


Doc. Reference : CL-ID-CL-01-EN	NovaScale F3 Series How To	
Product :	NovaScale F3 Series	Issued : November 9, 2012
Subject :	Procedure to update the ID Module.	
Abstract :	This note explains all the steps to update the ID Module.	



Written by : Jose Gomes - Bull Infrastructure Services & Support


Contents

1. ID Module file recovery _____ 3


2. ID Module Update _____ 8

1. ID Module file recovery


- a) Start an internet browser and connect to the Bull Support On Line (SOL) web site (<http://support.bull.com/ols>).

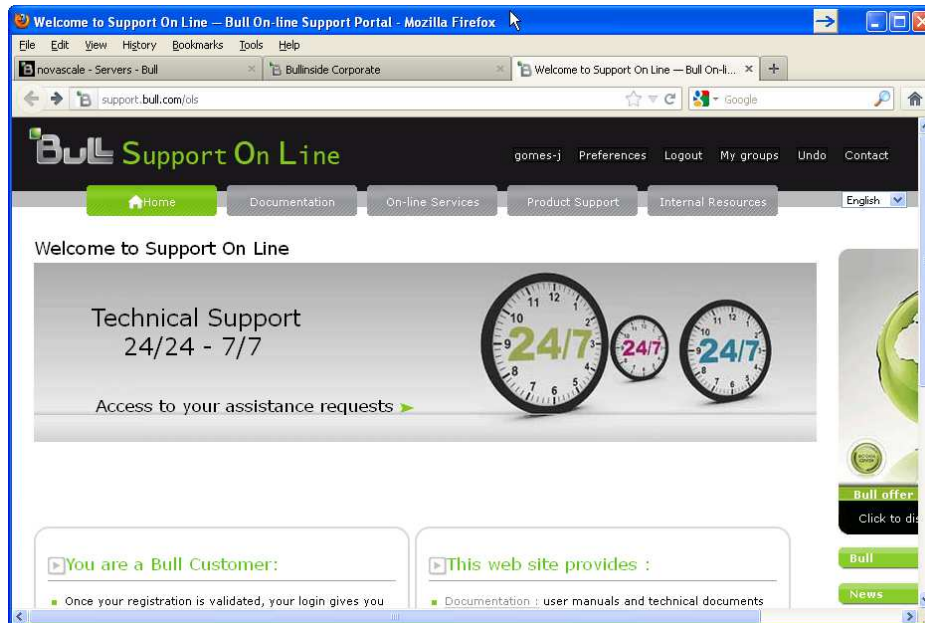

- b) Then select "Product support", as shown below.

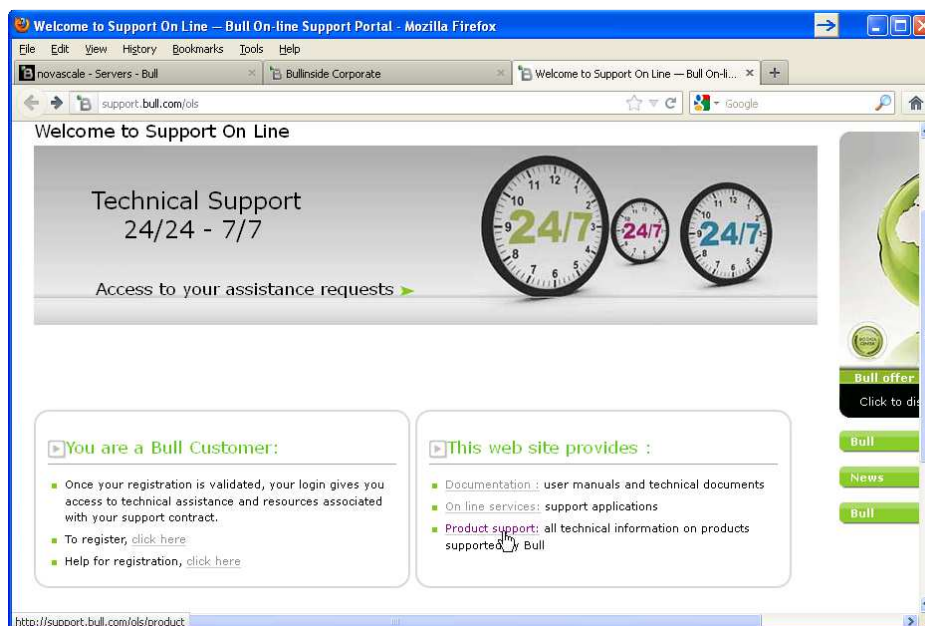

c) Click on “NovaScale”.

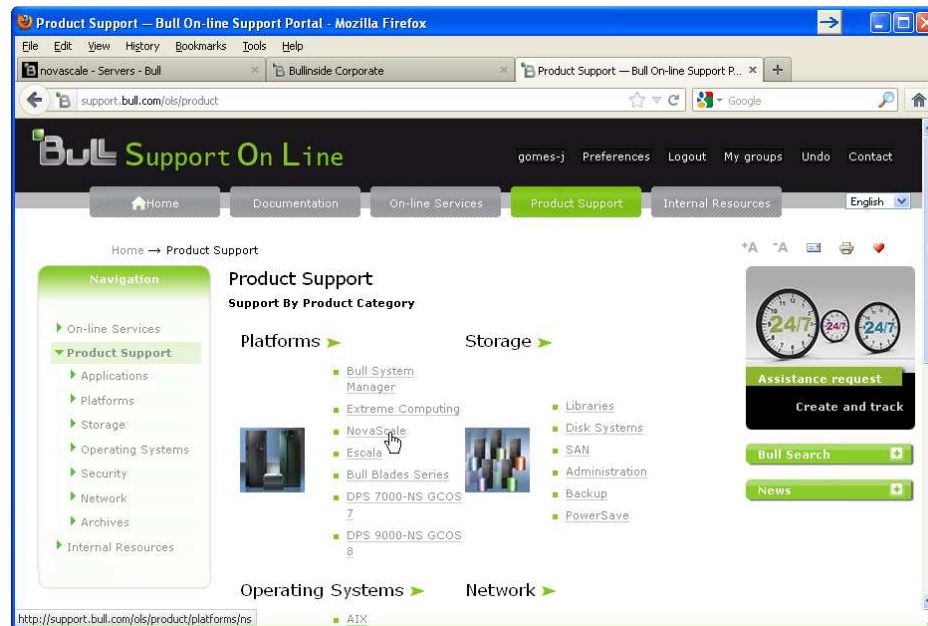

d) Then select the server type, as “R400 F series” for rack optimized servers or “T800 F series” for tower servers.

NovaScale Universal Line >

Blade Servers

- [Blade series](#) +

Rack optimized

- [R400 E series](#) +
- [R400 F series](#) +

Fault tolerant

- [R600 series](#) +


Tower

- [T800 E series](#) +
- [T800 F series](#) +

e) Select the F3 series system model.

- [NovaScale R460 F2](#)
- [NovaScale R460 F3](#)
- [NovaScale R460 F3](#)
- [NovaScale R480 E1](#)
- [NovaScale R480 F2](#)

f) In the top menu, select “Downloads”, then “Packages”.

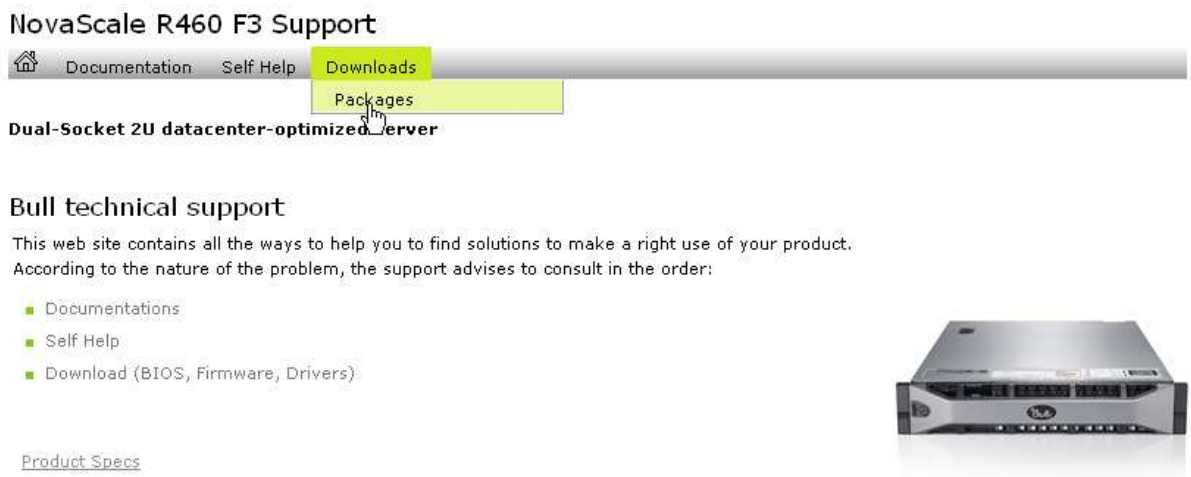

g) Click on the ID Module link.

▶ BIOS

- [BIOS Packages](#)

▶ Firmware & Drivers

- [Individual Packages](#)
- [Server Update Utility](#)

▶ Tools

- [OpenManagement Packages](#)
- [DSET Packages](#)
- [Service Tag \(Restricted access\)](#)
- [NovaScale R460 F3 ID module](#)
- [Online Diagnostics for NovaScale F3 \(Restricted access\)](#)

▶ Other downloads

- [Other downloads](#)

h) Then, select the [ID Module Update](#) link.

NovaScale R460 F3

Documentation Self Help Downloads

NovaScale R460 F3 ID module

NovaScale R460 F3 ID module

Title	Description	Modification Date
NovaScale R460 F3 ID Module Update V1.01	NovaScale R460 F3 ID Module update V1.01	2012-11-09 14:05
NovaScale R460 F3 ID module (for motherboard replacement)	NovaScale R460 F3 ID module (for motherboard replacement)	2012-11-09 13:27

i) Click on the [ID Module Update](#) to download the file.

NovaScale R460 F3 ID Module Update V1.01


NovaScale R460 F3 ID Module update V1.01

Documentation Utilisateur


Attachments

[NovaScale R460 F3 ID Module Update V1.01](#)


j) In the download window check “[Save File](#)”, then click on “[OK](#)” button.

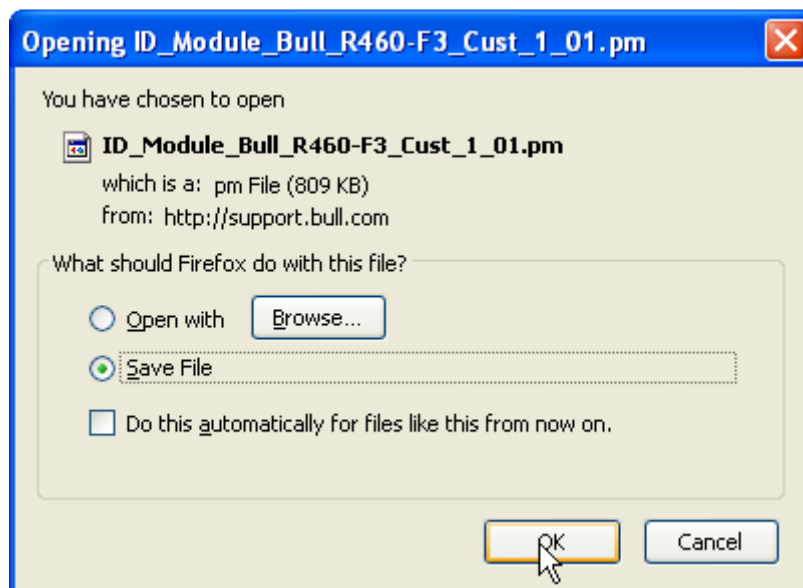

- k) Select the directory where the ID Module file will be written, then click on the “Save” button.

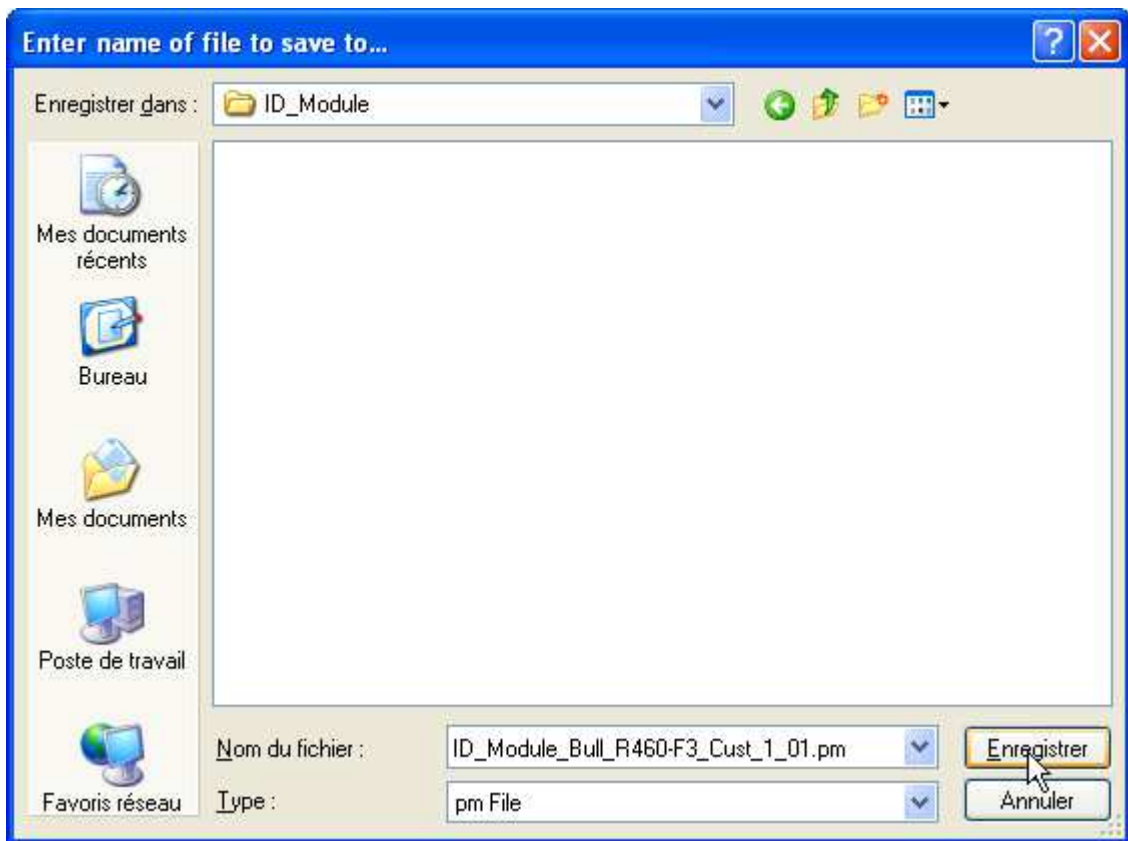


- l) Verify that the file is downloaded correctly.

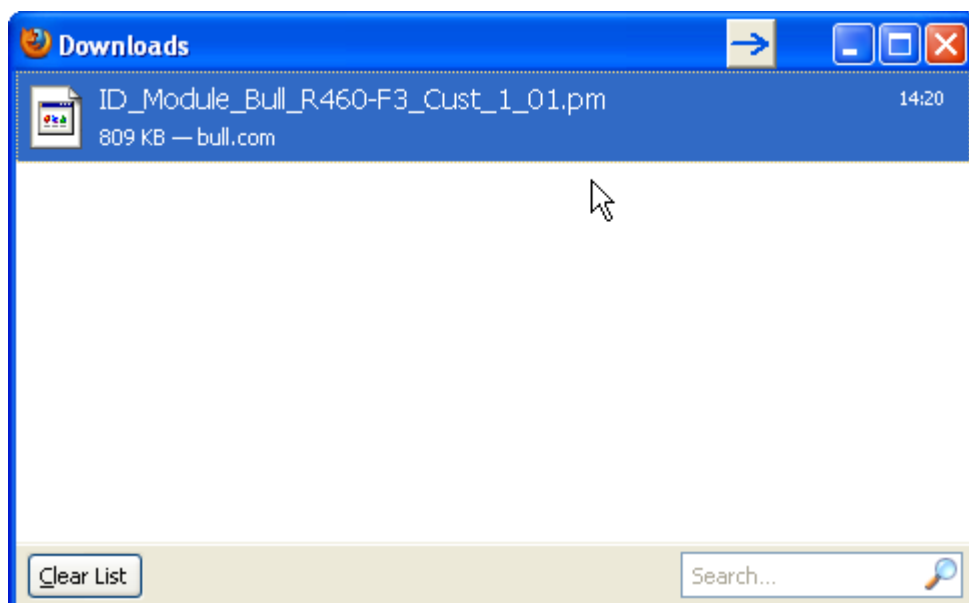


2. ID Module Update


- 1) Start your favorite browser and enter the IP address of the iDRAC7 inside the addresses field (*192.168.0.120 by default*).

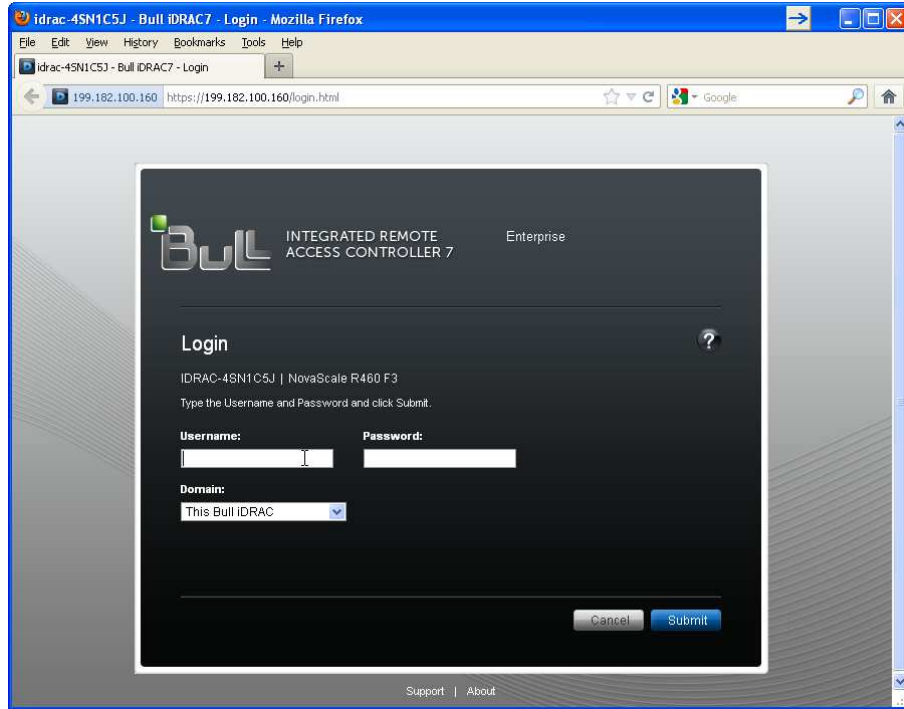


- 2) Enter the username and the password (*root - calvin by default*)

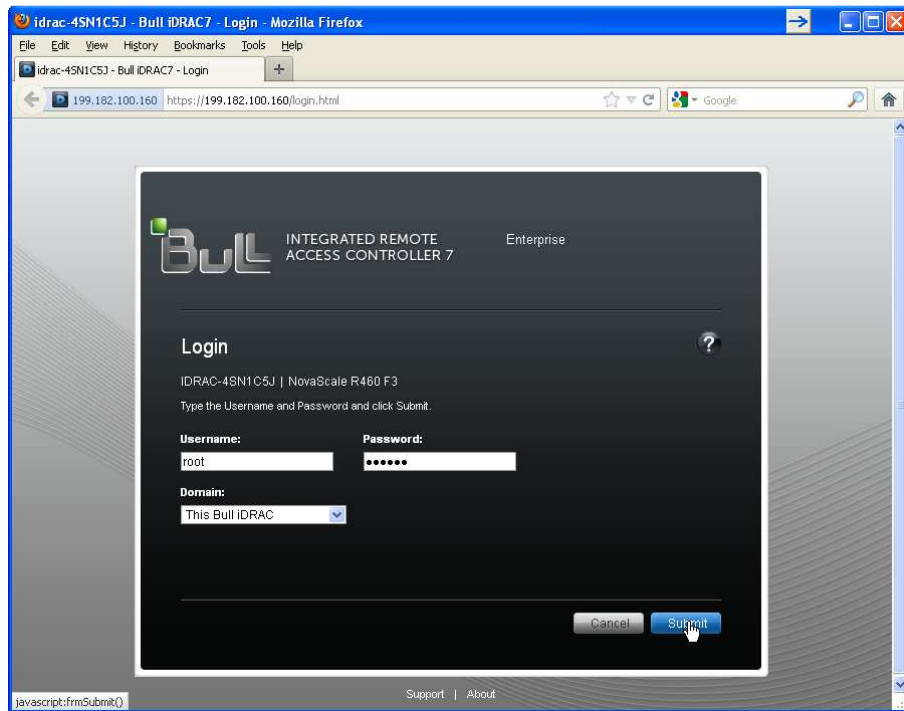


3) In the menu (left of the screen), click on “iDRAC Firmware Update” link.

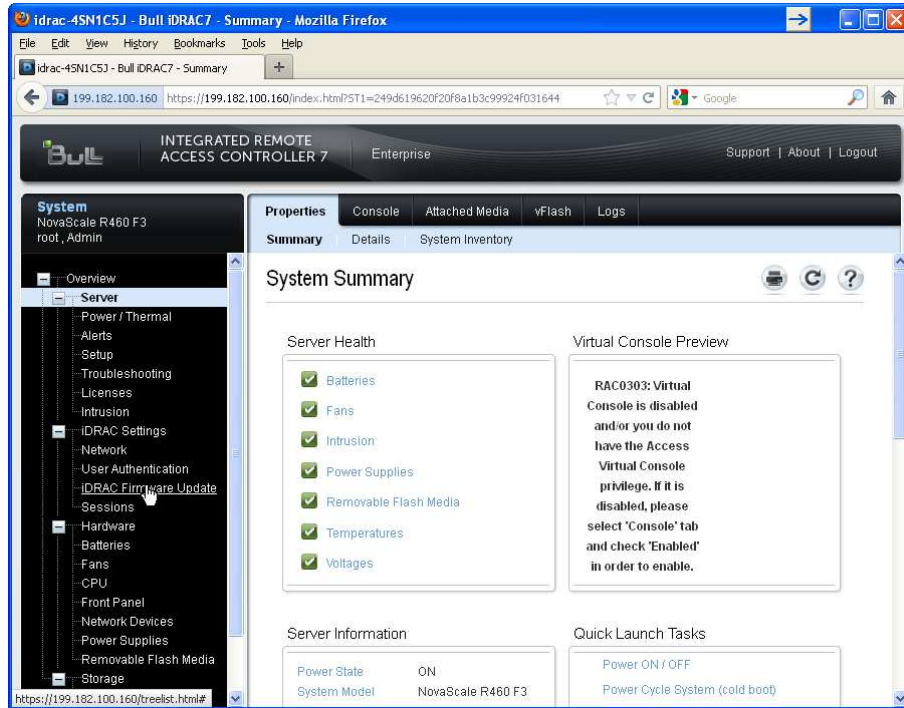


4) Click on the “Browse” button to select the ID Module file path.

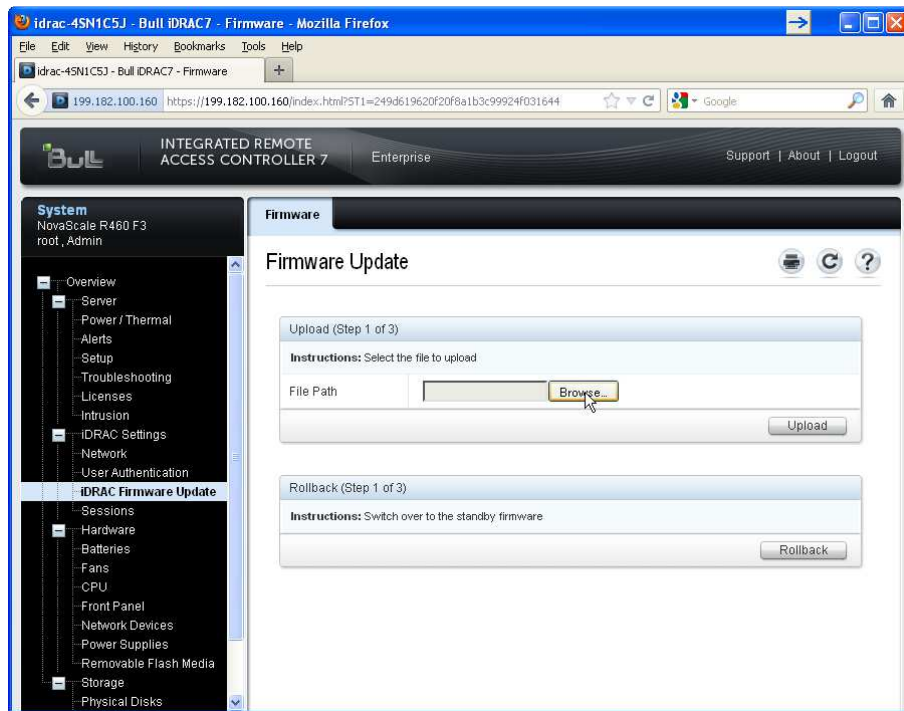


5) Select the ID Module file and click “Ok”.

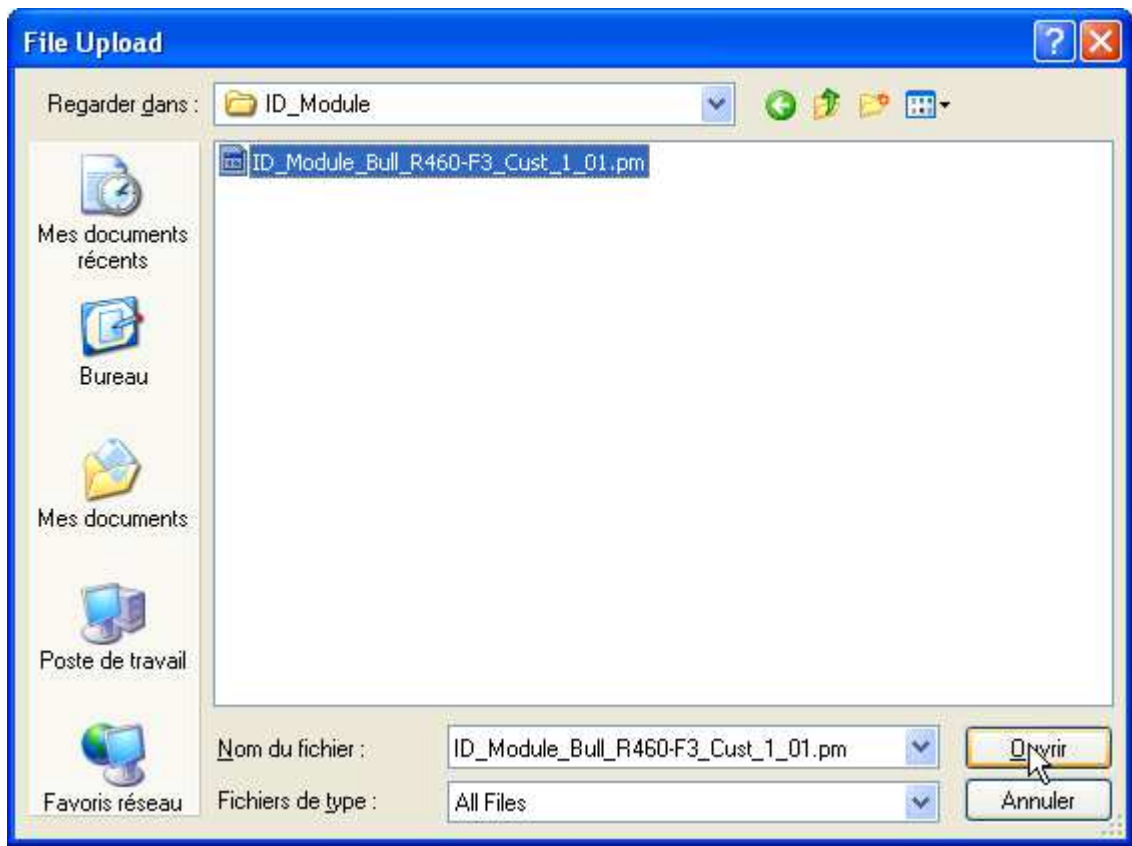


6) Then click on the “Upload” button.

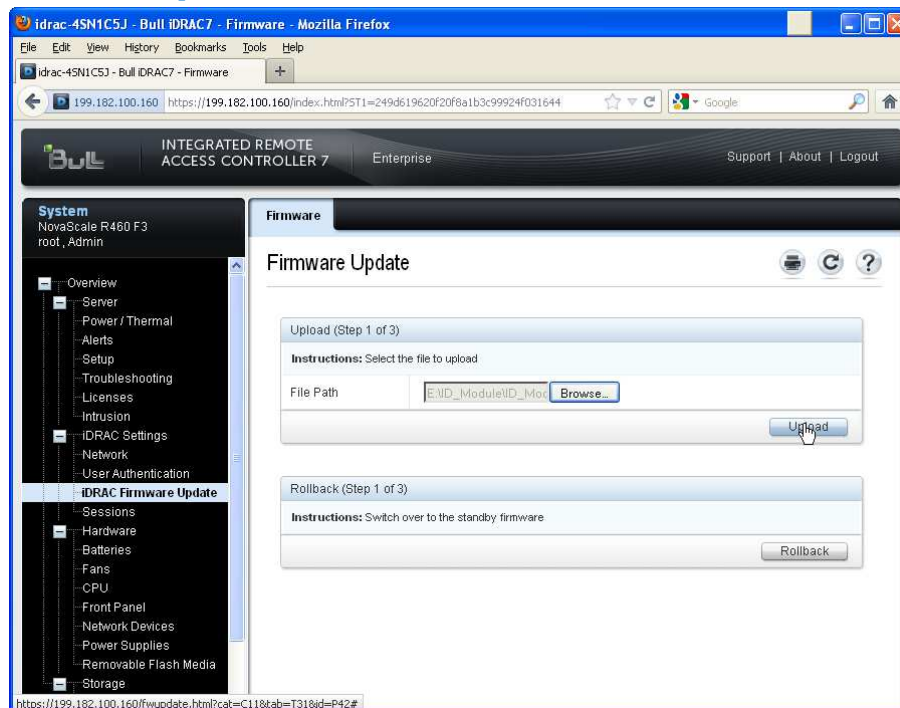



7) Verify that all is correct, then click on the “Next” button.

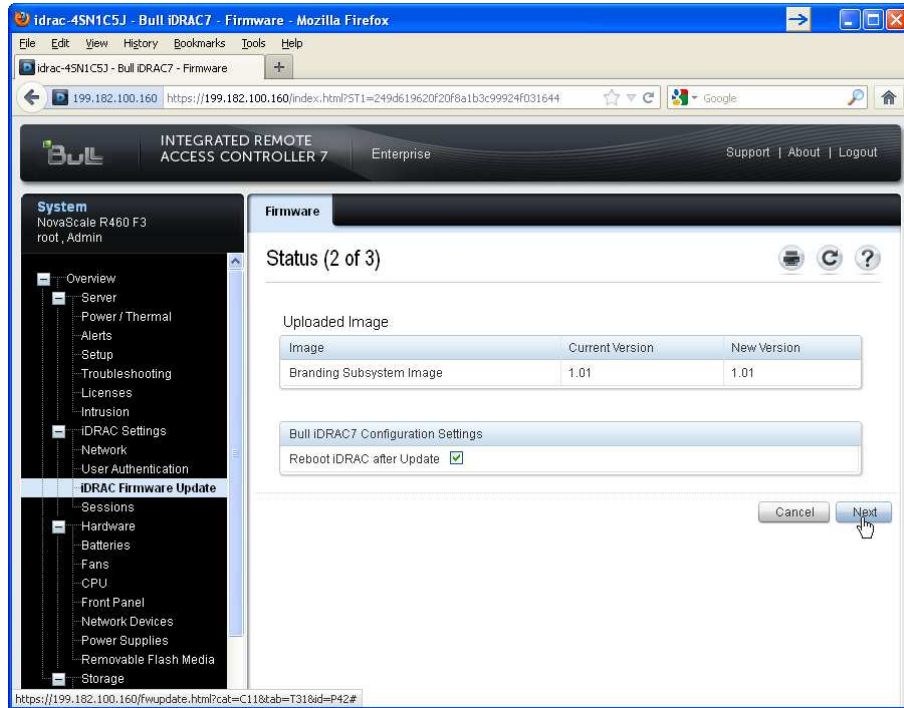

8) Click on “OK” to confirm the upgrade.

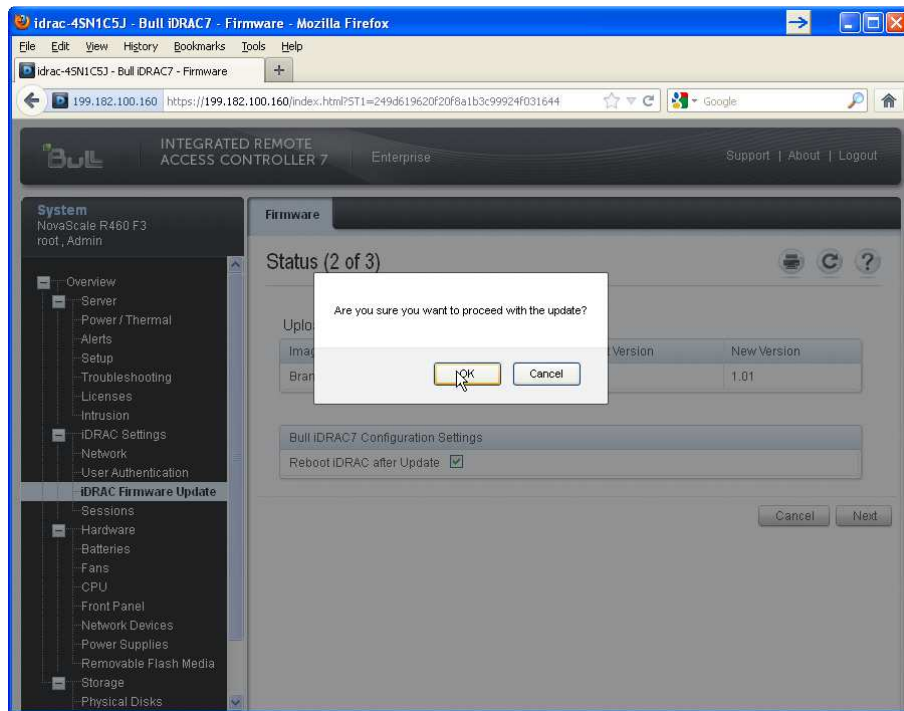

9) Wait for the end of the upgrade.

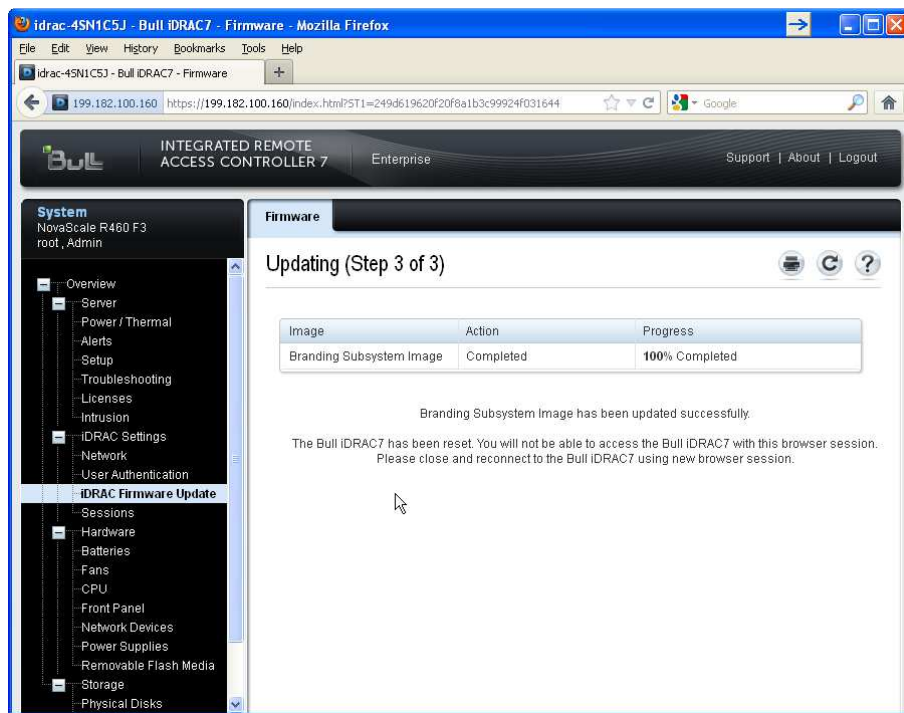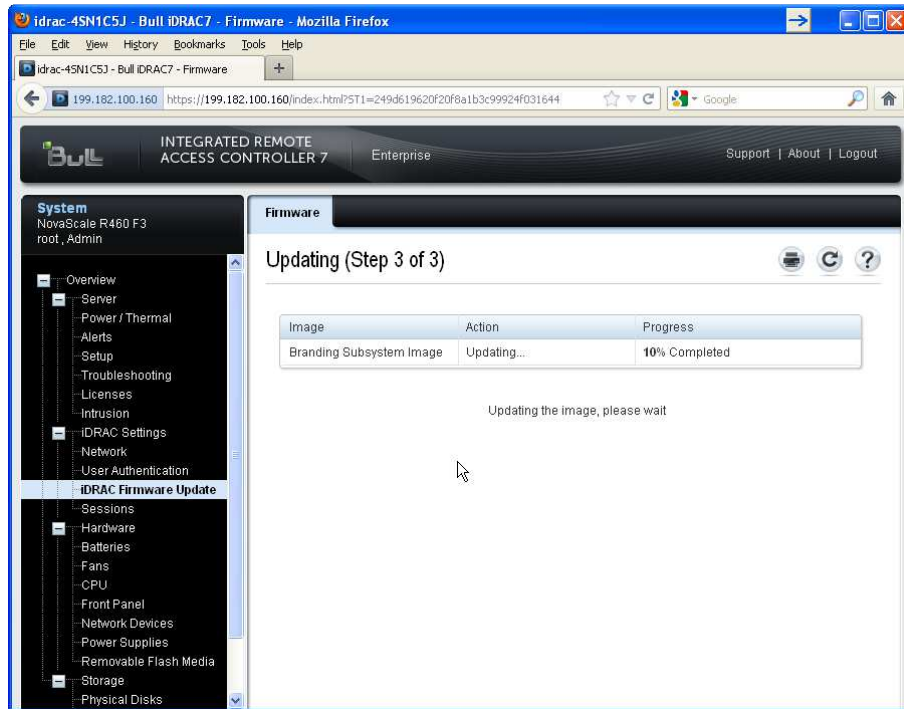

10)The Bull iDRAC7 has been reset. You will not be able to access the Bull iDRAC7 with this browser session.

Please close and reconnect to the Bull iDRAC7 using new browser session.

End Procedure.