

Document Title:	How to schedule a consistency check with Universal RAID Utility (URU) ?
Document ID:	TID0802041621
Creation Date:	04 February 2008
Modified Date:	
Document Revision:	0
Product Class:	Servers
Product and Version:	Server using URU (R480 E1 and next)

Symptoms / Facts

Check consistency is a preventive maintenance to be scheduled regularly (see documentation for details)

URU is provided with a CLI version in order to add a scheduled task on operating system.

Solutions / Fixes

URU CLI version is 'raidcmd' and it is located here:

```
C:\Program Files\Universal RAID Utility\cli>
```

Use the following command

```
raidcmd cc -c=x -l=y -op=start
```

where

x=controller number (first controller is number 1)

y=logical drive number (first logical drive is number 1)

Note: there is no command to run consistency check on all logical drive of all controller in one shot.

Document owner:	COE Servers
Applies to:	NovaScale Server using URU (R480 E1 and next)