

PCI Adapters

ESCALA



REFERENCE
86 A1 61EW 04

ESCALA

PCI Adapters

Hardware

May 2009

BULL CEDOC
357 AVENUE PATTON
B.P.20845
49008 ANGERS CEDEX 01
FRANCE

REFERENCE
86 A1 61EW 04

The following copyright notice protects this book under Copyright laws which prohibit such actions as, but not limited to, copying, distributing, modifying, and making derivative works.

Copyright © Bull SAS 2009

Printed in France

Trademarks and Acknowledgements

We acknowledge the rights of the proprietors of the trademarks mentioned in this manual.

All brand names and software and hardware product names are subject to trademark and/or patent protection.

Quoting of brand and product names is for information purposes only and does not represent trademark misuse.

The information in this document is subject to change without notice. Bull will not be liable for errors contained herein, or for incidental or consequential damages in connection with the use of this material.

Contents

Safety notices	vii
Installing PCI adapters	1
What's new in PCI adapters	1
Model 8203-E4A, 9407-M15, and 9408-M25 PCI adapters	1
Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server	2
Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power off	2
Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX	4
Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in IBM i	6
Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in Linux	9
Removing a PCI adapter from a model 8203-E4A, 9407-M15, or 9408-M25 server	11
Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power off	11
Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX	13
Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in IBM i	16
Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in Linux	18
Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server	20
Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power off	20
Removing and replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX	22
Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in IBM i	25
Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in Linux	27
Model 8203-E4A, 9407-M15, and 9408-M25 PCI adapter dividers	29
Installing a PCI adapter divider in the 8203-E4A, 9407-M15, or 9408-M25 server	29
Removing a PCI adapter divider from a model 8203-E4A, 9407-M15, or 9408-M25 server	30
Model 8204-E8A and 9409-M50 PCI adapters	32
Installing a PCI adapter in the 8204-E8A or 9409-M50 server	33
Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power off	33
Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in AIX	35
Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in IBM i	38
Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in Linux	41
Removing a PCI adapter from a model 8204-E8A or 9409-M50 server	44
Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power off	45
Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power on in AIX	47
Removing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in IBM i	49
Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power on in Linux	51
Replacing a PCI adapter in the 8204-E8A or 9409-M50 server	54
Replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power off	54
Removing and replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in AIX	55
Replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in IBM i	59
Replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in Linux	61
Model 8204-E8A and 9409-M50 PCI adapter dividers	62
Removing a PCI adapter divider from a model 8204-E8A or 9409-M50 server	63
Installing a PCI adapter divider in the 8204-E8A or 9409-M50 server	64
Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters, and cassettes	66
Installing a PCI adapter contained in a cassette	66
Installing a PCI adapter contained in a cassette with the power off	66
Installing a PCI adapter contained in a cassette with the power on in AIX	71
Installing a PCI adapter contained in a cassette with the power on in IBM i	76
Installing a PCI adapter contained in a cassette with the power on in Linux	82
Removing a PCI adapter contained in a cassette from the system	88
Removing a PCI adapter contained in a cassette from the system with the power off	89
Removing a PCI adapter contained in a cassette from the system with the power on in AIX	91
Removing a PCI adapter contained in a cassette from the system with the power on in IBM i	96
Removing a PCI adapter contained in a cassette from the system with the power on in Linux	99

Replacing a PCI adapter contained in a cassette in the system	102
Replacing a PCI adapter contained in a cassette in the system with the power off	103
Removing and replacing a PCI adapter contained in a cassette in the system with the power on in AIX	105
Replacing a PCI adapter contained in a cassette in the system with the power on in IBM i	112
Replacing a PCI adapter contained in a cassette in the system with the power on in Linux	117
PCI adapter single-width cassette.	119
Placing a PCI adapter in a single-width cassette	120
Placing a 4-Port USB PCI Express Adapter in a single-width cassette	126
Removing an adapter from the PCI adapter single-width cassette	130
PCI adapter single-width, first and second generation cassettes.	132
Placing a PCI adapter in a single-width, first or second generation cassette.	133
Removing an adapter from the PCI adapter single-width, first or second generation cassette	139
PCI adapter double-wide cassette	145
Removing an adapter from the PCI adapter double-wide cassette	145
Placing an adapter in the PCI adapter double-wide cassette	148
PCI adapter double-wide cassette, generation 2.5 cassette.	152
Placing a PCI adapter in a double-wide, generation 2.5 cassette	152
Removing a PCI adapter from a double-wide, generation 2.5 cassette.	160
Model 5802 and 5877 expansion units, PCI adapters, and cassettes	166
Preparing to install, remove, or replace a PCI adapter cassette	166
Installing a PCI adapter contained in a cassette	166
Installing a PCI adapter cassette with the power off	167
Installing a PCI adapter cassette	167
Installing a PCI adapter contained in a cassette with the power on in AIX	169
Installing a PCI adapter contained in a cassette with the power on in IBM i	169
Installing a PCI adapter contained in a cassette with the power on in Linux	170
Removing or replacing a PCI adapter contained in a cassette from the expansion unit	171
Removing a PCI adapter contained in a cassette from the expansion unit with the system power off	171
Removing a PCI adapter cassette from the expansion unit	171
Removing a PCI adapter contained in a cassette from the expansion unit with the power on in AIX	173
Removing a PCI adapter contained in a cassette from the expansion unit with the power on in IBM i	174
Removing a PCI adapter contained in a cassette from the expansion unit with the power on in Linux.	175
Replacing a PCI adapter contained in a cassette from the expansion unit with the power off	175
Replacing a PCI adapter contained in a cassette from the expansion unit with the power on in AIX	175
Replacing a PCI adapter contained in a cassette from the expansion unit with the power on in IBM i	177
Replacing a PCI adapter contained in a cassette from the expansion unit with the power on in Linux	178
PCI adapter single-width and double-width cassettes	178
Removing an adapter from the PCI adapter single-width cassette	178
Placing a PCI adapter in a single-width cassette	181
Removing an adapter from the PCI adapter double-wide cassette	188
Placing an adapter in the PCI adapter double-wide cassette	191
Expansion units that do not use cassettes	195
Installing a PCI adapter in an expansion unit that does not use cassettes	196
Installing a PCI adapter in an expansion unit that does not use cassettes, with the power off.	196
Installing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX	201
Installing a PCI adapter in an expansion unit that does not use cassettes, with the power on in IBM i	205
Installing a PCI adapter in an expansion unit that does not use cassettes, with the power on in Linux.	211
Removing a PCI adapter in an expansion unit that does not use cassettes	215
Removing a PCI adapter in an expansion unit that does not use cassettes, with the power off	216
Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX	219
Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in IBM i	223
Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in Linux	226
Replacing a PCI adapter in an expansion unit that does not use cassettes	230
Replacing a PCI adapter in an expansion unit that does not use cassettes, with the power off	230
Removing and replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX.	233
Replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in IBM i	239
Replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in Linux	243
Related procedures for installing and removing PCI adapters	246
Before you begin	246
Avoiding electric shock	248

Handling static-sensitive devices	249
Installing or replacing a PCI adapter with the system power on in Virtual I/O Server	250
Getting started	250
Installing a PCI adapter	250
Replacing a PCI Adapter	251
Unconfiguring storage adapters	251
Preparing the client logical partitions	252
Shutting down logical partitions	253
PCI hot-plug manager access for AIX	253
Accessing hot-plug management functions	254
PCI hot-plug manager menu	254
Component LEDs	255
Resetting the LEDs in AIX	255
Prerequisites for hot-plugging PCI adapters in Linux	256
Verify that the Linux, hot-plug PCI tools are installed	256
Installing feature code 3650 or 3651 in the 9406-MMA	257
Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA	258
PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller (FC 5739, 5778, 5781, 5782; CCIN 571F, 575B)	258
Removing and replacing expansion unit cover or door	262
Remove the back cover from the 0588 expansion unit	262
Opening the 0595, 5095, or D20 service access cover	263
Removing the rear door from the 5074, 5079, or 5094 expansion unit	263
Removing the rear door from the 5088, 5094, or 5096 expansion unit	264
Remove the back door and cover from the 5095 expansion unit	265
Removing the front cover on the 7314-G30 or 5796	266
Removing the rear door from the 5088, 5094, or 5096 expansion unit	267
Installing the front cover on the 7314-G30 or 5796	268
Removing the front cover from a 7311-D11, 5791, or 5794 expansion unit	269
Installing the front cover on a 7311-D11, 5791, or 5794 expansion unit	269
Removing the front cover from a 7311-D20 expansion unit	269
Installing the front cover on a 7311-D20 expansion unit	270
Removing and Replacing Covers and Doors	270
Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50	271
Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50	271
Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50	272
Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50	273
Removing the front cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50	274
Installing the front cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50	275
Removing the door from the 8204-E8A or 9409-M50	276
Installing or replacing the door on the 8204-E8A or 9409-M50	276
Removing the front cover from the stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50	276
Installing the front cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50	277
Front cover for the 8234-EMA, 9117-MMA, or 9406-MMA	278
Removing the front cover from the 8234-EMA, 9117-MMA, or 9406-MMA	278
Installing the front cover on the 8234-EMA, 9117-MMA, or 9406-MMA	279
Placing the rack-mounted system or expansion unit in the service position or operating position	280
Placing the rack-mounted system or expansion unit in the service position	280
Placing the rack-mounted system or expansion unit in the operating position	284
Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position	285
Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position	288

Appendix. Notices 291

Trademarks	292
Electronic emission notices	292
Class A Notices.	292
Terms and conditions.	296

Safety notices

Safety notices may be printed throughout this guide:

- **DANGER** notices call attention to a situation that is potentially lethal or extremely hazardous to people.
- **CAUTION** notices call attention to a situation that is potentially hazardous to people because of some existing condition.
- **Attention** notices call attention to the possibility of damage to a program, device, system, or data.

World Trade safety information

Several countries require the safety information contained in product publications to be presented in their national languages. If this requirement applies to your country, a safety information booklet is included in the publications package shipped with the product. The booklet contains the safety information in your national language with references to the U.S. English source. Before using a U.S. English publication to install, operate, or service this product, you must first become familiar with the related safety information in the booklet. You should also refer to the booklet any time you do not clearly understand any safety information in the U.S. English publications.

German safety information

Das Produkt ist nicht für den Einsatz an Bildschirmarbeitsplätzen im Sinne § 2 der Bildschirmarbeitsverordnung geeignet.

Laser safety information

IBM® servers can use I/O cards or features that are fiber-optic based and that utilize lasers or LEDs.

Laser compliance

All lasers are certified in the U.S. to conform to the requirements of DHHS 21 CFR Subchapter J for class 1 laser products. Outside the U.S., they are certified to be in compliance with IEC 60825 as a class 1 laser product. Consult the label on each part for laser certification numbers and approval information.

CAUTION:

This product might contain one or more of the following devices: CD-ROM drive, DVD-ROM drive, DVD-RAM drive, or laser module, which are Class 1 laser products. Note the following information:

- **Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.**
- **Use of the controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.**

(C026)

CAUTION:

Data processing environments can contain equipment transmitting on system links with laser modules that operate at greater than Class 1 power levels. For this reason, never look into the end of an optical fiber cable or open receptacle. (C027)

CAUTION:

This product contains a Class 1M laser. Do not view directly with optical instruments. (C028)

CAUTION:

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following information: laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam. (C030)

Power and cabling information for NEBS (Network Equipment-Building System) GR-1089-CORE

The following comments apply to the IBM servers that have been designated as conforming to NEBS (Network Equipment-Building System) GR-1089-CORE:

The equipment is suitable for installation in the following:

- Network telecommunications facilities
- Locations where the NEC (National Electrical Code) applies

The intrabuilding ports of this equipment are suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding ports of this equipment *must not* be metallically connected to the interfaces that connect to the OSP (outside plant) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metallically to OSP wiring.

Note: All Ethernet cables must be shielded and grounded at both ends.

The ac-powered system does not require the use of an external surge protection device (SPD).

The dc-powered system employs an isolated DC return (DC-I) design. The DC battery return terminal *shall not* be connected to the chassis or frame ground.

Installing PCI adapters

Learn about installing, removing, and replacing Peripheral Component Interconnect (PCI), PCI-X, and PCI Express (PCIe) adapters.

Related reference

 [Managing PCI adapters](#)

Find specifications, instructions, and part numbers for specific adapters.

 [PCI adapter placement for machine types 82xx and 91xx](#)

Find PCI adapter placement information for machine types 82xx and 91xx.

 [PCI adapter placement for machine type 94xx](#)

Find PCI adapter placement information for machine type 94xx.

What's new in PCI adapters

Read about new and significantly changed information in PCI adapters since the previous update of this topic collection.

May 2009

The following updates have been made to the content:

- Added the topic “Placing a 4-Port USB PCI Express Adapter in a single-width cassette” on page 126.
- Added the section “PCI adapter double-wide cassette, generation 2.5 cassette” on page 152.
- Added the section “Model 5802 and 5877 expansion units, PCI adapters, and cassettes” on page 166.
- Updated the related information links, which are located at the end of many procedures.

November 2008

The following updates have been made to the content:

- Added the topic “PCI adapter single-width, first and second generation cassettes” on page 132.
- Added the 8234-EMA machine type model (MTM) to “Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters, and cassettes” on page 66.

April 2008

The following updates have been made to the content:

- Added procedures for the IBM i operating system to “Model 8203-E4A, 9407-M15, and 9408-M25 PCI adapters” and “Model 8204-E8A and 9409-M50 PCI adapters” on page 32.
- Added the 9407-M15 and 9408-M25 MTMs to “Model 8203-E4A, 9407-M15, and 9408-M25 PCI adapters.”
- Added the 9119-FHA and 9125-F2A MTMs to “Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters, and cassettes” on page 66.

Model 8203-E4A, 9407-M15, and 9408-M25 PCI adapters

You can remove, replace, or install PCI adapters in the 8203-E4A, 9407-M15, or 9408-M25.

If you are installing a new adapter, refer to the following topics for placement information: the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.

If you need to remove, replace, or install PCI adapters in an expansion unit attached to the system unit, refer to one of the following procedures:

- I/O expansion units that do not use cassettes:
 - “Installing a PCI adapter in an expansion unit that does not use cassettes” on page 196
 - “Removing a PCI adapter in an expansion unit that does not use cassettes” on page 215
 - “Replacing a PCI adapter in an expansion unit that does not use cassettes” on page 230
- I/O expansion units that use cassettes:
 - “Installing a PCI adapter contained in a cassette” on page 66
 - “Removing a PCI adapter contained in a cassette from the system” on page 88
 - “Replacing a PCI adapter contained in a cassette in the system” on page 102

Important: If you are installing a new feature, ensure that you have the software required to support the new feature and determine whether there are any existing PTF prerequisites to install. To do this, use the IBM Prerequisite Web site at http://www-912.ibm.com/e_dir/eServerPrereq.nsf .

Important:

- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input/output adapter (IOA), the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5703, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA might have been altered or the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server

You can install a PCI adapter.

Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power off

You can install a PCI adapter with the system power off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power off, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Determine in which slot to place the PCI adapter.
If you are installing a new adapter, refer to the following topics for placement information: the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. Stop the system or logical partition. See Stop the system or logical partition.
5. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.

- b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
- c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.
6. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
7. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

8. Place the adapter, component-side up, on a flat, antistatic surface.
9. Some PCI adapters are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.
10. Install the adapter in the system unit using the following illustration and steps as a guide:

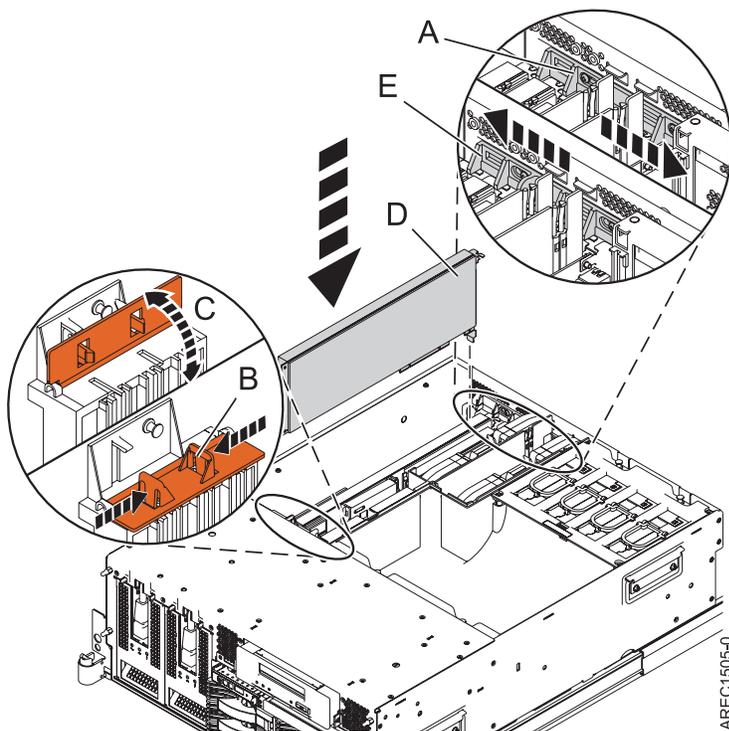


Figure 1. PCI adapter installation

- a. Slide the adapter latch (A) into the open position by sliding it toward the center of the unit.
- b. If applicable, open the long-adapter, front retention bracket shown in (B) and (C). Press in on B and rotate up, as shown by C. This step only applies to long, PCI-X adapters or filler plates.
- c. If an existing adapter or filler plate is in the slot, remove it before installing the new adapter.
- d. Carefully grasp the adapter (D) by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
- e. Firmly press the adapter connector into the slot.
- f. If applicable, close the long-adapter, front retention bracket. This step only applies to long, PCI-X adapters.
- g. Slide the adapter latch (E) into the closed position by sliding it away from the center of the unit.

11. Connect any adapter cables.
12. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
13. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
14. Reconnect the power source to the system.
15. Start the system or logical partition. Refer to Start the system or logical partition.
16. Verify that the new resource is functional. Refer to Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX

You can install a PCI adapter with the system power on in the AIX[®] operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power on in AIX, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Determine in which slot to place the PCI adapter.

If you are installing a new adapter, refer to the following topics for placement information: the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

7. Place the adapter, component-side up, on a flat, antistatic surface.

8. Some PCI adapters are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.
9. Refer to “PCI hot-plug manager access for AIX” on page 253, and follow the steps in the access procedure to select **PCI Hot Plug Manager**. Then return here to continue.
10. From the PCI Hot-Plug Manager menu, select **Add a PCI Hot-Plug Adapter** and press Enter. The Add a Hot-Plug Adapter window is shown.
11. Select the appropriate empty PCI slot from the ones listed on the screen, and press Enter.
12. Remove the adapter filler plate if one is present.
13. Follow the instructions on the screen to install the adapter until the LED for the specified PCI slot is set to the Action state. See “Component LEDs” on page 255.
14. When you are instructed to install the adapter in the adapter slot, use the following illustration and steps as a guide:
 - a. Slide the adapter latch (**A**) into the open position by sliding it toward the center of the unit.
 - b. If applicable, open the long-adapter, front retention bracket shown in (**B**) and (**C**). Press in on **B** and rotate up, as shown by **C**. This step only applies to long, PCI-X adapters or filler plates.
 - c. If an existing adapter or filler plate is in the slot, remove it before installing the new adapter.
 - d. Carefully grasp the adapter (**D**) by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
 - e. Firmly press the adapter connector into the slot.
 - f. If applicable, close the long-adapter, front retention bracket. This step only applies to long, PCI-X adapters.
 - g. Slide the adapter latch (**E**) into the closed position by sliding it away from the center of the unit.

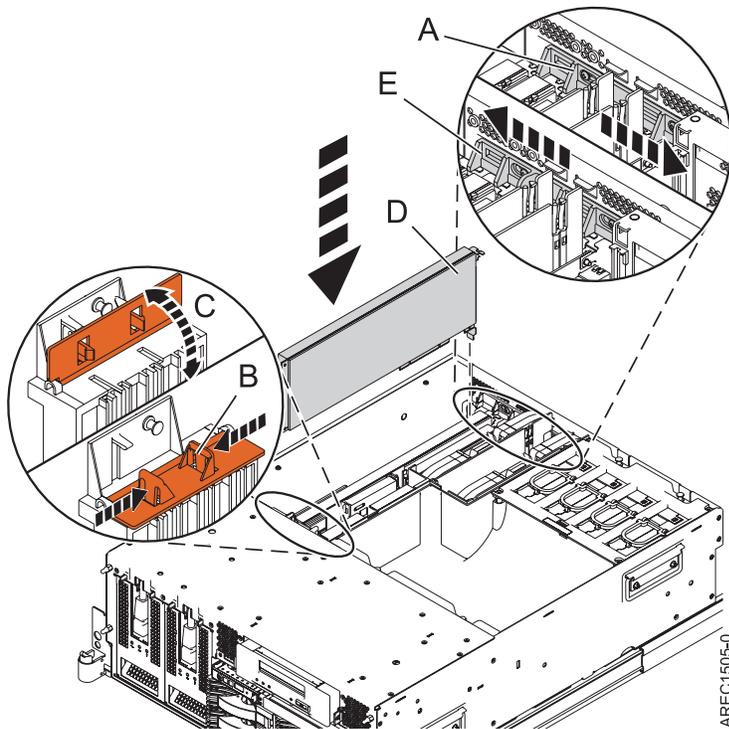


Figure 2. PCI adapter installation

15. Connect any adapter cables.

16. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
17. Run the `cfgmgr` command to configure the adapter.
18. Verify that the new resource is functional. See Verify the installed part.

Related information

 Installing a feature using the Hardware Management Console

 Logical partitioning

Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in IBM i

You can install a PCI adapter with the system power on in the IBM i operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

Important:

- If you are removing, installing, or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782)(CCIN 571F, 575B) topic before proceeding with the instructions provided here.
- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input output adapter (IOA), the external storage subsystem must be updated to use the world-wide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To install a PCI adapter with the system power on in i, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Determine in which slot to place the PCI adapter. If you are installing a new adapter, refer to the PCI adapter placement for machine types 82xx and 91xx or PCI adapter placement for machine type 94xx.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.

- c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

7. Place the adapter, component-side up, on a flat, antistatic surface.
8. Some PCI adapter cards are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.
9. Type **strsst** on the command line of the Main Menu and then press Enter.
10. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display. Press Enter.
11. Select **Start a service tool** from the System Service Tools (SST) display and press Enter.
12. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
13. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
14. Type **9** (Hardware contained within package) in the **System Unit** or **Expansion Unit** field of the unit where you are replacing the card. Press Enter.
15. Select the option to **Include empty positions**.
16. Select **Concurrent Maintenance** on the card position where you want to replace the card and then press Enter.
17. Select the option **Toggle LED blink off/on**. A light-emitting diode (LED) blinks, identifying the position you chose. Physically verify that this is the slot where you want to install the adapter.
18. Select the option **Toggle LED blink off/on** to stop the blinking LED.
19. Install the adapter in the adapter slot. Use the following illustration and steps as a guide:

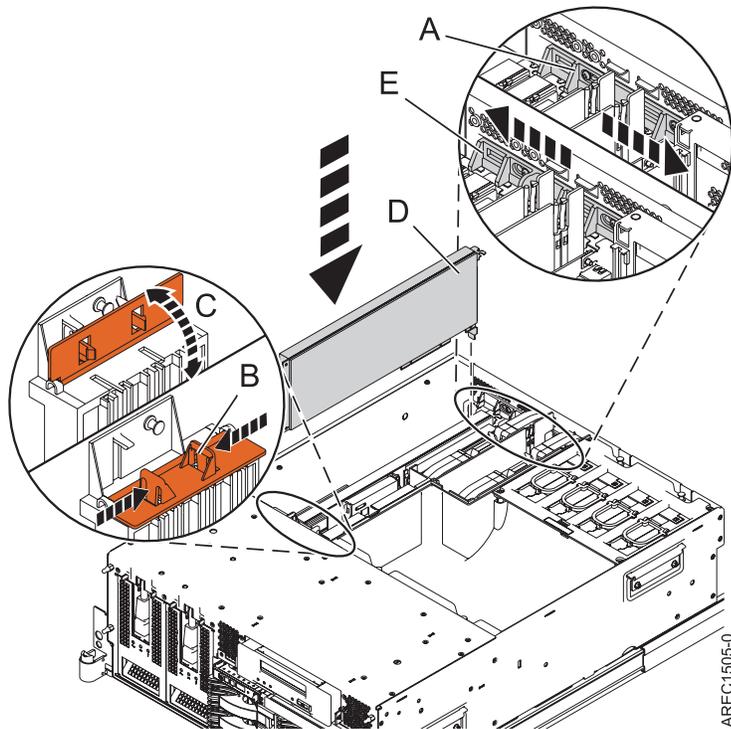


Figure 3. PCI adapter installation

- a. Slide the adapter latch (A) into the open position by sliding it toward the center of the unit.
 - b. If applicable, open the long-adapter, front retention bracket shown in (B) and (C). Press in on B and rotate up, as shown by C. This step only applies to long, PCI-X adapters or filler plates.
 - c. If an existing adapter or filler plate is in the slot, remove it before installing the new adapter.
 - d. Carefully grasp the adapter (D) by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
 - e. Firmly press the adapter connector into the slot.
 - f. If applicable, close the long-adapter, front retention bracket. This step only applies to long, PCI-X adapters.
 - g. Slide the adapter latch (E) into the closed position by sliding it away from the center of the unit.
20. Connect any adapter cables.
 21. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
 22. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
 23. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
 24. Replace or close the covers.
 25. If you are servicing a rack-mounted system, refer to "Placing the rack-mounted system or expansion unit in the operating position" on page 284.
 26. On a rack-mounted system, close the rear rack door.
 27. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in Linux

You can install a PCI adapter with the system power on in the Linux[®] operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power on in Linux, do the following steps:

1. Ensure that the system meets the “Prerequisites for hot-plugging PCI adapters in Linux” on page 256.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. “Verify that the Linux, hot-plug PCI tools are installed” on page 256.
4. Determine in which slot to place the PCI adapter.
If you are installing a new adapter, refer to the following topics for placement information: the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
5. Perform the prerequisite tasks described in “Before you begin” on page 246.
6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.
7. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
8. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

9. Place the adapter, component-side up, on a flat, antistatic surface.
10. Log in to the system console as the root user.
11. Run the `lsslot` tool to list the hot-plug PCI slots that are available in the server or partition:

```
lsslot -c pci -a
```

The following is an example of the information displayed by this command:

```
# Slot      Description      Device(s)
U7879.001.DQD014E-P1-C1 PCI-X capable, 64 bit, 133MHz slot Empty
U7879.001.DQD014E-P1-C4 PCI-X capable, 64 bit, 133MHz slot Empty
U7879.001.DQD014E-P1-C5 PCI-X capable, 64 bit, 133MHz slot Empty
```

Select the appropriate empty PCI slot from the ones listed by the command.

12. Ensure the slot is empty. Remove the adapter filler plate if one is present.

13. Run the `drslot_chrp_pci` command to enable an adapter to be installed. For example, to install an adapter into PCI slot U7879.001.DQD014E-P1-C3, enter the following command:

```
drslot_chrp_pci -a -s U7879.001.DQD014E-P1-C3
```

The following displays:

The visual indicator for the specified PCI slot has been set to the identify state. Press Enter to continue or enter x to exit.

14. Press Enter.

The following text is displayed:

The visual indicator for the specified PCI slot has been set to the action state. Insert the PCI card into the identified slot, connect any devices to be configured and press Enter to continue. Enter x to exit.

15. When you are instructed to install the adapter in the adapter slot, use the following illustration and steps as a guide:

- a. Slide the adapter latch (**A**) into the open position by sliding it toward the center of the unit.
- b. If applicable, open the long-adapter, front retention bracket shown in (**B**) and (**C**). Press in on **B** and rotate up, as shown by **C**. This step only applies to long, PCI-X adapters or filler plates.
- c. If an existing adapter or filler plate is in the slot, remove it before installing the new adapter.
- d. Carefully grasp the adapter (**D**) by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
- e. Firmly press the adapter connector into the slot.
- f. If applicable, close the long-adapter, front retention bracket. This step only applies to long, PCI-X adapters.
- g. Slide the adapter latch (**E**) into the closed position by sliding it away from the center of the unit.

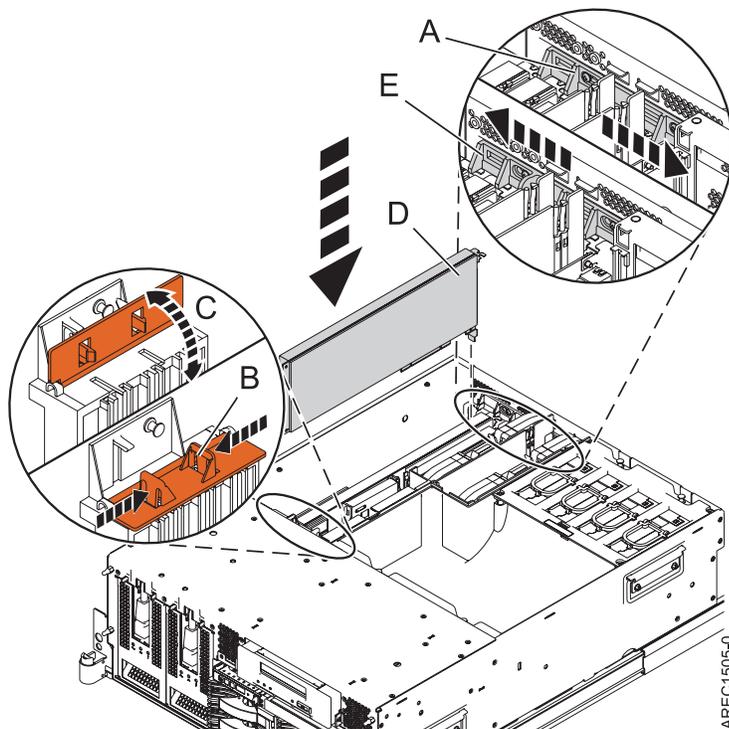


Figure 4. PCI adapter installation

16. Connect any adapter cables.
17. Run the `lsslot` command to verify that the slot is occupied.

For example, enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`

The following is an example of the information displayed by this command:

```
# Slot      Description      Device(s)
U7879.001.DQD014E-P1-C3 PCI-X capable, 64 bit, 133MHz slot 0001:40:01.0
```

18. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
19. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing a PCI adapter from a model 8203-E4A, 9407-M15, or 9408-M25 server

You can remove a PCI adapter.

Important:

- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input/output adapter (IOA), the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5703, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA might have been altered or the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power off

You can remove a PCI adapter with the system power off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

To remove a PCI adapter with the system power off, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. Stop the system or logical partition. See Stop the system or logical partition.
5. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.

- a. Open the front rack door.
- b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
- c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.
6. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
7. Label and disconnect all cables attached to the adapter you are going to remove.
8. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system.

9. Remove the adapter from the system unit as shown in the following figure:

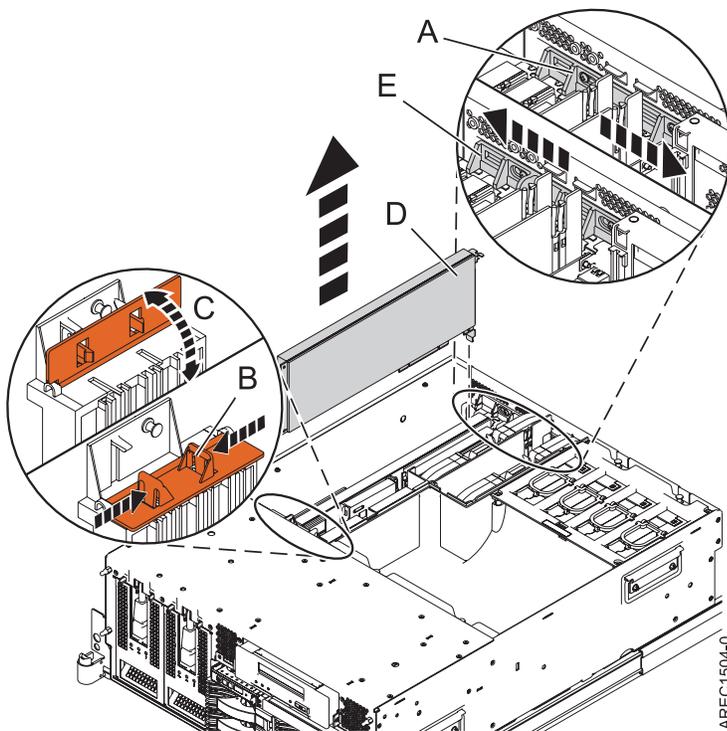


Figure 5. PCI adapter removal

- a. Slide the adapter latch (A) into the open position by sliding it towards the center of the unit.
- b. If applicable, open the long-adapter, front retention bracket shown in (B) and (C). Press in on (B) and rotate up, as shown by (C). This step only applies to long, PCI-X adapters or filler plates.
- c. Carefully grasp the adapter (D) by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
- d. Slide the adapter latch (E) into the closed position by sliding it away from the center of the unit.
10. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
11. If you plan to install another adapter into the vacated slot, go to “Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power off” on page 20; otherwise, continue with the next step.
12. Seal the expansion slot using an expansion-slot cover.

13. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
14. Reconnect the power source to the system.
15. Start the system or logical partition. Refer to Start the system or logical partition.
16. To replace the PCI adapter, see “Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server” on page 20.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX

You can remove a PCI adapter with the system power on in the AIX operating system.

To remove a failing adapter and replace it with the same adapter, see “Removing and replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX” on page 22. If the adapter that is removed will be placed into a different slot or system, complete this removal procedure, and then install the adapter as described in “Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX” on page 4.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter. .

Note: Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To remove a PCI adapter with the system power on in AIX, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.

5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit's cover: "Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50" on page 272.
6. Label and disconnect all cables attached to the adapter you are planning to remove.
7. Record the slot number and location of each adapter being removed. Adapter slots are numbered on the rear of the system unit.
8. Ensure that any processes or applications that might use the adapter are stopped.
9. Follow these steps to place the adapter in the action state using the PCI Hot-Plug Manager:
 - a. Enter the system diagnostics by logging in as root user or as the celogin user, type **diag** at the AIX command line.
 - b. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
 - c. At the FUNCTION SELECTION menu, select **Task Selection**, and then press Enter.
 - d. At the Task Selection list, select **PCI Hot Plug Manager**.
 - e. Select **Unconfigure a Device**, and then press Enter.
 - f. Press F4 (or Esc +4) to display the **Device Names** menu.
 - g. Select the adapter you are removing in the **Device Names** menu.
 - h. Use the Tab key to answer NO to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, and then press Enter. The ARE YOU SURE window is displayed.
 - i. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the **Command** field at the top of the screen.
 - j. Press F4 (or Esc +4) twice to return to the Hot Plug Manager menu.
 - k. Select **Replace/remove PCI Hot Plug adapter**.
 - l. Select the slot that has the device to be removed from the system.
 - m. Select **Remove**. A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.
 - n. Label all cables attached to the adapter you plan to remove.
 - o. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
 - p. Disconnect all cables attached to the adapter you plan to remove.
10. Label, and then disconnect all cables attached to the adapter you plan to remove.
11. Remove the adapter from the system unit as shown in the following figure:

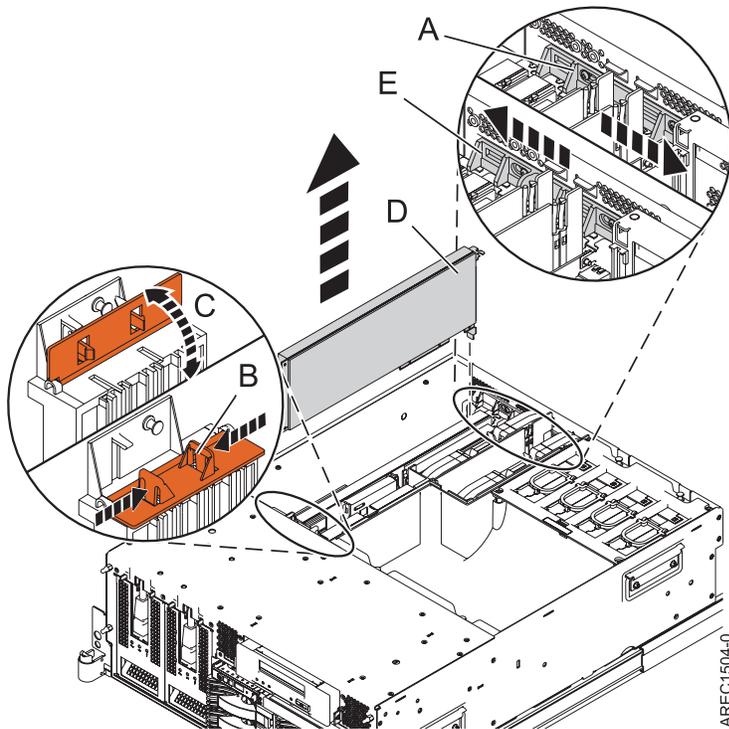


Figure 6. PCI adapter removal

- a. Slide the adapter latch (A) into the open position by sliding it towards the center of the unit.
 - b. If applicable, open the long-adapter, front retention bracket shown in (B) and (C). Press in on (B) and rotate up, as shown by (C). This step only applies to long, PCI-X adapters or filler plates.
 - c. Carefully grasp the adapter (D) by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
 - d. Slide the adapter latch (E) into the closed position by sliding it away from the center of the unit.
12. If you plan to install another adapter into the vacated slot, go to “Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX” on page 4; otherwise, continue with the next step.
 13. Seal the expansion slot using an expansion-slot cover.
 14. Continue to follow the screen instructions until you receive a message that the adapter removal is successful. Successful removal is indicated by the OK message displayed next to the **Command** field at the top of the screen.
 15. If you have other adapters to remove, press F3 (Exit) to return to the PCI Hot-Plug Manager menu, and then return to step 10 on page 14.
If you do not have other adapters to remove, continue with the next step.
 16. Press F10 to exit the Hot-Plug Manager.
 17. Run the diag -a command. If the system responds with a menu or prompt, follow the instructions to complete the device configuration.
 18. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288

- “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
19. To replace the PCI adapter, see “Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server” on page 20.

Related information

- 🔗 Installing a feature using the Hardware Management Console
- 🔗 Logical partitioning

Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in IBM i

You can remove a PCI adapter with the system power on in the i operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

Important:

- If you are removing, installing, or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782)(CCIN 571F, 575B) topic before proceeding with the instructions provided here.
- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input output adapter (IOA), the external storage subsystem must be updated to use the world-wide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To remove a PCI adapter with the system power on in the i operating system, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. Type **strsst** on the command line of the Main Menu and press Enter.

7. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display. Press Enter.
8. Select **Start a service tool** from the System Service Tools (SST) display. Press Enter.
9. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
10. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
11. Type **9** (Hardware contained within package) in the **System Unit** or **Expansion Unit** field of the unit where you are removing the card, and then press Enter.
12. Select the option to **Include empty positions**.
13. Select **Concurrent Maintenance** on the card position where you want to remove the card and then press Enter.
14. Select the option to **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to remove the adapter.
15. Select the option to **Toggle LED blink off/on** to stop the blinking LED.
16. Select the option to **Power off domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
17. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power off complete
18. Label and then disconnect all cables attached to the adapter you plan to remove.
19. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system.

20. Remove the adapter from the system unit as shown in the following figure:

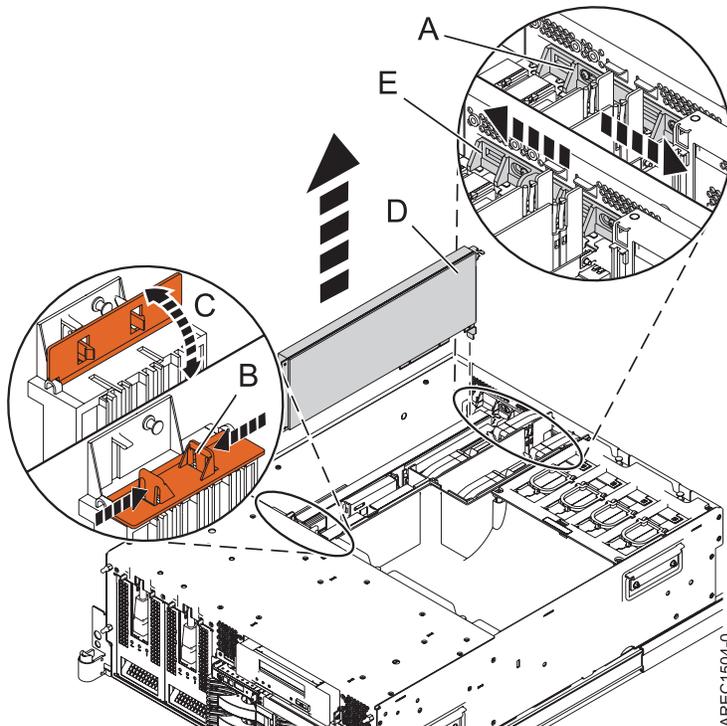


Figure 7. PCI adapter removal

- a. Slide the adapter latch (**A**) into the open position by sliding it towards the center of the unit.

- b. If applicable, open the long-adapter, front retention bracket shown in **(B)** and **(C)**. Press in on **(B)** and rotate up, as shown by **(C)**. This step only applies to long, PCI-X adapters or filler plates.
 - c. Carefully grasp the adapter **(D)** by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
 - d. Slide the adapter latch **(E)** into the closed position by sliding it away from the center of the unit.
21. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
 22. Seal the expansion slot using an expansion-slot cover.
 23. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in Linux

You can remove a PCI adapter with the system power on in the Linux operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

To remove a PCI adapter with the system power on in Linux, do the following steps:

1. Ensure that the system meets the “Prerequisites for hot-plugging PCI adapters in Linux” on page 256.
2. “Verify that the Linux, hot-plug PCI tools are installed” on page 256.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
5. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.
7. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
8. Label and disconnect all cables attached to the adapter you are going to remove.
9. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system.

10. Label, and then disconnect all cables attached to the adapter you plan to remove.

Note: Before performing a PCI hot-plug removal of storage devices, ensure that the file systems on those devices are unmounted.

11. Run the `drslot_chrp_pci` command to enable an adapter to be removed:

For example, to remove the PCI adapter in slot U7879.001.DQD014E-P1-C3, run this command:

```
drslot_chrp_pci -r -s U7879.001.DQD014E-P1-C3
```

Follow the instructions on the display to complete the task.

12. Remove the adapter from the system unit as shown in the following figure:

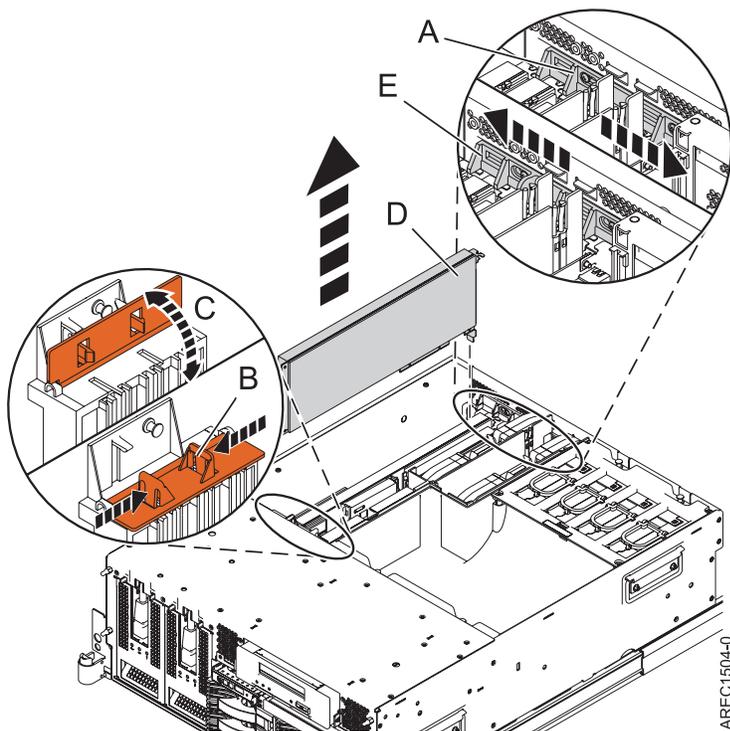


Figure 8. PCI adapter removal

- a. Slide the adapter latch (A) into the open position by sliding it towards the center of the unit.
 - b. If applicable, open the long-adapter, front retention bracket shown in (B) and (C). Press in on (B) and rotate up, as shown by (C). This step only applies to long, PCI-X adapters or filler plates.
 - c. Carefully grasp the adapter (D) by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
 - d. Slide the adapter latch (E) into the closed position by sliding it away from the center of the unit.
13. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
 14. If you plan to install another adapter into the vacated slot, go to “Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in Linux” on page 27; otherwise, continue with the next step.
 15. Seal the expansion slot using an expansion-slot cover.
 16. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:

- “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
17. Reconnect the power source to the system.
 18. Start the system or logical partition. Refer to Start the system or logical partition.
 19. To replace the PCI adapter, see “Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server.”

Related information

 Installing a feature using the Hardware Management Console

 Logical partitioning

Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server

You can replace a PCI adapter.

Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power off

You can replace a PCI adapter with the system power off.

You must have already completed the procedure “Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power off” on page 11 in order to have the slot powered off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

To replace a PCI adapter with the system power off, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Place the adapter, component-side up, on a flat, static-protective surface.
5. Install the adapter in the system unit as shown in the following figure:

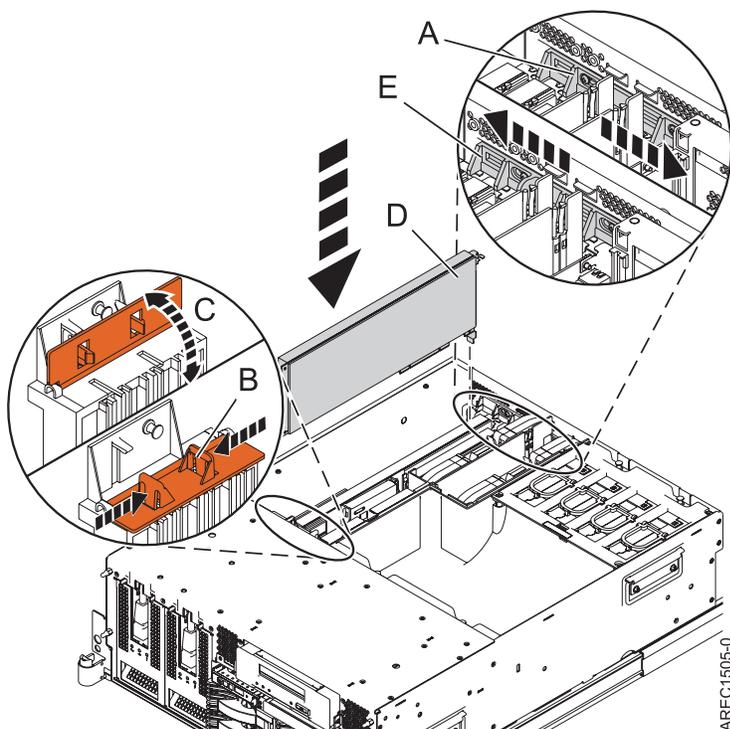


Figure 9. PCI adapter installation

- a. Slide the adapter latch (A) into the open position by sliding it towards the center of the unit.
 - b. If applicable, open the long-adapter, front retention bracket shown in (B) and (C). Press in on (B) and rotate up, as shown by (C). This step only applies to long, PCI-X adapters or filler plates.
 - c. Carefully grasp the adapter (D) by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
 - d. Firmly press the adapter connector into the slot.
 - e. If applicable, close the long-adapter, front retention bracket. This step only applies to long, PCI-X adapters.
 - f. Slide the adapter latch (E) into the closed position by sliding it away from the center of the unit.
6. Connect the adapter cables.
 7. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
 8. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
 9. Reconnect the power source to the system.
 10. Start the system or logical partition. Refer to Start the system or logical partition.
 11. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing and replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX

You can replace a PCI adapter with the system power on in the AIX operating system.

Read the following notes to determine if this is the correct procedure for the task to be performed.

Notes:

- If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.
- Use this procedure if you intend to remove a failing PCI adapter and replace it with the same type of adapter.
- If you plan to remove a failing adapter and leave the slot empty, see “Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX” on page 13.
- This procedure should not be used to remove an existing adapter and install a different type of adapter. To install a different adapter, remove the existing adapter as described in “Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX” on page 13, then install the new adapter as described in “Installing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in AIX” on page 4.
- Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To replace a PCI adapter with the system power on in AIX, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271.
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. Determine which adapters you plan to remove.
7. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system unit.

8. Ensure that any processes or applications that might use the adapter are stopped.

9. Enter the system diagnostics by logging in as root user or as the celogin user, type **diag** at AIX command line.
10. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
11. At the FUNCTION SELECTION menu, select **Task Selection**, and then press enter.
12. At the Task Selection list, select **PCI Hot Plug Manager**.
13. Select **Unconfigure a Device**, and then press Enter.
14. Press F4 (or Esc +4) to display the **Device Names** menu.
15. Select the adapter you are removing in the **Device Names** menu.
16. Use the Tab key to answer YES to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, and then press Enter.
17. The **ARE YOU SURE** screen is shown. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the **Command** field at the top of the screen.
18. Press F3 (or Esc +3) twice to return to the **Hot Plug Manager** menu.
19. Select **Replace/remove PCI Hot Plug adapter**.
20. Select the slot that has the device to be removed from the system.
21. Select **Replace**.

Note: A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.

22. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
23. Label, and then disconnect all cables attached to the adapter you plan to remove.
24. Remove the adapter from the system unit as shown in the following figure:

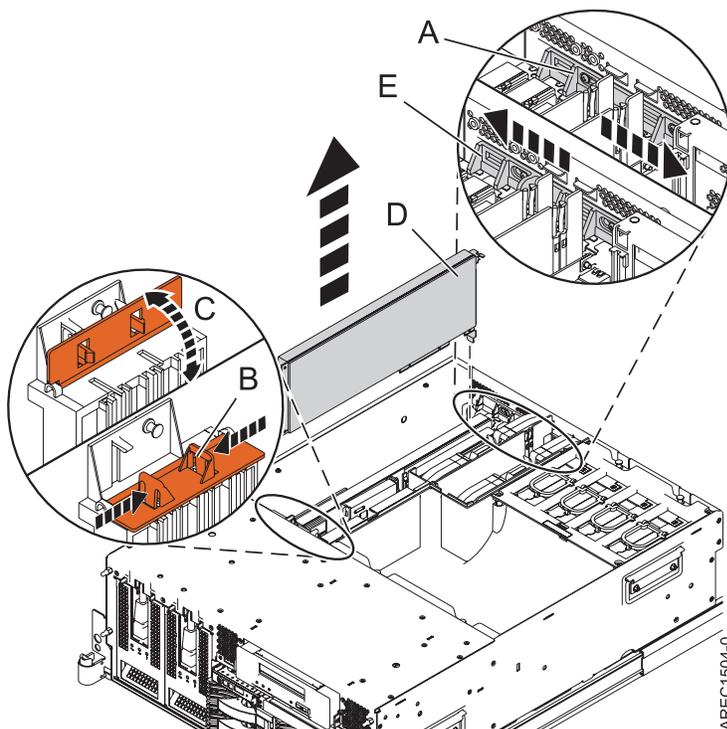


Figure 10. PCI adapter removal

- a. Slide the adapter latch (A) into the open position by sliding it towards the center of the unit.

- b. If applicable, open the long-adapter, front retention bracket shown in **(B)** and **(C)**. Press in on **(B)** and rotate up, as shown by **(C)**. This step only applies to long, PCI-X adapters or filler plates.
 - c. Carefully grasp the adapter **(D)** by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
 - d. Slide the adapter latch **(E)** into the closed position by sliding it away from the center of the unit.
25. If necessary, remove the replacement adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

26. Install the adapter in the system unit as shown in the following figure:

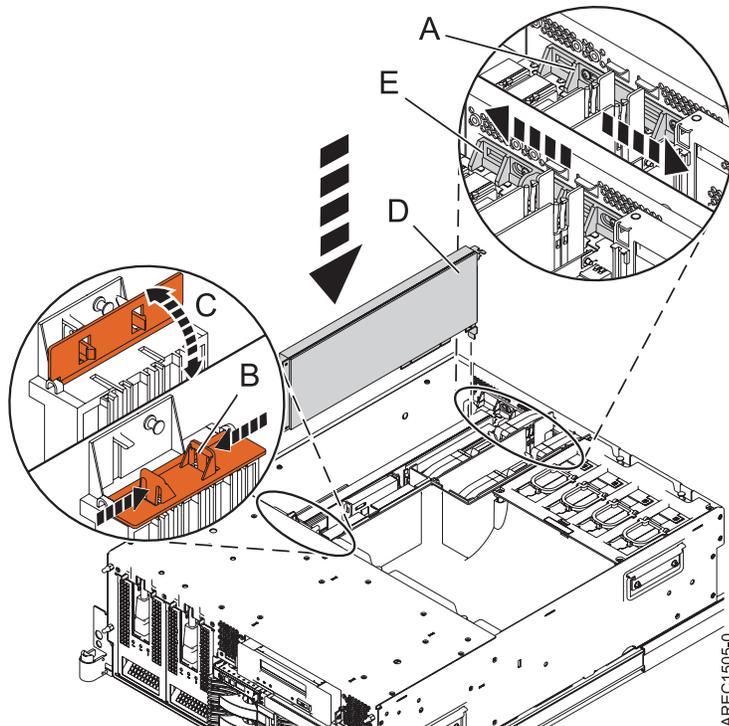


Figure 11. PCI adapter installation

- a. Slide the adapter latch **(A)** into the open position by sliding it towards the center of the unit.
 - b. If applicable, open the long-adapter, front retention bracket shown in **(B)** and **(C)**. Press in on **(B)** and rotate up, as shown by **(C)**. This step only applies to long, PCI-X adapters or filler plates.
 - c. Carefully grasp the adapter **(D)** by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
 - d. Firmly press the adapter connector into the slot.
 - e. If applicable, close the long-adapter, front retention bracket. This step only applies to long, PCI-X adapters.
 - f. Slide the adapter latch **(E)** into the closed position by sliding it away from the center of the unit.
27. Connect the adapter cables.
28. Press Enter and continue to follow the instructions in the system diagnostics until you receive a message that the replacement is successful. Successful replacement is indicated by the OK message displayed next to the **Command** field at the top of the menu.
29. Press the F3 (or Esc+3) key to return to the **PCI Hot-Plug Manager** menu.
30. Press the F3 (or Esc+3) key to return to the **TASK** selection list.
31. Select **Log Repair Action**.

32. Select the resource just replaced, press Enter, press Commit (F7 or ESC 7), then press Enter.
33. Press F3 (or Esc+3) to return to **TASK Selection List**.
34. Select **Hot Plug Task**, and press Enter.
35. Select **PCI Hot Plug Manager**, select **Configure a defined device**, and then press Enter.
36. Select the device just replaced from the list, and then press Enter. The device is now configured.
37. Press the F10 key to exit the diagnostic program.

Note: If you are running the stand-alone diagnostics, do not exit the program completely.

38. Verify the PCI adapter by using the following instructions:
 - a. Did you replace the adapter with the system power on?
 - Yes: Go to the next step.
 - No: Load the diagnostic program by doing the following:
 - If AIX is available, boot AIX, log in as root or celogin, and then enter the **diag** command.
 - If AIX is not available, boot the stand-alone diagnostics.
 - b. Type the **diag** command if you are not already displaying the diagnostic menus.
 - c. Select **Advance Diagnostic Routines**, and then select **Problem Determination**.
 - d. Select the name of the resource just replaced from the menu. If the resource just replaced is not shown, choose the resource associated with it. Press Enter, then press **Commit** (F7 or Esc+7).
 - e. Did Problem Determination identify any problems?
 - No: Continue to the next step.
 - Yes: A problem is identified.
 - If you are a customer, record the error information, and then contact your service provider.
 - If you are an authorized service provider, return to map 210-5.
39. Press the F10 key to exit the diagnostic program.
40. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
41. Verify that the new resource is functional. See Verify the installed part.

Related information

 Installing a feature using the Hardware Management Console

 Logical partitioning

Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in IBM i

You can replace a PCI adapter with the system power on in the i operating system.

Attention: You must have already completed the procedure “Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in IBM i” on page 16 in order to have the slot powered off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

Important:

- If you are removing, installing, or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782)(CCIN 571F, 575B) topic before proceeding with the instructions provided here.
- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input output adapter (IOA), the external storage subsystem must be updated to use the world-wide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To replace a PCI adapter with the system power on in IBM i, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Install the adapter in the system unit as shown in the following figure:

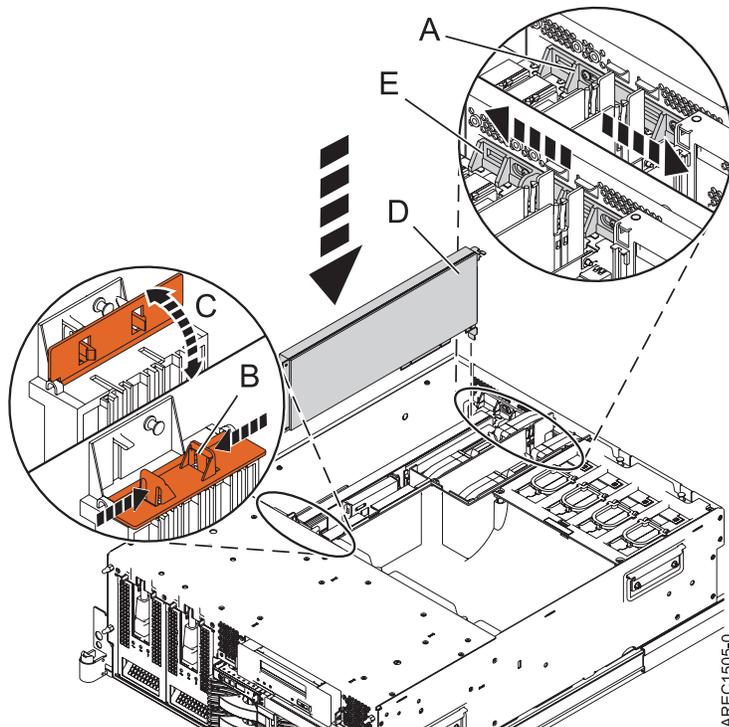


Figure 12. PCI adapter installation

- a. Slide the adapter latch (A) into the open position by sliding it towards the center of the unit.

- b. If applicable, open the long-adapter, front retention bracket shown in **(B)** and **(C)**. Press in on **(B)** and rotate up, as shown by **(C)**. This step only applies to long, PCI-X adapters or filler plates.
 - c. Carefully grasp the adapter **(D)** by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
 - d. Firmly press the adapter connector into the slot.
 - e. If applicable, close the long-adapter, front retention bracket. This step only applies to long, PCI-X adapters.
 - f. Slide the adapter latch **(E)** into the closed position by sliding it away from the center of the unit.
5. Connect the adapter cables.
 6. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
 7. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
 8. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
 9. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
 10. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Replacing a PCI adapter in the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in Linux

You can replace a PCI adapter with the system power on in the Linux operating system.

You must have already completed the procedure “Removing a PCI adapter from the 8203-E4A, 9407-M15, or 9408-M25 server, with the power on in Linux” on page 18.

To replace a PCI adapter with the system power on in Linux, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Place the adapter, component-side up, on a flat, static-protective surface.
5. Run the `drslot_chrp_pci` command to enable an adapter to be replaced:

For example, to replace the PCI adapter in slot U7879.001.DQD014E-P1-C3 run this command:

```
drslot_chrp_pci -R -s U7879.001.DQD014E-P1-C3
```

Follow the instructions on the display to complete the task.

6. Install the adapter in the system unit as shown in the following figure:

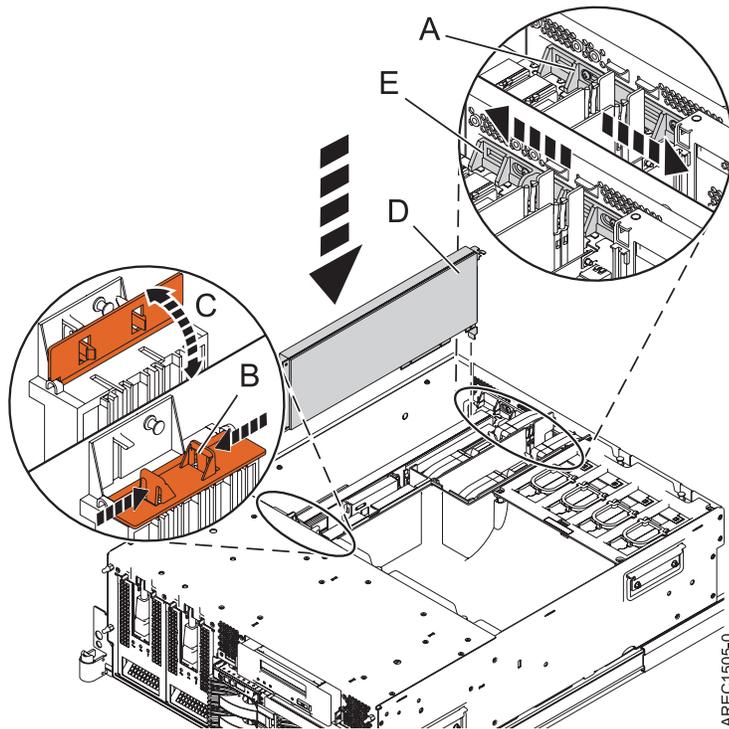


Figure 13. PCI adapter installation

- a. Slide the adapter latch (A) into the open position by sliding it towards the center of the unit.
- b. If applicable, open the long-adapter, front retention bracket shown in (B) and (C). Press in on (B) and rotate up, as shown by (C). This step only applies to long, PCI-X adapters or filler plates.
- c. Carefully grasp the adapter (D) by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
- d. Firmly press the adapter connector into the slot.
- e. If applicable, close the long-adapter, front retention bracket. This step only applies to long, PCI-X adapters.
- f. Slide the adapter latch (E) into the closed position by sliding it away from the center of the unit.

7. Connect the adapter cables.

8. Run the lsslot command to verify that the slot is occupied.

For example, enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`

The following is an example of the information displayed by this command:

```
# Slot      Description      Device(s)
U7879.001.DQD014E-P1-C3 PCI-X capable, 64 bit, 133MHz slot 0001:40:01.0
```

9. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
10. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273

11. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Model 8203-E4A, 9407-M15, and 9408-M25 PCI adapter dividers

You can install or replace PCI adapter dividers in the 8203-E4A, 9407-M15, or 9408-M25.

Installing a PCI adapter divider in the 8203-E4A, 9407-M15, or 9408-M25 server

You can install a PCI adapter divider.

The following procedure describes the installation of a PCI adapter divider with the system power off. This procedure can be done with the system power on by omitting the steps related to disconnecting the power source from the system and reconnecting the power source to the system.

To install a divider, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Stop the system or logical partition. See Stop the system or logical partition.
3. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

4. If you are installing the divider in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
5. If you are installing the divider in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. Install the divider in the system unit using the following illustration and steps as a guide:

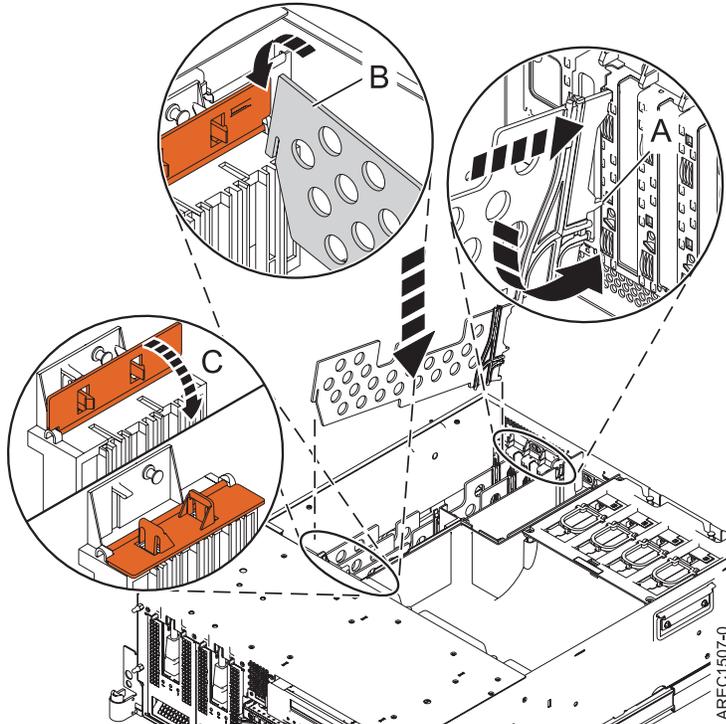


Figure 14. PCI-adapter divider installed in the system unit

- a. Locate the divider slot that you want to use.
 - b. Carefully grasp the divider by its top edge and align the back edge of the divider with the retention notches (A).
 - c. Insert the front edge of the divider (B) into the divider slot and then press the divider into place. If this is a divider for a PCI-X slot, the long-adapter retention bracket (C) should be in the open position.
 - d. If this is a divider for a PCI-X slot, close the long-adapter retention bracket (C).
7. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
 8. Reconnect the power source to the system.
 9. Start the system or logical partition. Refer to Start the system or logical partition.

Related information

- ➡ Installing a feature using the Hardware Management Console
- ➡ Logical partitioning

Removing a PCI adapter divider from a model 8203-E4A, 9407-M15, or 9408-M25 server

You can remove a PCI adapter divider.

The following procedure describes the removal of PCI adapter dividers with the system power off. This procedure can be done with the system power on by omitting the steps related to powering off the system.

To remove a divider, do the following steps:

1. Perform prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Stop the system or logical partition. See Stop the system or logical partition.
4. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

5. If you are removing a PCI adapter divider in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
6. If you are removing a PCI adapter divider in a stand-alone system unit, follow these steps to remove the units scoper: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
7. Remove the adapter divider from the system unit using the following illustration and steps as a guide:

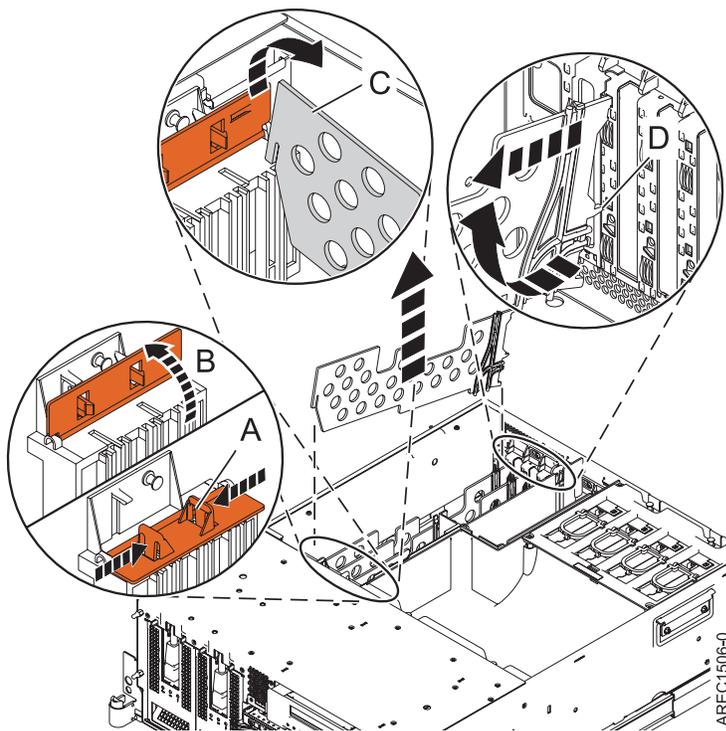


Figure 15. PCI adapter divider removed from the system unit

- a. If this is a divider for a PCI-X slot, open the long-adapter retention bracket **(A)**, by squeezing the tabs and rotating it up, as shown by **(B)**.
 - b. Pull the front edge of the divider **(C)** away from the divider slot.
 - c. Flex the back edge **(D)** of the divider out of the bracket.
 - d. Pull the divider out of the system.
8. If you are removing the divider as part of another procedure, return to that procedure now. To replace the divider, see “Installing a PCI adapter divider in the 8203-E4A, 9407-M15, or 9408-M25 server” on page 29. To close up the system, continue to the next step.
 9. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
 10. Reconnect the power source to the system.
 11. Start the system or logical partition. Refer to Start the system or logical partition.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Model 8204-E8A and 9409-M50 PCI adapters

You can remove, replace, or install PCI adapters in the 8204-E8A (IBM System p[®] 550) or 9409-M50 (IBM System i 550).

If you are installing a new adapter, you will also need to refer to the PCI placement guide for slot placement information. See the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.

If you need to remove, replace, or install PCI adapters in an expansion unit attached to the system unit, refer to one the following procedures:

- 7311-D20 I/O expansion unit
 - “Installing a PCI adapter in an expansion unit that does not use cassettes” on page 196
 - “Removing a PCI adapter in an expansion unit that does not use cassettes” on page 215
 - “Replacing a PCI adapter in an expansion unit that does not use cassettes” on page 230
- 7314-G30 I/O expansion unit
 - “Installing a PCI adapter contained in a cassette” on page 66
 - “Removing a PCI adapter contained in a cassette from the system” on page 88
 - “Replacing a PCI adapter contained in a cassette in the system” on page 102

Important: If you are installing a new feature, ensure that you have the software required to support the new feature and determine whether there are any existing PTF prerequisites to install. To do this, use the IBM Prerequisite Web site at http://www-912.ibm.com/e_dir/eServerPrereq.nsf .

Important:

- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input/output adapter (IOA), the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5703, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA might have been altered or the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

Installing a PCI adapter in the 8204-E8A or 9409-M50 server

You can install a PCI adapter.

Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power off

You can install a PCI adapter with the system power off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power off, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Determine in which slot to place the PCI adapter. For system-specific adapter placement information, see the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. Stop the system or logical partition. See Stop the system or logical partition.
5. Disconnect the power source from the system by unplugging the system.


Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
7. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
8. If necessary, remove the adapter expansion slot shield.
9. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

10. Place the adapter, component-side up, on a flat, antistatic surface.
11. Some PCI adapters are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.

12. Slide the adapter latch (A) into the open position, as shown in the following figure.

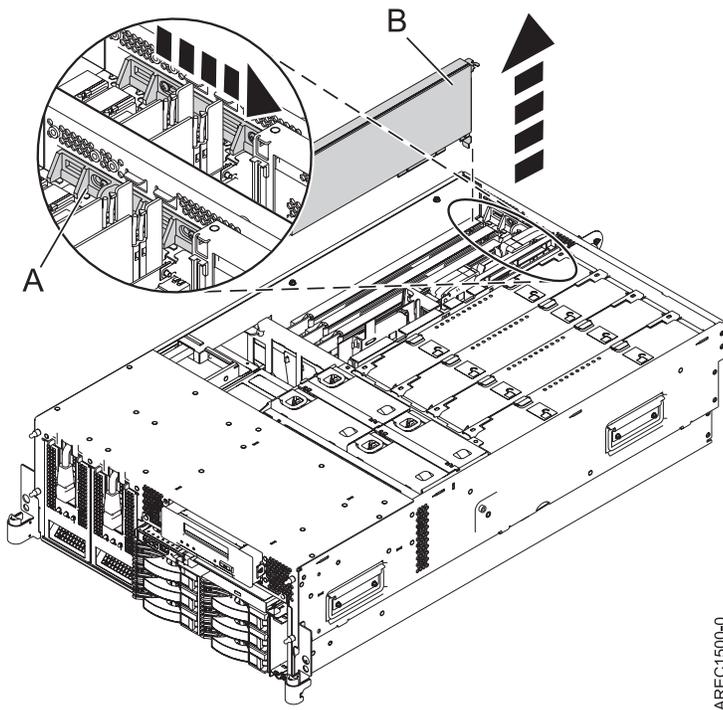

AREC1500-0

Figure 16. PCI adapter or filler plate removed from the rack-mounted system unit

13. Ensure the slot is empty.
14. Carefully grasp the adapter (A) by its top edge, and align the adapter with the expansion slot and its connector on the system backplane. See the following figure.
15. Press the adapter firmly into its connector.
16. Slide the adapter latch (B) back into place as shown in the following figure.

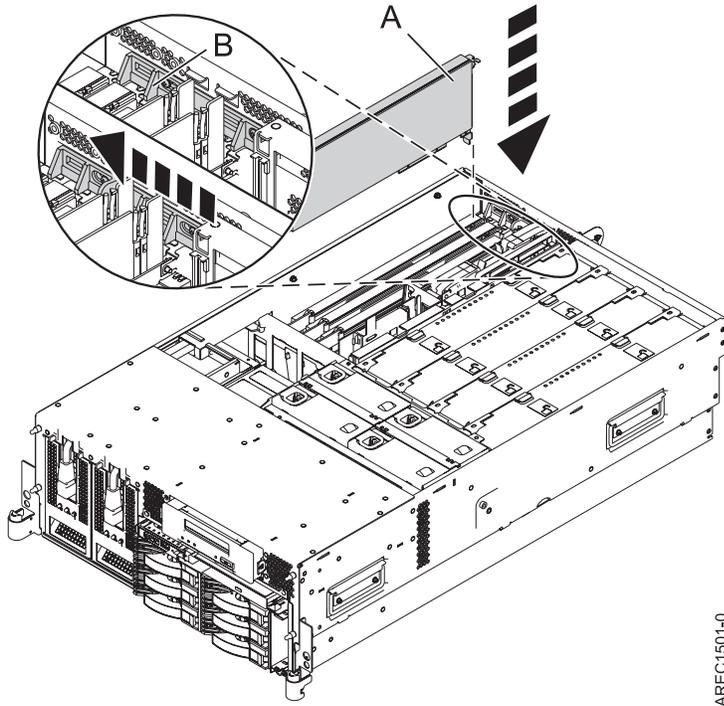


Figure 17. PCI adapter replaced in the rack-mounted system unit

17. Connect any adapter cables.
18. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
19. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
20. Reconnect the power source to the system.
21. Start the system or logical partition. Refer to Start the system or logical partition.
22. Verify that the new resource is functional.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in AIX

You can install a PCI adapter with the system power on in AIX.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power on in AIX, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Determine in which slot to place the PCI adapter. For system-specific adapter placement information, see the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. If necessary, remove the adapter expansion slot shield.
7. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

8. Place the adapter, component-side up, on a flat, antistatic surface.
9. Some PCI adapters are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.
10. Refer to “PCI hot-plug manager access for AIX” on page 253, and follow the steps in the access procedure to select **PCI Hot Plug Manager**. Then return here to continue.
11. From the PCI Hot-Plug Manager menu, select **Add a PCI Hot-Plug Adapter** and press Enter. The Add a Hot-Plug Adapter window displays.
12. Select the appropriate empty PCI slot from the ones listed on the screen, and press Enter.
13. Slide the adapter latch (**A**) into the open position, as shown in the following figure.

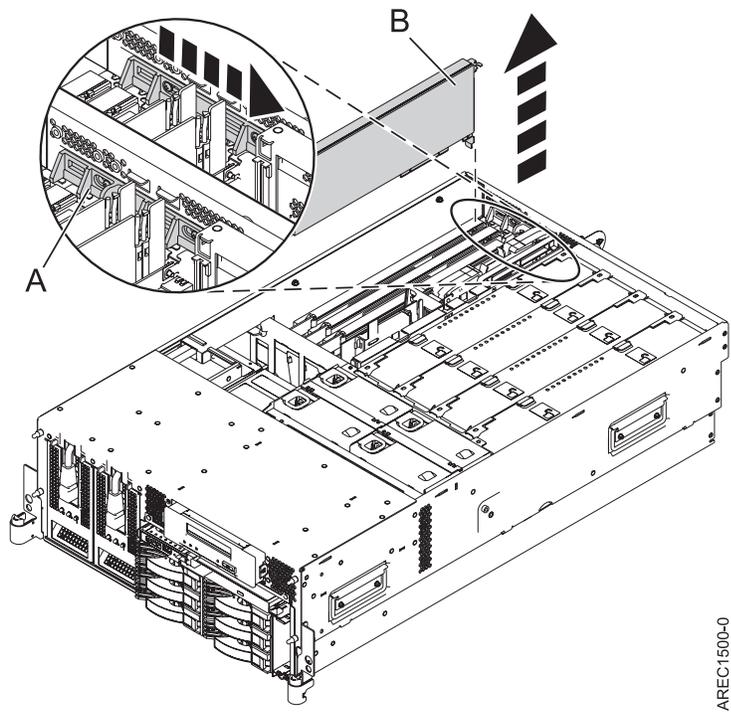


Figure 18. PCI adapter or filler plate removed from the rack-mounted system unit

14. Remove the adapter filler plate if one is present.
15. Follow the instructions on the screen to install the adapter until the LED for the specified PCI slot is set to the Action state. See "Component LEDs" on page 255.
16. When you are instructed to install the adapter in the adapter slot, carefully grasp the adapter by the edges and align the adapter **(A)** in the slot guides. Insert the adapter fully into the adapter slot connector. If you are installing a full-length adapter, ensure that both ends of the adapter engage the card guides.
17. Press the adapter firmly into its connector.
18. Slide the adapter latch **(B)** back into place as shown in the following figure.

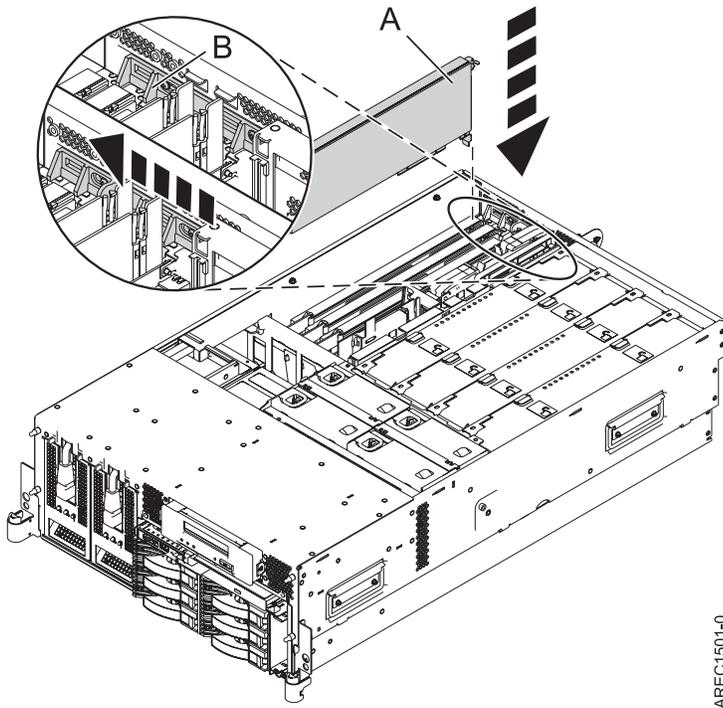


Figure 19. PCI adapter replaced in the rack-mounted system unit

19. Connect any adapter cables.
20. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
21. Run the `cfgmgr` command to configure the adapter.
22. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in IBM i

You can install a PCI adapter in the i operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

Important:

- If you are removing, installing, or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782)(CCIN 571F, 575B) topic before proceeding with the instructions provided here.


- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input output adapter (IOA), the external storage subsystem must be updated to use the world-wide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To install a PCI adapter with the system power on in the i operating system, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Determine in which slot to place the PCI adapter. For system-specific adapter placement information, see the PCI adapter placement for machine types 82xx and 91xx or PCI adapter placement for machine type 94xx.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. If necessary, remove the adapter expansion slot shield.
7. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.
8. Place the adapter, component-side up, on a flat, antistatic surface.
9. Some PCI adapter cards are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.
10. Type **strsst** on the command line of the Main Menu and then press Enter.
11. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display. Press Enter.
12. Select **Start a service tool** from the System Service Tools (SST) display and press Enter.
13. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
14. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
15. Type **9** (Hardware contained within package) in the **System Unit** or **Expansion Unit** field of the unit where you are replacing the card. Press Enter.
16. Select the option to **Include empty positions**.
17. Select **Concurrent Maintenance** on the card position where you want to replace the card and then press Enter.

18. Select the option to **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to install the adapter.
19. Select the option to **Toggle LED blink off/on** to stop the blinking LED.
20. Slide the adapter latch (**A**) into the open position, as shown in the following figure.

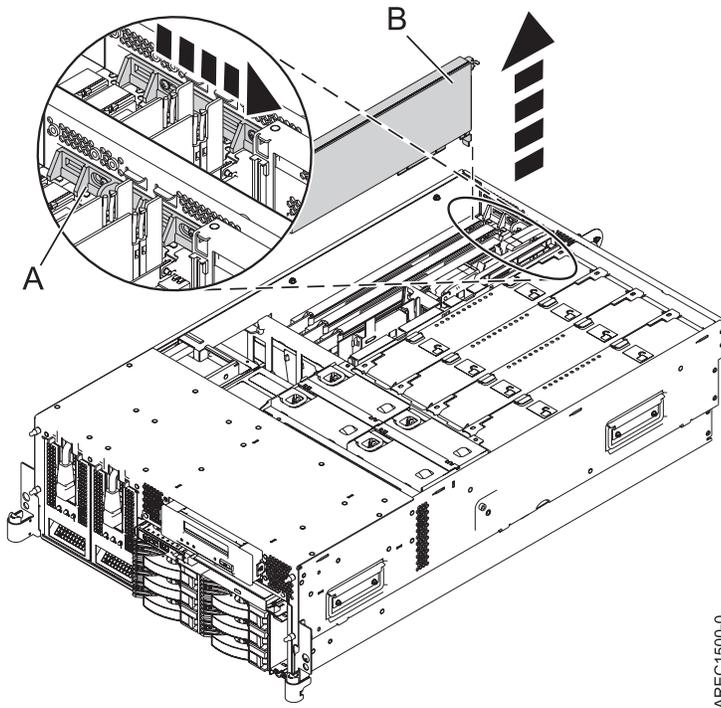

AREC1500-0

Figure 20. PCI adapter or filler plate removed from the rack-mounted system unit

21. Ensure that the slot is empty. Remove the adapter filler plate if one is present.
22. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
23. Press the adapter firmly into its connector.
24. Slide the adapter latch (**B**) back into place as shown in the following figure.

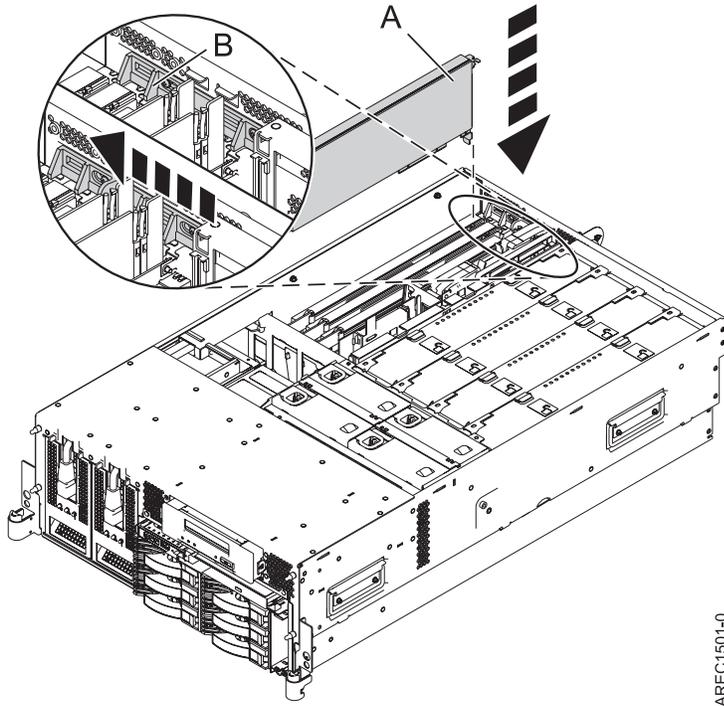


Figure 21. PCI adapter replaced in the rack-mounted system unit

25. Connect any adapter cables.
26. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
27. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
28. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
29. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
30. Verify that the new resource is functional. See Verify the installed part.

Related information

- Installing a feature using the Hardware Management Console
- Logical partitioning

Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in Linux

You can install a PCI adapter with the system power on in Linux.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power on in Linux, do the following steps:

1. Ensure that the system meets the “Prerequisites for hot-plugging PCI adapters in Linux” on page 256.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. “Verify that the Linux, hot-plug PCI tools are installed” on page 256.
4. Determine in which slot to place the PCI adapter. For system-specific adapter placement information, see the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
5. Perform the prerequisite tasks described in “Before you begin” on page 246.
6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
7. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
8. If necessary, remove the adapter expansion slot shield.
9. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

10. Place the adapter, component-side up, on a flat, antistatic surface.
11. Log in to the system console as the root user.
12. Run the `lsslot` tool to list the hot-plug PCI slots that are available in the server or partition:


```
lsslot -c pci -a
```

The following is an example of the information displayed by this command:

```
# Slot      Description      Device(s)
U7879.001.DQD014E-P1-C1 PCI-X capable, 64 bit, 133MHz slot Empty
U7879.001.DQD014E-P1-C4 PCI-X capable, 64 bit, 133MHz slot Empty
U7879.001.DQD014E-P1-C5 PCI-X capable, 64 bit, 133MHz slot Empty
```

Select the appropriate empty PCI slot from the ones listed by the command.

13. Slide the adapter latch (A) into the open position, as shown in the following figure.

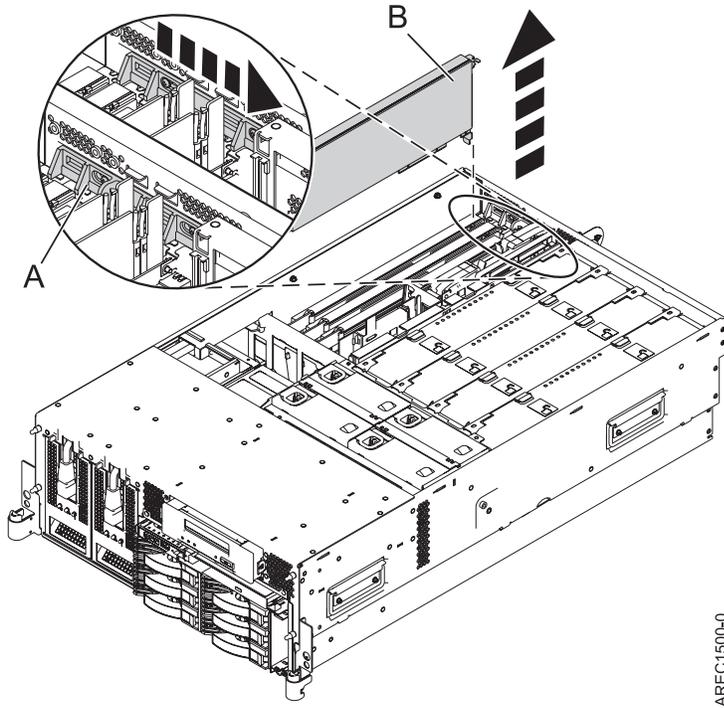

AREC1500-0

Figure 22. PCI adapter or filler plate removed from the rack-mounted system unit

14. Ensure the slot is empty. Remove the adapter filler plate if one is present.
 15. Run the `drslot_chrp_pci` command to enable an adapter to be installed. For example, to install an adapter into PCI slot U7879.001.DQD014E-P1-C3, enter the following command:

```
drslot_chrp_pci -a -s U7879.001.DQD014E-P1-C3
```

The following displays:
The visual indicator for the specified PCI slot has been set to the identify state. Press Enter to continue or enter x to exit.
 16. Press Enter.

The following displays:
The visual indicator for the specified PCI slot has been set to the action state. Insert the PCI card into the identified slot, connect any devices to be configured and press Enter to continue. Enter x to exit.
 17. When you are instructed to install the adapter (A) in the adapter slot, carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
 18. Press the adapter firmly into its connector.
- Attention:** When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.
19. Slide the adapter latch (B) back into place as shown in the following figure.

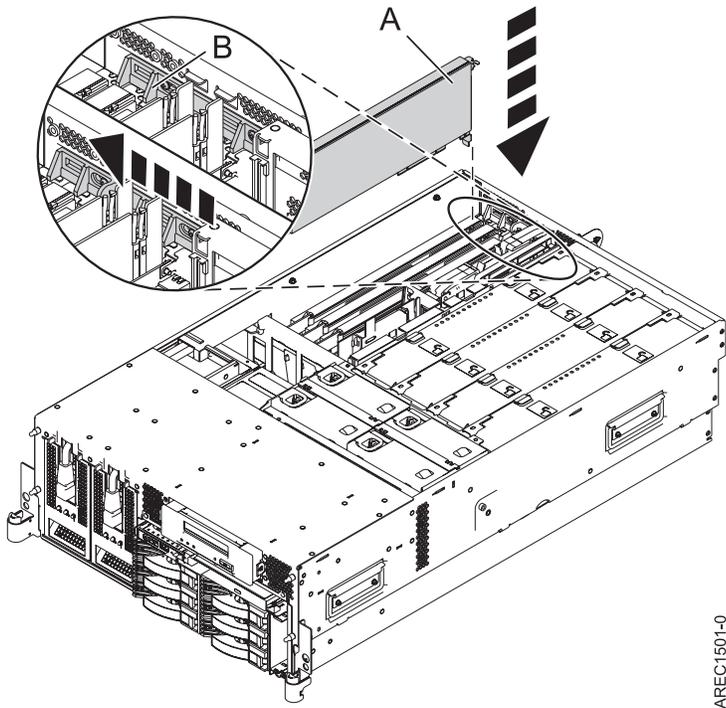


Figure 23. PCI adapter replaced in the rack-mounted system unit

20. Connect any adapter cables.

21. Run the `lsslot` command to verify that the slot is occupied.

For example, enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`

The following is an example of the information displayed by this command:

```
# Slot      Description      Device(s)
U7879.001.DQD014E-P1-C3 PCI-X capable, 64 bit, 133MHz slot 0001:40:01.0
```

22. If you are servicing a rack-mounted system, route the cables through the cable-management arm.

23. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:

- “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
- “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
- “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273

Related information

[Installing a feature using the Hardware Management Console](#)

[Logical partitioning](#)

Removing a PCI adapter from a model 8204-E8A or 9409-M50 server

You can remove a PCI adapter.

Important:

- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input/output adapter (IOA), the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5703, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA might have been altered or the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power off

You can remove a PCI adapter with the system power off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

To remove a PCI adapter with the system power off, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. Stop the system or logical partition.
5. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
7. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
8. Determine which adapter you plan to remove, then label and disconnect all cables attached to that adapter.
9. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system.

10. Slide the adapter latch (A) into the open position, as shown in the following figure.

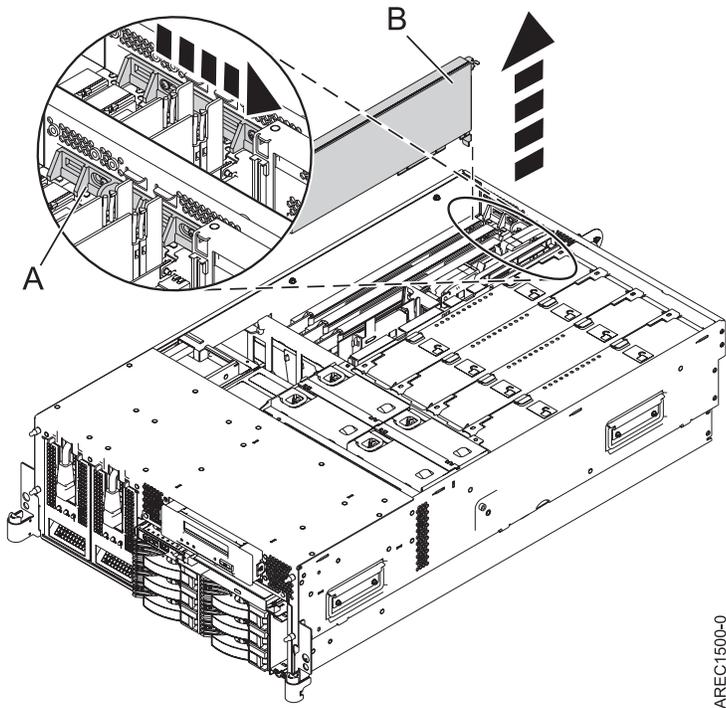


Figure 24. PCI adapter or filler plate removed from the rack-mounted system unit

11. Carefully grasp the PCI adapter (**B**) by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
12. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
13. If you plan to install another adapter into the vacated slot, go to “Replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power off” on page 54; otherwise, continue with the next step.
14. Seal the expansion slot using an expansion-slot cover.
15. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
16. Reconnect the power source to the system.
17. Start the system or logical partition. Refer to Start the system or logical partition.
18. To replace the PCI adapter, see “Replacing a PCI adapter in the 8204-E8A or 9409-M50 server” on page 54.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power on in AIX

You can remove a PCI adapter with the system power on in AIX.

To remove a failing adapter and replace it with the same adapter, see “Removing and replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in AIX” on page 55. If the adapter that is removed will be placed into a different slot or system, complete this removal procedure, then install the adapter as described in “Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in AIX” on page 35.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

Note: Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To remove a PCI adapter with the system power on in AIX, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. Determine which adapters you plan to remove.
7. Record the slot number and location of each adapter being removed. Adapter slots are numbered on the rear of the system unit.
8. Ensure that any processes or applications that might use the adapter are stopped.
9. Follow these steps to place the adapter in the action state using the PCI Hot-Plug Manager:
 - a. Enter the system diagnostics by logging in as root user or as the celogin user, type **diag** at the AIX command line.
 - b. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
 - c. At the FUNCTION SELECTION menu, select **Task Selection**, and then press Enter.
 - d. At the Task Selection list, select **PCI Hot Plug Manager**.

- e. Select **Unconfigure a Device**, and then press Enter.
 - f. Press F4 (or Esc +4) to display the **Device Names** menu.
 - g. Select the adapter you are removing in the **Device Names** menu.
 - h. Use the Tab key to answer NO to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, and then press Enter. The ARE YOU SURE window is displayed.
 - i. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the **Command** field at the top of the screen.
 - j. Press F4 (or Esc +4) twice to return to the Hot Plug Manager menu.
 - k. Select **Replace/remove PCI Hot Plug adapter**.
 - l. Select the slot that has the device to be removed from the system.
 - m. Select **Remove**. A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.
 - n. Label all cables attached to the adapter you plan to remove.
 - o. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
 - p. Disconnect all cables attached to the adapter you plan to remove.
10. Label, and then disconnect all cables attached to the adapter you plan to remove.
 11. Slide the adapter latch (A) into the open position, as shown in the following figure.

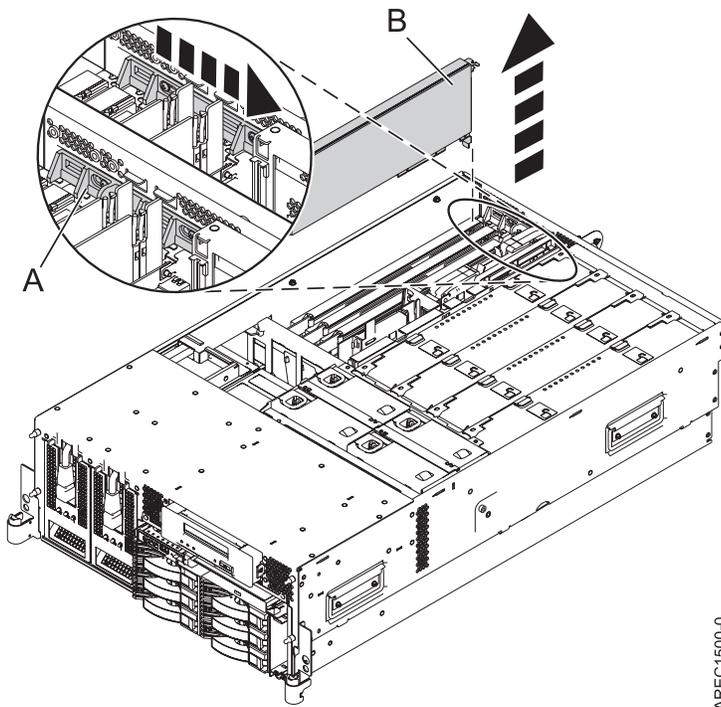


Figure 25. PCI adapter or filler plate removed from the rack-mounted system unit

12. Carefully grasp the PCI adapter (B) by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
13. If you plan to install another adapter into the vacated slot, go to "Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in AIX" on page 35; otherwise, continue with the next step.
14. Seal the expansion slot using an expansion-slot cover.
15. Lower the plastic retainer seat over the PCI adapter faceplate.

16. Rotate the locking latch clockwise until it clicks into the locked position.
17. Continue to follow the screen instructions until you receive a message that the adapter removal is successful. Successful removal is indicated by the OK message displayed next to the Command field at the top of the screen.
18. If you have other adapters to remove, press the F3 key to return to the PCI Hot-Plug Manager menu and then return to step 10 on page 48.
OR
If you do not have other adapters to remove, continue with the next step.
19. Press F10 to exit the Hot-Plug Manager.
20. Run the diag -a command. If the system responds with a menu or prompt, follow the instructions to complete the device configuration.
21. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
22. To replace the PCI adapter, see “Replacing a PCI adapter in the 8204-E8A or 9409-M50 server” on page 54.

Related information

-  [Installing a feature using the Hardware Management Console](#)
-  [Logical partitioning](#)

Removing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in IBM i

You can remove a PCI adapter with the system power on in the i operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

Important:

- If the adapter is the load source I/O adapter (IOA) or the load source I/O processor (IOP), or any other storage IOA or IOP with critical disk storage attached for the system or partition, follow the on-screen instructions when you use HSM to power down the IOP or IOA. Instructions to use functions 68 and 69 on the control panel will be included.
- If the adapter is the console IOA or the console IOP for the system or partition, you must perform the maintenance from an IBM i operating system session connected through a different IOA or IOP, or you must power down the partition to perform maintenance.
- If you are removing, installing, or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782) (CCIN 571F, 575B) topic before proceeding with the instructions provided here.
- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel IOA, the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are

replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To remove a PCI adapter with the system power on in i, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. Type **strsst** on the command line of the Main Menu and press Enter.
7. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display. Press Enter.
8. Select **Start a service tool** from the System Service Tools (SST) display. Press Enter.
9. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
10. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
11. Type **9** (Hardware contained within package) in the **System Unit** or **Expansion Unit** field of the unit where you are removing the card, and then press Enter.
12. Select the option to **Include empty positions**.
13. Select **Concurrent Maintenance** on the card position where you want to remove the card and then press Enter.
14. Select the option to **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to remove the adapter.
15. Select the option to **Toggle LED blink off/on** to stop the blinking LED.
16. Select the option to **Power off domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
17. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power off complete
18. Label and then disconnect all cables attached to the adapter you plan to remove.
19. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system.

20. Slide the adapter latch (**A**) into the open position, as shown in the following figure.

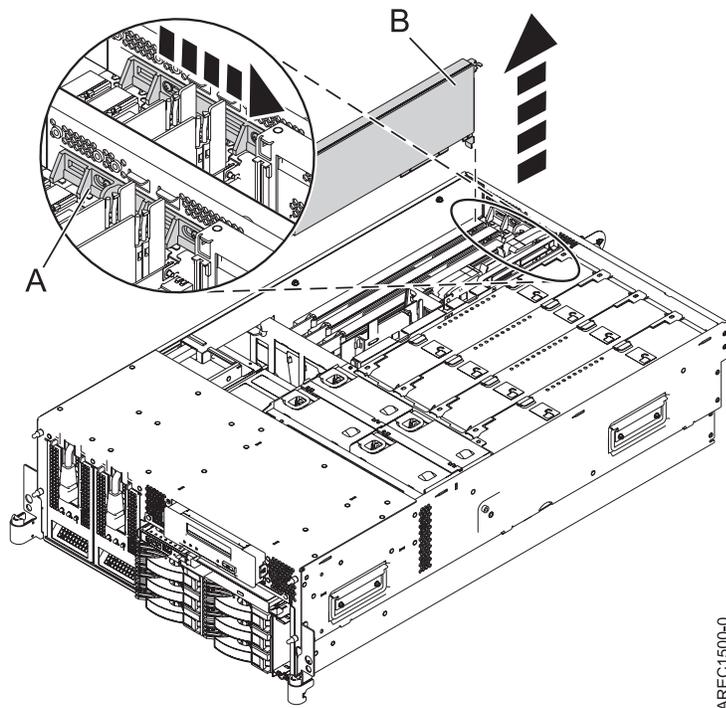


Figure 26. PCI adapter or filler plate removed from the rack-mounted system unit

21. Carefully grasp the PCI adapter (**B**) by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
22. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
23. If you plan to install another adapter into the vacated slot, go to “Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in IBM i” on page 38; otherwise, continue with the next step.
24. Seal the expansion slot using an expansion-slot cover.
25. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
26. To replace the PCI adapter, see “Replacing a PCI adapter in the 8204-E8A or 9409-M50 server” on page 54.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power on in Linux

You can remove a PCI adapter with the system power on in Linux.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

To remove a PCI adapter with the system power on in Linux, do the following steps:

1. Ensure that the system meets the “Prerequisites for hot-plugging PCI adapters in Linux” on page 256.
2. “Verify that the Linux, hot-plug PCI tools are installed” on page 256.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
5. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
7. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
8. Determine which adapter you plan to remove, then label and disconnect all cables attached to that adapter.
9. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system.

10. Label, and then disconnect all cables attached to the adapter you plan to remove.

Note: Before performing a PCI hot-plug removal of storage devices, ensure file systems on those devices are unmounted.

11. Run the `drslot_chrp_pci` command to enable an adapter to be removed:

For example, to remove the PCI adapter in slot U7879.001.DQD014E-P1-C3, run this command:

```
drslot_chrp_pci -r -s U7879.001.DQD014E-P1-C3
```

Follow the instructions on the display to complete the task.

12. Slide the adapter latch (A) into the open position, as shown in the following figure.

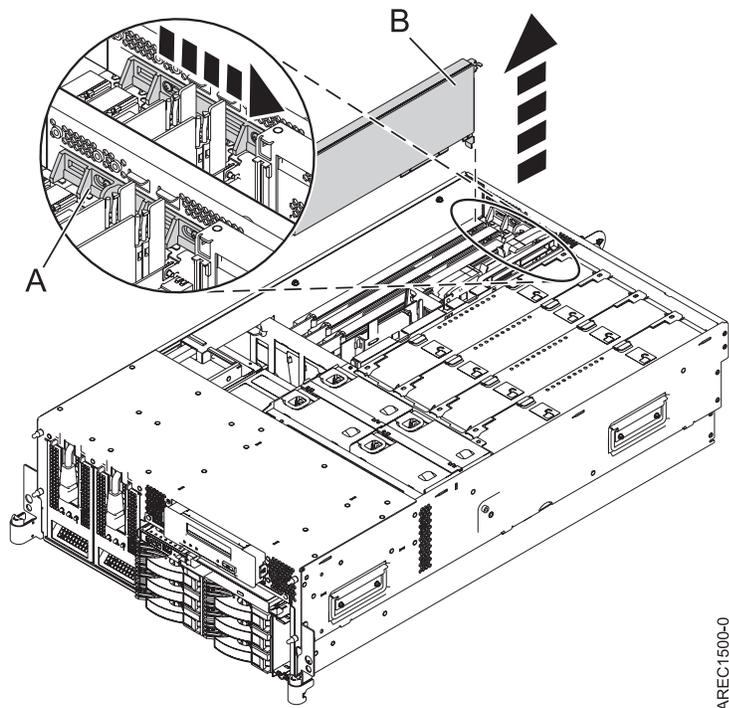


Figure 27. PCI adapter or filler plate removed from the rack-mounted system unit

13. Carefully grasp the PCI adapter (**B**) by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
14. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
15. If you plan to install another adapter into the vacated slot, go to “Replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in Linux” on page 61; otherwise, continue with the next step.
16. Seal the expansion slot using an expansion-slot cover.
17. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
18. Reconnect the power source to the system.
19. Start the system or logical partition. Refer to Start the system or logical partition.
20. To replace the PCI adapter, see “Replacing a PCI adapter in the 8204-E8A or 9409-M50 server” on page 54.

Related information

- 🔗 Installing a feature using the Hardware Management Console
- 🔗 Logical partitioning

Replacing a PCI adapter in the 8204-E8A or 9409-M50 server

You can replace a PCI adapter.

Related information

- 🔗 Installing a feature using the Hardware Management Console
- 🔗 Logical partitioning

Replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power off

You can replace a PCI adapter with the system power off.

You must have already completed the procedure “Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power off” on page 45 in order to have the slot powered off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

To replace a PCI adapter with the system power off, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Place the adapter, component-side up, on a flat, static-protective surface.
5. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
6. Press the adapter **(A)** firmly into its connector.

Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

7. Slide the adapter latch **(B)** back into place as shown in the following figure.

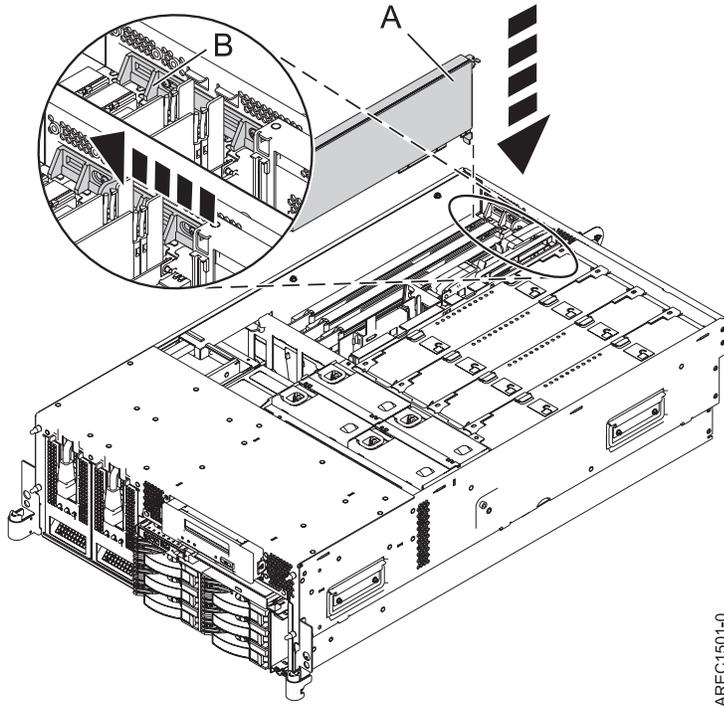

AREC1501-0

Figure 28. PCI adapter replaced in the rack-mounted system unit

8. Connect the adapter cables.
9. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
10. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
11. Reconnect the power source to the system.
12. Start the system or logical partition. Refer to Start the system or logical partition.
13. Verify that the new resource is functional. See Verify the installed part.

Related information

 Installing a feature using the Hardware Management Console

 Logical partitioning

Removing and replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in AIX

You can replace a PCI adapter with the system power on in AIX.

Read the following notes to determine if this is the correct procedure for the task to be performed.

Notes:

- If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

- Use this procedure if you intend to remove a failing PCI adapter and replace it with the same type of adapter.
- If you plan to remove a failing adapter and leave the slot empty, see “Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power on in AIX” on page 47.
- This procedure should not be used to remove an existing adapter and install a different type of adapter. To install a different adapter, remove the existing adapter as described in “Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power on in AIX” on page 47, then install the new adapter as described in “Installing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in AIX” on page 35.
- Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To replace a PCI adapter with the system power on in AIX, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
5. If you are installing, removing, or replacing a PCI adapter in a stand-alone system unit, follow these steps to remove the units cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
6. Determine which adapters you plan to remove.
7. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system unit.

8. Ensure that any processes or applications that might use the adapter are stopped.
9. Enter the system diagnostics by logging in as root user or as the celogin user, type **diag** at AIX command line.
10. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
11. At the FUNCTION SELECTION menu, select **Task Selection**, then press enter.
12. At the Task Selection list, select **PCI Hot Plug Manager**.
13. Select **Unconfigure a Device**, then press Enter.
14. Press F4 (or Esc +4) to display the **Device Names** menu.
15. Select the adapter you are removing in the **Device Names** menu.
16. Use the Tab key to answer YES to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, then press Enter.

17. The **ARE YOU SURE** screen displays. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the Command field at the top of the screen.
18. Press F3 (or Esc +3) twice to return to the **Hot Plug Manager** menu.
19. Select **Replace/remove PCI Hot Plug adapter**.
20. Select the slot that has the device to be removed from the system.
21. Select **Replace**.

Note: A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.

22. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
23. Label, and then disconnect all cables attached to the adapter you plan to remove.
24. Slide the adapter latch (A) into the open position, as shown in the following figure.

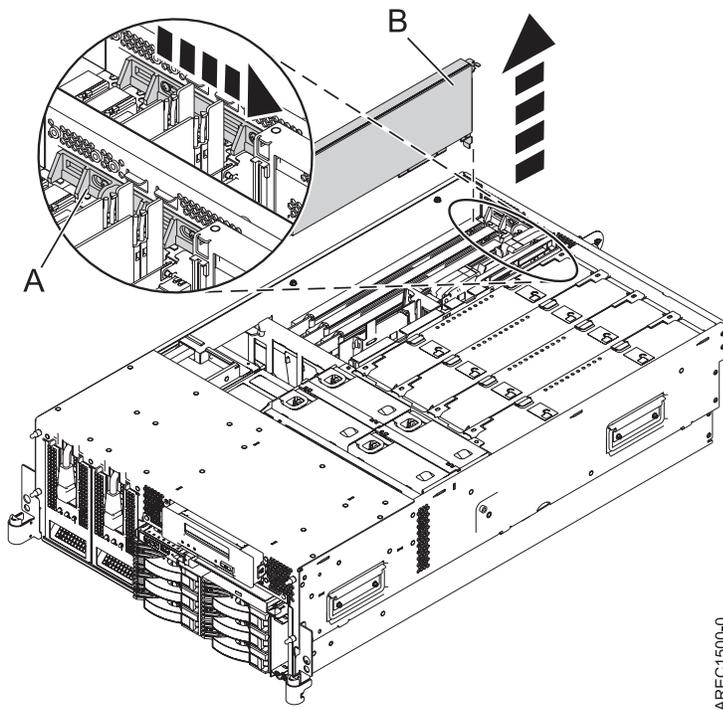


Figure 29. PCI adapter or filler plate removed from the rack-mounted system unit


25. Carefully grasp the PCI adapter (B) by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.
26. If necessary, remove the replacement adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

27. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
28. Press the adapter (A) firmly into its connector. See the following figure.

Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

29. Slide the adapter latch (B) back into place as shown in the following figure.

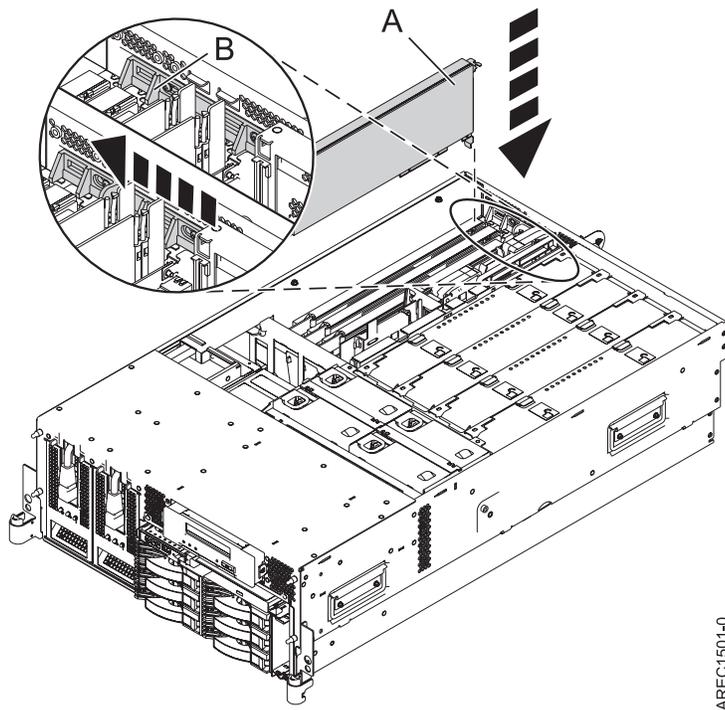

AREC1501-0

Figure 30. PCI adapter replaced in the rack-mounted system unit

30. Connect the adapter cables.
31. Press enter and continue to follow the instructions in the system diagnostics until you receive a message that the replacement is successful. Successful replacement is indicated by the OK message displayed next to the **Command** field at the top of the menu.
32. Press the F3 (or Esc+3) key to return to the **PCI Hot-Plug Manager** menu.
33. Press the F3 (or Esc+3) key to return to the **TASK** selection list.
34. Select **Log Repair Action**.
35. Select the resource just replaced, press Enter, press Commit (F7 or ESC 7), then press Enter.
36. Press F3 (or Esc+3) to return to **TASK Selection List**.
37. Select **Hot Plug Task**, press enter.
38. Select **PCI Hot Plug Manager**, then select **Configure a defined device**, then press Enter.
39. Select the device just replaced from the list, then press Enter. The device is now configured.
40. Press the F10 key to exit the diagnostic program.

Note: If you are running the stand-alone diagnostics, do not exit the program completely.

41. Verify the PCI adapter by using the following instructions:
 - a. Did you replace the adapter with the system power on?
 - Yes - Go to the next step.
 - No - Load the diagnostic program by doing the following:
 - If AIX is available, boot AIX, log in as root or CELOGIN, then enter the **diag** command.
 - If AIX is not available, boot the stand-alone diagnostics
 - b. Type the **diag** command if you are not already displaying the diagnostic menus
 - c. Select **Advance Diagnostic Routines**, then select **Problem Determination**.

- d. Select the name of the resource just replaced from the menu. If the resource just replaced is not shown, choose the resource associated with it. Press Enter, then press **Commit** ((F7 or Esc+7)).
 - e. Did the Problem Determination identify any problems?
 - No: Continue to the next step.
 - Yes: A problem is identified
 - If you are a customer, record the error information, then contact your service provider.
 - If you are an authorized service provider, return to map 210-5.
42. Press the F10 key to exit the diagnostic program.
43. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
- “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
44. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in IBM i

You can replace a PCI adapter with the system power on in the i operating system.

Attention: You must have already completed the procedure “Removing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in IBM i” on page 49 in order to have the slot powered off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

Important:

- If the adapter is the load source I/O adapter (IOA) or the load source I/O processor (IOP), or any other storage IOA or IOP with critical disk storage attached for the system or partition, follow the on-screen instructions when you use HSM to power down the IOP or IOA. Instructions to use functions 68 and 69 on the control panel will be included.
- If the adapter is the console IOA or the console IOP for the system or partition, you must perform the maintenance from an IBM i operating system session connected through a different IOA or IOP, or you must power down the partition to perform maintenance.
- If you are removing, installing, or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782) (CCIN 571F, 575B) topic before proceeding with the instructions provided here.
- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel IOA, the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are

replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To replace a PCI adapter with the system power on in the i operating system, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
5. Press the adapter **(A)** firmly into its connector.

Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

6. Slide the adapter latch **(B)** back into place as shown in the following figure.

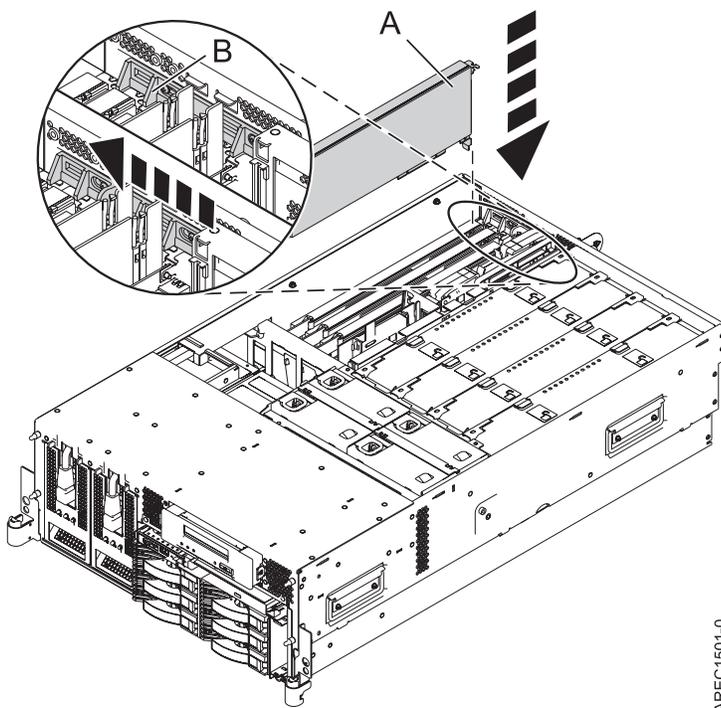

AREC1501-0

Figure 31. PCI adapter replaced in the rack-mounted system unit

7. Connect the adapter cables.
8. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
9. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
10. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete

11. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
12. Verify that the new resource is functional. See Verify the installed part.

Replacing a PCI adapter in the 8204-E8A or 9409-M50 server, with the power on in Linux

You can replace a PCI adapter with the system power on in Linux.

You must have already completed the procedure “Removing a PCI adapter from the 8204-E8A or 9409-M50 server, with the power on in Linux” on page 51.

To replace a PCI adapter with the system power on in Linux, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Place the adapter, component-side up, on a flat, static-protective surface.
5. Run the `drsslot_chrp_pci` command to enable an adapter to be replaced:
For example, to replace the PCI adapter in slot U7879.001.DQD014E-P1-C3 run this command:

```
drsslot_chrp_pci -R -s U7879.001.DQD014E-P1-C3
```


Follow the instructions on the display to complete the task.
6. Press the adapter firmly into its connector.

Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

7. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
8. Press the adapter **(A)** firmly into its connector.

Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

9. Slide the adapter latch **(B)** back into place as shown in the following figure.

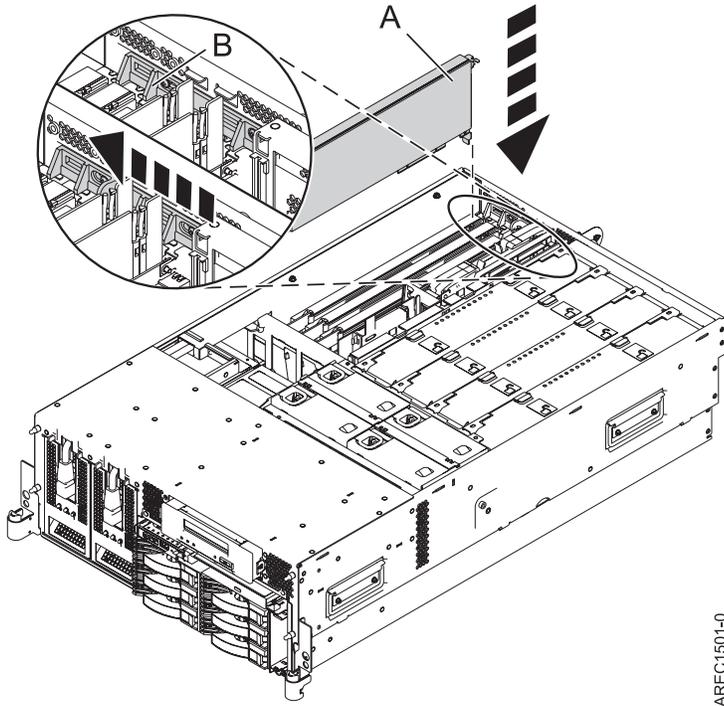


Figure 32. PCI adapter replaced in the rack-mounted system unit

10. Connect the adapter cables.
11. Run the `lsslot` command to verify that the slot is occupied.
 For example, Enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`
 The following is an example of the information displayed by this command:

# Slot	Description	Device(s)
U7879.001.DQD014E-P1-C3	PCI-X capable, 64 bit, 133MHz slot	0001:40:01.0
12. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
13. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
14. Verify that the new resource is functional. See Verify the installed part.

Related information

- [Installing a feature using the Hardware Management Console](#)
- [Logical partitioning](#)

Model 8204-E8A and 9409-M50 PCI adapter dividers

You might need to remove, replace, or install PCI adapter dividers. Use the procedures in this section to perform these tasks.

Removing a PCI adapter divider from a model 8204-E8A or 9409-M50 server

You can remove a PCI adapter divider.

The following procedure describes the removal of PCI adapter dividers with the system power off. This procedure can be done with the system power on by omitting the steps related to powering off the system.

To remove a divider, do the following steps:

1. Perform prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Stop the system or logical partition. See Stop the system or logical partition.
4. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

5. If you are installing or removing a PCI adapter divider in a rack-mounted system, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - a. Open the front rack door.
 - b. Place the system unit in the service position. See “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
 - c. Remove or open the service access cover as follows: “Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
6. If you are installing or removing a PCI adapter divider in a stand-alone system unit, follow these steps to remove the unit’s cover: “Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 272.
7. Flex the front edge **(A)** of the PCI adapter divider out of the bracket and toward the rest of the divider.
8. Pull the back edge of the divider away from the retention notches **(B)**.

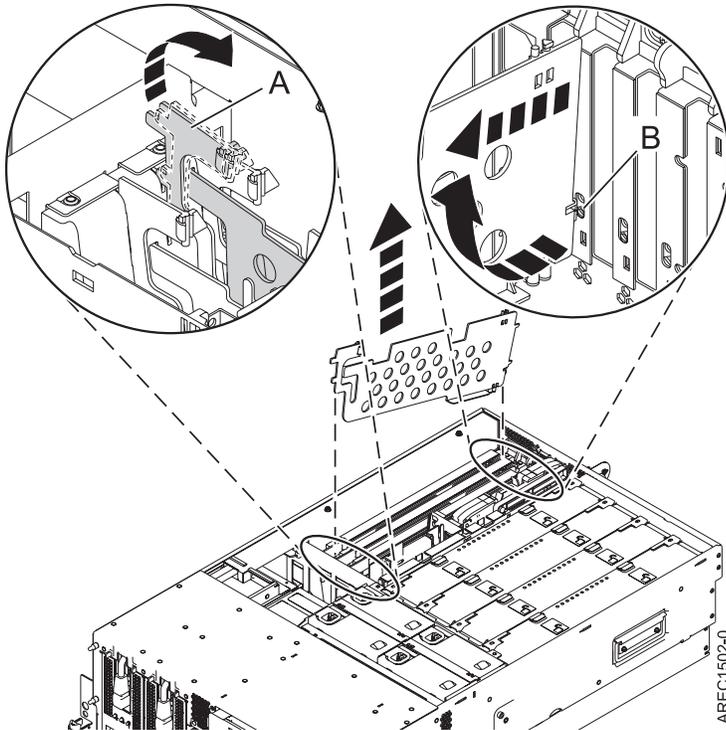


Figure 33. PCI-adapter divider removed from the system unit

9. If you are removing the PCI adapter divider as part of another procedure, return to that procedure now. To replace the divider, see “Installing a PCI adapter divider in the 8204-E8A or 9409-M50 server.” To close up the system, continue to the next step.
10. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
11. Reconnect the power source to the system.
12. Start the system or logical partition. Refer to Start the system or logical partition.

Related information

- 🔗 [Installing a feature using the Hardware Management Console](#)
- 🔗 [Logical partitioning](#)

Installing a PCI adapter divider in the 8204-E8A or 9409-M50 server

You can install a PCI adapter divider.

The following procedure describes the installation of a PCI adapter divider with the system power off. This procedure can be done with the system power on by omitting the steps related to powering on the system.

To install a divider, do the following steps:

1. Locate the PCI adapter divider slot that you want to use. To access the divider slots, see the first 6 steps in “Removing a PCI adapter divider from a model 8204-E8A or 9409-M50 server” on page 63.
2. Carefully grasp the PCI adapter divider by its top edge and align the back edge of the divider with the retention notches (A).
3. Insert the front edge of the divider (B) into the slots and then press the divider into place.

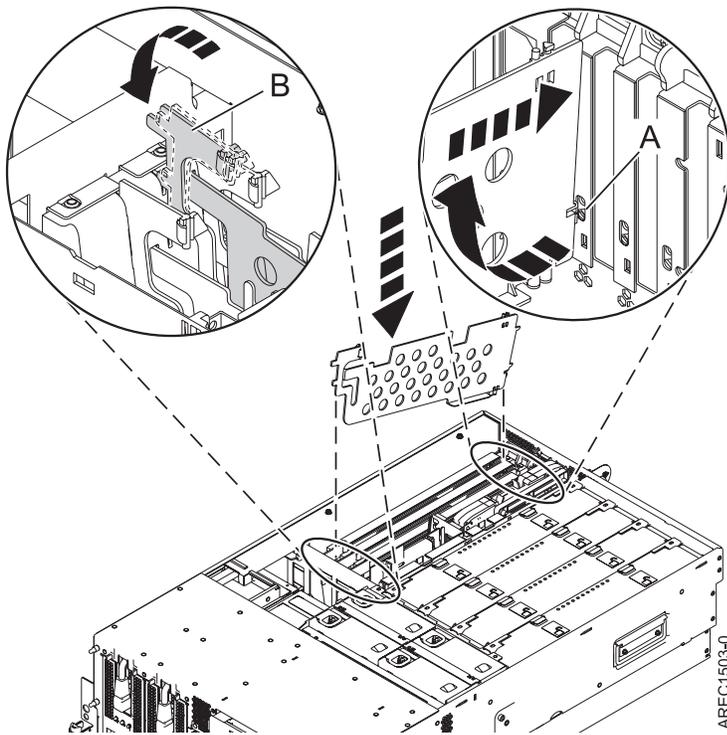


Figure 34. PCI-adapter divider replaced in the system unit

4. Replace or close the service access cover and, if applicable, return the system to the operating position. Refer to the following procedures as needed:
 - “Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 271
 - “Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position” on page 288
 - “Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50” on page 273
5. Reconnect the power source to the system.
6. Start the system or logical partition. Refer to Start the system or logical partition.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters, and cassettes

You can remove, replace, or install PCI adapter cassettes.

Notes:

- Models 9119-FHA and 9125-F2A should only be serviced by authorized service providers.
- If you are installing a PCI adapter in an expansion unit that does not use cassettes, see the expansion-unit procedures in Expansion units that do not use cassettes. “Expansion units that do not use cassettes” on page 195
- If you are installing feature code 3650 or 3651, you might find it difficult to insert and plug in the card assembly. If you encounter this problem see the topic Installing feature code 3650 or 3651 in the 9406-MMA.

Related concepts

“Expansion units that do not use cassettes” on page 195

You might need remove, replace, or install PCI adapters in expansion units that do not use cassettes.

“Installing feature code 3650 or 3651 in the 9406-MMA” on page 257

When you install feature code 3650 or 3651, you might find it difficult to insert and plug in the card assembly. This situation is caused by the interference of a bracket that is installed within the enclosure.

Installing a PCI adapter contained in a cassette

You can install a PCI adapter.

Installing a PCI adapter contained in a cassette with the power off

You can install a PCI adapter.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.


To install an adapter with the system power off, do the following steps:

1. Perform prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. To determine in which slot to place the PCI adapter, refer to the placement guide for information regarding slot restrictions for the adapters that can be used in this system. See the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
4. Stop the system or logical partition. See Stop the system or logical partition.
5. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.


6. If you are installing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable.

7. If you are installing a PCI adapter in a stand-alone expansion unit, remove the unit's back cover, if applicable.
8. Determine the location of PCI adapter in the system.
9. Lift up the PCI adapter EMC shield (A) as shown in Figure 35 and then rotate it up and away from the cassette as shown in Figure 36 on page 68.

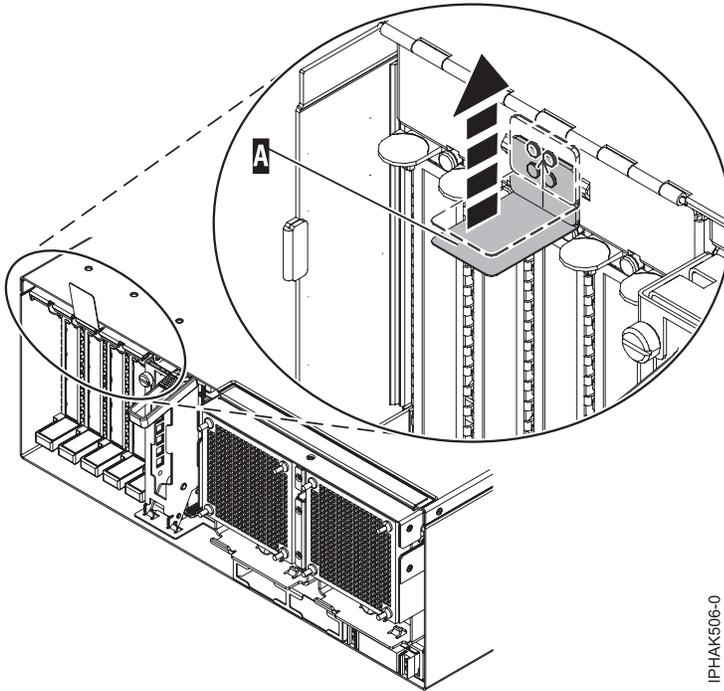

IPHAK506-0

Figure 35. Lift up the EMC shield

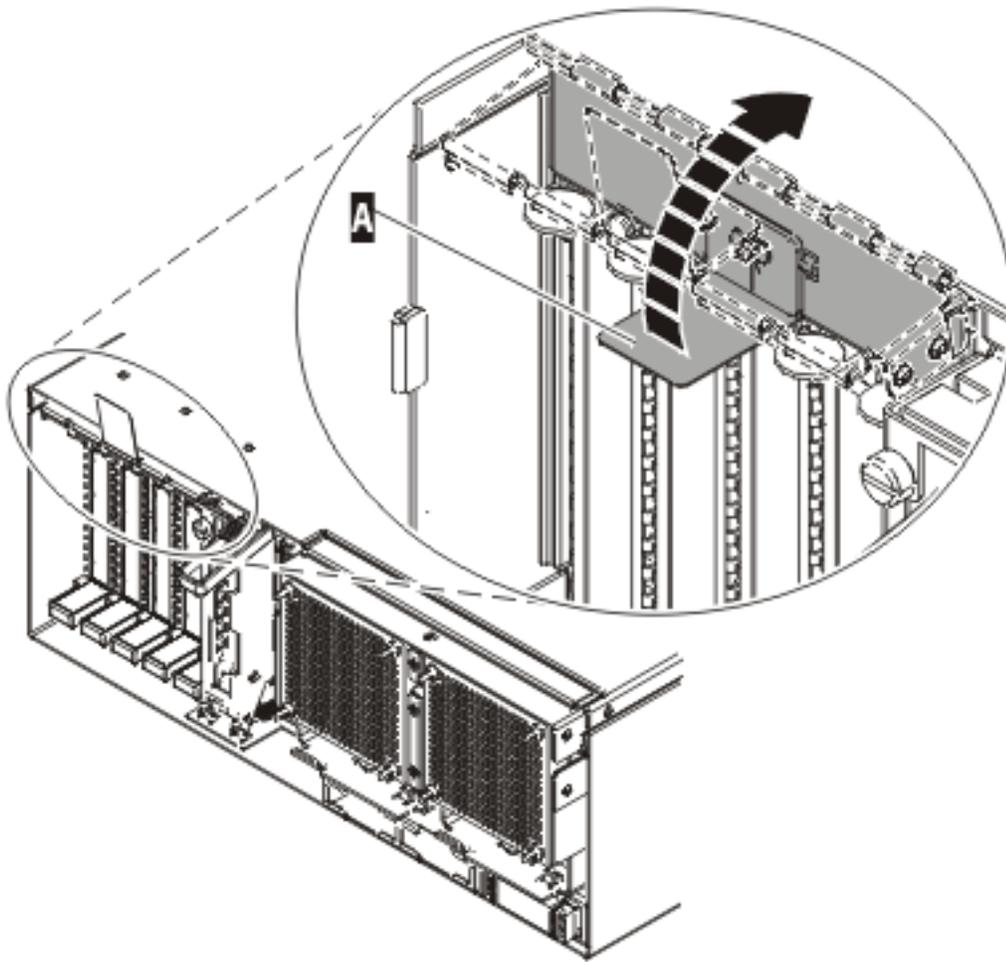

IPHAK907-0

Figure 36. Rotate the EMC shield into the open position

10. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.


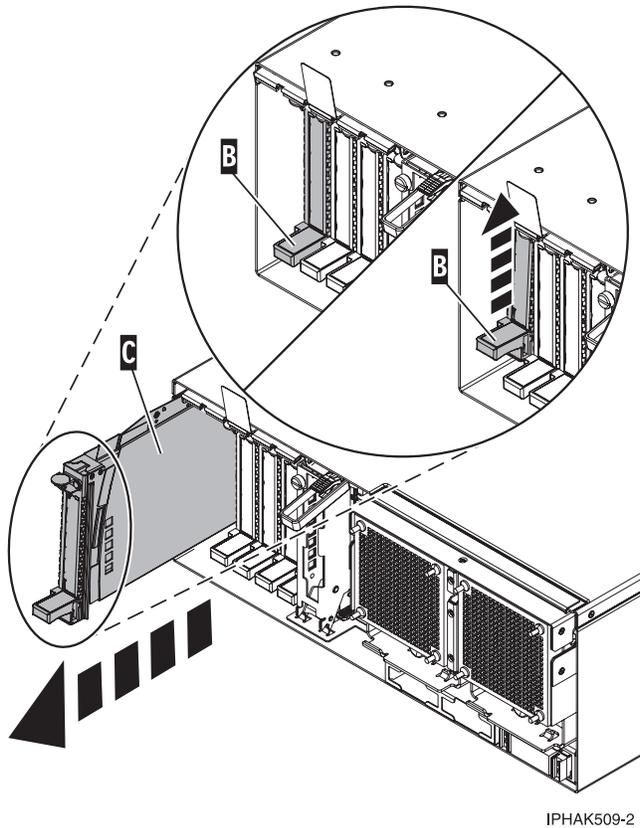


Figure 37. PCI adapter cassette removed from the system unit


11. Install the adapter into the PCI adapter cassette. See the following topics:
 - “PCI adapter single-width cassette” on page 119
 - “PCI adapter double-wide cassette” on page 145
12. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be locked in the system.
13. Lift and hold the PCI adapter EMC shield in the open position. See Figure 35 on page 67 and Figure 36 on page 68.
14. Slide the cassette (C) into the cassette slot as shown in the following figure.
15. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle (B) to lock the adapter in its connector.

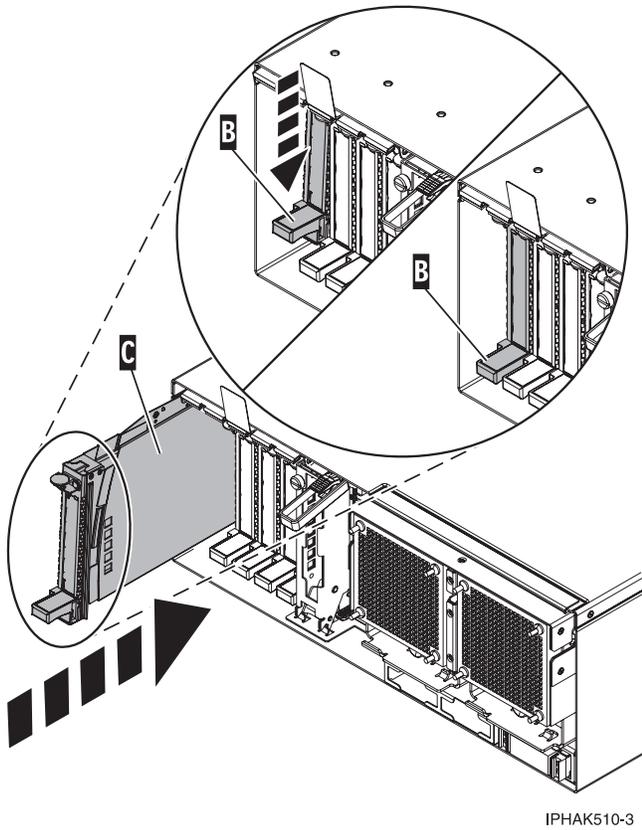

IPHAK510-3

Figure 38. PCI adapter cassette removed from the system unit

16. Lower the PCI adapter EMC shield (A) into the closed position, close the shield latch, then close the rear rack door.

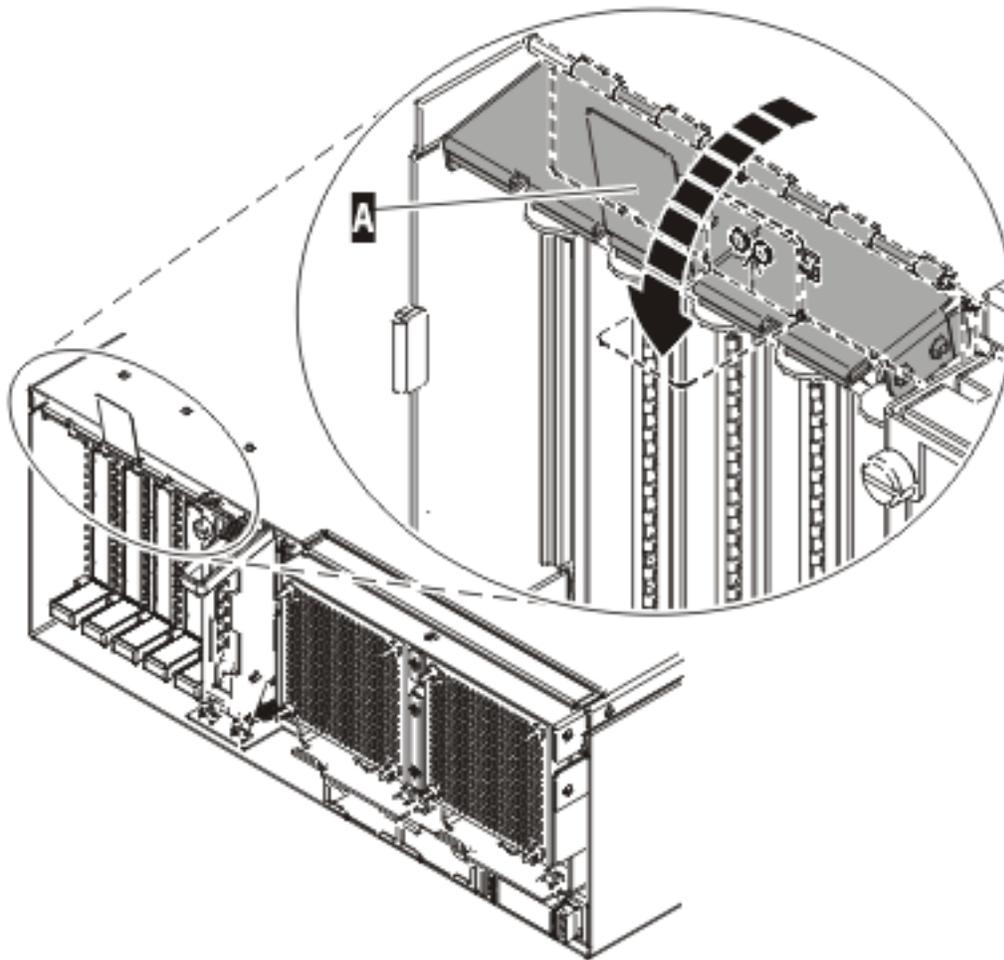

IPHAK508-0

Figure 39. PCI adapter EMC shield in the closed position

17. Start the system or logical partition. Refer to Start the system or logical partition.

18. Verify that the new resource is functional. See Verify the installed part.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

🔗 Installing a feature using the Hardware Management Console

🔗 Logical partitioning

Installing a PCI adapter contained in a cassette with the power on in AIX


You can install a PCI adapter with the power on in AIX.

Note: If the system is partitioned, see the Logical partitioning topic to learn more about working in a partitioned environment, and then return here to continue the procedure.

To install an adapter with the system power on in AIX, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.

2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. To determine in which slot to place the PCI adapter, refer to the placement guide for information regarding slot restrictions for the adapters that can be used in this system. See the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
4. If you are installing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable.
5. If you are installing a PCI adapter in a stand-alone expansion unit, remove the units back cover, if applicable.
6. Refer to “PCI hot-plug manager access for AIX” on page 253, and follow the steps in the access procedure to select **PCI Hot Plug Manager**. Then return here to continue.
7. From the PCI Hot-Plug Manager menu, select **Add a PCI Hot-Plug Adapter** and press Enter. The Add a Hot-Plug Adapter window displays.
8. Select the appropriate PCI slot from the ones listed on the screen, and press Enter.
9. Locate the PCI adapter slot and cassette you want to use.
10. If the cassette you want to use does not contain a PCI adapter, continue to the next step. If the cassette you want to use does contain an active PCI adapter, see “Removing a PCI adapter contained in a cassette from the system with the power on in AIX” on page 91.
11. Lift up the PCI adapter EMC shield (**A**) as shown in Figure 40 and then rotate it up and away from the cassette as shown in Figure 41 on page 73.

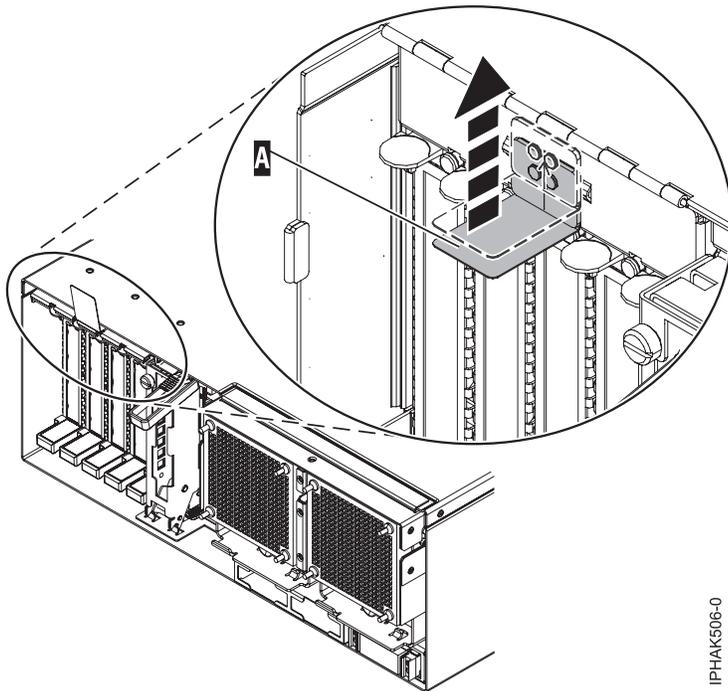

IPHAK506-0


Figure 40. Lift up the EMC shield

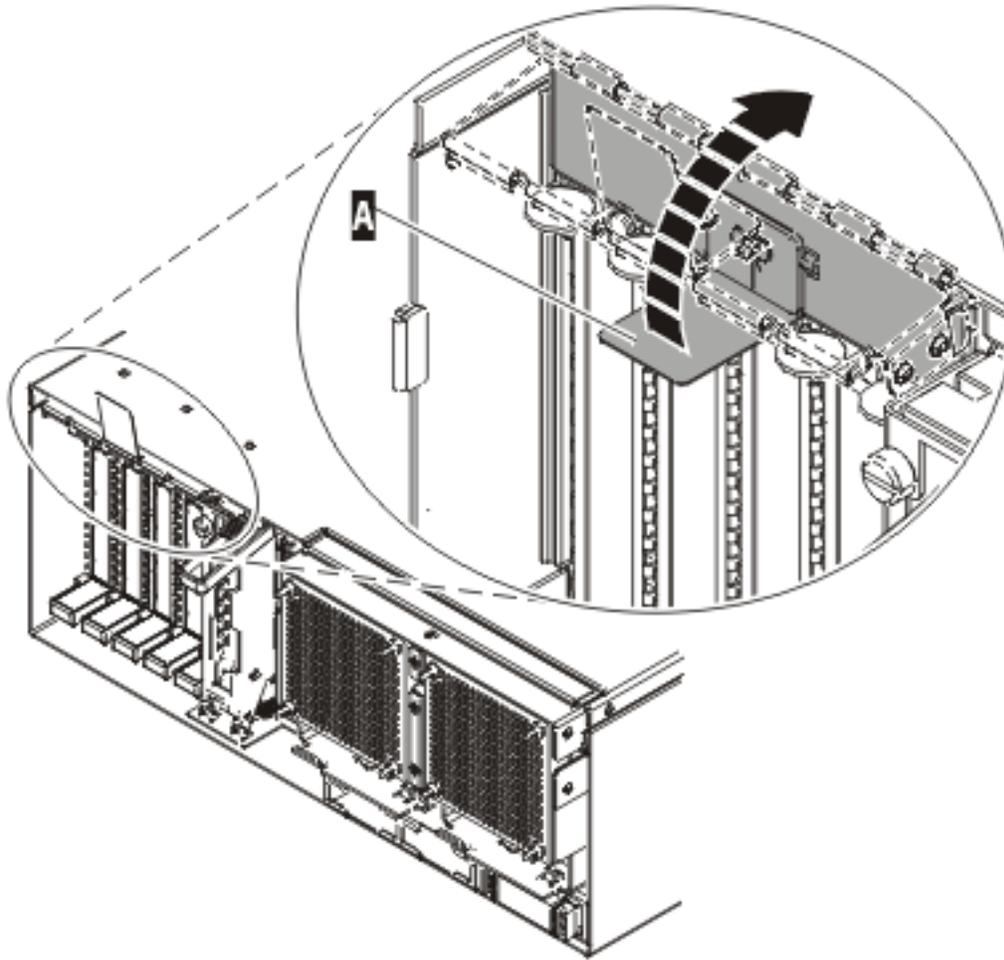

IPHAK907-0

Figure 41. Rotate the EMC shield into the open position


12. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.

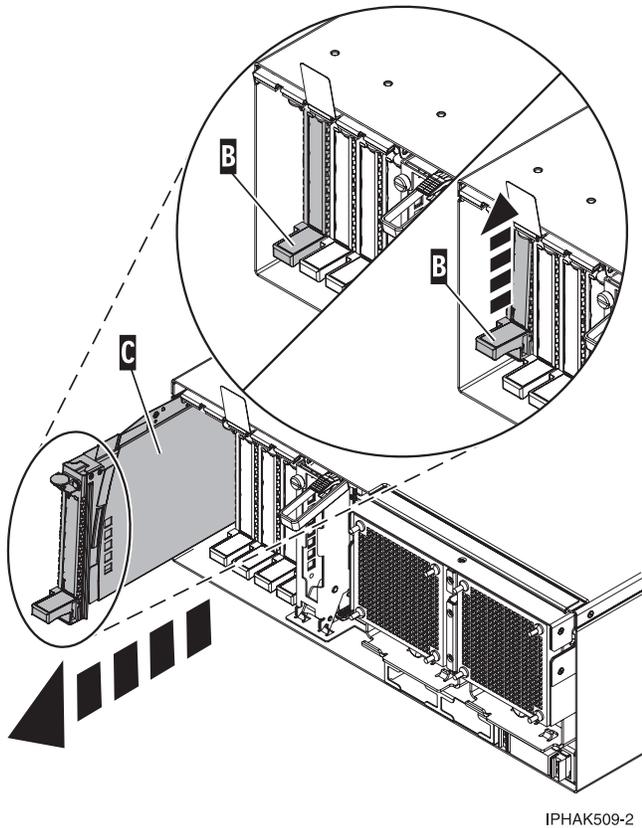

IPHAK509-2

Figure 42. PCI adapter cassette removed from the system unit.


13. Install the adapter into the PCI adapter cassette. See the following topics:
 - “PCI adapter single-width cassette” on page 119
 - “PCI adapter double-wide cassette” on page 145
14. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.
15. Lift and hold the PCI adapter EMC shield in the open position. See Figure 40 on page 72 and Figure 41 on page 73.
16. Follow the instructions on the screen to install the adapter until the LED for the specified PCI slot is set to the Action state. See “Component LEDs” on page 255.
17. Slide the cassette (C) into the cassette slot as shown in the following figure.
18. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle (B) to lock the adapter in its connector.

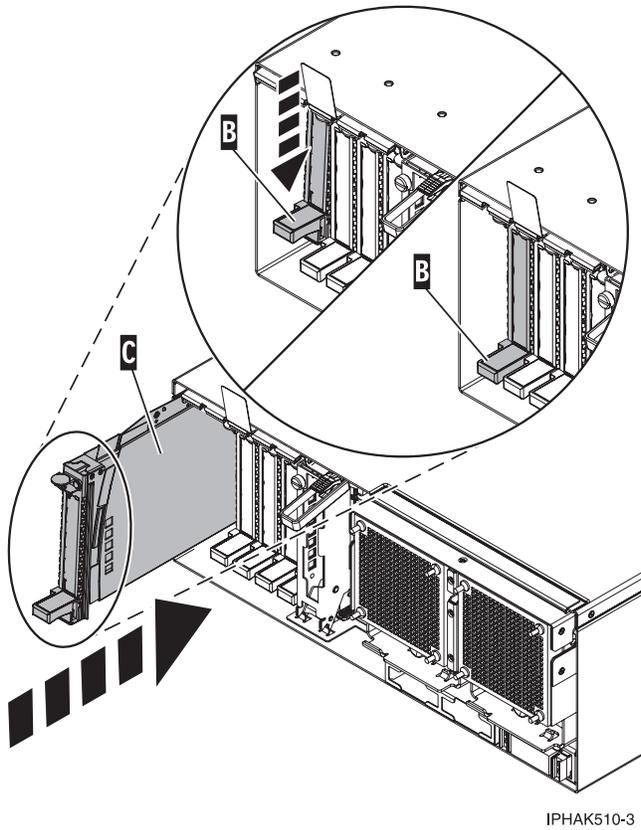

IPHAK510-3

Figure 43. PCI adapter cassette removed from the system unit

19. Lower the PCI adapter EMC shield (A) into the closed position, close the shield latch, then close the rear rack door.

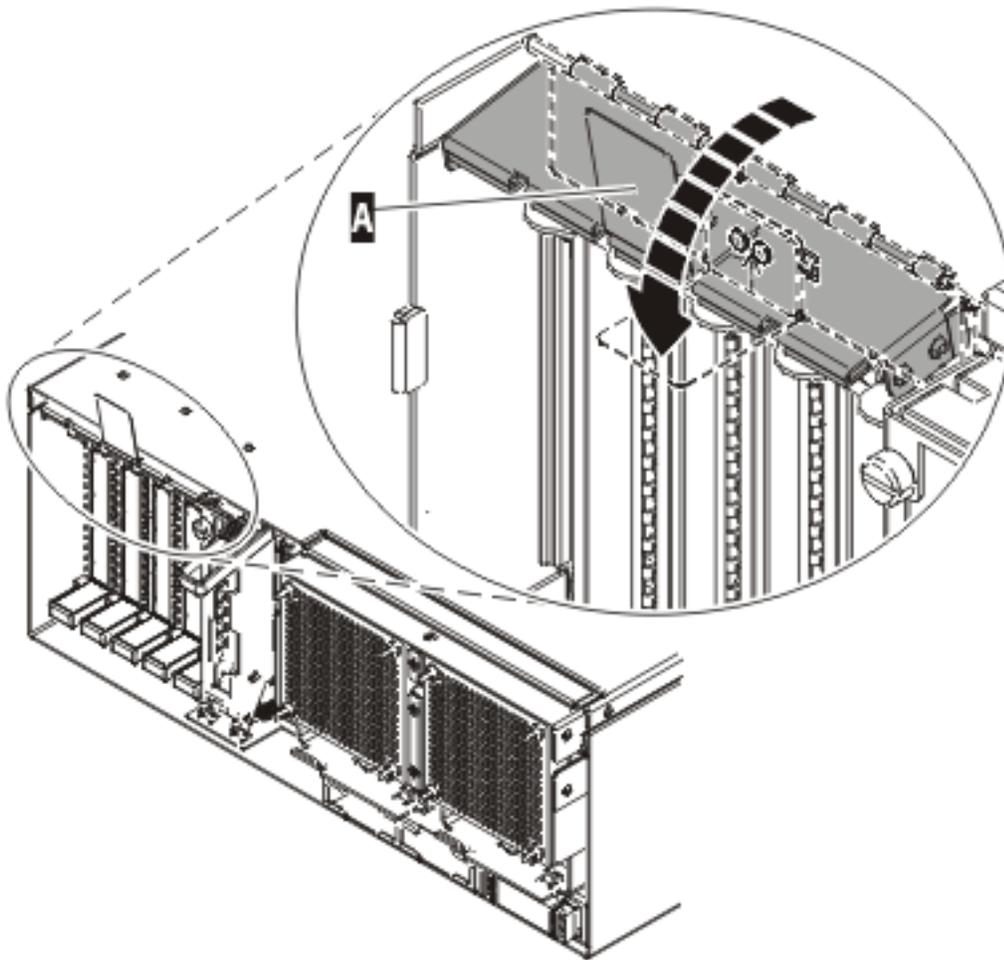

IPHAK508-0

Figure 44. PCI adapter EMC shield in the closed position

20. Run the `cfgmgr` command to configure the adapter.
21. Verify that the new resource is functional. See [Verify the installed part](#).

Related tasks

[“Placing a PCI adapter in a single-width cassette” on page 120](#)

You can place a PCI adapter in a single-width cassette. .

[“Removing an adapter from the PCI adapter single-width cassette” on page 130](#)

You can remove a PCI adapter from a single-width cassette. .

Related information

[Installing a feature using the Hardware Management Console](#)

[Logical partitioning](#)

Installing a PCI adapter contained in a cassette with the power on in IBM i

You can install a PCI adapter with the power on in the i operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.


Important:

- If you are removing, installing, or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782)(CCIN 571F, 575B) topic before proceeding with the instructions provided here.
- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input output adapter (IOA), the external storage subsystem must be updated to use the world-wide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To install an adapter with the system power on in the i operating system, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. To determine in which slot to place the PCI adapter, refer to the PCI adapter placement for machine type 94xx or PCI adapter placement for machine types 82xx and 91xx for information regarding slot restrictions for the adapters that can be used in this system.
4. If you are installing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable.
5. If you are installing a PCI adapter in a stand-alone expansion unit, remove the units back cover, if applicable.
6. Type **strsst** on the command line of the Main Menu and then press Enter.
7. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display. Press Enter.
8. Select **Start a service tool** from the System Service Tools (SST) display and press Enter.
9. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
10. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
11. Type **9** (Hardware contained within package) in the *System Unit* or *Expansion Unit* field of the unit where you are replacing the card. Press Enter.
12. Select the option to **Include empty positions**.
13. Select **Concurrent Maintenance** on the card position where you want to replace the card and then press Enter.
14. Select the option to **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to install the adapter.
15. Select the option to **Toggle LED blink off/on** to stop the blinking LED.
16. Select the option to **Power off domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
17. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power off complete
18. Locate the PCI adapter slot and cassette you want to use.

19. If the cassette you want to use does not contain a PCI adapter, continue to the next step. If the cassette you want to use does contain an active PCI adapter, see “Removing a PCI adapter contained in a cassette from the system with the power on in IBM i” on page 96.
20. Lift up the PCI adapter EMC shield (A) as shown in Figure 45 and then rotate it up and away from the cassette as shown in Figure 46 on page 79.

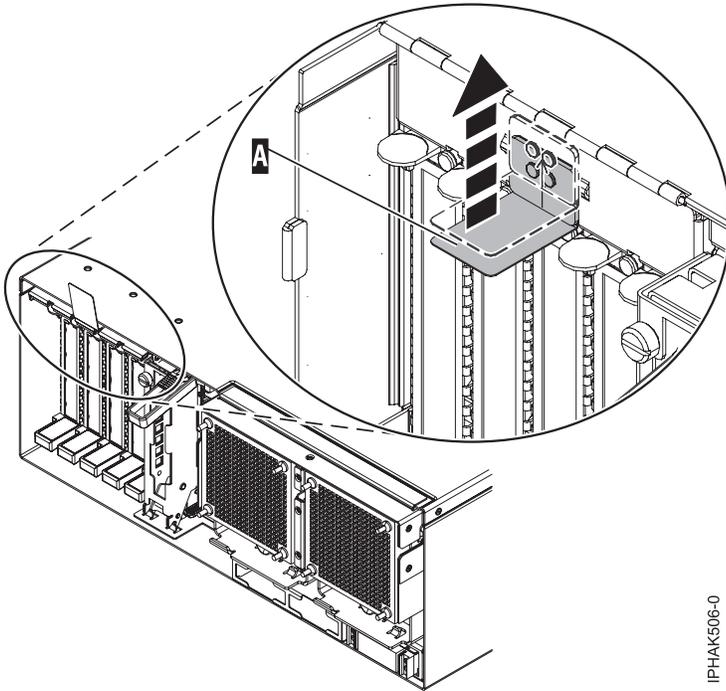

IPHAK506-0


Figure 45. Lift up the EMC shield

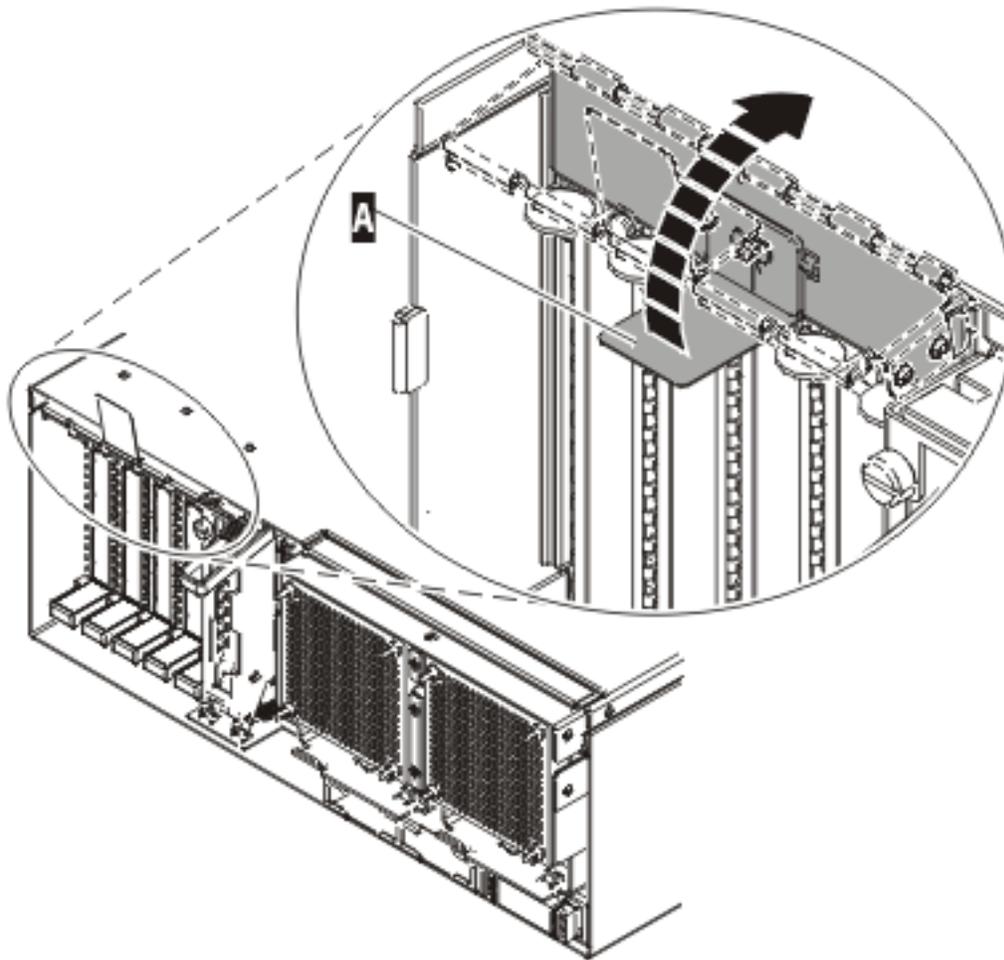

IPHAK907-0

Figure 46. Rotate the EMC shield into the open position


21. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.

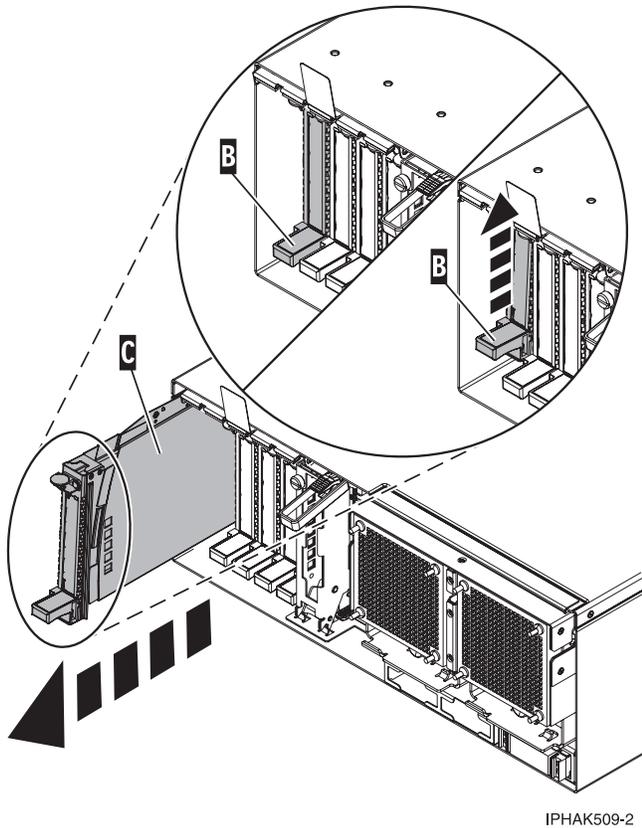

IPHAK509-2

Figure 47. PCI adapter cassette removed from the system unit.


22. Install the adapter into the PCI adapter cassette. See the following topics:
 - “PCI adapter single-width cassette” on page 119
 - “PCI adapter double-wide cassette” on page 145
23. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.
24. Lift and hold the PCI adapter EMC shield in the open position. See Figure 45 on page 78 and Figure 46 on page 79.
25. Slide the cassette (C) into the cassette slot as shown in the following figure.
26. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle (B) to lock the adapter in its connector.

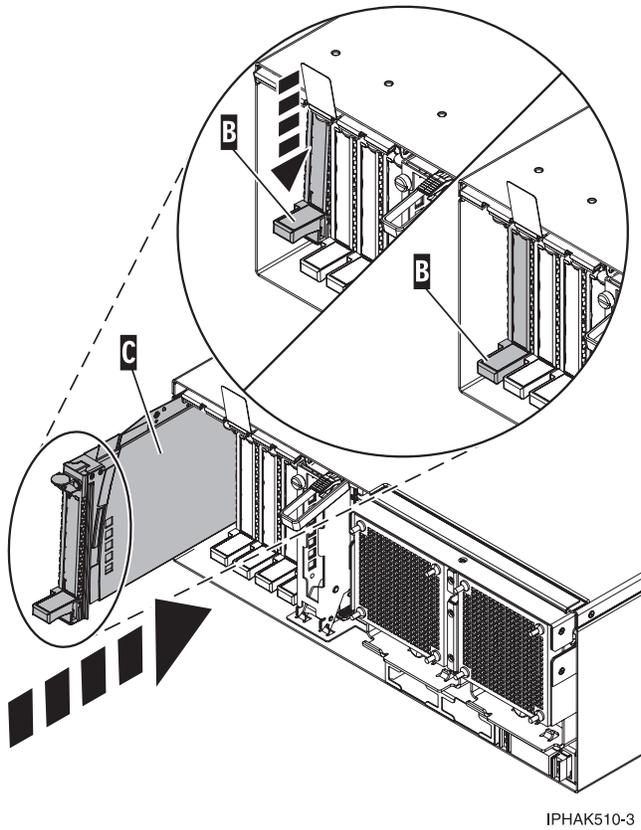

IPHAK510-3

Figure 48. PCI adapter cassette removed from the system unit

27. Lower the PCI adapter EMC shield (A) into the closed position, close the shield latch, then close the rear rack door.

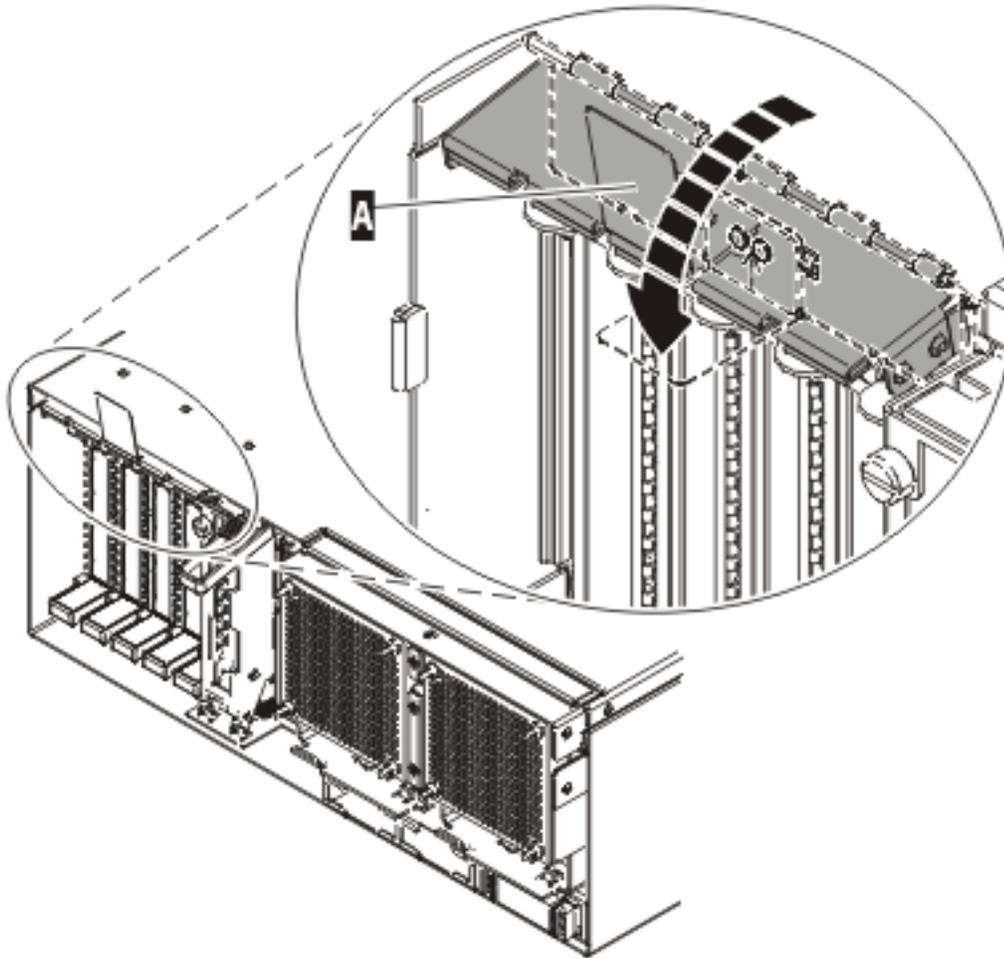

IPHAK508-0

Figure 49. PCI adapter EMC shield in the closed position

28. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
29. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
30. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
31. Verify that the new resource is functional. See Verify the installed part.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

[Installing a feature using the Hardware Management Console](#)

[Logical partitioning](#)

Installing a PCI adapter contained in a cassette with the power on in Linux

You can install a PCI adapter with the power on in Linux.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

Note: If the system is partitioned, see the Logical partitioning topic to learn more about working in a partitioned environment, and then return here to continue the procedure.

To install an adapter with the system power on in Linux, do the following steps:

1. Perform prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. To determine in which slot to place the PCI adapter, refer to the placement guide for information regarding slot restrictions for the adapters that can be used in this system. See the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
4. If you are installing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable.
5. Log in to the system console as the root user.
6. Use the `lsslot` tool to list the hot-plug PCI slots that are available in the server or partition:


```
lsslot -c pci -a
```

The following is an example of the information displayed by this command:

```
# Slot          Description          Device(s)
U7879.001.DQD014E-P1-C1 PCI-X capable, 64 bit, 133MHz slot Empty
U7879.001.DQD014E-P1-C4 PCI-X capable, 64 bit, 133MHz slot Empty
U7879.001.DQD014E-P1-C5 PCI-X capable, 64 bit, 133MHz slot Empty
```


Select the appropriate empty PCI slot from the ones listed by the command.

7. Lift up the PCI adapter EMC shield (**A**) as shown in Figure 50 on page 84 and then rotate it up and away from the cassette as shown in Figure 51 on page 85.

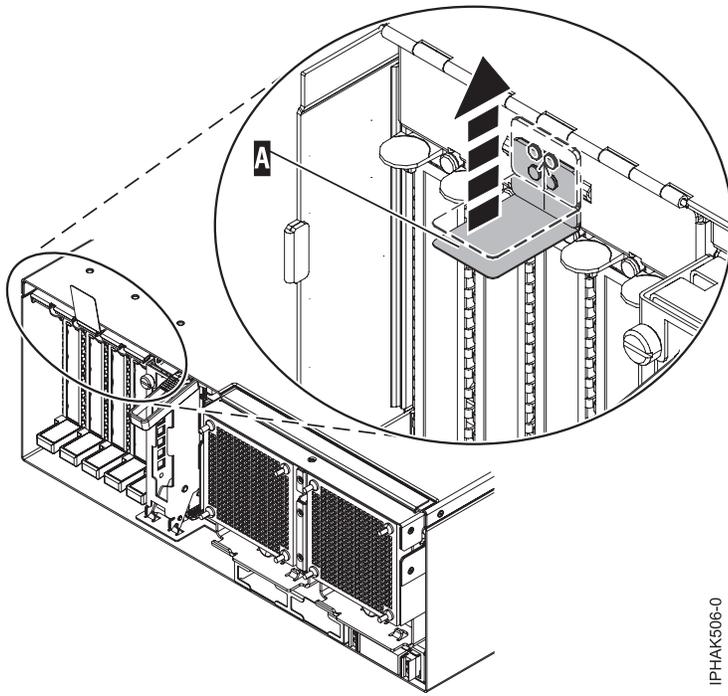

IPHAK506-0


Figure 50. Lift up the EMC shield

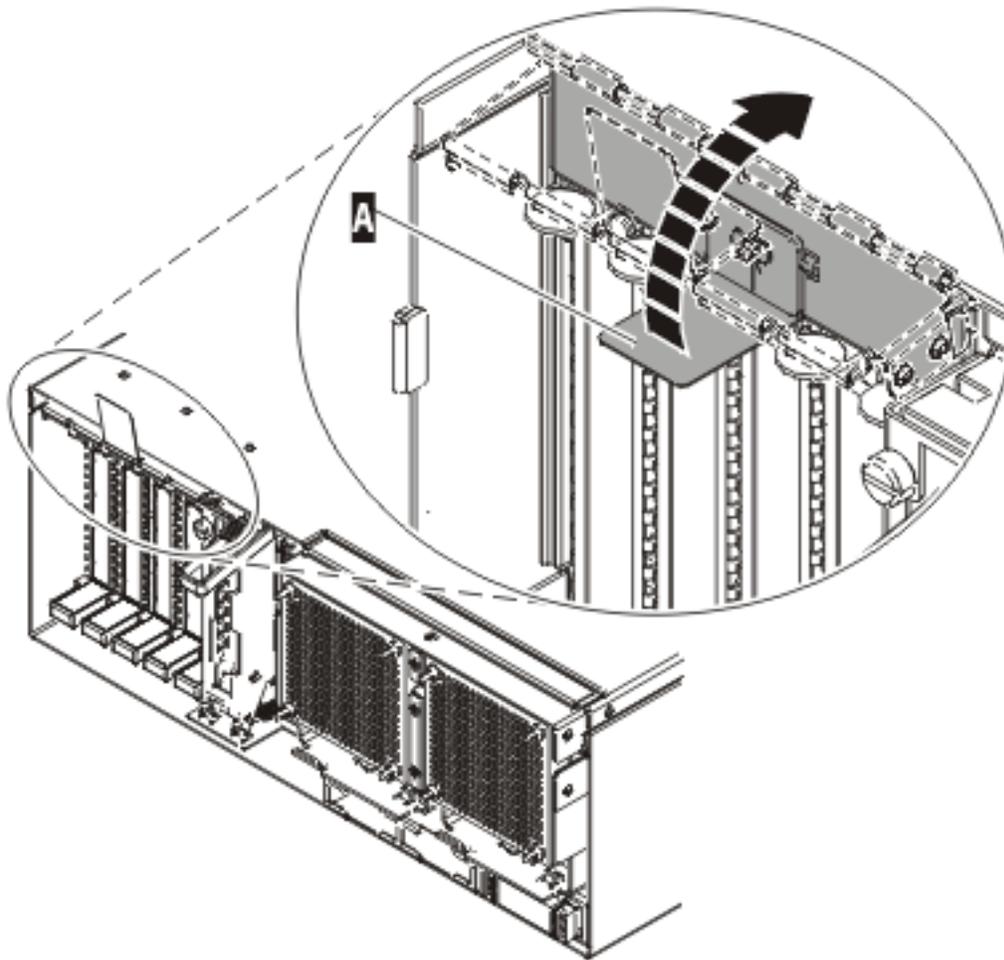

IPHAK907-0

Figure 51. Rotate the EMC shield into the open position

8. Remove the cassette. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.

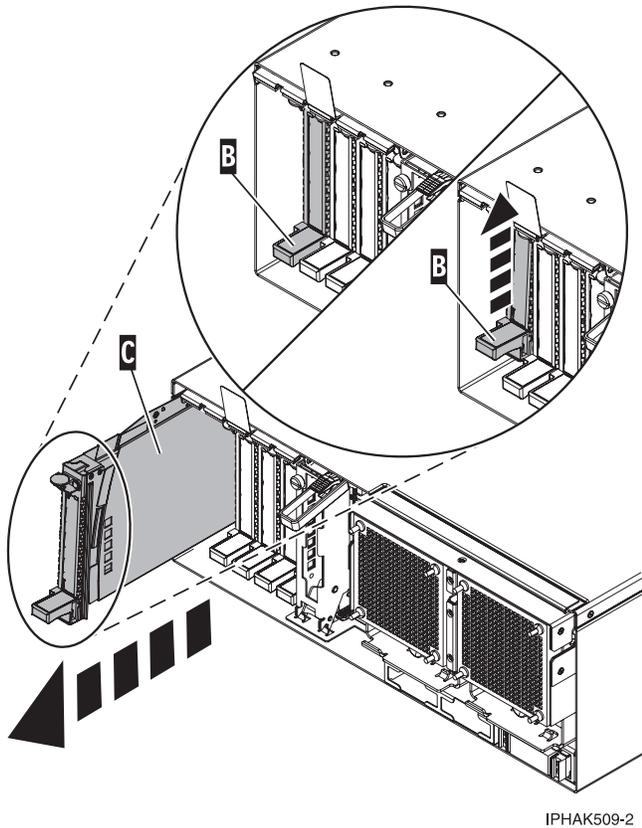

IPHAK509-2


Figure 52. PCI adapter cassette removed from the system unit

9. Install the adapter into the PCI adapter cassette. See the following topics:
 - “PCI adapter single-width cassette” on page 119
 - “PCI adapter double-wide cassette” on page 145
10. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be locked in the system.
11. Run the `drsloc_chrp_pci` command to enable an adapter to be installed.
For example, to install an adapter in slot U7879.001.DQD014E-P1-C3, run:
`drsloc_chrp_pci -a -s U7879.001.DQD014E-P1-C3`

The following displays:

The visual indicator for the specified PCI slot has been set to the identify state. Press Enter to continue or enter x to exit.


12. Press Enter.
The following displays:
The visual indicator for the specified PCI slot has been set to the action state. Insert the PCI card into the identified slot, connect any devices to be configured and press Enter to continue. Enter x to exit.
13. Lift and hold the PCI adapter EMC shield in the open position. See Figure 50 on page 84 and Figure 51 on page 85.
14. Slide the cassette (C) into the cassette slot as shown in the following figure.
15. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle (B) to lock the adapter in its connector.

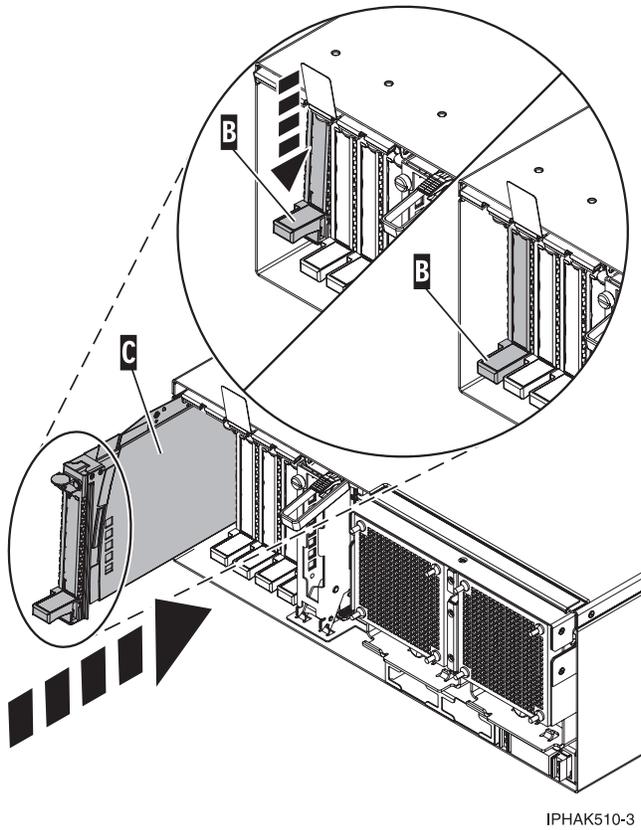

IPHAK510-3

Figure 53. PCI adapter cassette removed from the system unit

16. Lower the PCI adapter EMC shield (A) into the closed position, close the shield latch, then close the rear rack door.

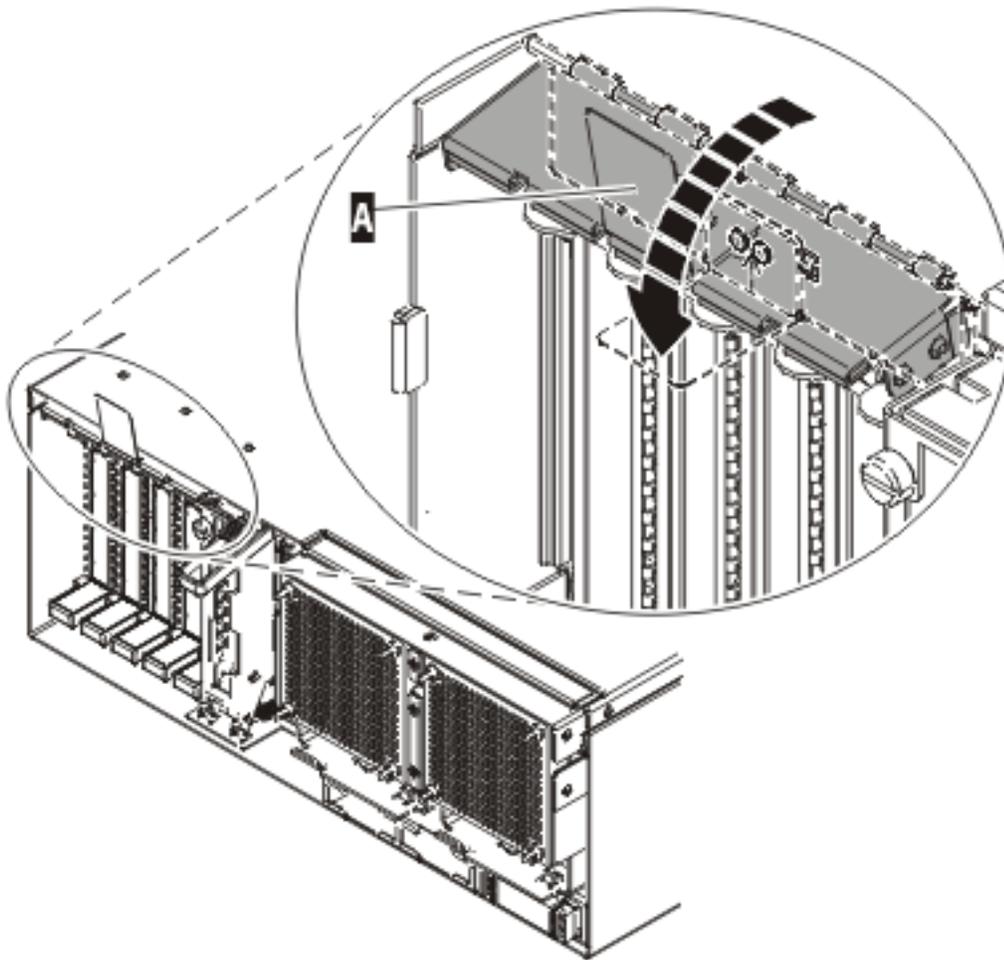

IPHAK508-0

Figure 54. PCI adapter EMC shield in the closed position

17. Use the `lsslot` command to verify that U7879.001.DQD014E-P1-C3 is occupied.

Enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`

The following is an example of the information displayed by this command:

# Slot	Description	Device(s)
U7879.001.DQD014E-P1-C3	PCI-X capable, 64 bit, 133MHz slot	0001:40:01.0

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

[Installing a feature using the Hardware Management Console](#)

[Logical partitioning](#)

Removing a PCI adapter contained in a cassette from the system

You can remove a PCI adapter.

Removing a PCI adapter contained in a cassette from the system with the power off

You can remove a PCI adapter with the system power off.


If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

To remove an adapter, do the following steps:

1. Perform the prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Stop the system or logical partition. See Stop the system or logical partition.
4. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

5. If you are removing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable.
6. If you are removing a PCI adapter in a stand-alone expansion unit, remove the units back cover, if applicable.
7. Determine the location of PCI adapter in the system.
8. Lift and hold the PCI adapter EMC shield (A) in the open position.

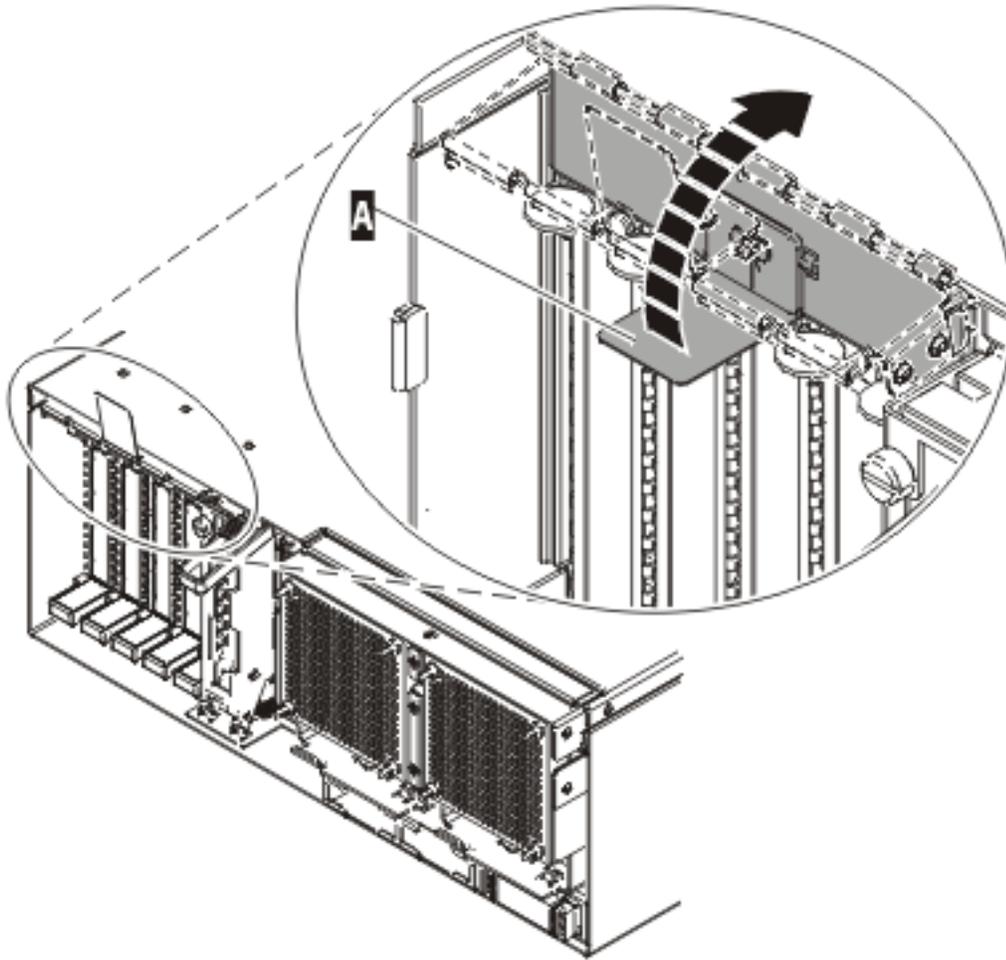


IPHAK907-0

Figure 55. PCI adapter EMC shield in the open position

9. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.

Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

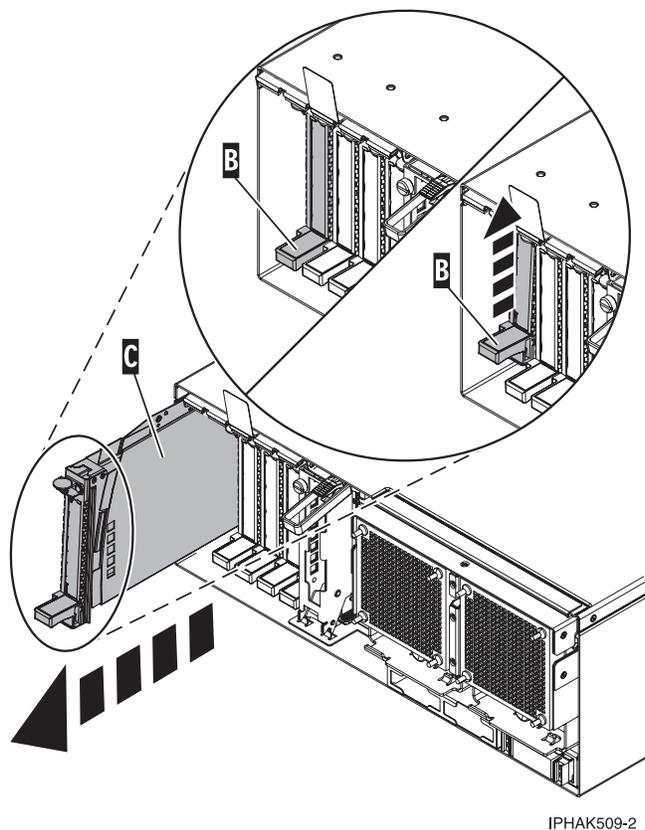

IPHAK509-2

Figure 56. PCI adapter cassette removed from the system unit

10. Place the cassette with the cover facing up on an approved ESD surface.

Note: The cover will have a label on it.

11. To remove the adapter from the cassette, refer to “Removing an adapter from the PCI adapter single-width cassette” on page 130.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

 Installing a feature using the Hardware Management Console

 Logical partitioning

Removing a PCI adapter contained in a cassette from the system with the power on in AIX

You can remove a PCI adapter with the system power on in AIX.

Read the following notes to determine if this is the correct procedure for the task to be performed.

Note:

1. Use this procedure to remove a PCI adapter and leave the slot in the system unit empty.


2. If the adapter that is removed will be placed into a different slot or system, complete this removal procedure, then install the adapter as described in “Installing a PCI adapter contained in a cassette with the power on in AIX” on page 71.
3. Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To remove an adapter, do the following steps:

1. Perform the prerequisite tasks as described in “Before you begin” on page 246.
2. If you are removing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable.
3. If you are removing a PCI adapter in a stand-alone expansion unit, remove the unit’s back cover, if applicable.
4. Determine the location of PCI adapter in the system.
5. Record the slot number and location of each adapter being removed.


Note: Adapter slots are numbered on the rear of the system unit.

6. Ensure that any processes or applications that might use the adapter are stopped.
7. Enter the system diagnostics by logging in as root user or as the celogin user, type **diag** at AIX command line.
8. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
9. At the FUNCTION SELECTION menu, select **Task Selection**, then press enter.
10. At the Task Selection list, select **PCI Hot Plug Manager**.
11. Select **Unconfigure a Device**, then press Enter.
12. Press F4 (or Esc +4) to display the **Device Names** menu.
13. Select the adapter you are removing in the **Device Names** menu.
14. Use the Tab key to answer N0 to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, then press Enter. The **ARE YOU SURE** screen displays.
15. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the Command field at the top of the screen.
16. Press F4 (or Esc +4) twice to return to the **Hot Plug Manager** menu.
17. Select **replace/remove PCI Hot Plug adapter**.
18. Select the slot that has the device to be removed from the system.
19. Select **remove**. A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.
20. Label all cables attached to the adapter you plan to remove.
21. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
22. Disconnect all cables attached to the adapter you plan to remove.
23. Before handling any PCI adapter, see “Handling static-sensitive devices” on page 249.
24. Lift up the PCI adapter EMC shield (**A**) as shown in Figure 57 on page 93 and then rotate it up and away from the cassette as shown in Figure 58 on page 94.

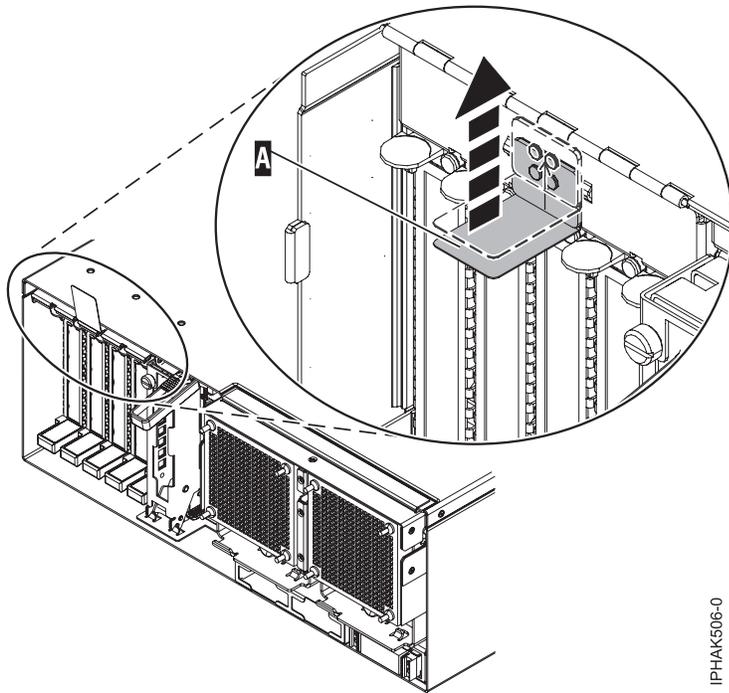

IPHAK506-0

Figure 57. Lift up the EMC shield

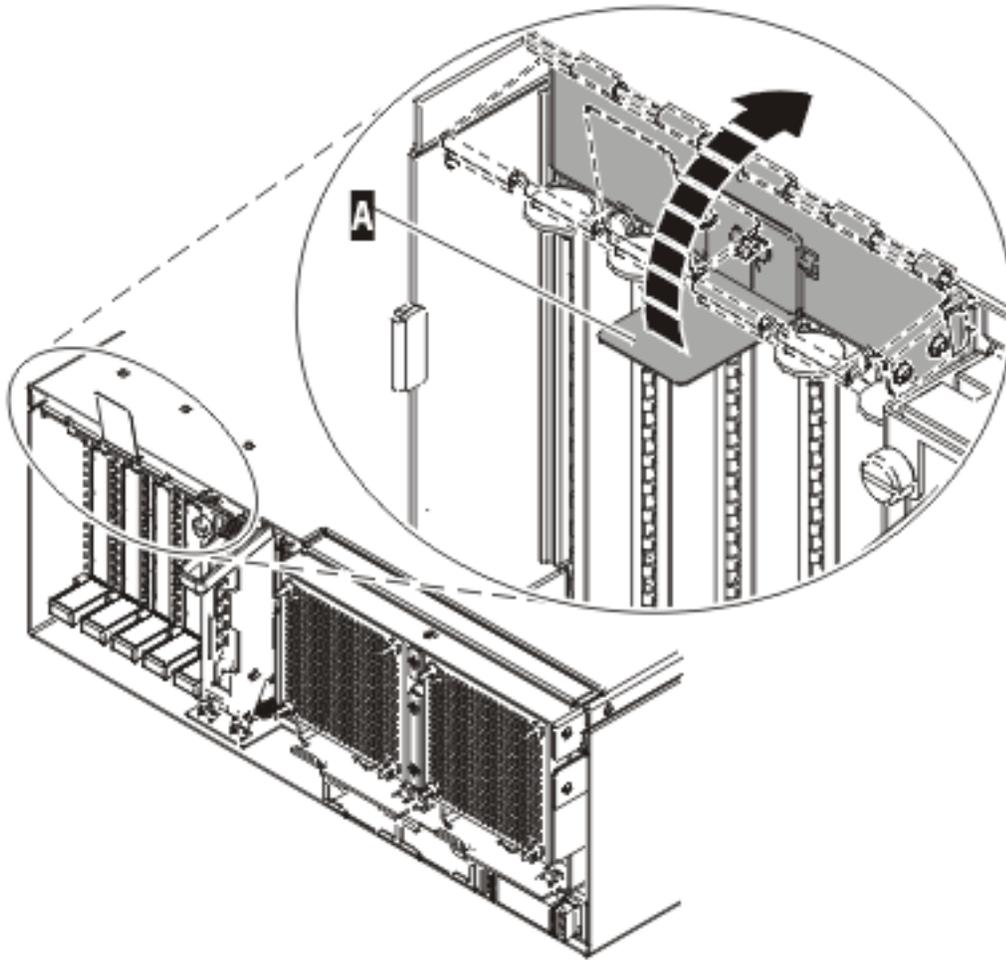


IPHAK907-0

Figure 58. Rotate the EMC shield into the open position

25. Remove the cassette. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.

Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

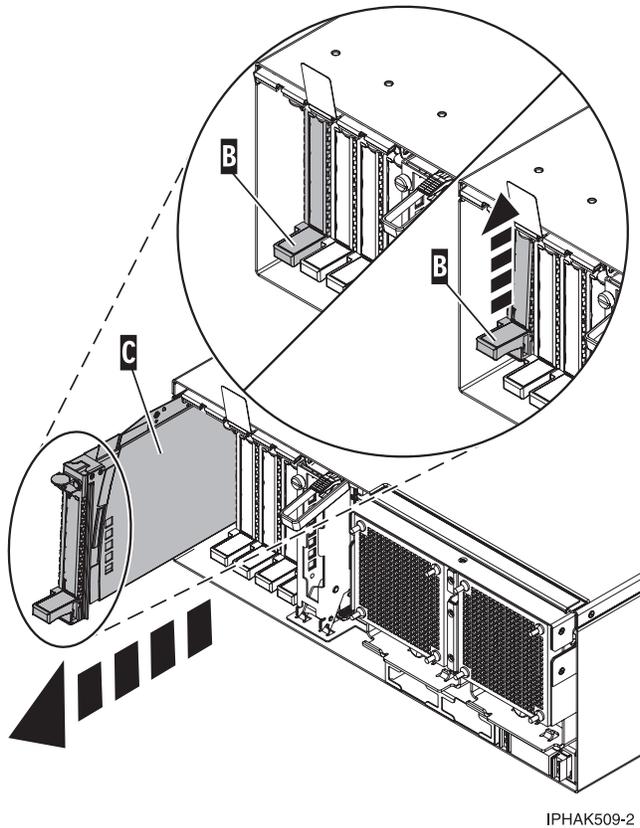

IPHAK509-2

Figure 59. PCI adapter cassette removed from the system unit

26. Place the cassette with the cover facing up on an approved ESD surface.

Note: The cover will have a label on it.

27. Continue to follow the screen instructions until you receive a message that the adapter removal is successful. Successful removal is indicated by the OK message displayed next to the Command field at the top of the screen.
28. If you have other adapters to remove, press the F3 key to return to the PCI Hot-Plug Manager menu and then return to step 22 on page 92.

OR

If you do not have other adapters to remove, continue with the next step.

29. Press F10 to exit the Hot-Plug Manager.
30. Run the **diag -a** command. If the system responds with a menu or prompt, follow the instructions to complete the device configuration.
31. Place an empty cassette into the unused PCI slot for proper air flow. The procedure is complete.
 - To remove the adapter from the PCI adapter cassette, see “Removing an adapter from the PCI adapter single-width cassette” on page 130.
 - To install an adapter in the system, see “Installing a PCI adapter contained in a cassette with the power on in AIX” on page 71.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

🔗 Installing a feature using the Hardware Management Console

🔗 Logical partitioning


Removing a PCI adapter contained in a cassette from the system with the power on in IBM i

You can remove a PCI adapter with the system power on in the i operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.


To remove an adapter, do the following steps:

1. Perform the prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable.
4. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
5. Determine the location of PCI adapter in the system.
6. Type **strsst** on the command line of the Main Menu and then press Enter.
7. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display and press Enter.
8. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
9. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
10. Type **9** (Hardware contained within package) in the *System Unit* or *Expansion Unit* field of the unit where you are removing the card. Press Enter.
11. Select the option to **Include empty positions**.
12. Select **Concurrent Maintenance** on the card position where you want to remove the card and then press Enter.
13. Select the option to **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to install the adapter.
14. Select the option to **Toggle LED blink off/on** to stop the blinking LED.
15. Select the option to **Power off domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
16. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power off complete
17. Lift up the PCI adapter EMC shield (**A**) as shown in Figure 60 on page 97 and then rotate it up and away from the cassette as shown in Figure 61 on page 98.

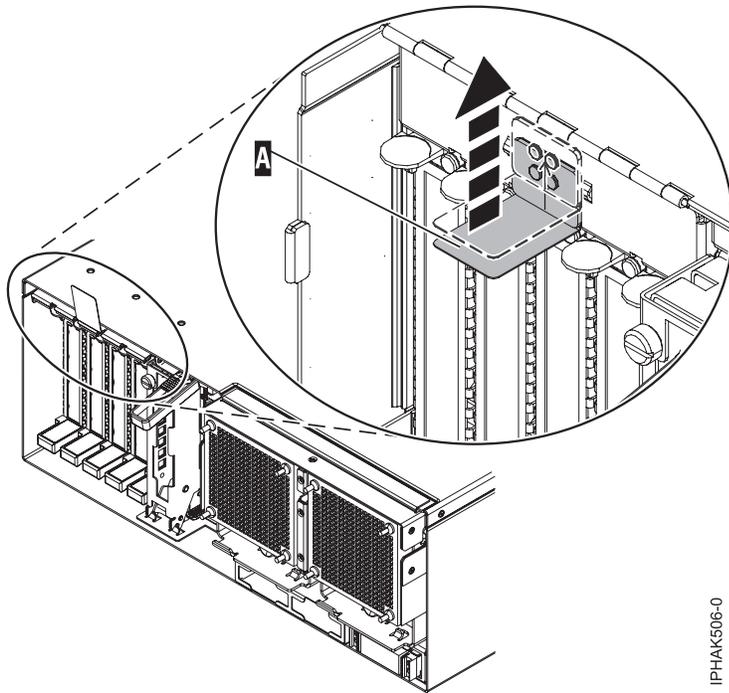

IPHAK506-0

Figure 60. Lift up the EMC shield

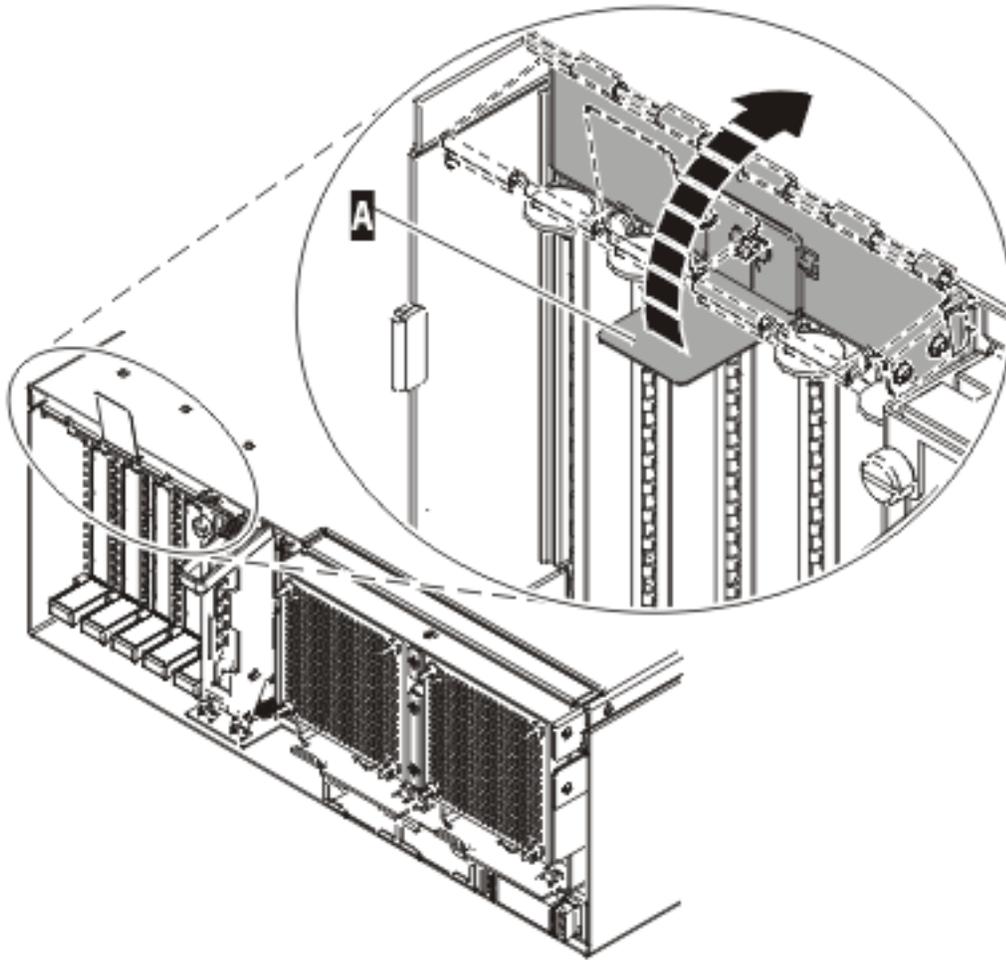


IPHAK907-0

Figure 61. Rotate the EMC shield into the open position

18. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.

Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

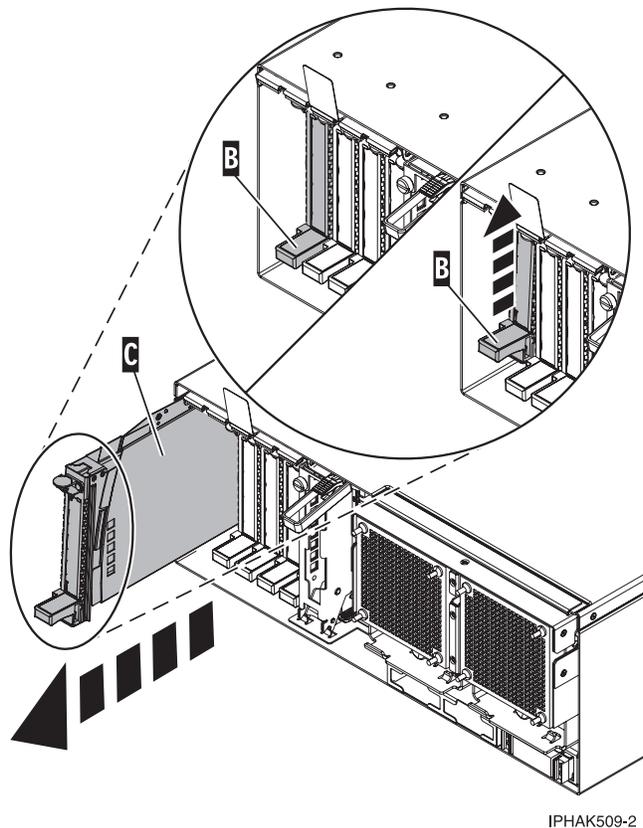

IPHAK509-2

Figure 62. PCI adapter cassette removed from the system unit

19. Place the cassette with the cover facing up on an approved ESD surface.

Note: The cover will have a label on it.

20. To remove the adapter from the PCI adapter cassette, see “Removing an adapter from the PCI adapter single-width cassette” on page 130.

To replace the adapter in the system, see “Replacing a PCI adapter contained in a cassette in the system” on page 102.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

 Installing a feature using the Hardware Management Console

 Logical partitioning

Removing a PCI adapter contained in a cassette from the system with the power on in Linux

You can remove a PCI adapter with the system power on in Linux.


If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

To remove an adapter, do the following steps:

1. Ensure that the system meets the “Prerequisites for hot-plugging PCI adapters in Linux” on page 256.
2. Verify that the Linux, hot-plug PCI tools are installed. See “Verify that the Linux, hot-plug PCI tools are installed” on page 256.
3. Perform the prerequisite tasks as described in “Before you begin” on page 246.
4. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
5. If you are removing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable.
6. If you are removing a PCI adapter in a stand-alone expansion unit, remove the unit’s back cover, if applicable.
7. Determine the location of PCI adapter in the system.
8. Label, and then disconnect all cables attached to the adapter you plan to remove.
9. Run the `drslot_chrp_pci` command to enable an adapter to be removed:
For example, to remove the PCI adapter in slot U7879.001.DQD014E-P1-C3 run this command:


```
drslot_chrp_pci -r -s U7879.001.DQD014E-P1-C3
```


Follow the instructions on the display to complete the task.
10. Lift up the PCI adapter EMC shield (A) as shown in Figure 63 and then rotate it up and away from the cassette as shown in Figure 64 on page 101.

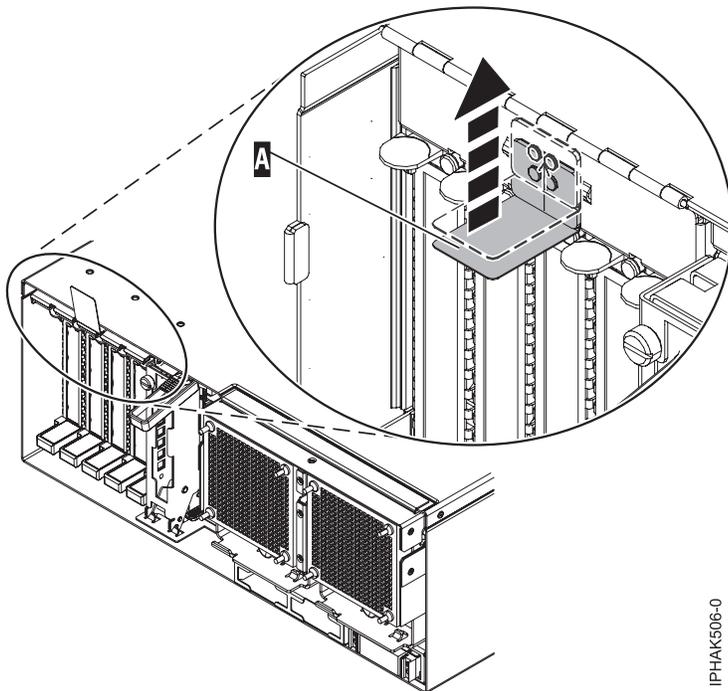

IPHAK506-0

Figure 63. Lift up the EMC shield

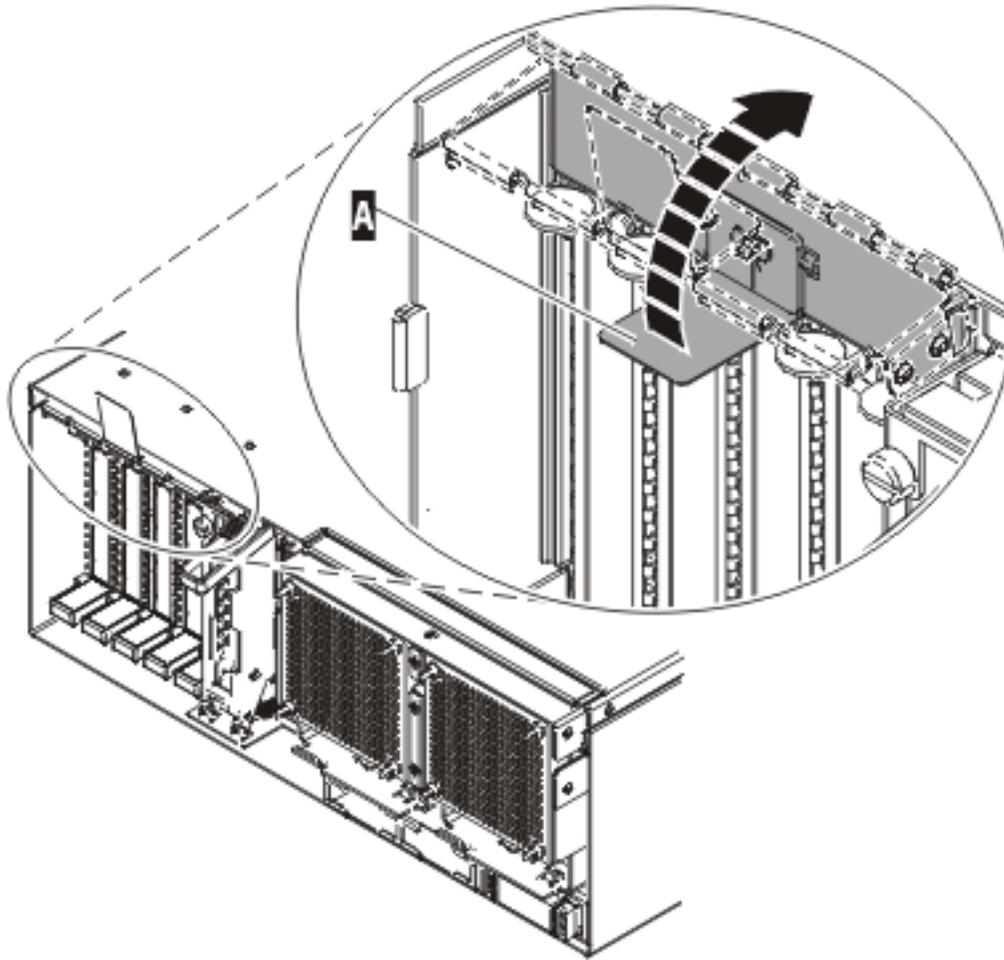


IPHAK907-0

Figure 64. Rotate the EMC shield into the open position

11. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.

Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

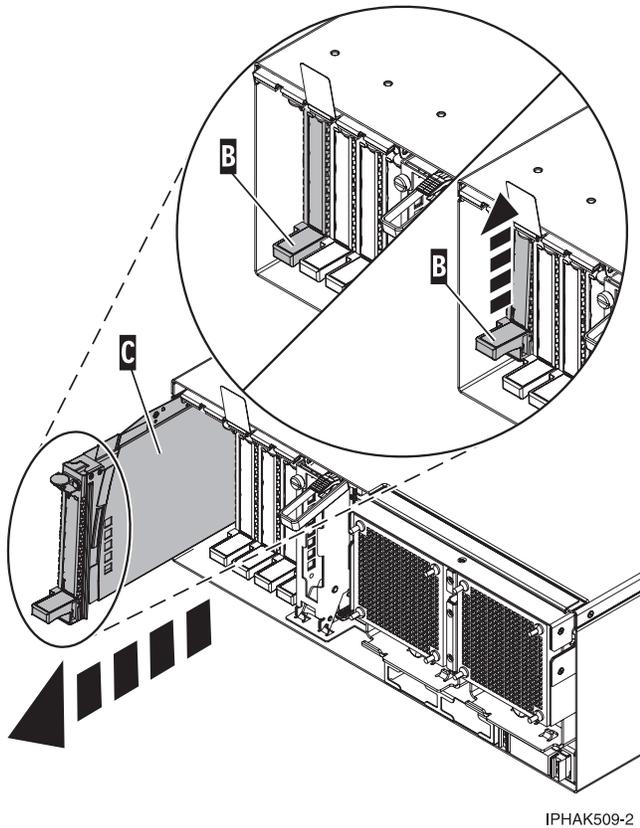

IPHAK509-2

Figure 65. PCI adapter cassette removed from the system unit

12. Place the cassette with the cover facing up on an approved ESD surface.

Note: The cover will have a label on it.

13. To remove an adapter from the PCI adapter cassette, refer to “Removing an adapter from the PCI adapter single-width cassette” on page 130.

To replace the adapter in the system, see “Replacing a PCI adapter contained in a cassette in the system with the power on in Linux” on page 117.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

[Installing a feature using the Hardware Management Console](#)

[Logical partitioning](#)

Replacing a PCI adapter contained in a cassette in the system

You can replace a PCI adapter.

Important:

- If you are removing, installing or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782) (CCIN 571F, 575B) topic, before proceeding with the instructions provided here.
- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel IOA, the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

Replacing a PCI adapter contained in a cassette in the system with the power off


You can replace a PCI adapter with the system power off.

Attention: You must have already completed the procedure “Removing a PCI adapter contained in a cassette from the system with the power off” on page 89 in order to have the slot powered off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

To replace an adapter with the system power off, do the following steps:


1. Perform prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If the adapter needs to be placed in a PCI adapter cassette, see one of the following topics:
 - “PCI adapter single-width cassette” on page 119
 - “PCI adapter double-wide cassette” on page 145
4. At the back of the system, lift the cassette cover flap and identify the cassette slot you want to use.
5. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.
6. Lift and hold the PCI adapter EMC shield (**A**) in the open position. See Figure 55 on page 90.
7. Slide the cassette (**C**) into the cassette slot as shown in the following figure.
8. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle (**B**) to lock the adapter in its connector.

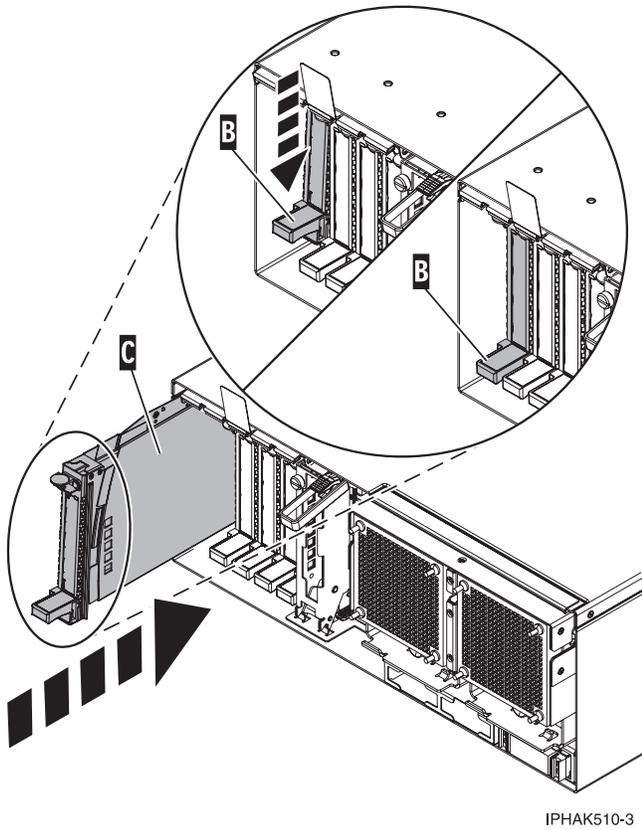

IPHAK510-3

Figure 66. PCI adapter cassette removed from the system unit

9. Lower the PCI adapter EMC shield (A) into the closed position, close the shield latch, then close the rear rack door.

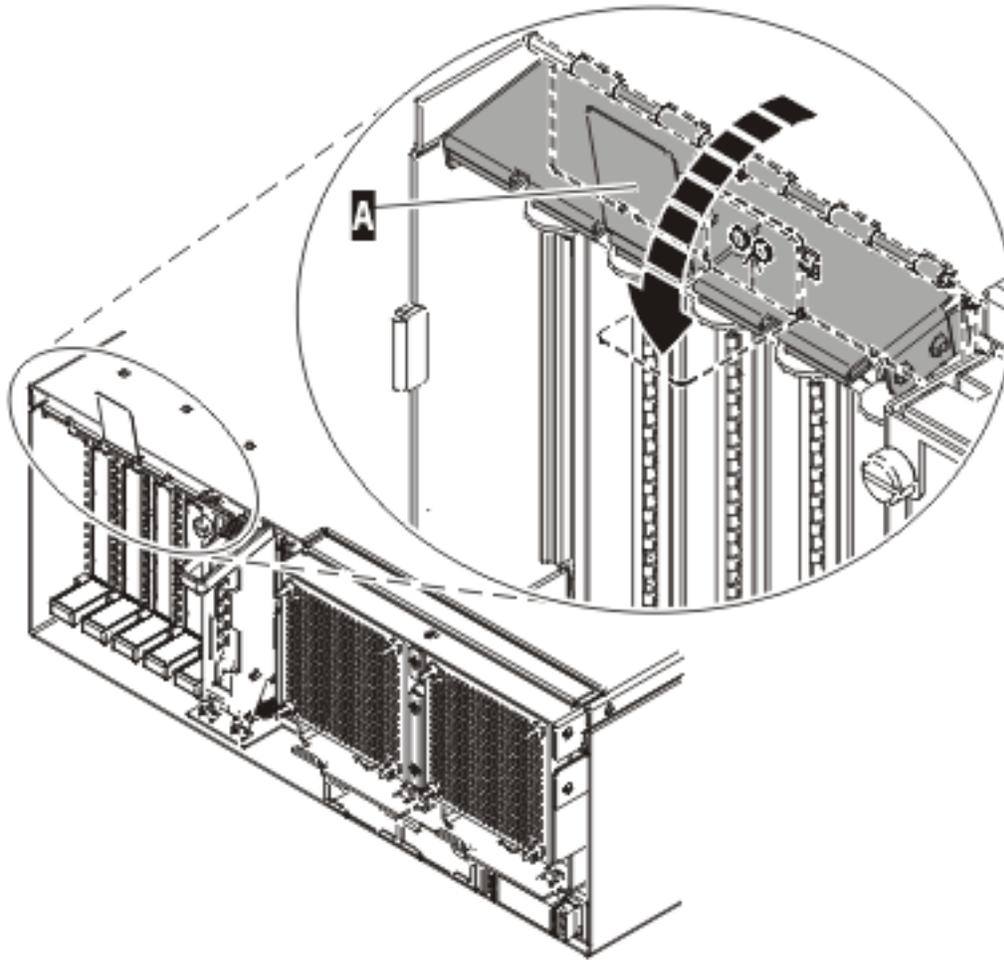

IPHAK508-0

Figure 67. PCI adapter EMC shield in the closed position

10. Reconnect the system to the power source.
11. Start the system or logical partition. Refer to Start the system or logical partition.
12. Verify that the new resource is functional. See Verify the installed part.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

🔗 Installing a feature using the Hardware Management Console

🔗 Logical partitioning

Removing and replacing a PCI adapter contained in a cassette in the system with the power on in AIX

You can replace a PCI adapter with the system power on in AIX.

Important:

1. Use this procedure if you intend to remove a failing PCI adapter and replace it with the same type of adapter.

2. If you plan to remove a failing adapter and leave the slot empty, see “Removing a PCI adapter contained in a cassette from the system with the power on in AIX” on page 91.
3. This procedure should not be used to remove an existing adapter and install a different type of adapter. To install a different adapter, remove the existing adapter as described in “Removing a PCI adapter contained in a cassette from the system with the power on in AIX” on page 91, then install the new adapter as described in “Installing a PCI adapter contained in a cassette with the power on in AIX” on page 71.
4. Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To replace an adapter, do the following steps:


1. Perform the prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing and replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps:
 - a. Open the rear rack door.
 - b. Remove the units cover or covers if applicable. For instructions see the *Related information* links at the end of the page.
4. If you are removing and replacing a PCI adapter in a stand-alone expansion unit, remove the units back cover, if applicable. For instructions see the *Related information* links at the end of the page.
5. Determine the location of the PCI adapter in the system.
6. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system unit.

7. Ensure that any processes or applications that might use the adapter are stopped.
8. Enter the system diagnostics by logging in as root user or as the celogin user, type **diag** at AIX command line.
9. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
10. At the FUNCTION SELECTION menu, select **Task Selection**, then press enter.
11. At the Task Selection list, select **PCI Hot Plug Manager**.
12. Select **Unconfigure a Device**, then press Enter.
13. Press F4 (or Esc +4) to display the **Device Names** menu.
14. Select the adapter you are removing in the **Device Names** menu.
15. Use the Tab key to answer YES to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, then press Enter. The **ARE YOU SURE** screen displays.
16. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the Command field at the top of the screen.
17. Press F3 (or Esc +3) twice to return to the **Hot Plug Manager** menu.
18. Select **replace/remove PCI Hot Plug adapter**.
19. Select the slot that has the device to be removed from the system.
20. Select **Replace**.


Note: A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.

21. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
22. Label, and then disconnect all cables attached to the adapter you plan to remove.
23. Lift up the PCI adapter EMC shield (A) as shown in Figure 68 and then rotate it up and away from the cassette as shown in Figure 69 on page 108.

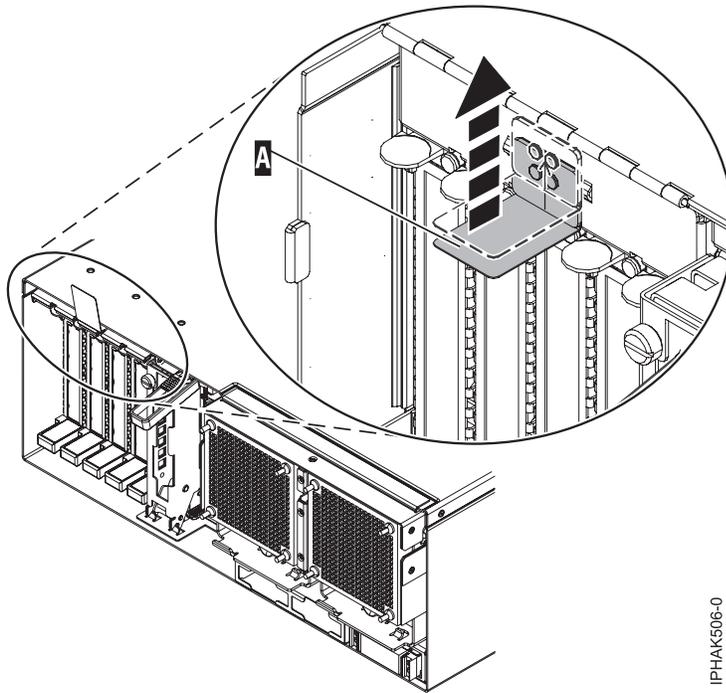

IPHAK506-0

Figure 68. Lift up the EMC shield

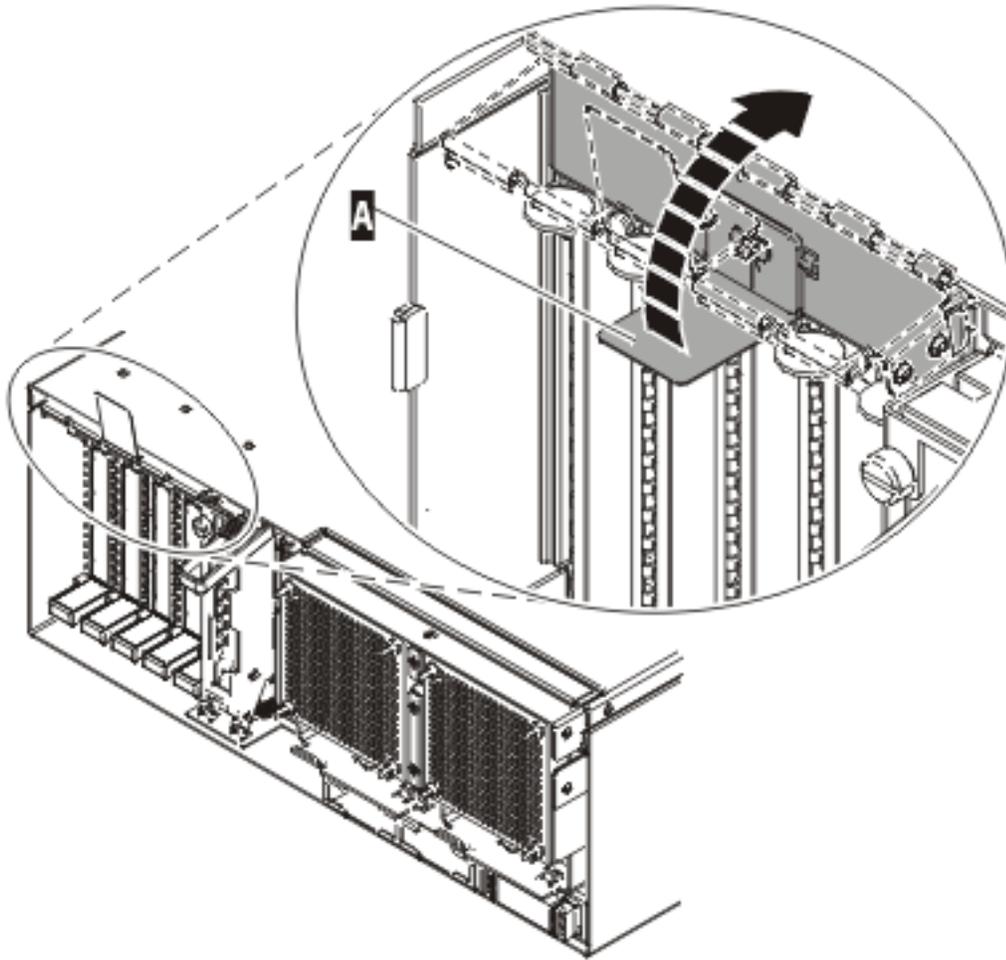

IPHAK907-0

Figure 69. Rotate the EMC shield into the open position

24. Remove the cassette. Lift up the lower cassette handle (B) as shown in the following figure. Pull the PCI cassette (C) out of the system.

Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

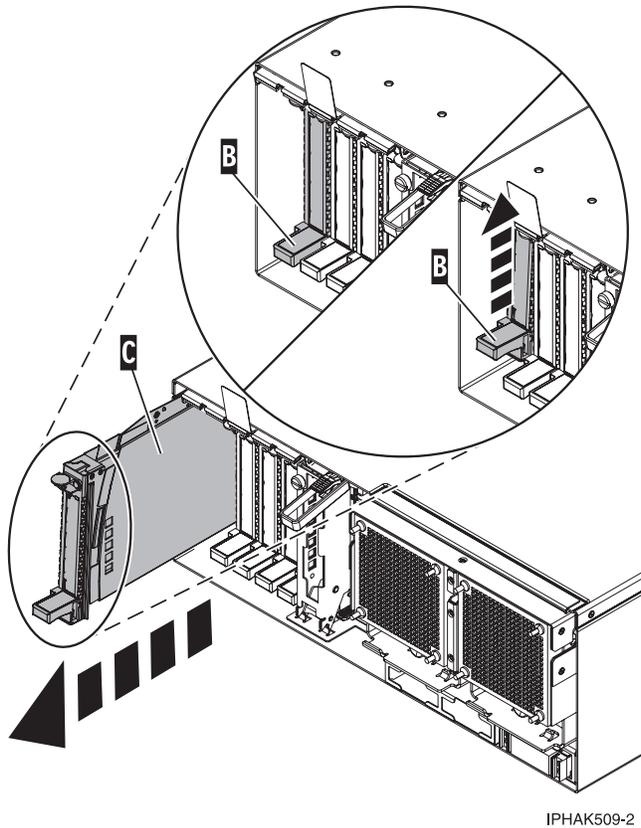


Figure 70. PCI adapter cassette removed from the system unit

25. Place the cassette with the cover facing up on an approved ESD surface.

Note: The cover will have a label on it.

26. Install the adapter into the PCI adapter cassette. See the following topics:

- “PCI adapter single-width cassette” on page 119
- “PCI adapter double-wide cassette” on page 145


27. At the back of the system, lift the cassette cover flap and identify the cassette slot you want to use.

28. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.

29. Lift and hold the PCI adapter EMC shield in the open position. See Figure 68 on page 107 and Figure 69 on page 108.

30. Slide the cassette (C) into the cassette slot as shown in the following figure.


31. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle (B) to lock the adapter in its connector.

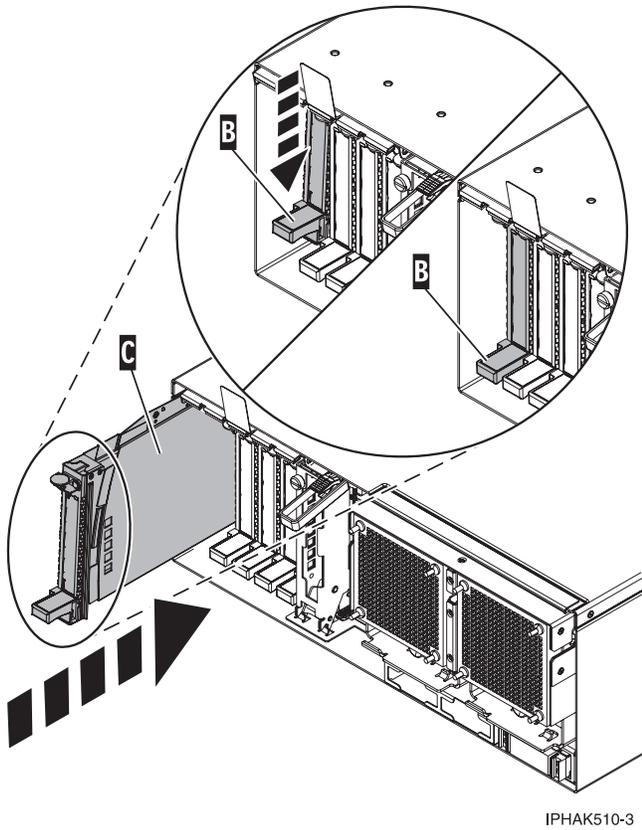

IPHAK510-3

Figure 71. PCI adapter cassette removed from the system unit

32. Connect the adapter cables.
33. Lower the PCI adapter EMC shield (A) into the closed position, close the shield latch, then close the rear rack door.

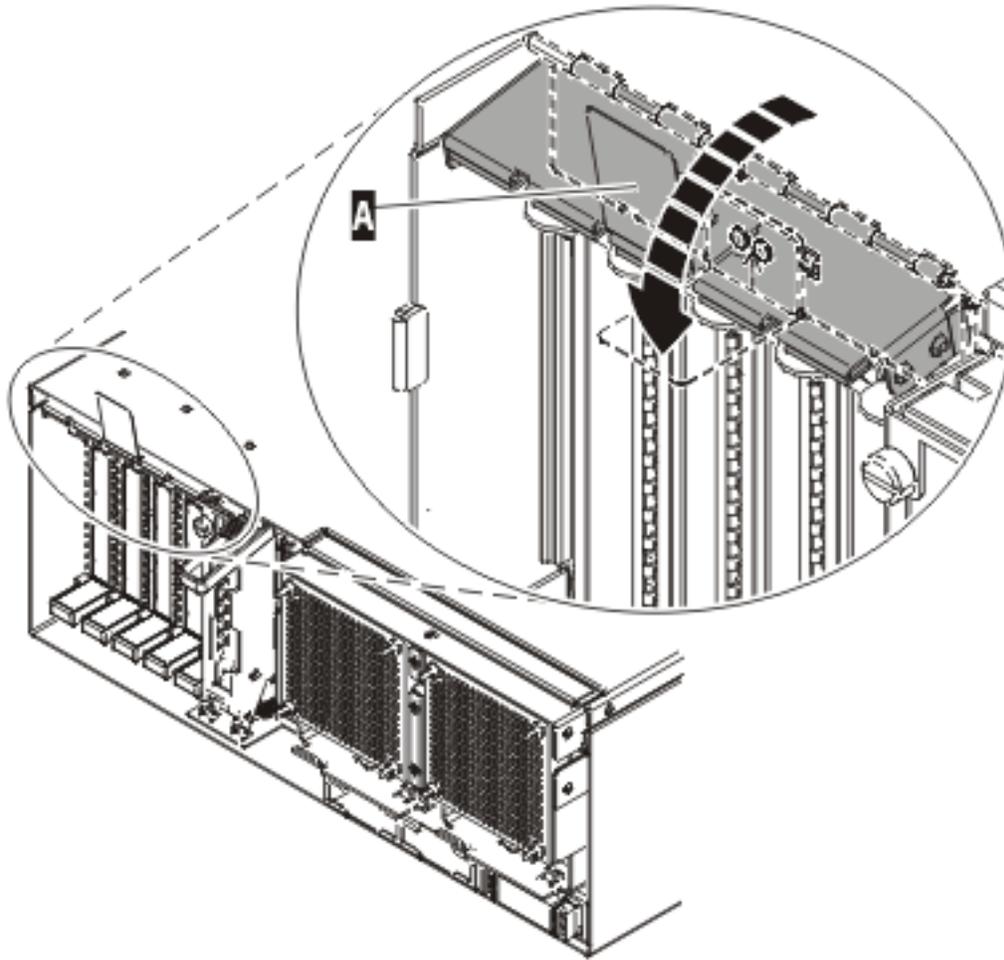

IPHAK508-0

Figure 72. PCI adapter EMC shield in the closed position

34. Press Enter and continue to follow the screen instructions until you receive a message that the replacement is successful. Successful replacement is indicated by the OK message displayed next to the **Command** field at the top of the screen.
35. Press the F3 (or Esc+3) key to return to the **PCI Hot-Plug Manager** menu.
36. Press the F3 (or Esc+3) key to return to the **TASK** selection list.
37. Select **Log Repair Action**.
38. Select the resource just replaced, press Enter, press Commit (F7 or ESC 7), then press Enter.
39. Press F3 (or Esc+3) to return to **TASK Selection List**.
40. Select **Hot Plug Task**, press enter.
41. Select **PCI Hot Plug Manager**, then select **Configure a defined device**, then press Enter.
42. Select the device just replaced from the list, then press Enter. The device is now configured.
43. Press the F10 key to exit the diagnostic program.

Note: If you are running the stand-alone diagnostics, do not exit the program completely.

44. Verify the PCI adapter by using the following instructions:
 - a. Did you replace the adapter with the system power on?
 - Yes - Go to the next step.
 - No - Load the diagnostic program by doing the following:

- If AIX is available, boot AIX, log in as root or CELOGIN, then enter the **diag** command.
- If AIX is not available, boot the stand-alone diagnostics
- b. Type the **diag** command if you are not already displaying the diagnostic menus
- c. Select **Advance Diagnostic Routines**, then select **Problem Determination**.
- d. Select the name of the resource just replaced from the menu. If the resource just replaced is not shown, choose the resource associated with it. Press Enter, then press **Commit** ((F7 or Esc+7)).
- e. Did the Problem Determination identify any problems?
 - No: Continue to the next step.
 - Yes: A problem is identified
 - If you are a customer, record the error information, then contact your service provider.
 - If you are an authorized service provider, return to map 210-5.

45. Press the F10 key to exit the diagnostic program.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

 Installing a feature using the Hardware Management Console

 Logical partitioning

Replacing a PCI adapter contained in a cassette in the system with the power on in IBM i


You can replace a PCI adapter with the system power on in the i operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

Attention: You must have already completed the procedure “Removing a PCI adapter contained in a cassette from the system with the power on in IBM i” on page 96 in order to have the slot powered off.


To replace an adapter, do the following steps:

1. Perform prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If the adapter needs to be placed in the PCI adapter cassette, see “Placing a PCI adapter in a single-width cassette” on page 120.
4. At the back of the system, lift the cassette cover flap and identify the cassette slot you want to use.
5. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.
6. Lift up the PCI adapter EMC shield (**A**) as shown in Figure 73 on page 113 and then rotate it up and away from the cassette as shown in Figure 74 on page 114.

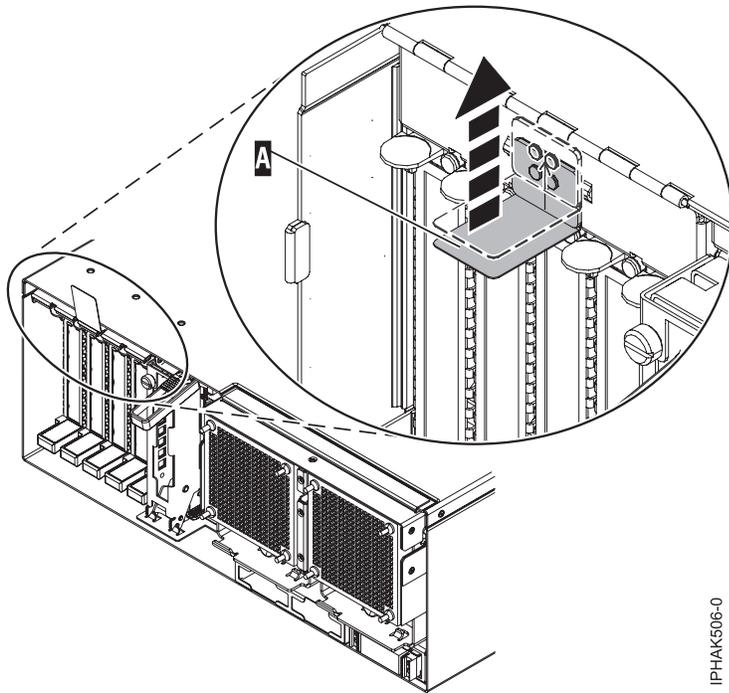

IPHAK506-0

Figure 73. Lift up the EMC shield

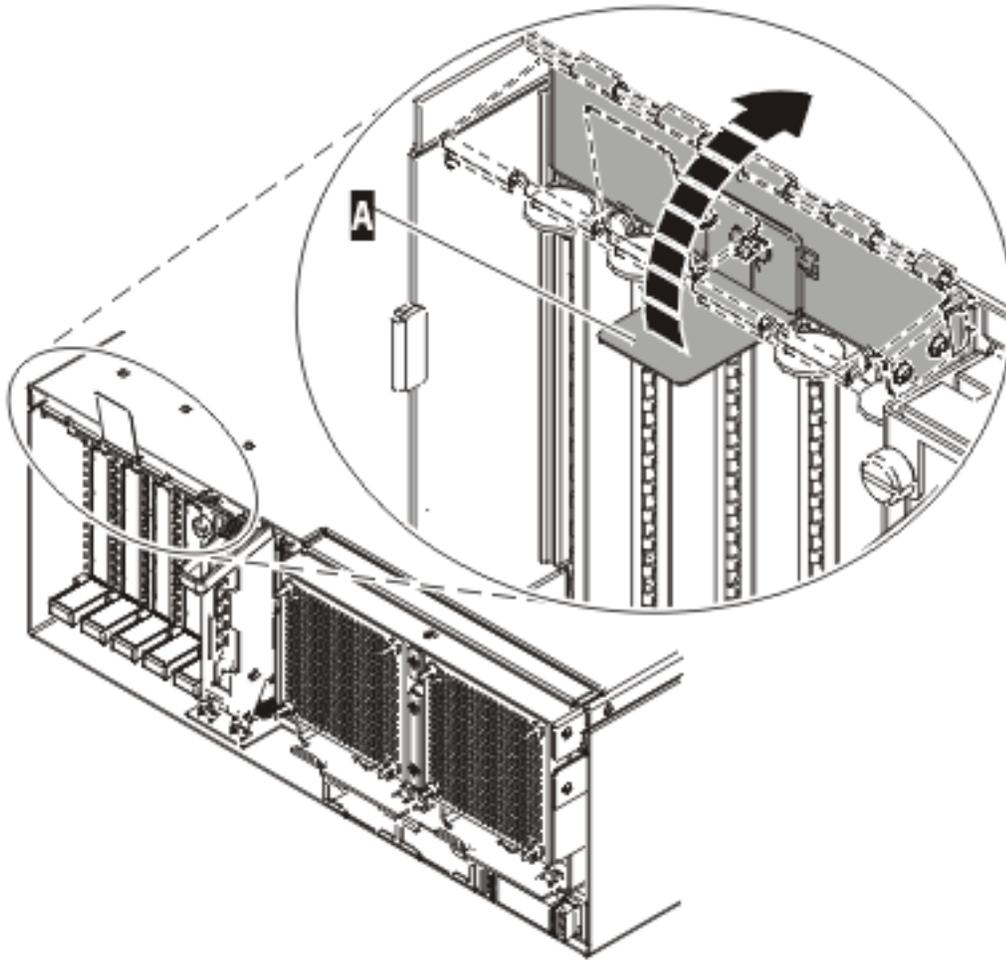

IPHAKR07-0

Figure 74. Rotate the EMC shield into the open position

7. Slide the cassette (C) into the cassette slot as shown in the following figure.
8. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle (B) to lock the adapter in its connector.


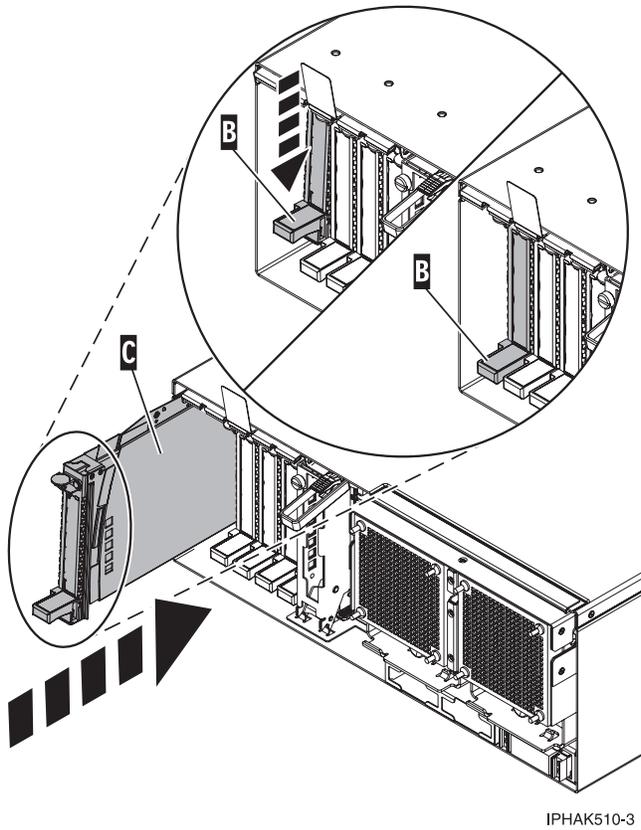


Figure 75. PCI adapter cassette removed from the system unit

9. Lower the PCI adapter EMC shield (**A**) into the closed position, close the shield latch, then close the rear rack door.

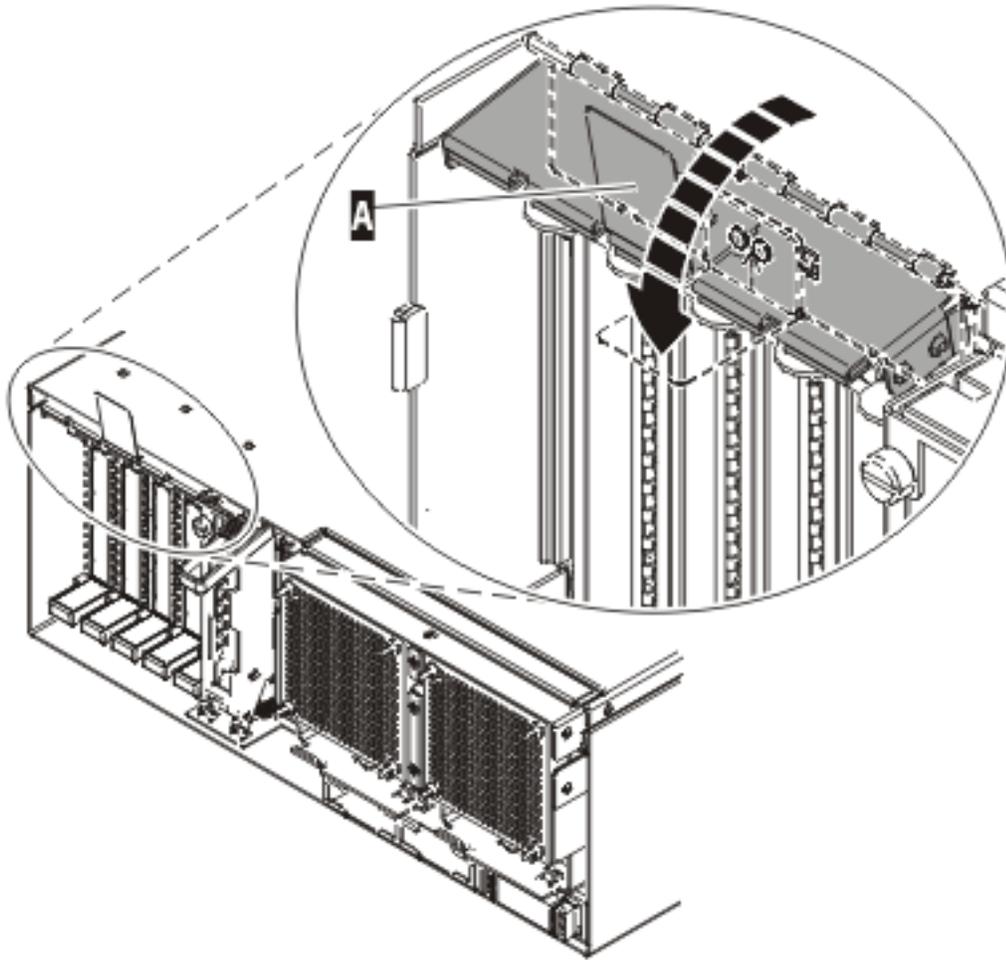

IPHAK508-0

Figure 76. PCI adapter EMC shield in the closed position

10. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
11. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
12. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
13. Verify that the new resource is functional. See Verify the installed part.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

🔗 Installing a feature using the Hardware Management Console

🔗 Logical partitioning

Replacing a PCI adapter contained in a cassette in the system with the power on in Linux

You can replace a PCI adapter.

You must have already completed the procedure “Removing a PCI adapter contained in a cassette from the system with the power on in Linux” on page 99 in order to have the slot powered off.


Note: Use this procedure only when you are replacing an adapter with an identical adapter. If you are replacing an adapter with an adapter that is not identical to the adapter removed, go to “Removing a PCI adapter contained in a cassette from the system with the power on in Linux” on page 99 and “Installing a PCI adapter contained in a cassette with the power on in Linux” on page 82.

To replace an adapter with the power on in Linux, do the following steps:

1. Perform prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If the adapter needs to be placed in the PCI adapter cassette, see “Placing a PCI adapter in a single-width cassette” on page 120.
4. At the back of the system, lift the cassette cover flap and identify the cassette slot you want to use.
5. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.
6. Run the `drs1ot_chrp_pci` command to enable an adapter to be replaced:
For example, to replace the PCI adapter in slot U7879.001.DQD014E-P1-C3 run this command:

```
drs1ot_chrp_pci -R -s U7879.001.DQD014E-P1-C3
```



Follow the instructions on the display to complete the task.
When you are instructed to insert the adapter in the adapter slot, lift and hold the PCI adapter EMC shield **(A)** in the open position. See Figure 55 on page 90.
7. Slide the cassette **(C)** into the cassette slot as shown in the following figure.
8. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle **(B)** to lock the adapter in its connector.

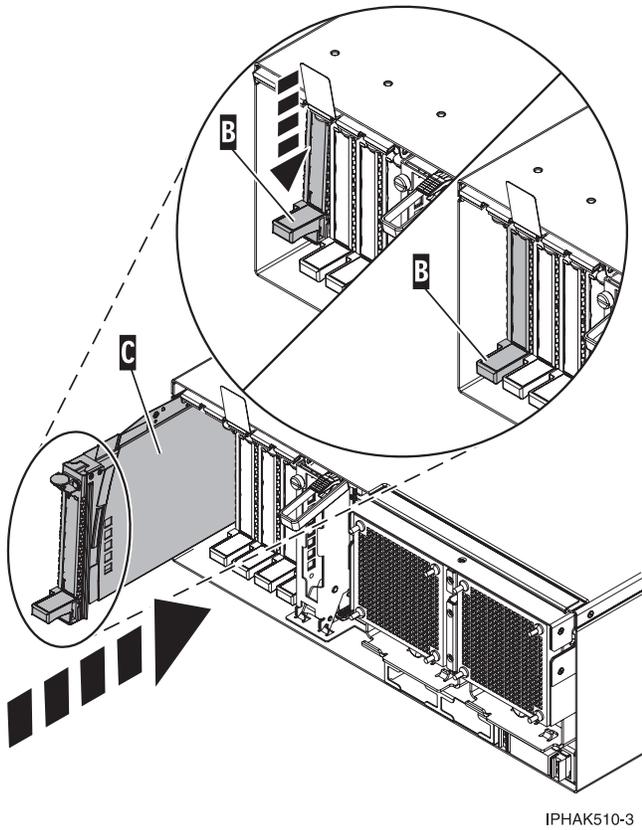

IPHAK510-3

Figure 77. PCI adapter cassette removed from the system unit

9. Lower the PCI adapter EMC shield (A) into the closed position, close the shield latch, then close the rear rack door.

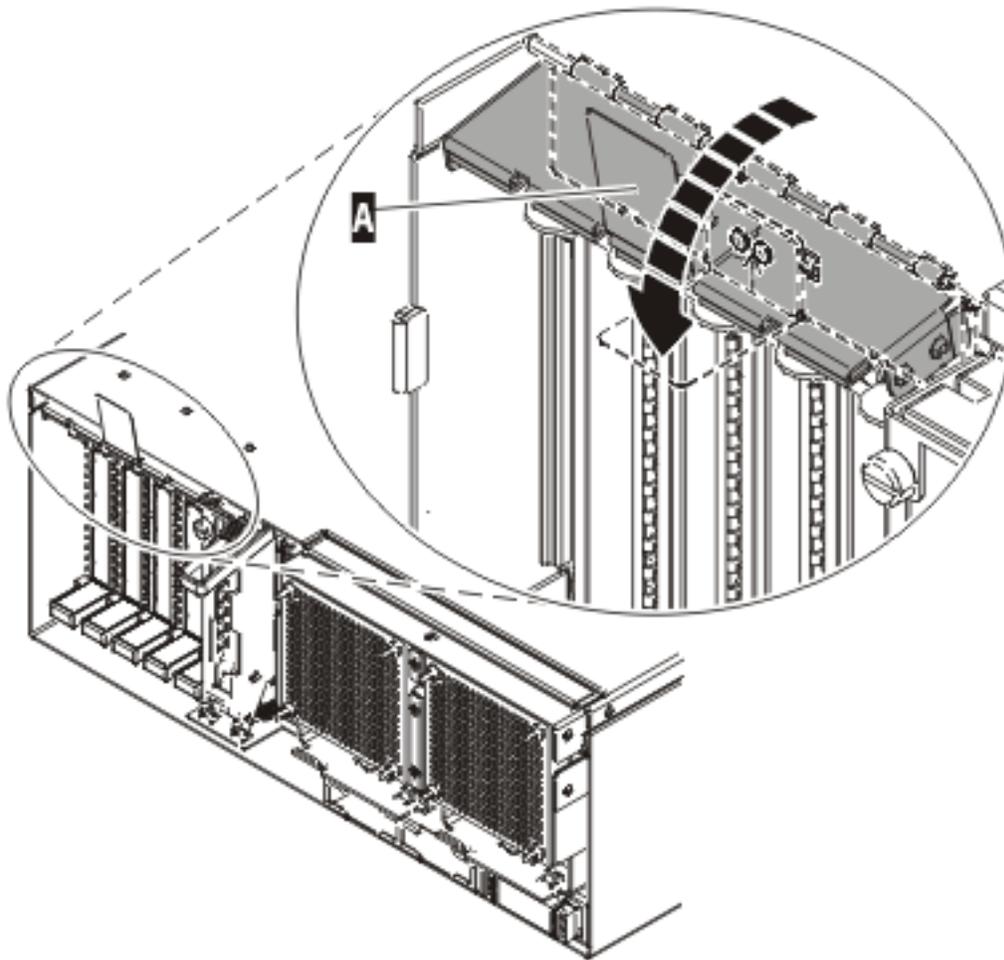

IPHAK508-0

Figure 78. PCI adapter EMC shield in the closed position

10. Run the `lsslot` command to verify that the slot is occupied.

For example, Enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`

The following is an example of the information displayed by this command:

```
# Slot      Description      Device(s)
U7879.001.DQD014E-P1-C3 PCI-X capable, 64 bit, 133MHz slot 0001:40:01.0
```

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

[Installing a feature using the Hardware Management Console](#)

[Logical partitioning](#)

PCI adapter single-width cassette

You might need to remove, replace, or install PCI adapters in a single-width cassette. Use the procedures in this section to perform these tasks.

Related tasks

“Placing a PCI adapter in a single-width cassette”

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

🔗 Installing a feature using the Hardware Management Console


🔗 Logical partitioning

Placing a PCI adapter in a single-width cassette

You can place a PCI adapter in a single-width cassette. .

To place a PCI adapter in a cassette, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Remove any shipping handles or brackets attached to the adapter.
4. Remove the cassette cover by doing the following:
 - a. Slide the cover latch (A) to disengage it from the pivot pin (C) as shown in the following figure.
 - b. Lift the cover (B) off of the pivot pin.
 - c. Slide the cover off of the cassette.

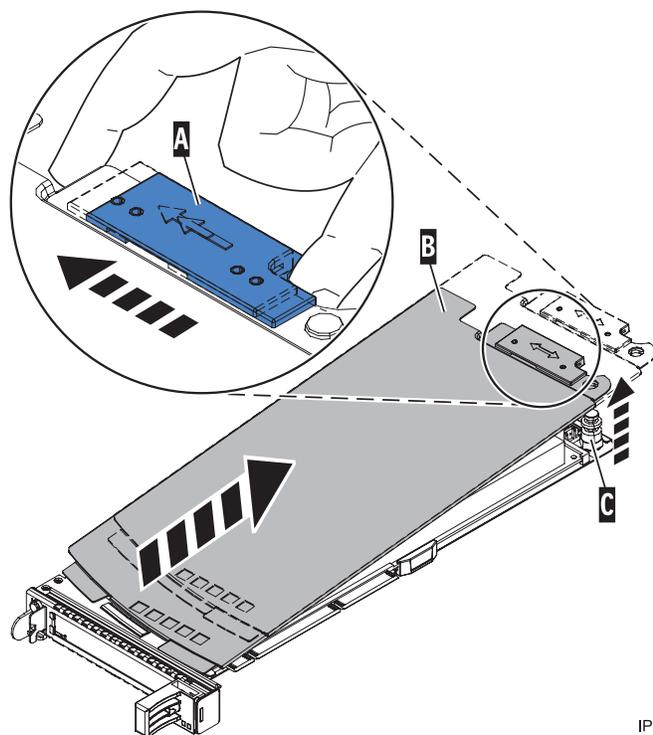

IPHA520-0

Figure 79. PCI adapter single-width cassette cover removed

5. Ensure the cassette is prepared to receive an adapter by doing the following:
 - a. Ensure the cassette is empty by doing one of the following:
 - “Removing an adapter from the PCI adapter single-width cassette” on page 130.

- Remove the adapter filler panel from the cassette.
- Ensure that all of the adapter retainers (A) have been pushed out to the edges of the cassette to allow the placement of the adapter. See Figure 80.

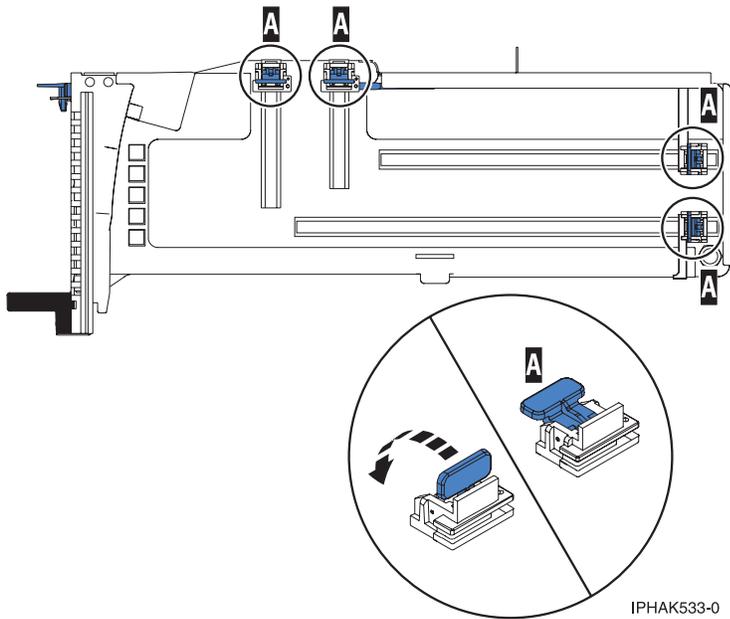


Figure 80. Adapter retainers

- Rotate the tailstock clamp into the open position.


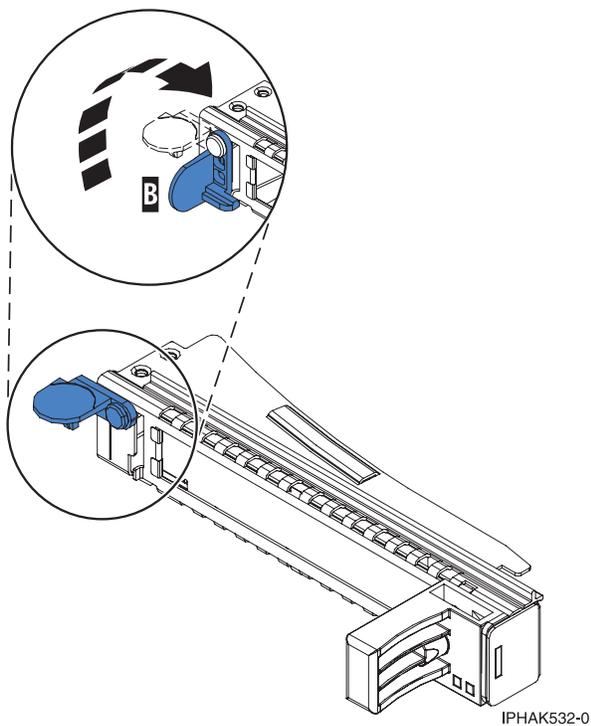


Figure 81. Tailstock clamp in the open position

- Place the adapter in the cassette by doing the following:

- a. With the tailstock clamp in the open position, insert the adapter firmly into the tailstock retaining channel (A). See Figure 82.
- b. Rotate the adapter toward the top of the cassette and into place.
- c. Close the tailstock clamp (B). See Figure 82.

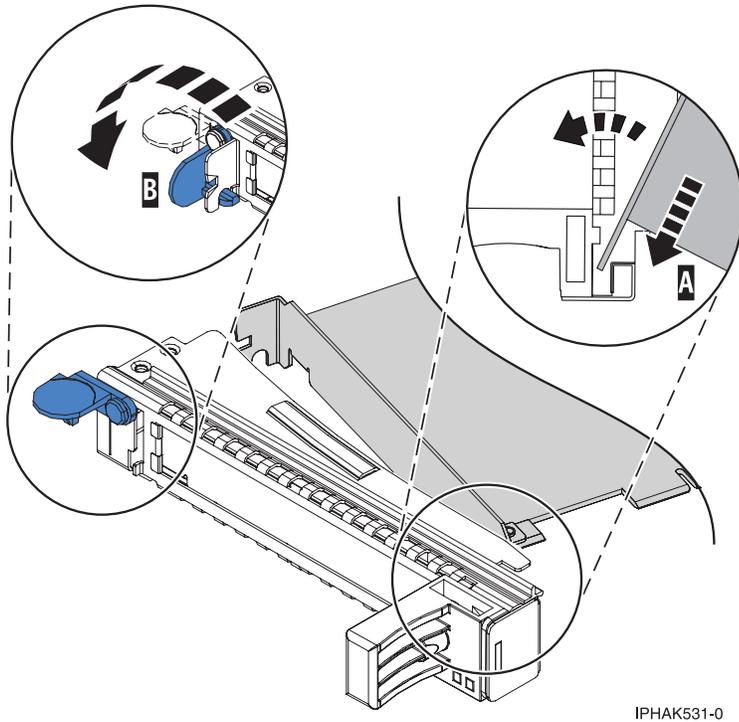

IPHAK531-0

Figure 82. Adapter removed from the PCI adapter single-width cassette

- d. Position the adapter retainers to support the adapter, and then rotate the retainer clip into the closed position.

Note:


- 1) Two retainers are located at the top of the cassette, along the top edge of the adapter. Two more retainers are located at the edge of the cassette opposite of the adapter tailstock.
- 2) When the adapter retainer clip is in the horizontal position, the adapter retainers are unlocked and can slide toward the adapter.
- 3) Place the retainers on the adapter according to the length of the adapter being used. Select the appropriate instructions:

Adapter-cassette retainer placement for large adapters

- a) Place and lock the retainers (B). See Figure 83 on page 123.

Attention: Use of the lower corner support retainer might interfere with the docking of the PCI card when positioned within the system. Ensure the retainer does not interfere with the adapter connectors on the system backplane.

- b) Ensure the adapter edge is seated in each retainer groove (A). If the shape of the adapter or the presence of a connector will not allow the adapter edge to be seated into the retainer groove, ensure the retainer is still locked firmly against that edge or connector.

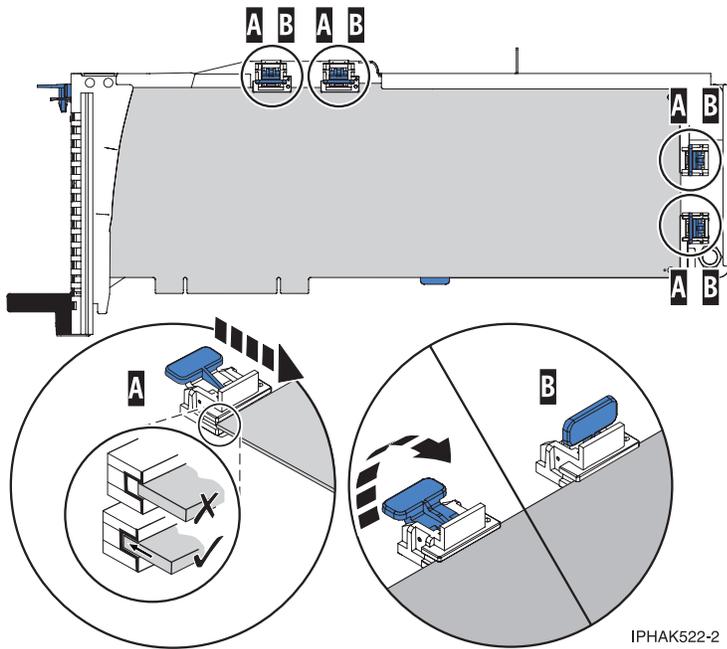


IPHA522-2

Figure 83. Large adapter in the PCI adapter cassette with the supports and stabilizer in place

Adapter-cassette retainer placement for medium-length adapters

- a) Remove the adapter stabilizer (C). See Figure 84 on page 124.
- b) Place and lock the retainers (B).
- c) Ensure the adapter edge is seated in each retainer groove (A). If the shape of the adapter or the presence of a connector will not allow the adapter edge to be seated into the retainer groove, ensure the retainer is still locked firmly against that edge or connector.

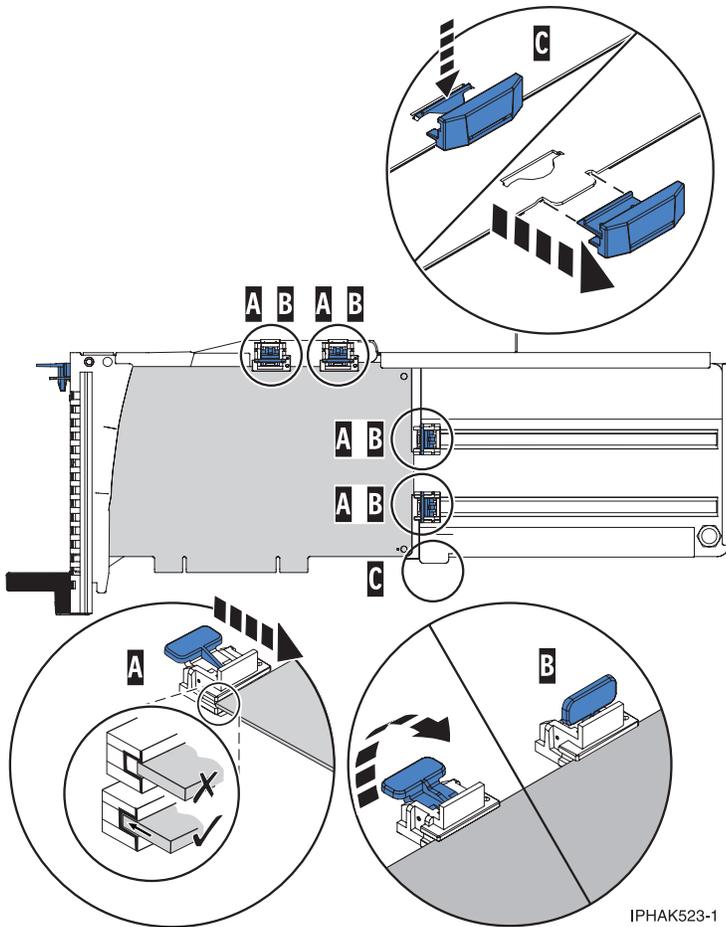

IPHAK523-1

Figure 84. Medium-length adapter in the PCI adapter cassette with the supports in place

Adapter-cassette retainer placement for small adapters

- a) Remove the adapter stabilizer (C). See Figure 85 on page 125.
- b) Place the hookarm (D) into the hole in the corner of the adapter. This supports the card when it is undocked from the connector on the system backplane.
- c) Place and lock the retainers (B).
- d) Ensure the adapter edge is seated in each retainer groove (A). If the shape of the adapter or the presence of a connector will not allow the adapter edge to be seated into the retainer groove, ensure the retainer is still locked firmly against that edge or connector.


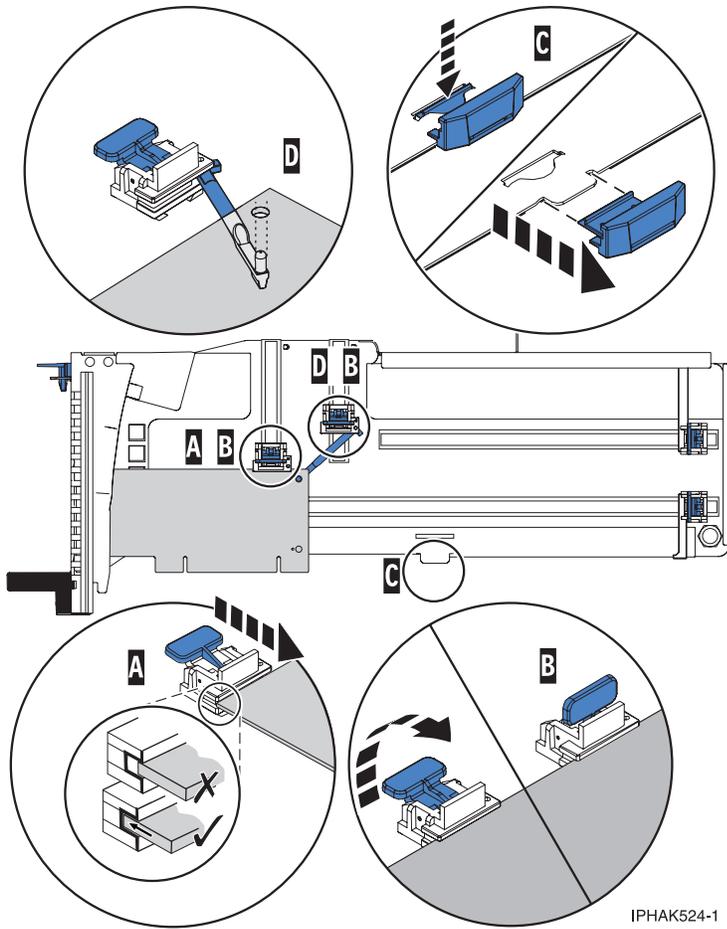


Figure 85. Small adapter in the PCI adapter cassette with the supports and the hookarm in place

7. Replace the cassette cover by doing the following:
 - a. Slide the cover (B) into position on the cassette as shown in the following figure.
 - b. While holding the cover latch (A) in the open position, place the cover over the pivot pin (C).
 - c. Release the cover latch to lock the cover into place.

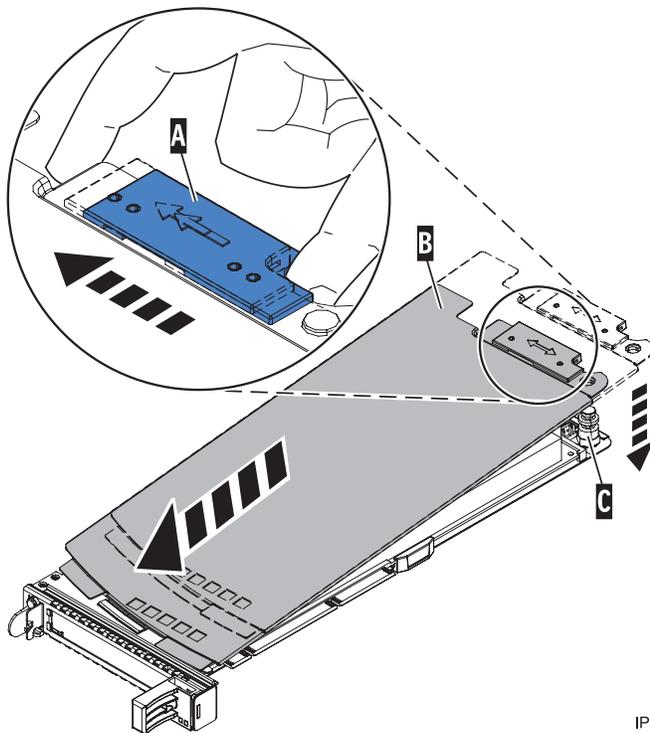

IPHA530-0

Figure 86. PCI adapter cassette cover replaced

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

“Placing a 4-Port USB PCI Express Adapter in a single-width cassette”

You can place a 4-Port USB PCI Express Adapter (FC 2728; CCIN 57D1) in a single-width cassette.

Related information

🔗 Installing a feature using the Hardware Management Console


🔗 Logical partitioning

Placing a 4-Port USB PCI Express Adapter in a single-width cassette

You can place a 4-Port USB PCI Express Adapter (FC 2728; CCIN 57D1) in a single-width cassette.

To place a PCI adapter in a cassette, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Remove the cassette from the system. See “Removing a PCI adapter contained in a cassette from the system” on page 88.
4. Remove the cassette cover by doing the following steps:
 - a. Slide the cover latch (A) to disengage it from the pivot pin (C) as shown in the following figure.
 - b. Lift the cover (B) off of the pivot pin.
 - c. Slide the cover off of the cassette.

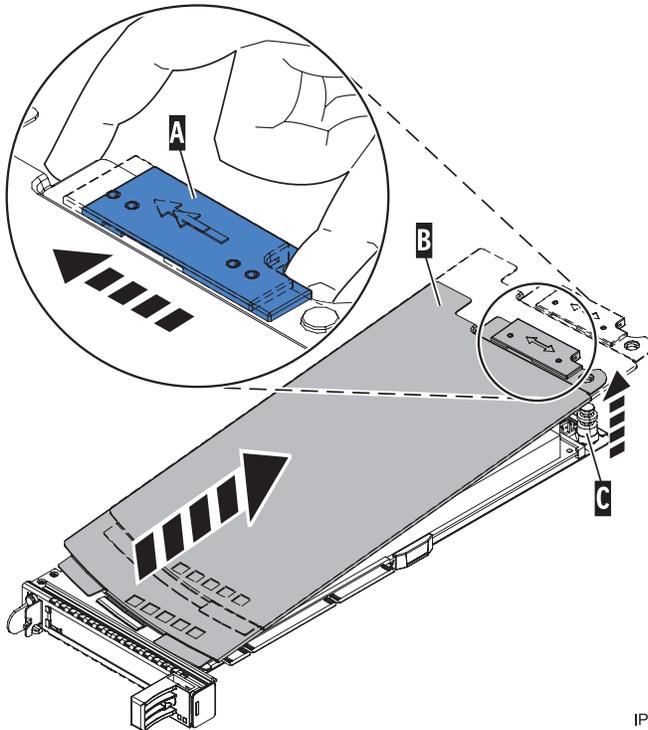

IPHAK520-0

Figure 87. PCI adapter single-width cassette cover removed


5. Ensure that the cassette is empty.
6. Place the adapter in the cassette by doing the following steps:
 - a. With the tailstock clamp in the open position, insert the adapter firmly into the tailstock retaining channel **(A)**. See Figure 88 on page 128.
 - b. Rotate the adapter toward the top of the cassette and into place.
 - c. Close the tailstock clamp **(B)**. See Figure 88 on page 128.

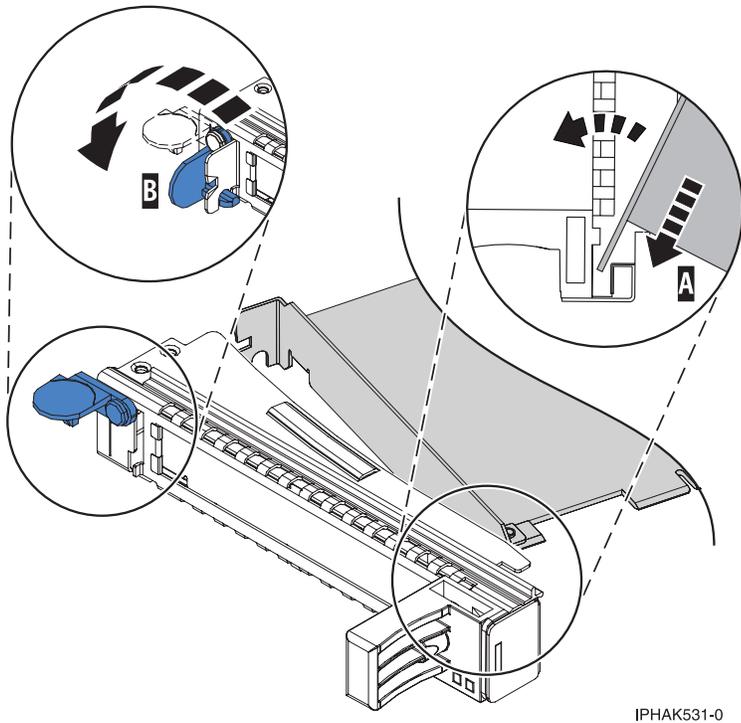

IPHAK531-0

Figure 88. Placing the PCI adapter single-width cassette


- d. Position the adapter retainer to support the adapter.

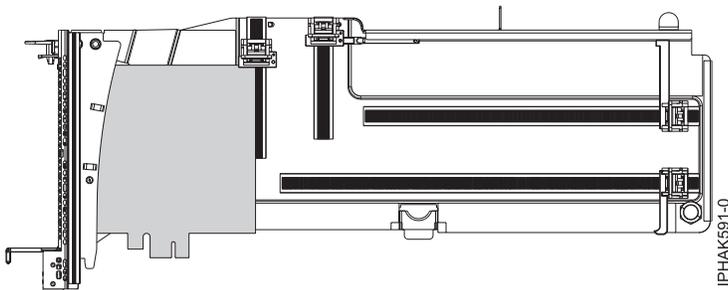

IPHAK591-0

Figure 89. Side view of adapter in cassette


7. Replace the cassette cover by doing the following steps:
 - a. Slide the cover (**B**) into position on the cassette as shown in the following figure.
 - b. While holding the cover latch (**A**) in the open position, place the cover over the pivot pin (**C**).
 - c. Release the cover latch to lock the cover into place.

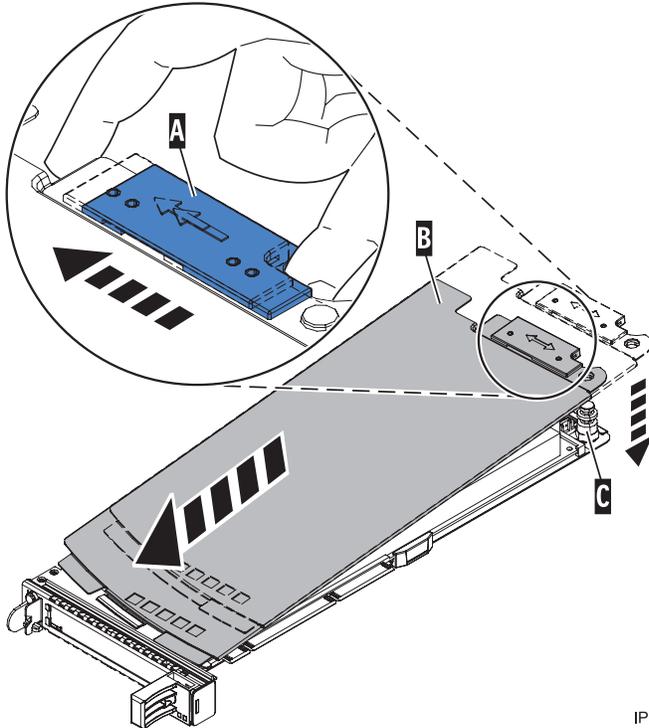

IPHAK530-0

Figure 90. PCI adapter cassette cover replaced

8. Replace the PCI adapter cassette (B) in the system. See the following figure.
9. Install the EMC grill (A).

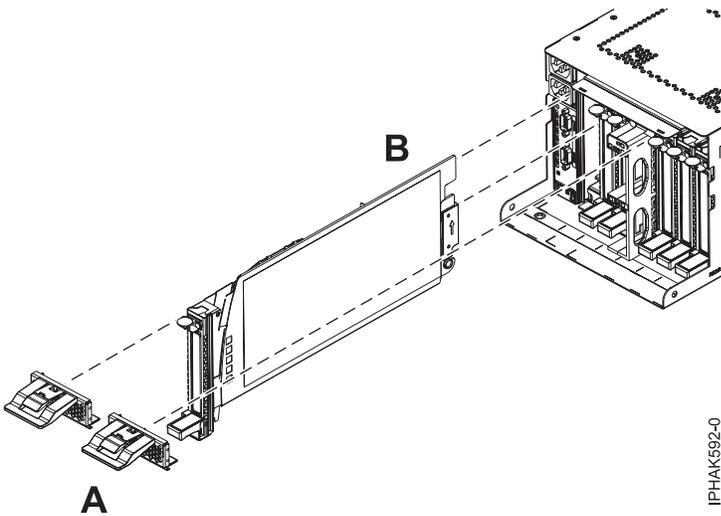

IPHAK592-0

Figure 91. Replace the cassette and install the EMC grill

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette”

You can remove a PCI adapter from a single-width cassette. .

Related information

🔗 Installing a feature using the Hardware Management Console

🔗 Logical partitioning


4-Port USB PCI Express Adapter (FC 2728; CCIN 57D1)

Removing an adapter from the PCI adapter single-width cassette

You can remove a PCI adapter from a single-width cassette. .

To remove an adapter from the single-width cassette, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Remove the cassette from the system. See “Removing a PCI adapter contained in a cassette from the system” on page 88.
4. Remove the cassette cover by doing the following:
 - a. Slide the cover latch (A) to disengage it from the pivot pin (C) as shown in the following figure.
 - b. Lift the cover (B) off the pivot pin.
 - c. Slide the cover off the cassette.

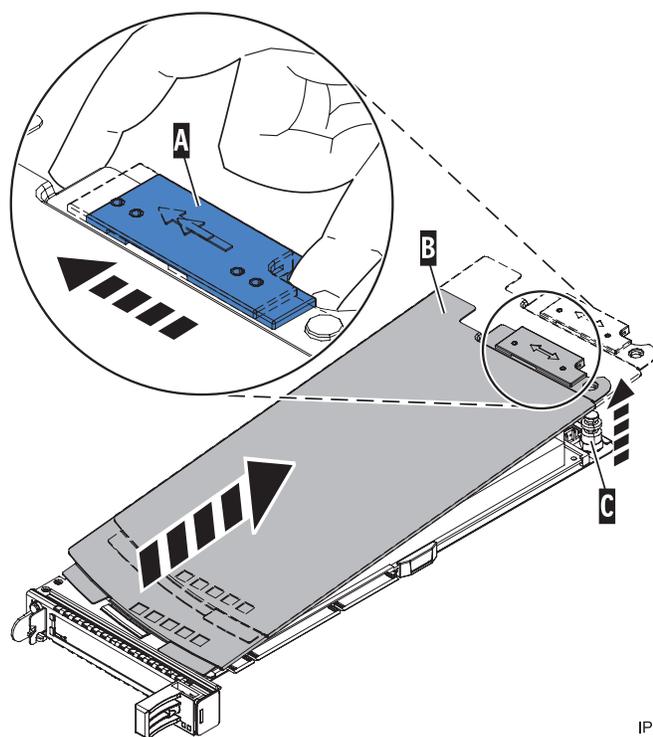

IPHA520-0

Figure 92. PCI adapter cassette cover removed

5. Remove the adapter from the cassette by doing the following:

- a. Unlock the adapter retainers by rotating the retainer clip (A) into the horizontal position. See Figure 93.

Note:

- 1) The edge of the adapter located at the end of the cassette that contains the cassette handles is called the adapter **tailstock**.
 - 2) Two retainers are located at the top of the cassette, along the top edge of the adapter. Two more retainers are located at the edge of the cassette opposite of the adapter tailstock.
 - 3) When the retainer clip is in the horizontal position, the adapter retainers are unlocked and can slide away from the card.
 - 4) If the corner support retainer is used, unlock it, and then slide the corner support retainer away from the card.
- b. Push the adapter retainers (B) away from the adapter.
 - c. Unlock the adapter tailstock clamp (C).
 - d. Rotate the adapter out of the cassette by grasping the edge of the adapter opposite the tailstock, and then firmly rotate the adapter toward the bottom of the cassette.
 - e. Lift the adapter out of the tailstock retaining channel.


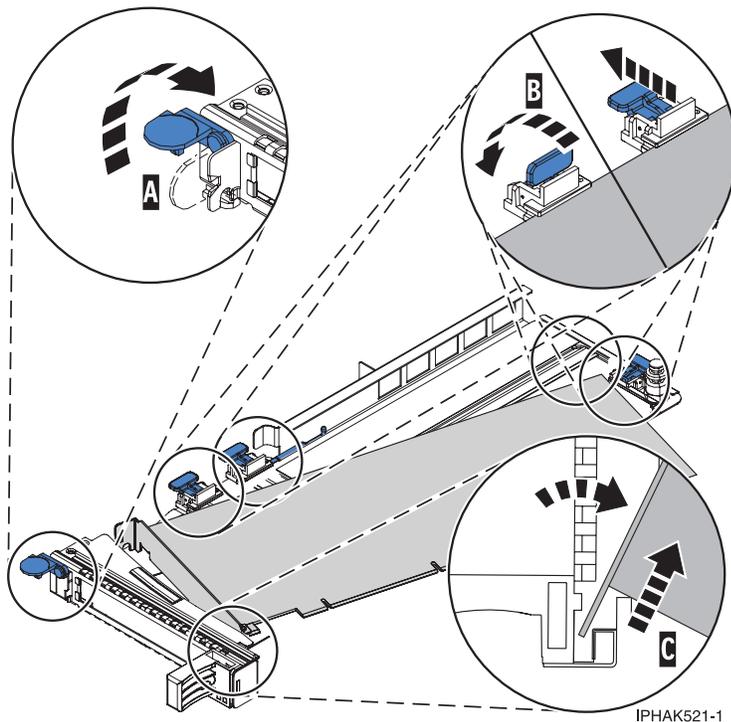


Figure 93. Adapter removed from the PCI adapter cassette

- f. Put the adapter in a safe place.
Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.
- g. Place a PCI adapter or filler panel in the cassette. See “Placing a PCI adapter in a single-width cassette” on page 120.
- h. Replace the cassette cover by doing the following:
 - 1) Slide the cover (B) into position on the cassette.
 - 2) While holding the cover latch (A) in the open position, place the cover over the pivot pin (C).

3) Release the cover latch to lock the cover into place.

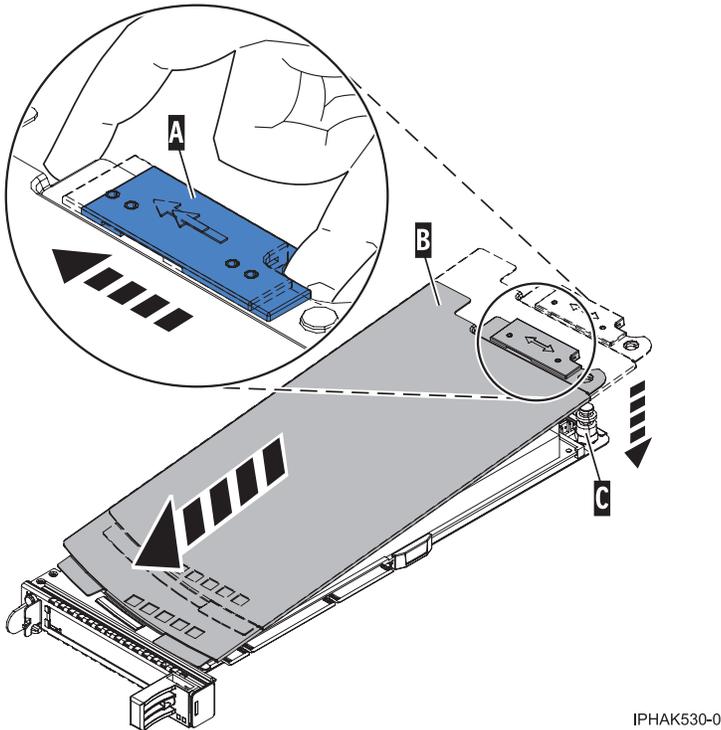

IPHAK530-0

Figure 94. PCI adapter cassette cover replaced

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

🔗 [Installing a feature using the Hardware Management Console](#)


🔗 [Logical partitioning](#)

PCI adapter single-width, first and second generation cassettes

You might need to remove, replace, or install PCI adapters in a single-width, generation 1, generation 2, or generation 2.5 cassette.

Note: If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

Use the following graphic to determine your PCI cassette generation.

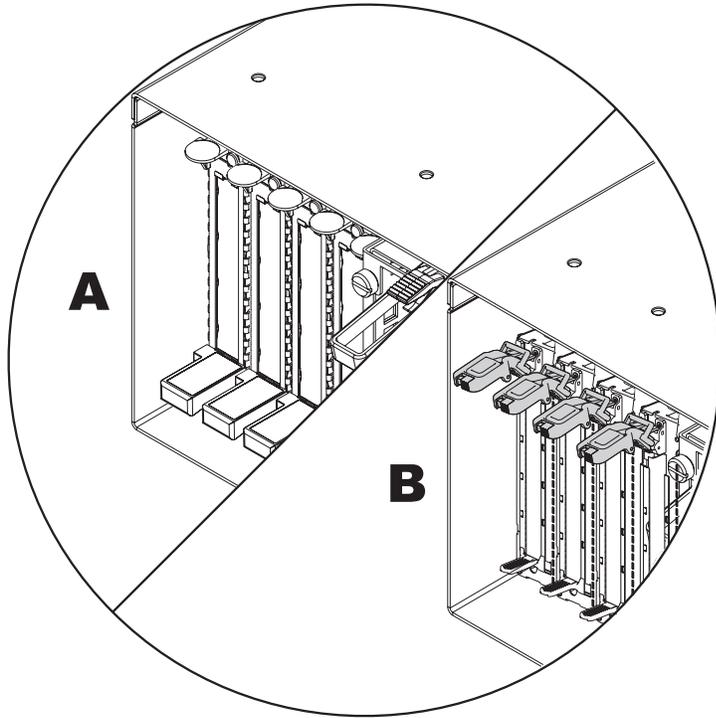

A Generation 3 or higher. Use the procedures in the topic “PCI adapter single-width cassette” on page 119.

B Generation 2.5 or earlier. Use the following procedures.

Related tasks

“Placing a PCI adapter in a single-width cassette” on page 120

You can place a PCI adapter in a single-width cassette. .

“Removing an adapter from the PCI adapter single-width cassette” on page 130

You can remove a PCI adapter from a single-width cassette. .

Related information

🔗 Installing a feature using the Hardware Management Console

🔗 Logical partitioning


Placing a PCI adapter in a single-width, first or second generation cassette

You can place a PCI adapter in a single-width, generation 1, generation 2, or generation 2.5 cassette. Use the procedure in this topic to perform this task.


Prerequisite: This procedure begins where “Removing an adapter from the PCI adapter single-width, first or second generation cassette” on page 139 ends.

To place an adapter in a single-width cassette, do the following steps:


1. Select the PCI adapter type:
 - If you are placing a large adapter, go to step 2.
 - If you are placing a small adapter, go to step 4 on page 134.
2. Install a large adapter in the cassette.

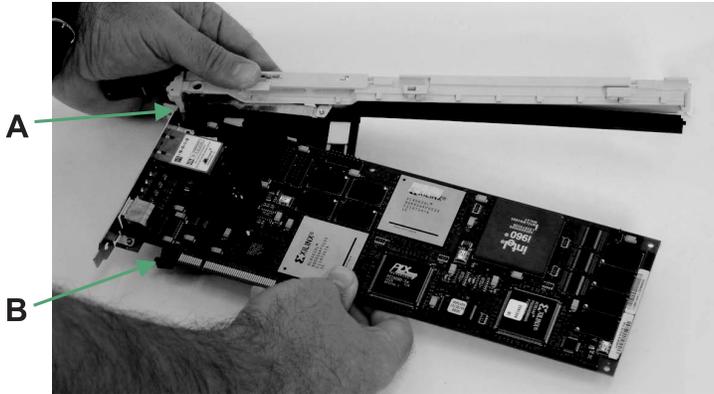

- a. Place the adapter into the cassette so that the upper-left corner of the adapter engages the adjustable top adapter retaining clip **A**.
- b. Rotate the adapter so that the adapter engages the slot in the bottom adapter retaining clip **B** and the top corner of the adapter is seated into the adjustable top adapter retaining clip.
If the adapter is not a full-height adapter, you must slide the adjustable top adapter-retaining clip downward until the lower edge of the adapter is seated into the slot on the bottom adapter-retaining clip.
3. Slide the adapter arms toward the large adapter.

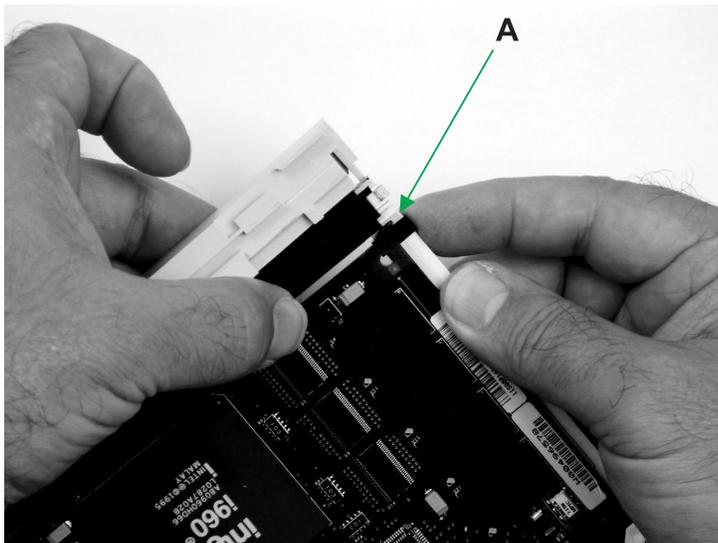


- a. Slide the large adapter retaining arm **A** toward the adapter on the cassette linkage rail.
- b. Make sure that the top adapter retaining clip holds the top-right corner of the adapter.
- c. Make sure that the bottom adapter retaining clip holds the bottom-right corner of the adapter.
It might be necessary to apply pressure to engage and hold the bottom of the adapter.
- d. To ensure that the adapter is secure, slide the large adapter retaining arm closer to the adapter (as needed), until the adapter is firmly held in place.
- e. Go to step 6 on page 135.
4. Install a small adapter in the cassette.

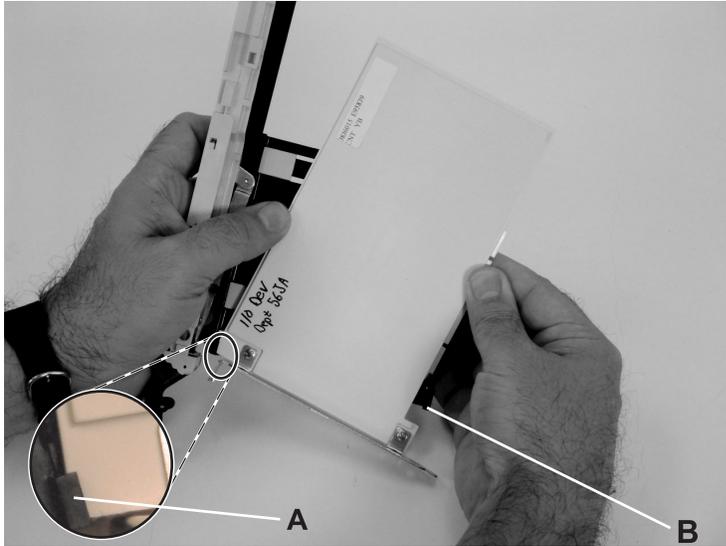

- a. Place the adapter into the cassette so that the upper-left corner of the adapter engages the adjustable top adapter retaining clip **A**.
- b. Rotate the adapter so that the adapter engages the slot in the bottom adapter retaining clip **B** and the top corner of the adapter is seated into the adjustable top adapter retaining clip.


If the adapter is not a full-height adapter, you must slide the adjustable top adapter-retaining clip downward until the lower edge of the adapter is seated into the slot on the bottom adapter-retaining clip.

5. Slide the adapter arms toward the small adapter.

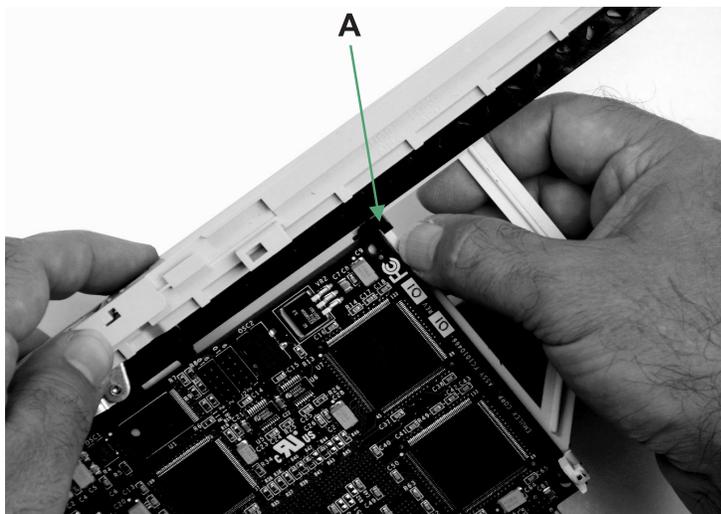


- a. Slide the small adapter retaining arm **A** toward the adapter on the cassette linkage rail.
- b. Make sure that the top adapter retaining clip holds the top right corner of the adapter.
- c. Make sure that the bottom adapter retaining clip holds the bottom right corner of the adapter.
It might be necessary to apply pressure to engage and hold the bottom of the adapter.
- d. To ensure that the adapter is secure, slide the small adapter retaining arm closer to the adapter (as needed), until the adapter is firmly held in place.

6. Install the EMC shield.

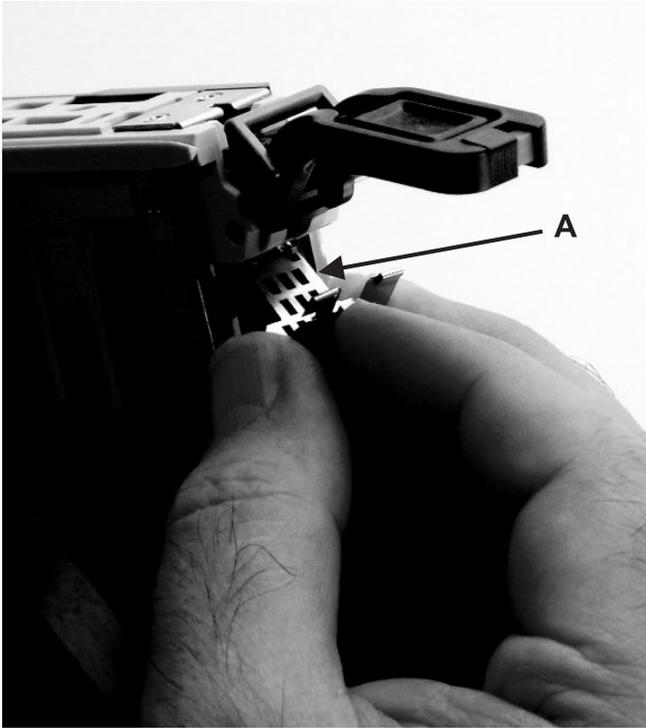


Install the metal EMC shield **A** to the top of the tailstock.

7. Lock the handle.

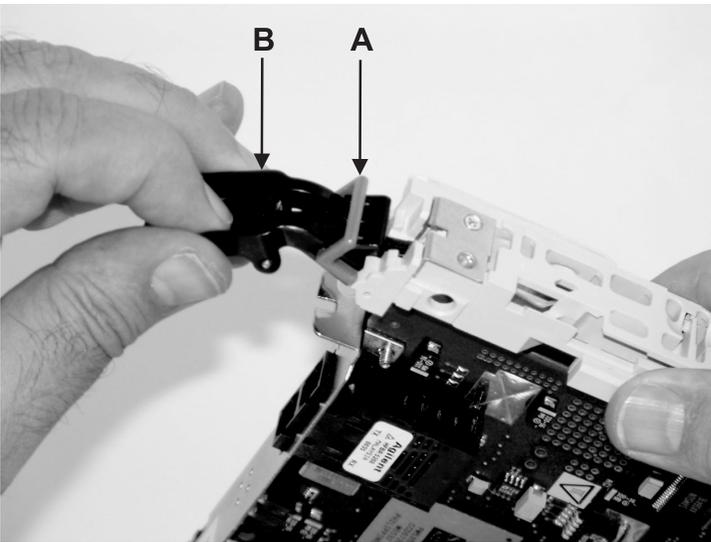

- a. Lower the handle **B** on the cassette linkage assembly until it moves into the down position (the adapter or blank filler should move up into the cassette assembly).
- b. Push on both sides of the gray plastic locking bar **A** to ensure that the handle is pushed into the locked position.



8. Install the cover.

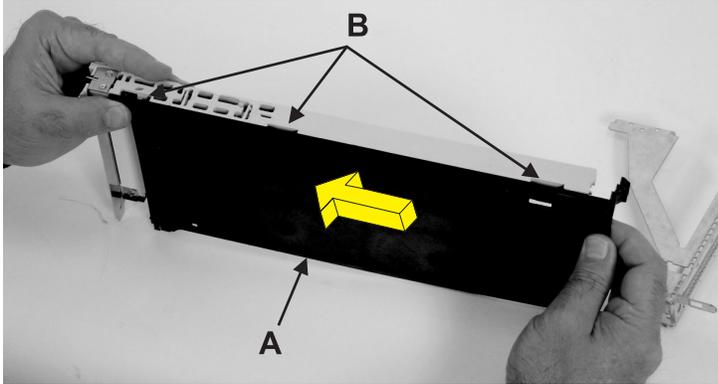

- a. Position the adapter and cassette assembly with the handle on the left (in the down position) and the top facing away from you.
- b. Place the cover **A** on the cassette assembly and align the tabs on the cover with the holes **B** in the assembly.
- c. Slide the cover toward the handle until the hole in the cover aligns with the hole in the cassette assembly.


The cover might be difficult to slide. If you grasp the left end (handle end) of the cassette and the right end of the cover, you can use enough force to push the cover onto the PCI adapter cassette assembly.

9. Slide on the bezel and latch it.

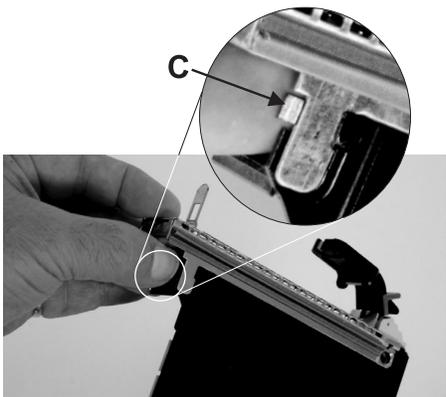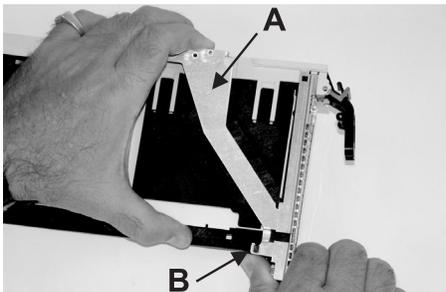


- a. Turn over the cassette so the cover side is down.
- b. While holding the bezel extension **A** out, slide the bezel onto the cassette assembly.
- c. Push the plastic cover arm latch **B** in the bezel hook.
- d. Turn over the cassette so the cover side is facing up.
- e. Push the cover tab **C** up to ensure that it is holding the bezel to the cover.

10. Lock the bezel.

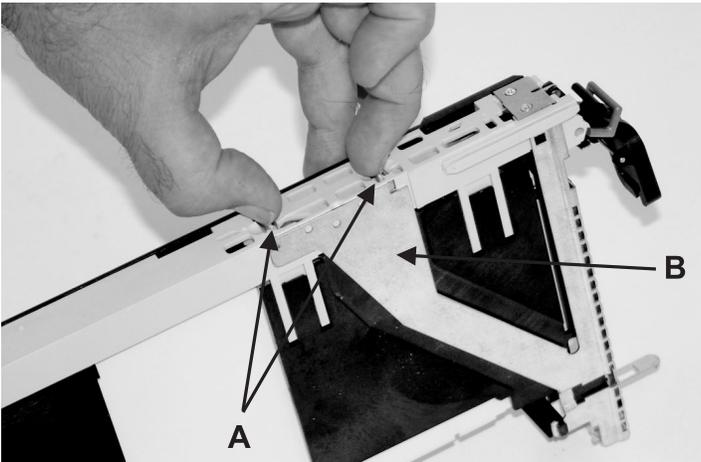


- a. Push the top part of the bezel extension **B** down until the metal tabs lock into the slots in the PCI adapter cassette assembly.
- b. Make sure that the extension arm engages the pins **A** on the cassette assembly. (You should be able to see the pins in the holes in the arm).

11. Install the bushing-lock pin and bushing.

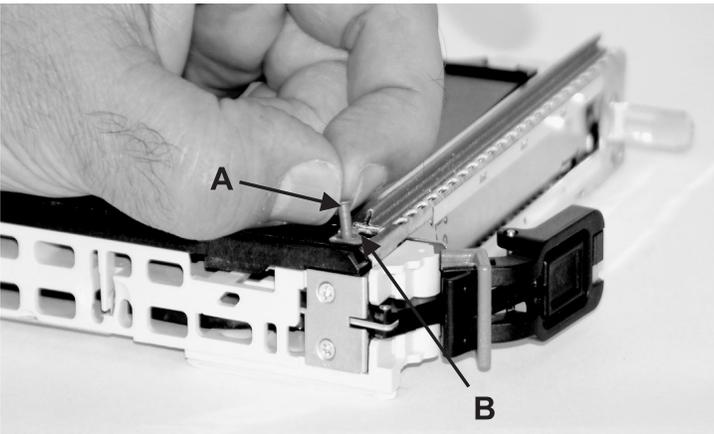

- a. Turn over the cassette so the cover side is up and the top of the adapter is facing you.
- b. Install the bushing **B** in the PCI adapter cassette assembly by pressing it into the cassette assembly hole.
- c. Install the lock pin **A** in the bushing by pressing it into the hole in the bushing.

12. Install the PCI adapter cassette.

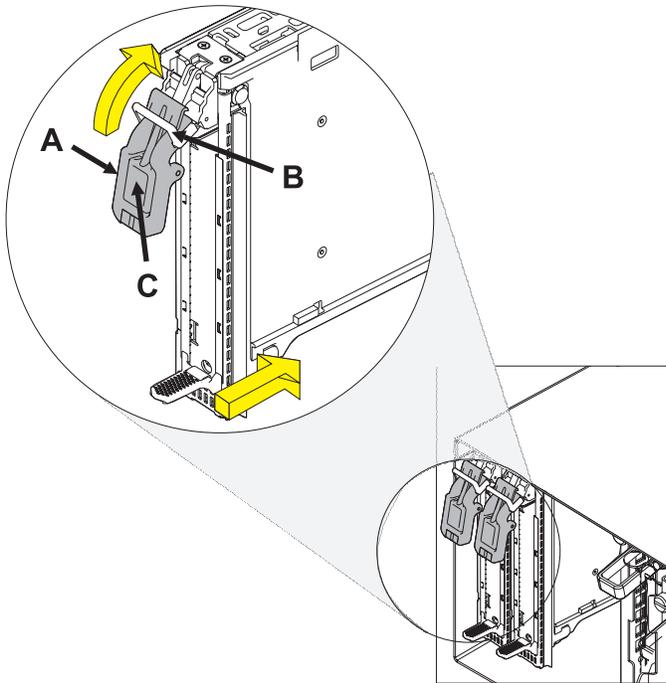

- a. Before installing the PCI adapter cassette, make sure the locking arm **A** is down.
- b. Push the locking knob **B** upward into the locked position.
- c. Slide the PCI adapter cassette all the way into the assembly.
- d. Press the tab **C** to unlock the locking knob.
- e. Rotate the locking arm **A** up to install it in the slot.


Removing an adapter from the PCI adapter single-width, first or second generation cassette

You can remove a PCI adapter in a single-width, generation 1, generation 2, or generation 2.5 cassette. Use the procedure in this topic to perform this task.

Note: If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter in a cassette. For instructions, see *Installing a feature using the Hardware Management Console*.


To remove an adapter from the single-width cassette, do the following steps:

1. Remove the cassette from the system unit.

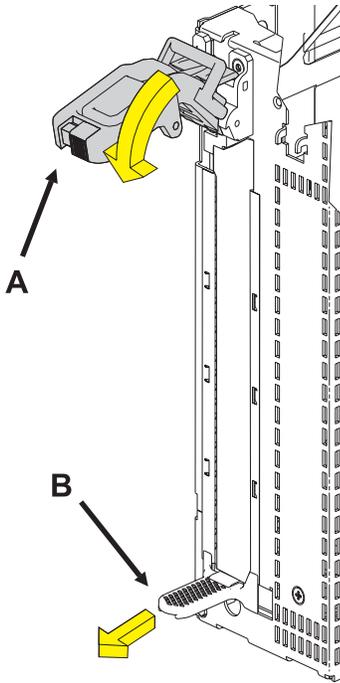


Follow these steps:

- a. Perform the prerequisite tasks described in “Before you begin” on page 246.
 - b. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
 - c. Push the locking arm **(A)** down to unlock the PCI adapter cassette.
 - d. Lift the lower tab **(B)** and pull the PCI adapter cassette out of the assembly.
 - e. Set the cassette aside with the cover facing up.
2. Remove the bushing-lock pin and bushing.

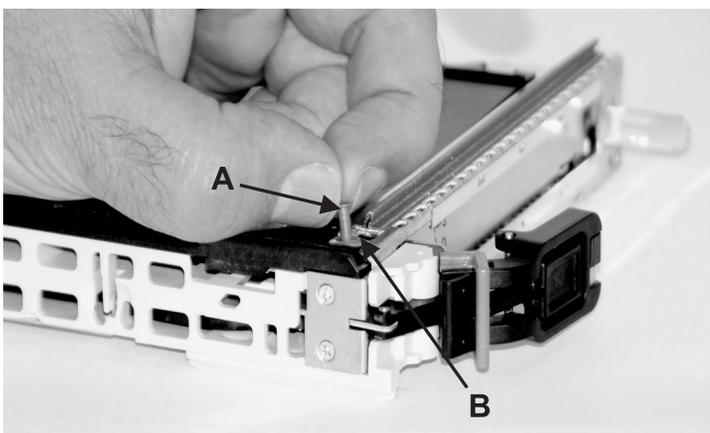



- a. Place the PCI adapter cassette assembly on a flat work surface with the cover facing up and the top of the adapter facing you.
- b. Using two fingers, remove the bushing-lock pin **A** from the bushing. The pin can be removed by pulling it out of the bushing with your fingernails, tweezers, or a similar tool.
- c. Remove the bushing **B**. The bushing can be removed by pulling it out of the PCI adapter cassette assembly with your fingernails, tweezers, or a similar tool.

3. Unlock the bezel.

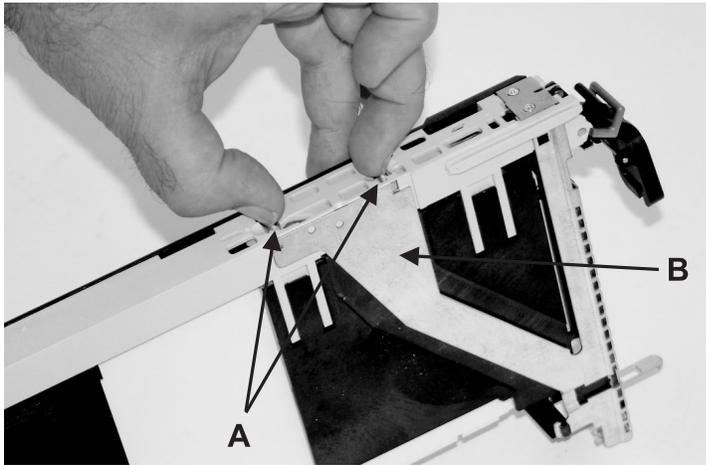

- a. Turn the PCI adapter cassette assembly over so that the cover side is down.
- b. Locate the plastic latch fingers **A** in the top part of the cassette.
- c. Using one hand, pinch the plastic latch fingers, and, with your other hand, carefully lift the top part of the bezel extension **B** out until the tabs clear the slots in the PCI adapter cassette assembly.


4. Unlatch the bezel and slide off.

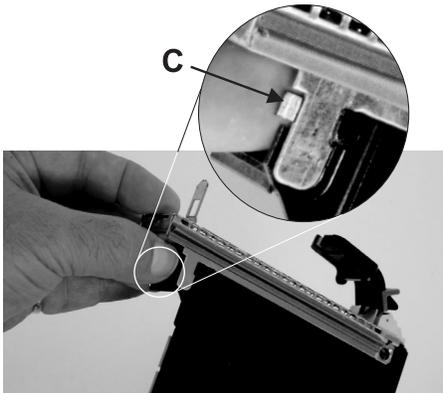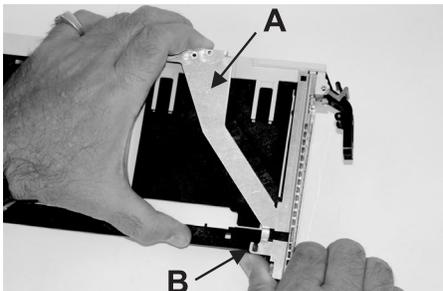


Follow these steps:

- a. While holding up the bezel extension **A**, push the plastic cover latch **B** out of the bezel hook.
- b. Turn the cassette assembly over so that the cover side is up.
- c. Push down on the cover tab **C** to release the bezel.
- d. Turn the cassette assembly over so that the cover side is down.


- e. Carefully slide the bezel off of the cassette assembly and set it aside.
5. Remove the cover.

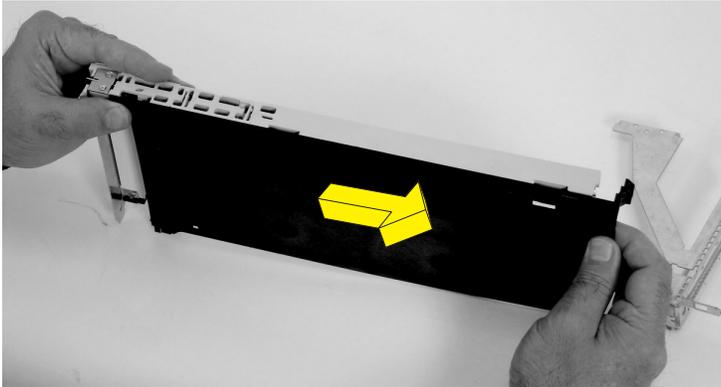

- a. Turn over the cassette assembly so that the cover side is up.
 - b. Slide the cover **A**, until it releases from the cassette assembly.
The cover might be tight and difficult to slide. If you grasp the left end (handle end) of the cassette and the right end of the cover, you can use enough force to pull the cover off of the PCI adapter cassette assembly.
 - c. Lift the cover off the assembly, and set it aside.
6. Unlock the handle.

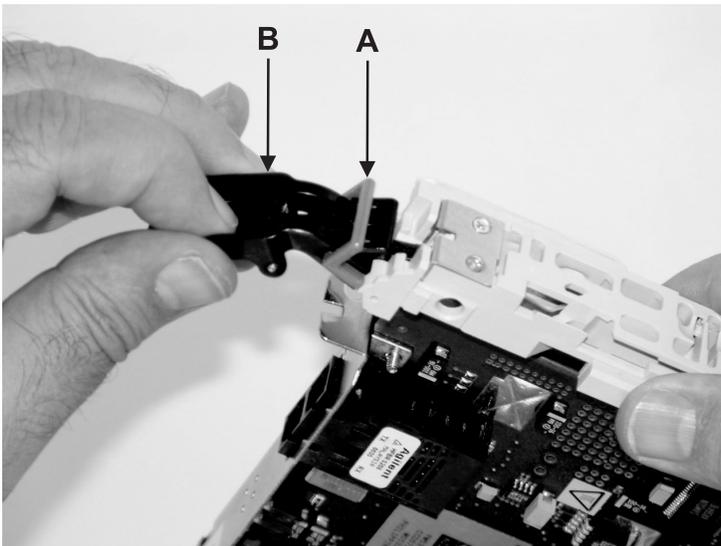


- a. Ensure that the handle is pulled into the unlocked position by pulling on both sides of the gray plastic locking bar **A** which is located on the handle **B**.
 - b. Raise the handle on the cassette linkage assembly until it moves into the up position (the blank filler or adapter moves downward).
7. Remove the electromagnetic compatibility (EMC) shield.

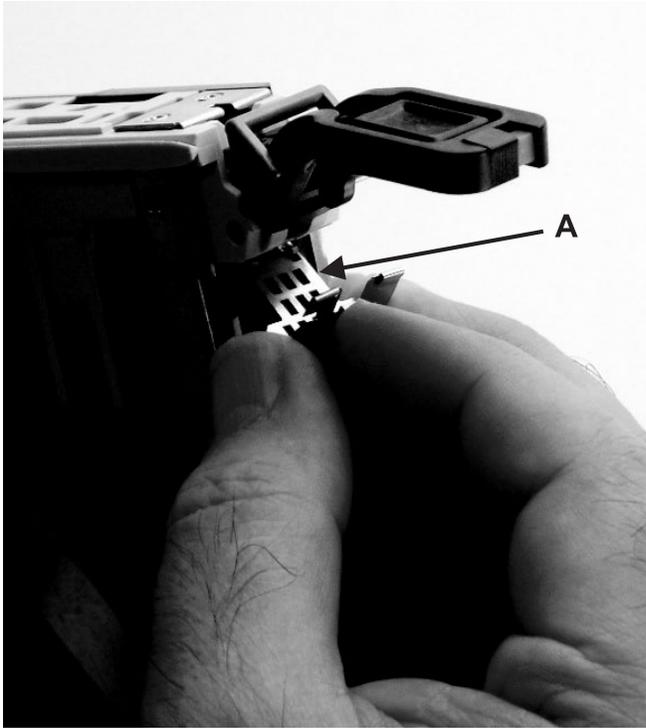

Remove the metal EMC shield **A** from the top of the tailstock.

8. Select the PCI adapter type:
 - If you are removing a large adapter, go to step 9.
 - If you are removing a small adapter, go to step 12 on page 144.
9. Slide the large adapter off the cassette assembly.

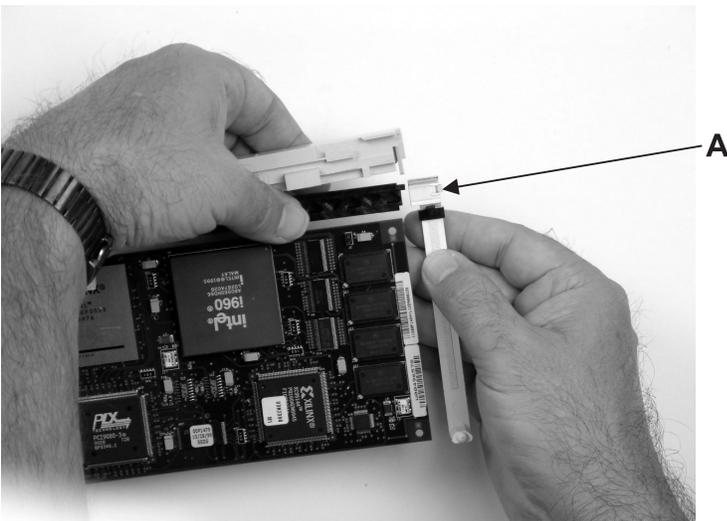


Each adapter arm has a release tab **A** that allows the arm to be moved away from the adapter in the cassette assembly. Use your fingernail to lift the tab, which allows the arm to be moved away from the adapter. Lift the release tab on the large adapter arm, and slide it off the cassette linkage assembly.

10. Remove the large adapter from the cassette.



Remove the adapter from the cassette linkage assembly by rotating the bottom of the tailstock **A** out as shown in the illustration. Store the adapter in a safe place.

11. Go to step 14 on page 145.
12. Slide the adapter arms away from the small adapter.

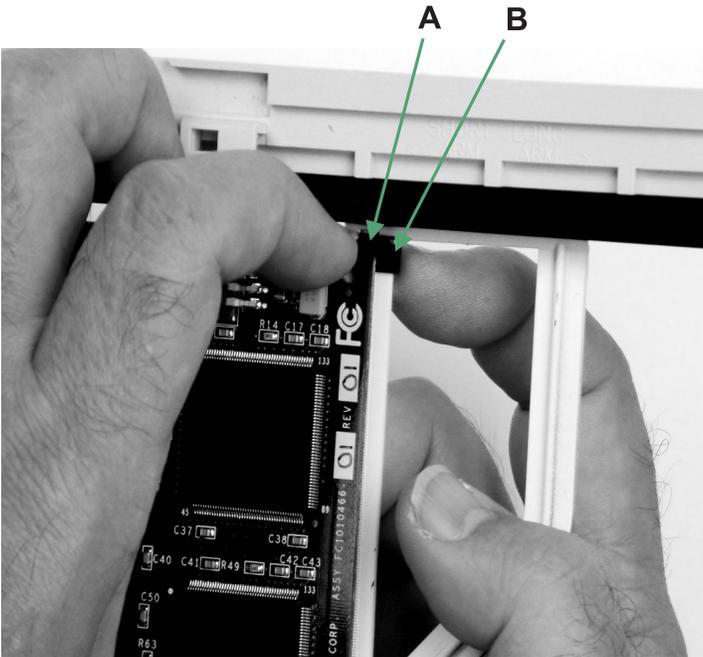


- a. Each adapter arm has a release tab **A** that allows the arm to be moved away from the adapter or blank filler in the cassette assembly. Use your fingernail to lift the tab, which allows each arm to be moved away from the adapter. Lift the release tab on the small adapter arm, and push on the slotted tab **B** to release the end of the blank filler.

Leave the large adapter arm on the cassette linkage assembly.

- b. Slide the large and small adapter arms away from the adapter.

13. Remove the small adapter from the cassette.

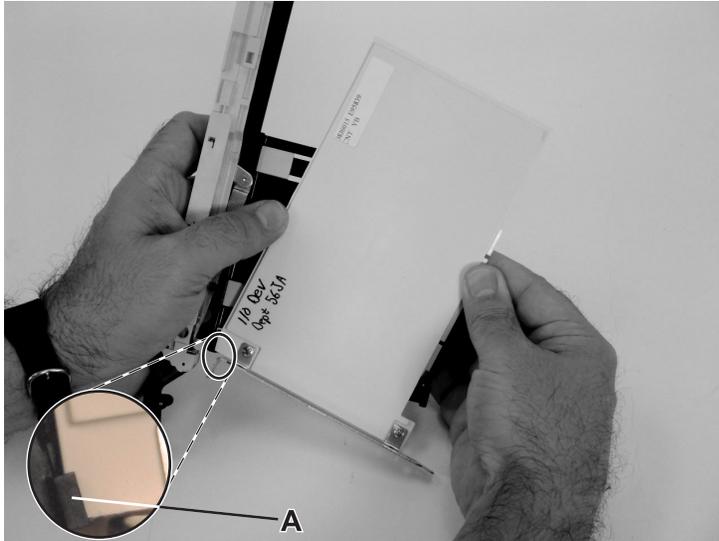

Remove the adapter or blank filler from the cassette linkage assembly by rotating the bottom of the tailstock **A** out, as shown in the illustration. Store the adapter or blank filler in a safe place.

14. Install a new adapter as described in “Placing a PCI adapter in a single-width, first or second generation cassette” on page 133.

PCI adapter double-wide cassette


You might need to remove, replace, or install PCI adapters in a double-wide cassette. Use the procedures in this section to perform these tasks.

Removing an adapter from the PCI adapter double-wide cassette

You might need to remove a PCI adapter from a double-wide cassette. .

To remove an adapter from the cassette, do the following:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Remove the PCI adapter contained in a cassette from the system. For information, see “Removing a PCI adapter contained in a cassette from the system” on page 88.
4. Remove any shipping handles or brackets attached to the adapter.
5. Remove the cassette cover by doing the following:
 - a. Slide the cover latch **A** to disengage it from the pivot pin **C** as shown in the following figure.
 - b. Lift the cover **B** off of the pivot pin.
 - c. Slide the cover off of the cassette.

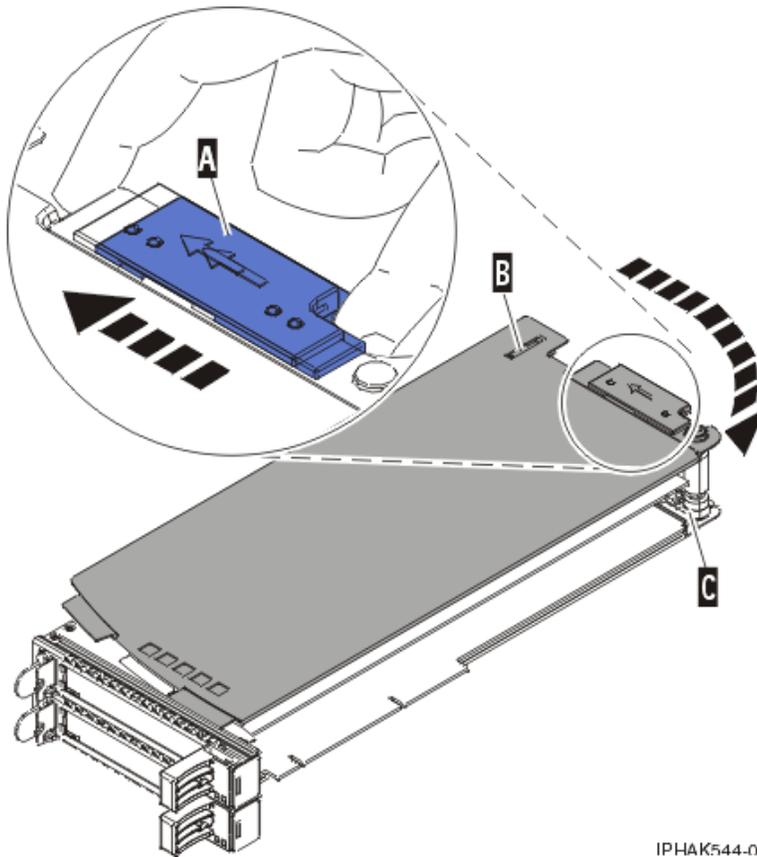

IPHAK544-0

Figure 95. PCI adapter cassette cover removed

- d. Unscrew pivot pin C and put it in a safe place
6. Remove the adapter from the cassette by doing the following:
 - a. Unlock the adapter retainers by rotating the retainer clip A into the horizontal position. See Figure 96 on page 147.

Note:

- 1) The edge of the adapter located at the end of the cassette that contains the cassette handles is called the adapter **tailstock**.
 - 2) Two retainers are located at the top of the cassette, along the top edge of the adapter. Two more retainers are located at the edge of the cassette opposite of the adapter tailstock.
 - 3) When the retainer clip is in the horizontal position, the adapter retainers are unlocked and can slide away from the card.
 - 4) If the corner support retainer is used, unlock it, and then slide the corner support retainer away from the card.
- b. Push the adapter retainers B away from the adapter.
 - c. Unlock the adapter tailstock clamp C.
 - d. Rotate the adapter out of the cassette by grasping the edge of the adapter opposite the tailstock, and then firmly rotate the adapter toward the bottom of the cassette.
 - e. Lift the adapter out of the tailstock retaining channel.

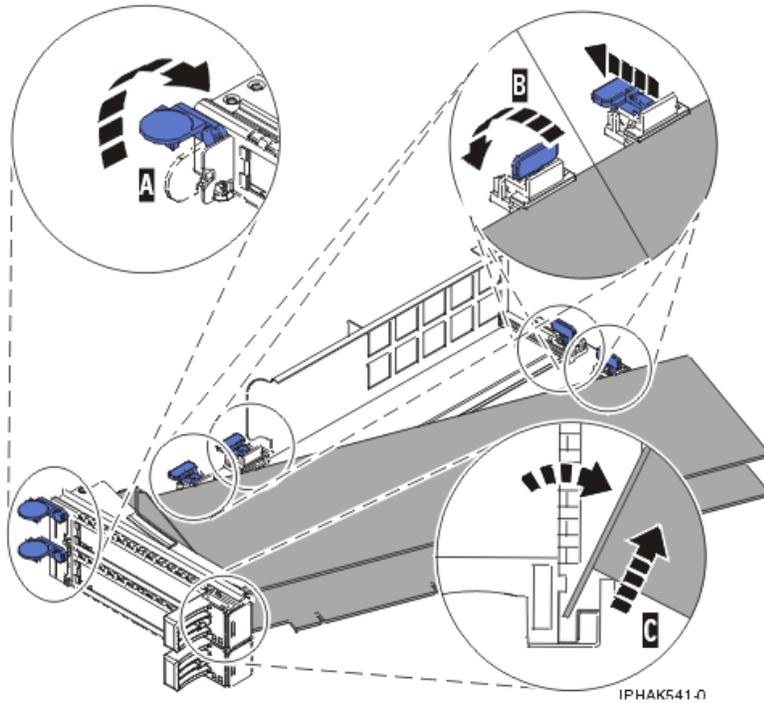


Figure 96. Adapter removed from the PCI adapter cassette

f. Put the adapter in a safe place.


Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

g. Place the adapter in the PCI adapter double-wide cassette. For information, see “Placing an adapter in the PCI adapter double-wide cassette” on page 148.

Note: If the cassette is not going to contain a PCI adapter, use this same procedure to place an adapter filler panel in the cassette.

h. Replace the cassette cover by doing the following:

- 1) Screw pivot pin **C** into place.
- 2) Slide the cover **B** into position on the cassette.
- 3) While holding the cover latch **A** in the open position, place the cover over the pivot pin **C**.
- 4) Release the cover latch to lock the cover into place.

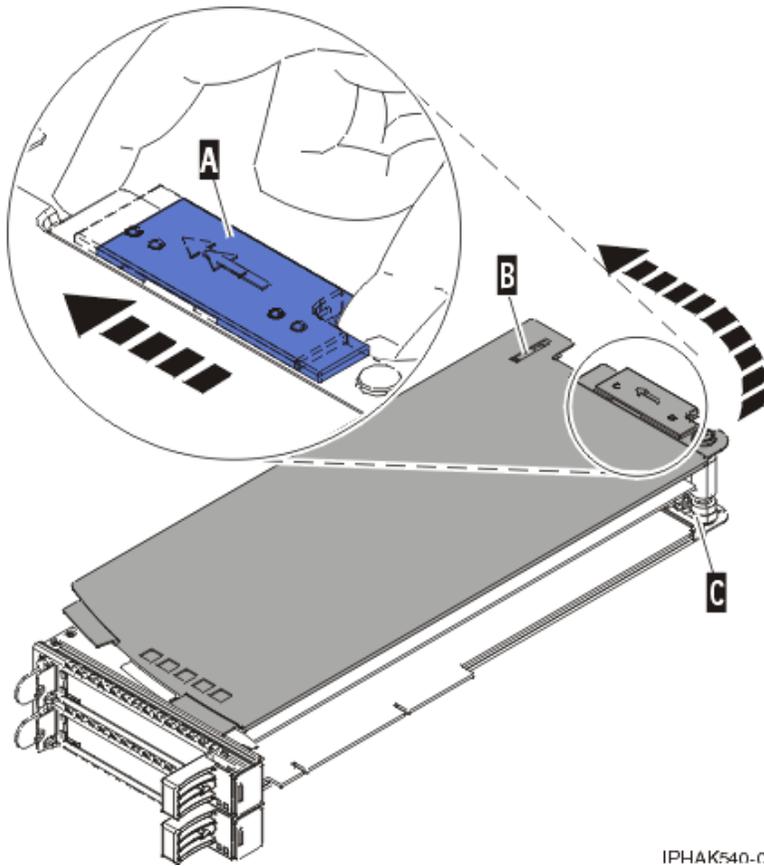

IPHAK540-C


Figure 97. PCI adapter cassette cover replaced

Placing an adapter in the PCI adapter double-wide cassette

You might need to place a PCI adapter in a double-wide cassette. .

To place an adapter in a cassette, do the following:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Remove the PCI adapter contained in a cassette from the system. For information, see “Removing a PCI adapter contained in a cassette from the system” on page 88.
3. Remove the cassette cover by doing the following:
 - a. Slide the cover latch **A** to disengage it from the pivot pin **C** as shown in the following figure.
 - b. Lift the cover **B** off of the pivot pin.
 - c. Slide the cover off of the cassette.

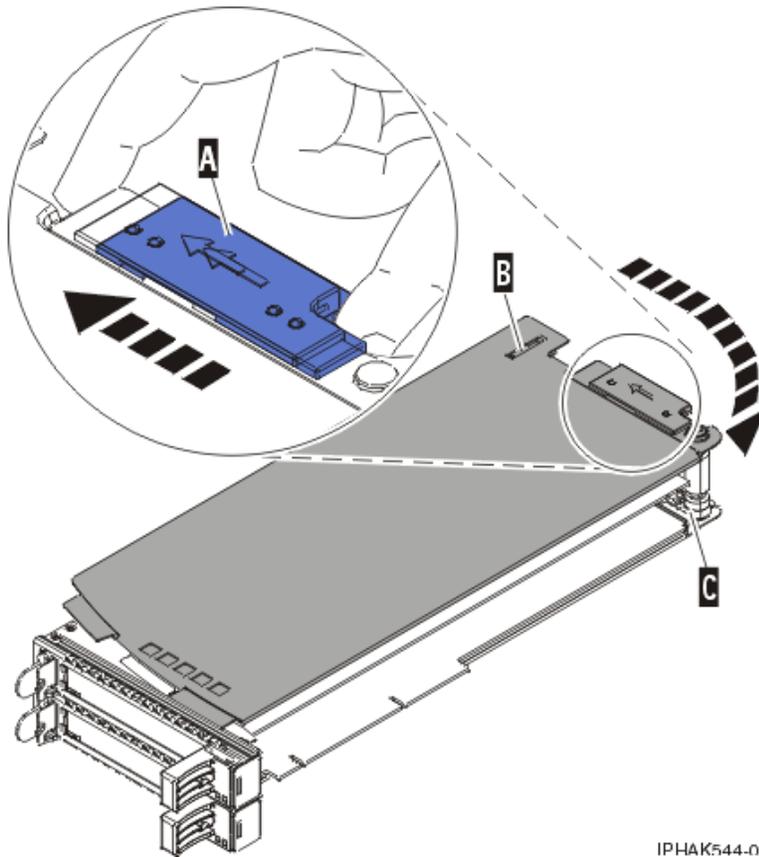

IPHAK544-0

Figure 98. PCI adapter cassette cover removed

- d. Unscrew pivot pin C and put it in a safe place
4. Ensure the cassette is prepared to receive an adapter by doing the following:
 - a. Ensure the cassette is empty by doing one of the following:
 - Remove the adapter from the PCI adapter double-wide cassette. For information, see “Removing an adapter from the PCI adapter double-wide cassette” on page 145.
 - Remove the adapter filler panel from the cassette.
 - b. Ensure that all of the adapter retainers have been pushed out to the edges of the cassette to allow the placement of the adapter.
 - c. Place the tailstock clamp in the open position by pressing the cassette handle towards the retainer clip.
5. Place the adapter in the cassette by doing the following:
 - a. With the tailstock clamp in the open position, insert the adapter firmly into the tailstock retaining channel A. See Figure 99 on page 150.
 - b. Rotate the adapter toward the top of the cassette and into place.
 - c. Close the tailstock clamp.

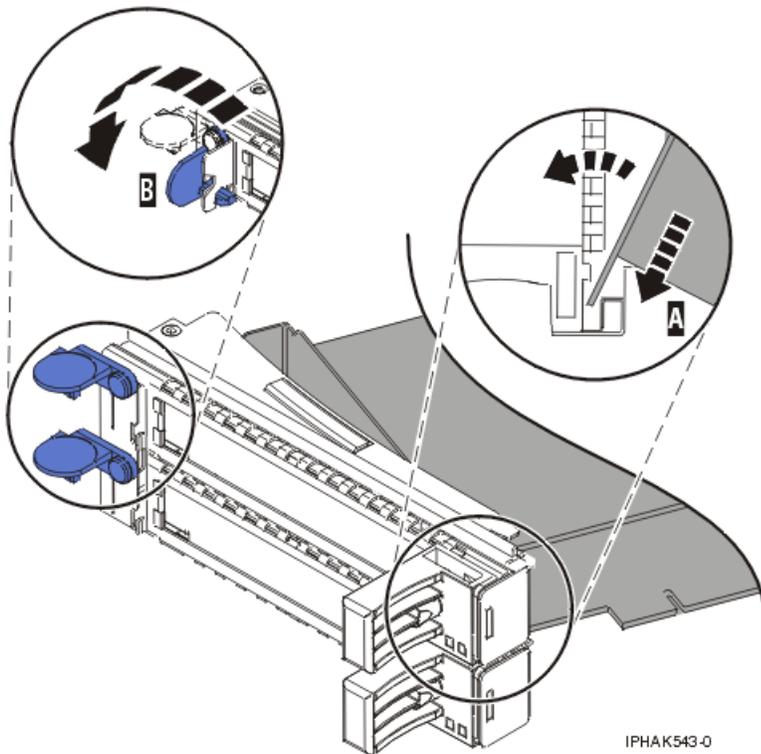

IPHAK543-0

Figure 99. Adapter replaced in the PCI adapter cassette

- d. Position the adapter retainers to support the adapter, and then rotate the retainer clip **B** into the closed position. See Figure 99.

Note:

- 1) Two retainers are located at the top of the cassette, along the top edge of the adapter. Two more retainers are located at the edge of the cassette opposite of the adapter tailstock.
- 2) When the adapter retainer clip is in the horizontal position, the adapter retainers are unlocked and can slide toward the adapter.
- 3) Place and lock the retainers **B**. See Figure 100 on page 151.

Attention: Use of the lower corner support retainer might interfere with the docking of the PCI card when positioned within the system. Ensure the retainer does not interfere with the adapter connectors on the system backplane.

- 4) Ensure the adapter edge is seated in each retainer groove **A**. If the shape of the adapter or the presence of a connector will not allow the adapter edge to be seated into the retainer groove, ensure the retainer is still locked firmly against that edge or connector.


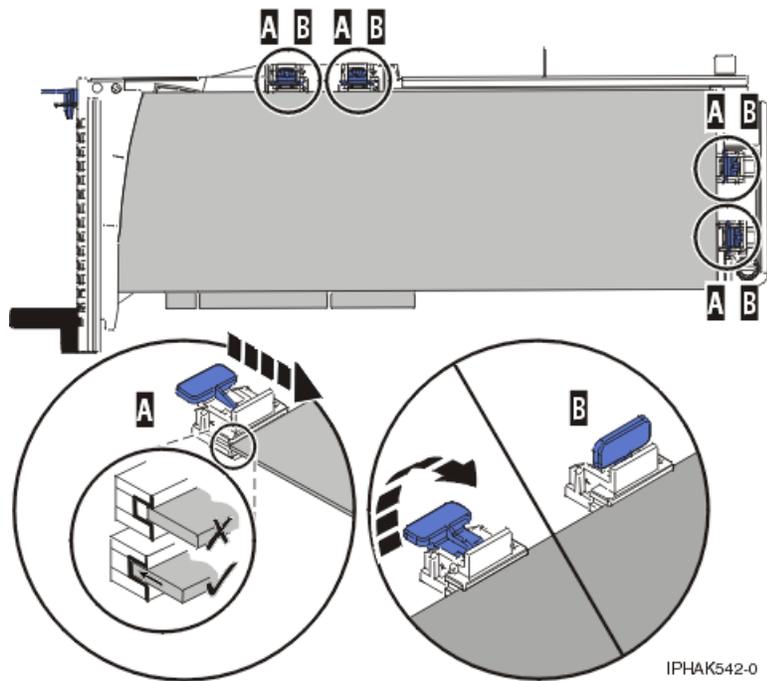


Figure 100. Long adapter in the PCI adapter cassette with the supports and stabilizer in place

6. After the retainers are placed, replace the cassette cover by doing the following:
 - a. Screw pivot pin **C** into place.
 - b. Slide the cover **B** into position on the cassette as shown in the following figure.
 - c. While holding the cover latch **A** in the open position, place the cover over the pivot pin **C**.
 - d. Release the cover latch to lock the cover into place.

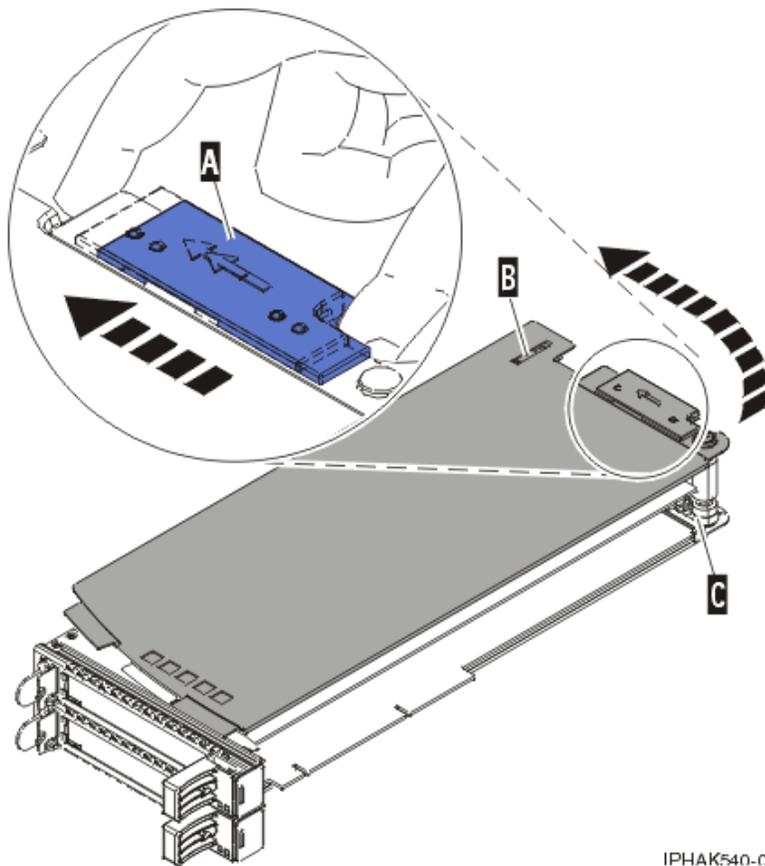

IPHAK540-c

Figure 101. PCI adapter cassette cover replaced

7. Replace the PCI adapter contained in a cassette in the system. For information, see “Replacing a PCI adapter contained in a cassette in the system” on page 102.

Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

Related concepts

“Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters, and cassettes” on page 66

You can remove, replace, or install PCI adapter cassettes.

Related reference

“PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller (FC 5739, 5778, 5781, 5782; CCIN 571F, 575B)” on page 258

Learn about the features, specifications, and installation notes for the PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller.

PCI adapter double-wide cassette, generation 2.5 cassette

You can remove or place a PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller in a generation 2.5, double-wide cassette.

Placing a PCI adapter in a double-wide, generation 2.5 cassette

You can place a PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller in a generation 2.5, double-wide cassette. Use the procedure in this topic to perform this task.


Before you begin: Ensure that you have the following tools and parts:

- Phillips screwdriver

- Needle-nose pliers
- Complete cassette-assembly, FRU 44V5205 (which is designed to comply with RoHS requirement)
- PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller, FRU 42R6578 (which is designed to comply with RoHS requirement)

The cassette assembly can also be ordered with the double-wide adapter already installed, FRU 44V4608 (which is designed to comply with RoHS requirement).


The following figure shows the PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller and the main parts that make up the cassette assembly. Some steps refer to the adapter tailstock, which is the front end of the adapter with the external connectors. The other end of the adapter is referred to in the steps as the rear of the adapter.

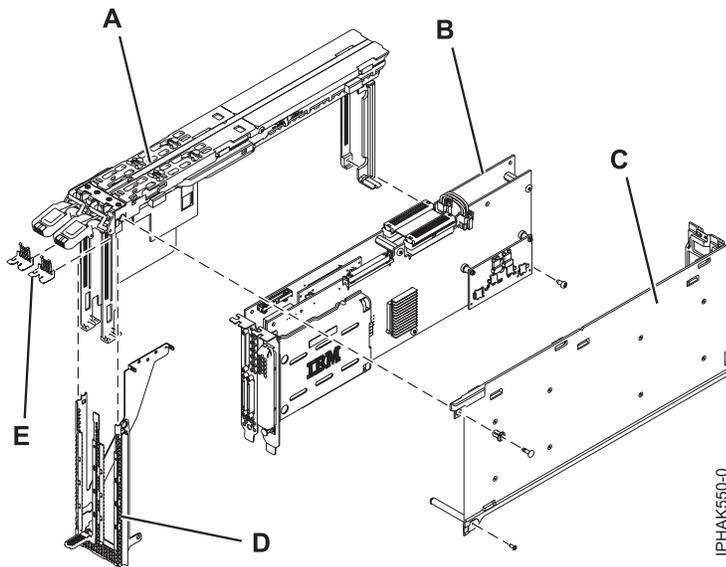

- (A) Cassette assembly
- (B) Double-wide adapter
- (C) Cover
- (D) Face plate
- (E) Metal clips


To place the double-wide adapter in the cassette assembly, do the following steps:

1. Remove the adapter handle (A) and the spacer (B) between the two halves of the adapter.

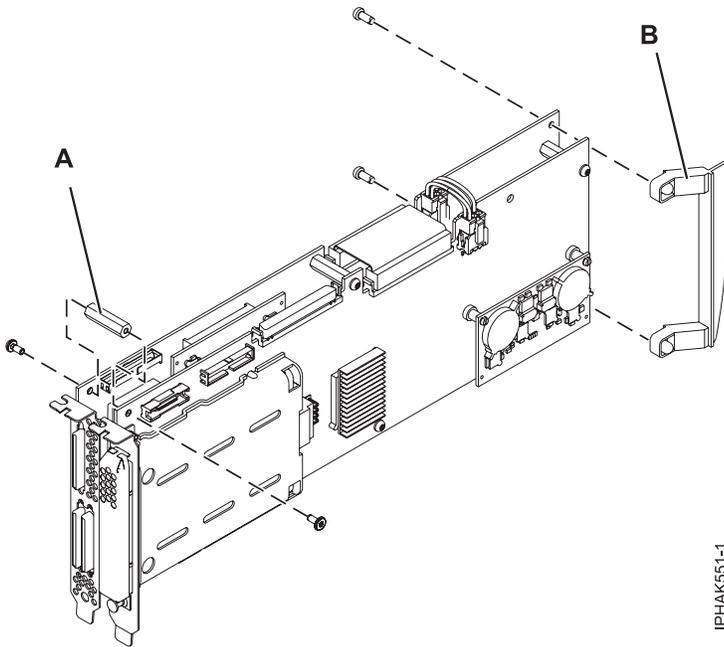


IPHAK551-1

2. Align the double-wide adapter with the cassette assembly so that the spacer on the cassette assembly fits between the two sides of the double-wide adapter.

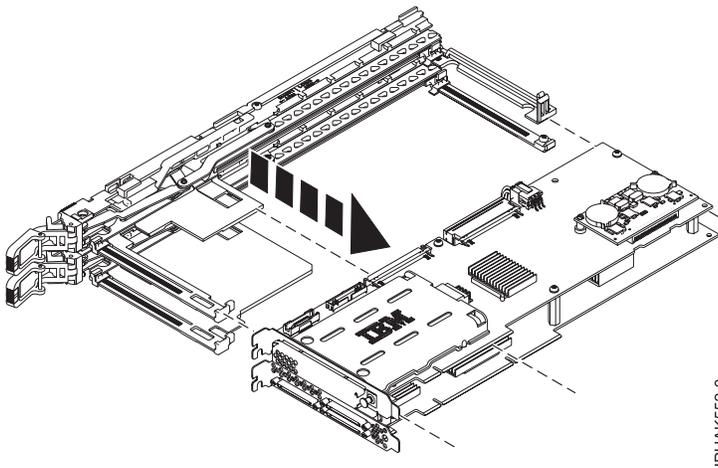


IPHAK552-0


3. With the levers on the cassette assembly fully extended out, attach all four corners of the cassette assembly to the double-wide adapter as described in the following substeps:
 - a. Insert the top notches on the double-wide adapter tailstock into the cassette assembly, and then secure the bottom of the double-wide adapter tailstock to the cassette assembly.

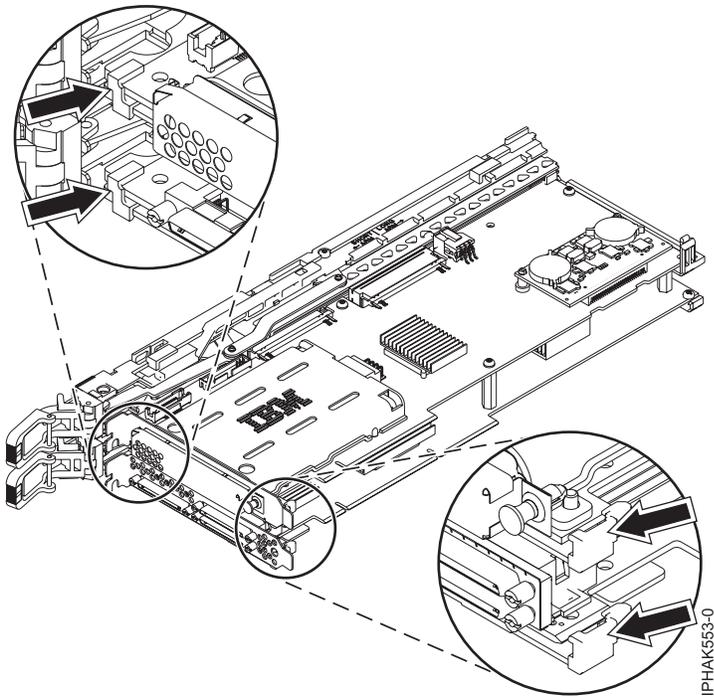

- b. Attach the rear arms of the cassette assembly to the notches at the rear end of the double-wide adapter.

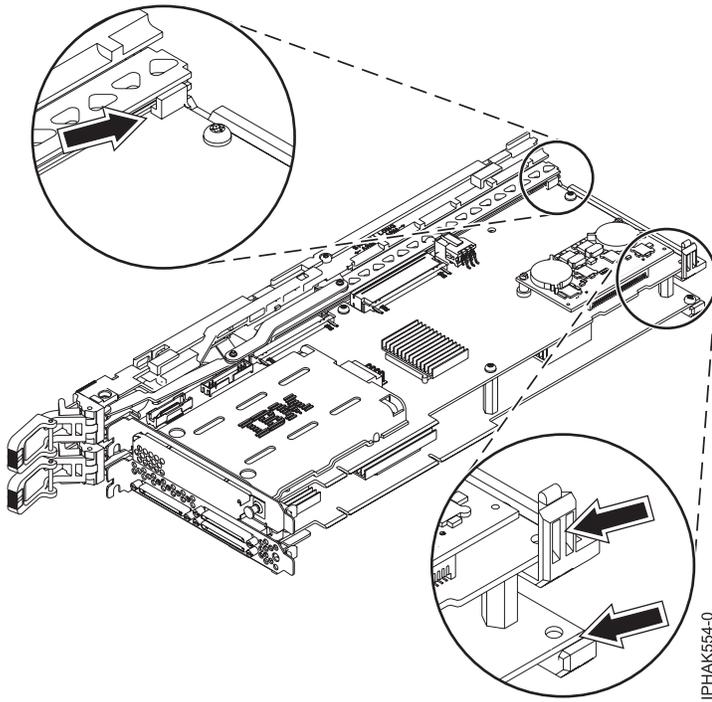


4. Secure the lower, rear arm of the cassette assembly to the rear end of the double-wide adapter using the small screw.

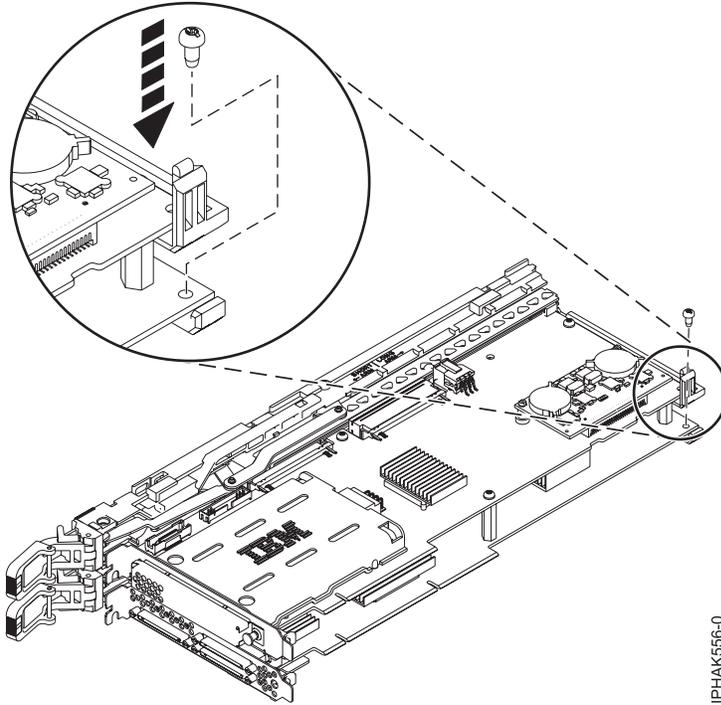

IPHAK556-0


5. Install the cover:

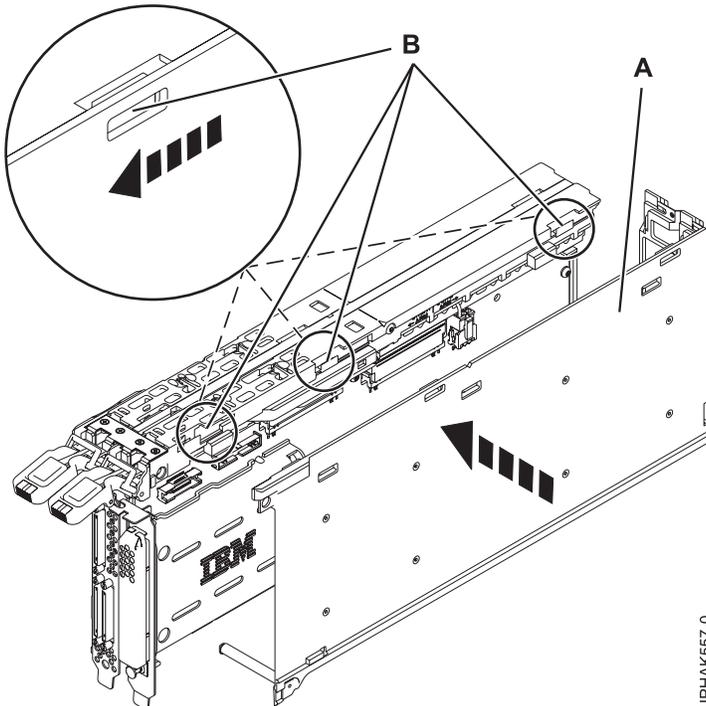


IPHAK557-0

- a. Place the cover (**A**) on the cassette assembly and align the hole on the cover with the tabs (**B**) on the assembly.
- b. Slide the cover toward the locking arms until the holes and tabs click into place.
The cover might be difficult to slide. If you grasp the left end of the cassette assembly and the right end of the cover, you can use enough force to push the cover onto the cassette assembly.


6. Attach the face plate to the front of the cassette assembly. Ensure that the top of the face plate inserts into the notches on both the front and sides of the cassette assembly.

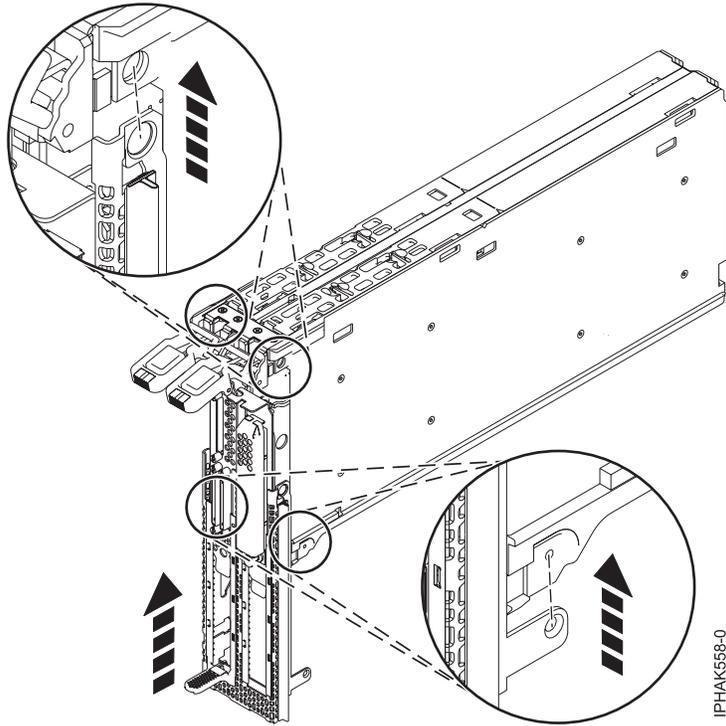

7. Press the locking arms down and insert the tab at the bottom of the cassette assembly into the notches on the face plate.

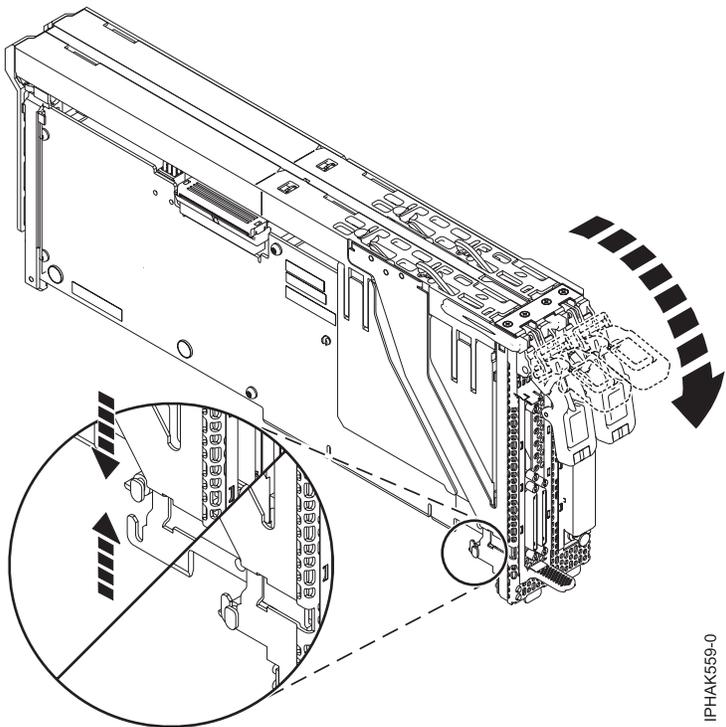


8. Press the outer arms of the face plate assembly into place.

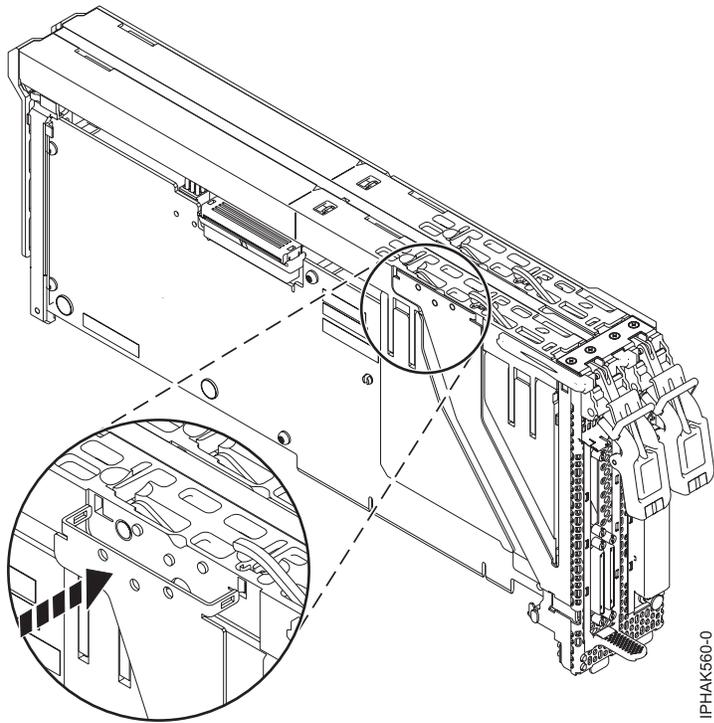


IPHAK560-0

9. Attach the push pin (A) to the top of cassette assembly by the tailstock and push into place as shown in the following figure.
10. Secure the screw (B) into the bottom of the tailstock as shown in the following figure.
11. Secure the screw (C) at the rear of the cassette assembly.

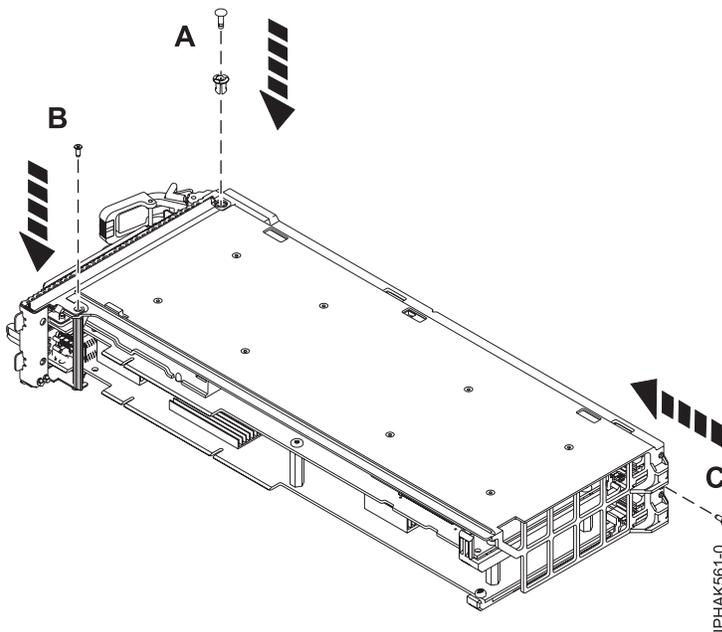


IPHAK561-0

12. Insert the two metal clips into the front of the assembly, and ensure that the locking arms move without obstructions.

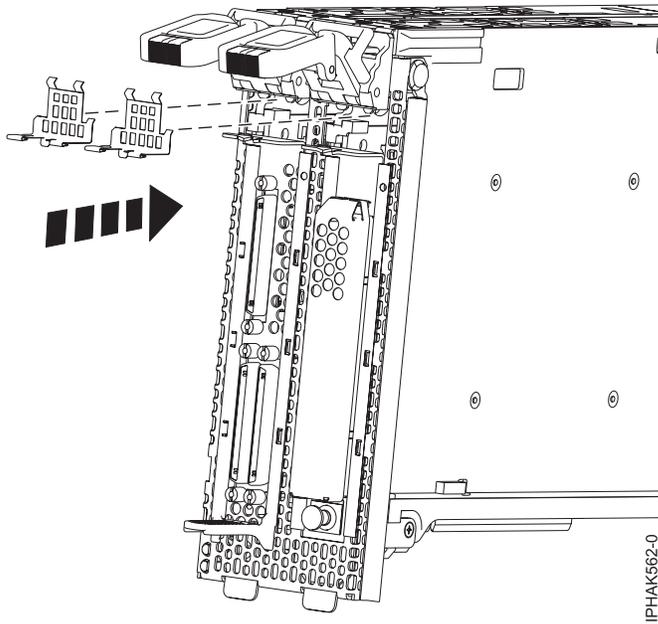

13. Install the cassette assembly into the I/O expansion unit as described in the following substeps:

- a. Ensure the locking arms (**A**) are down.
- b. Carefully slide the cassette assembly all the way into the I/O expansion unit.
- c. Ensure that the cassetted adapter is positioned in the I/O expansion unit so that the bottom of the tailstock goes through the openings in the chassis. If they are not aligned, the adapter will not plug into the PCI connector.
- d. Secure the cassette assembly by rotating the locking arms up.
- e. Push down on the top of the tailstock brackets so as to dock the back part of the adapter into the PCI connector on the chassis.

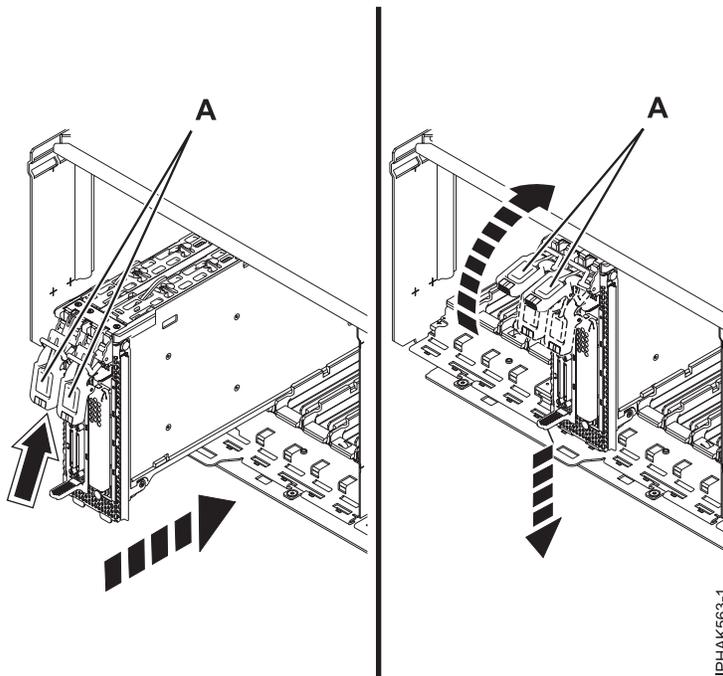

Related concepts

“Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters, and cassettes” on page 66

You can remove, replace, or install PCI adapter cassettes.

Related tasks

“Removing a PCI adapter from a double-wide, generation 2.5 cassette”

You can remove a PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller from a generation 2.5, double-wide cassette.

Related reference


“PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller (FC 5739, 5778, 5781, 5782; CCIN 571F, 575B)” on page 258

Learn about the features, specifications, and installation notes for the PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller.

Removing a PCI adapter from a double-wide, generation 2.5 cassette

You can remove a PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller from a generation 2.5, double-wide cassette.

The following figure shows the PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller and the main parts that make up the cassette assembly. Some steps refer to the adapter tailstock, which is the front end of the adapter with the external connectors. The other end of the adapter is referred to in the steps as the rear of the adapter.

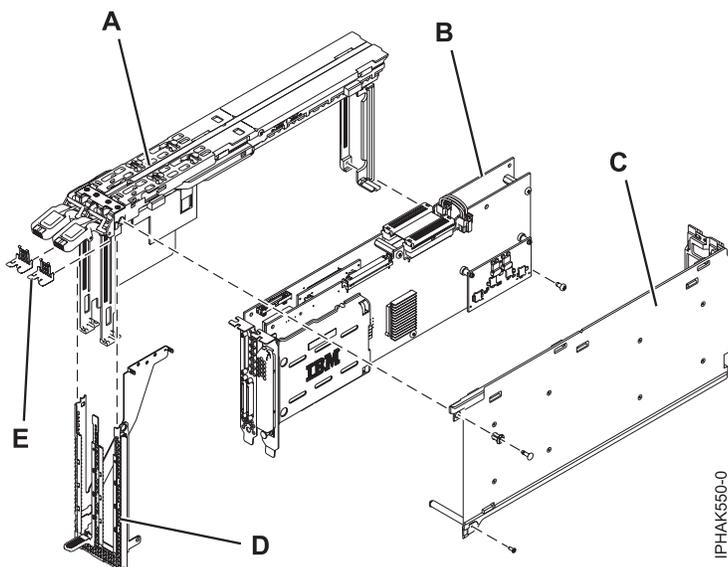


- (A) Cassette assembly
- (B) Double-wide adapter
- (C) Cover
- (D) Face plate
- (E) Metal clips

To remove the double-wide adapter from the cassette assembly, do the following steps:


1. Remove the cassette assembly from the I/O expansion unit:
 - a. Ensure that the locking arms (A) are down as shown in the following figure.

- b. Lift up on the top of the tailstock brackets so as to undock the back part of the adapter from the PCI connector on the chassis and detach the tailstock from the openings in the chassis.
- c. Carefully slide the cassette assembly all the way out of the I/O expansion unit.

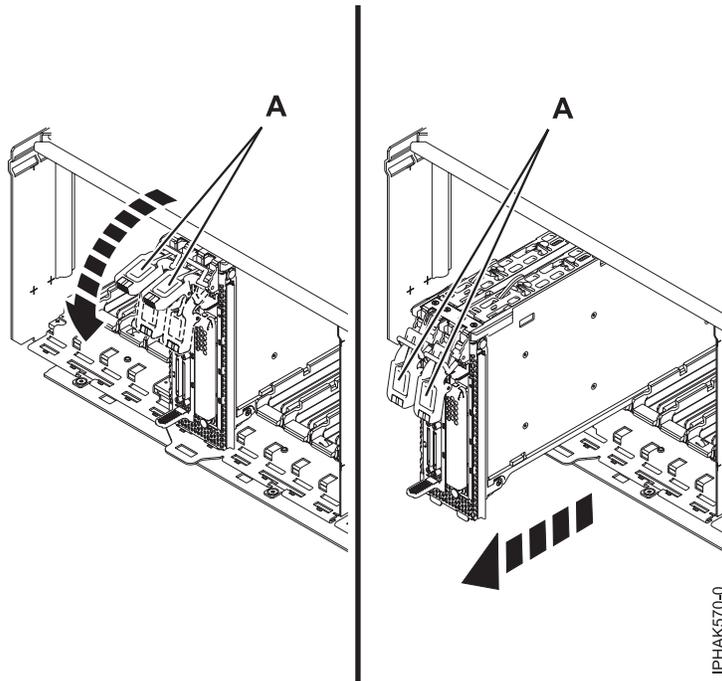


IPHAK570-0

- 2. Remove the two metal clips from the front of the assembly.

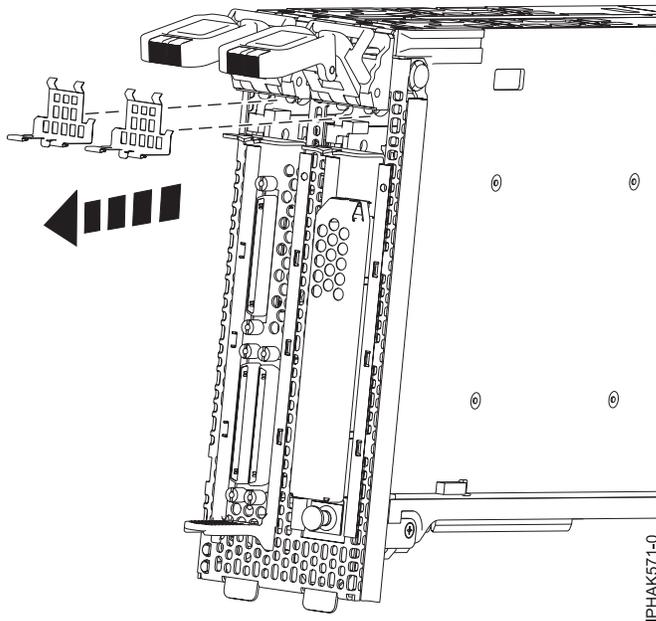


IPHAK571-0


- 3. Remove the push pin (A) from the top of cassette assembly by the tailstock as shown in the following figure.
- 4. Remove the screw (B) from the bottom of the tailstock as shown in the following figure.
- 5. Remove the screw (C) from the rear of the cassette assembly.

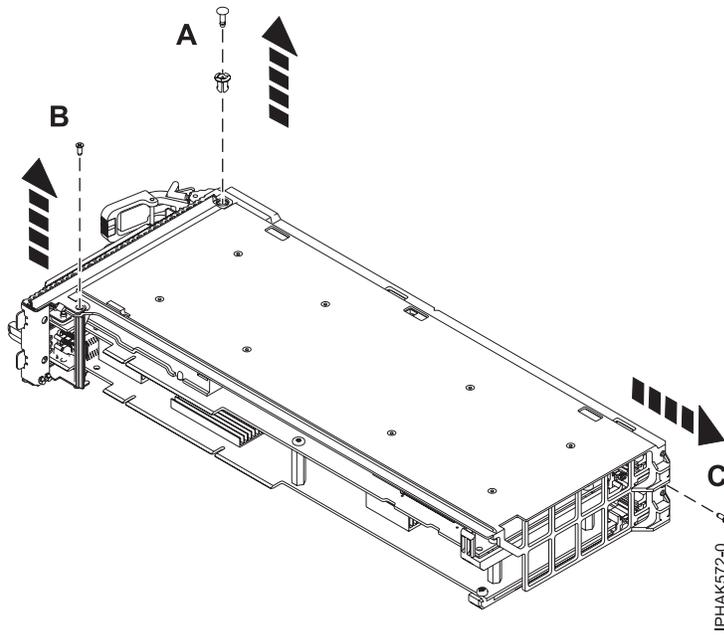

6. Detach the outer arms of the face plate assembly.

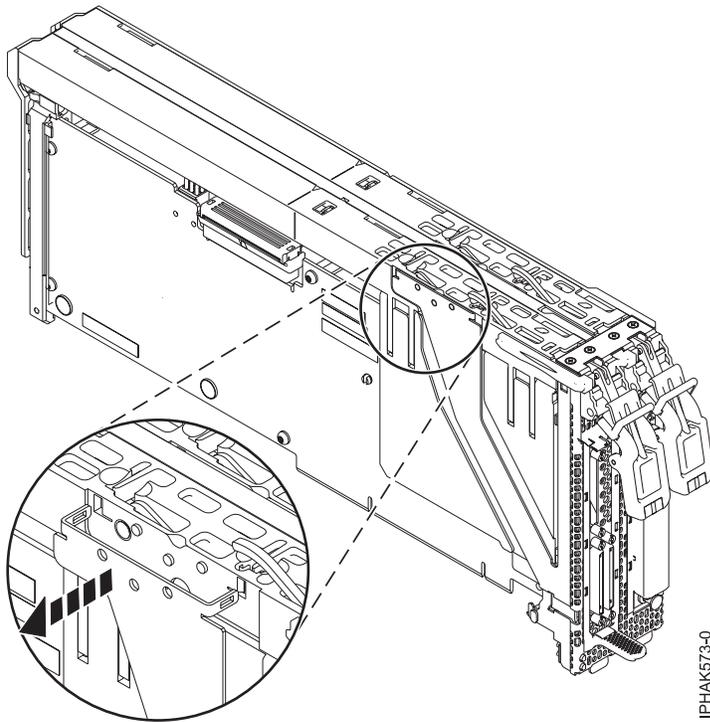


7. Detach the tab at the bottom of the cassette assembly from the notches on the face plate and lift up on the locking arms.

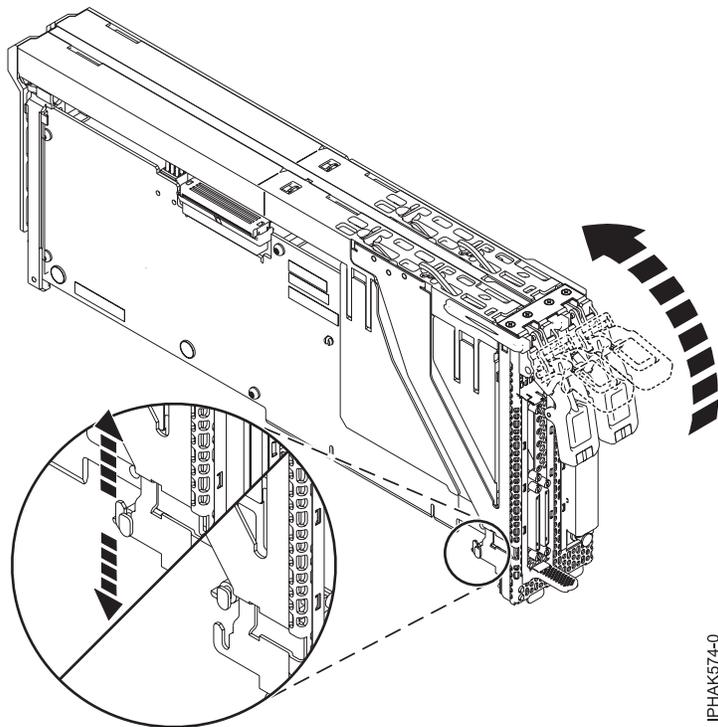


IPHAK574-0

8. Remove the face plate from the front of the cassette assembly. Ensure that the top of the face plate detaches from the notches on both the front and sides of the cassette assembly.

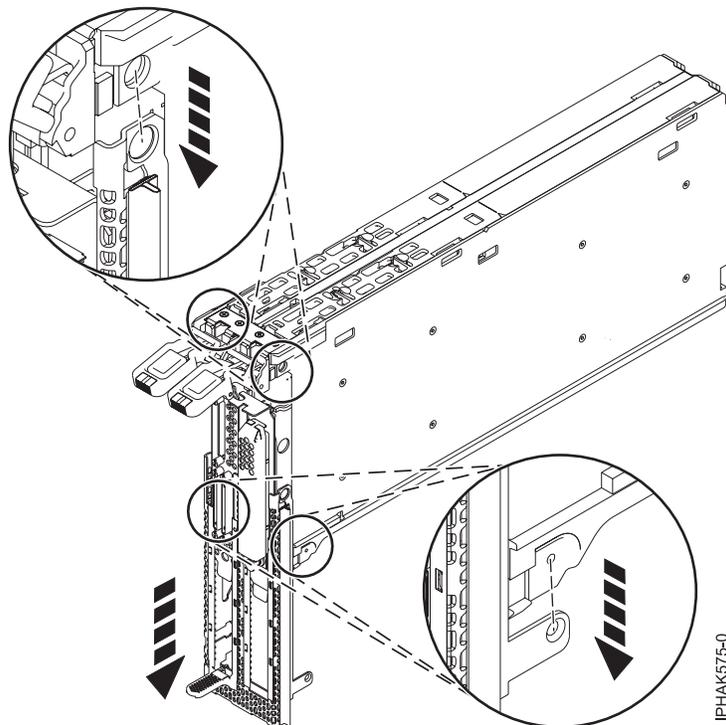


IPHAK575-0

9. Remove the cover:
 - a. Slide the cover away from the locking arms until the holes and corresponding tabs detach **(B)**.
 - b. Pull the cover away from the adapter **(A)**.

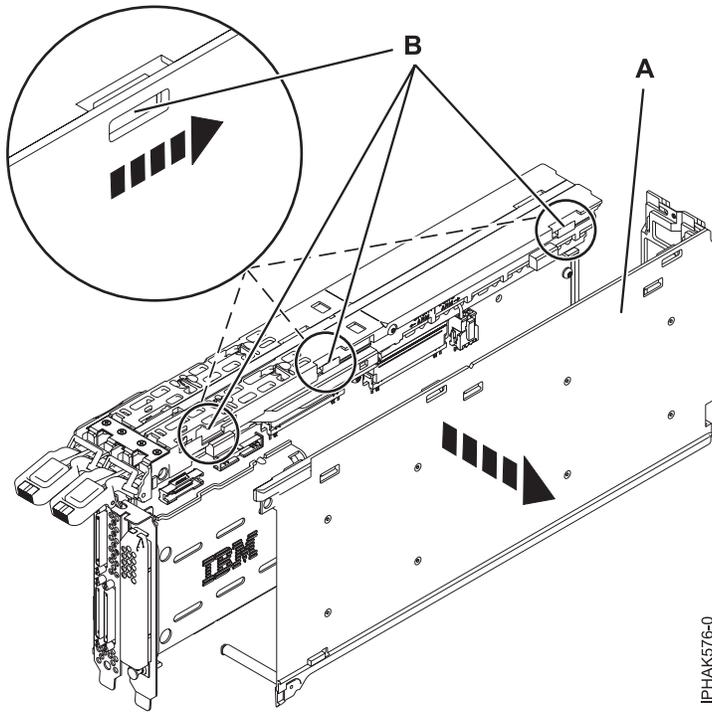


IPHAK576-0

10. Remove the small screw that secures the lower, rear arm of the cassette assembly from the rear end of the double-wide adapter.

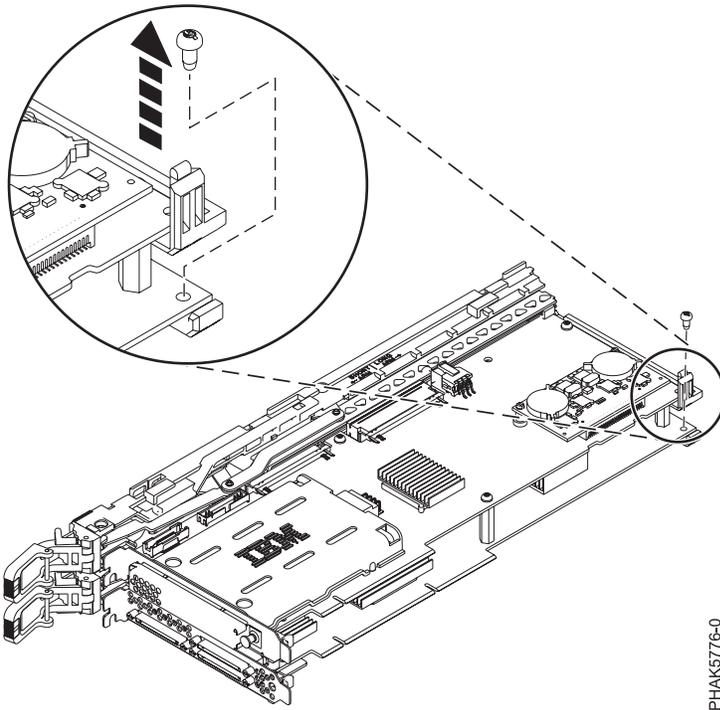


IPHAK576-0


11. With the levers on the cassette assembly fully extended out, detach all four corners of the cassette assembly from the double-wide adapter:
 - a. Remove the top notches on the double-wide adapter tailstock from the cassette assembly, and then remove the bottom of the double-wide adapter tailstock from the cassette assembly.

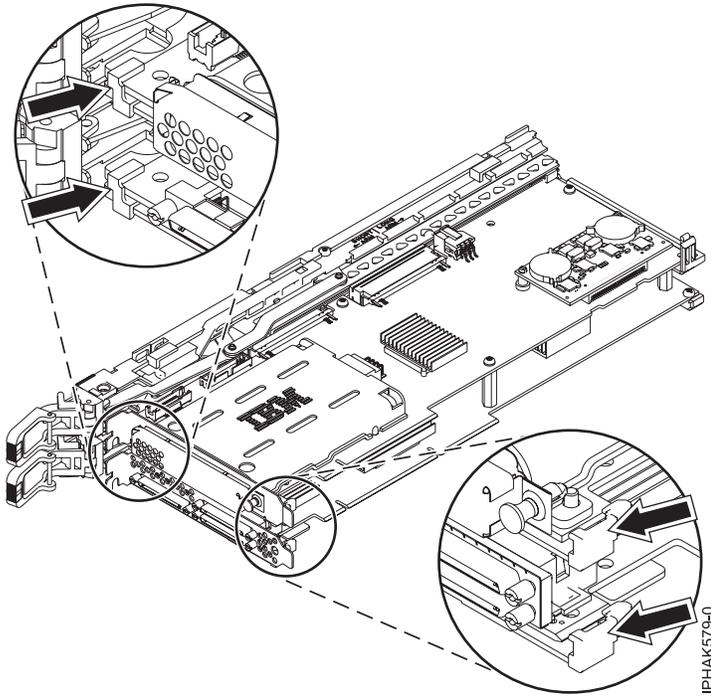

- b. Detach the rear arms of the cassette assembly from the notches at the rear end of the double-wide adapter.

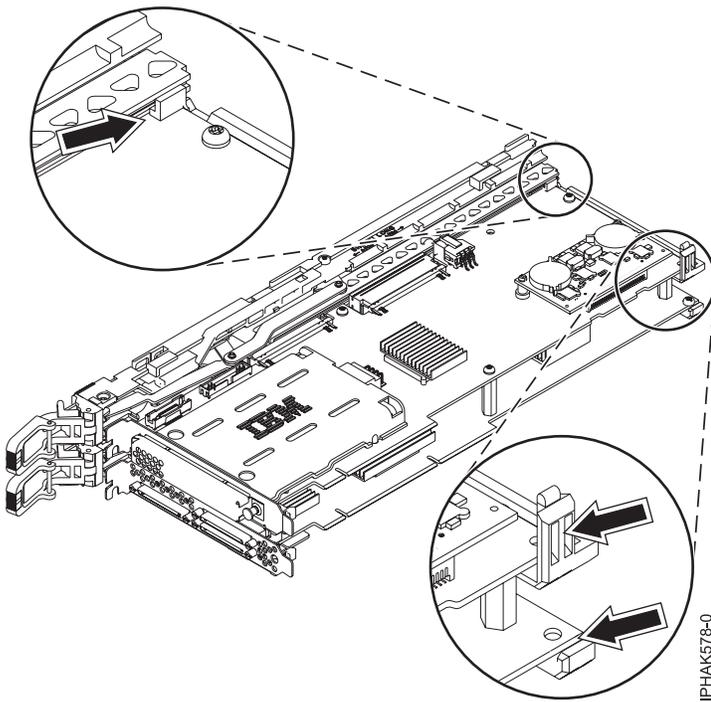

- 12. Pull the double-wide adapter away from the cassette assembly.

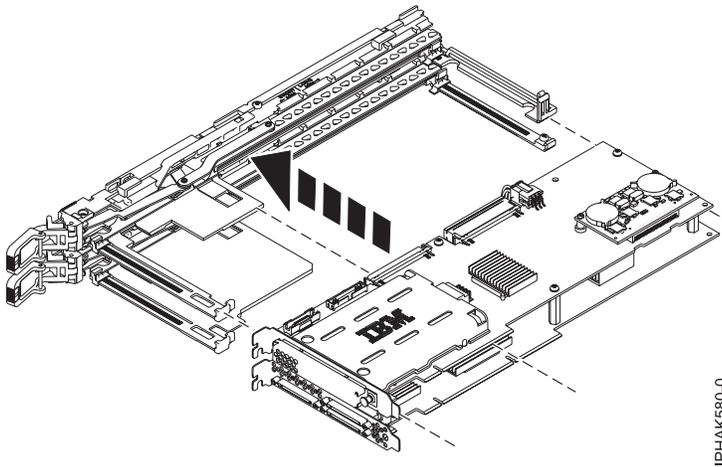

Related tasks

“Placing a PCI adapter in a double-wide, generation 2.5 cassette” on page 152

You can place a PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller in a generation 2.5, double-wide cassette. Use the procedure in this topic to perform this task.

Model 5802 and 5877 expansion units, PCI adapters, and cassettes

You can install, remove, replace PCI adapter cassettes in the 5802 or 5877 expansion unit.

Preparing to install, remove, or replace a PCI adapter cassette

Learn about steps you must do before you install, remove, or replace a PCI adapter cassette in a 5802 or 5877 expansion unit.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install, remove or replace an adapter, do the following steps:

1. Perform prerequisite tasks as described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are installing a new adapter, determine in which slot to place the new adapter. See the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
4. If you are removing a failing PCI adapter, see Identifying a failing part.
5. If you are installing a PCI adapter in a rack-mounted system or expansion unit, open the rear rack door.
6. Determine the location of PCI adapter cassette in the system.

Related information

- 🔗 [Installing a feature using the Hardware Management Console](#)
- 🔗 [Logical partitioning](#)

Installing a PCI adapter contained in a cassette

You can install a PCI adapter cassette in a 5802 or 5877 expansion unit.

Installing a PCI adapter cassette with the power off

You can install a PCI adapter cassette in a 5802 or 5877 expansion unit with the power off.

Before you begin: Prepare to install a PCI adapter cassette. See “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.

To install an adapter with the system power off, do the following steps:

1. Stop the system or logical partition. See Stop the system or logical partition.
2. Disconnect the power source from the system by unplugging the system.


Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

3. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit” on page 171.
4. Install the adapter into the PCI adapter cassette. Refer to “PCI adapter single-width and double-width cassettes” on page 178.
5. Install the PCI adapter cassette in the system. Refer to “Installing a PCI adapter cassette.”
6. Start the system or logical partition. Refer to Start the system or logical partition.
7. Verify that the new resource is functional. See Verify the installed part.

Installing a PCI adapter cassette

You can install a PCI adapter cassette in a 5802 or 5877 expansion unit.


1. Ensure that the lower cassette handle (C) is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system. See the following figure.
2. Slide the cassette into the cassette slot.
3. When the cassette is fully inserted into the system, firmly press downward on the lower cassette handle (C) to lock the adapter in its connector.

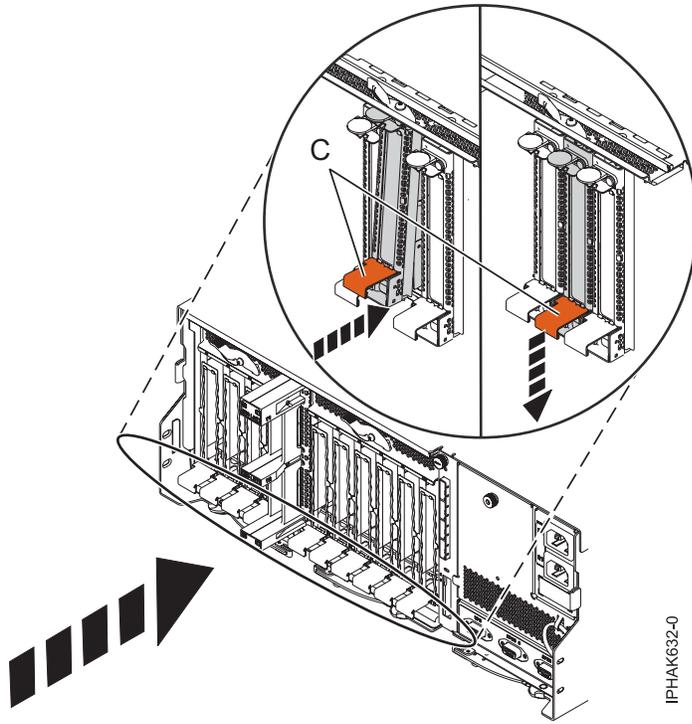

IPHAK632-0

Figure 102. Installing the PCI adapter cassette

4. Lower the access door (B) into the closed position. Latch (A) automatically latches to hold the access door closed.

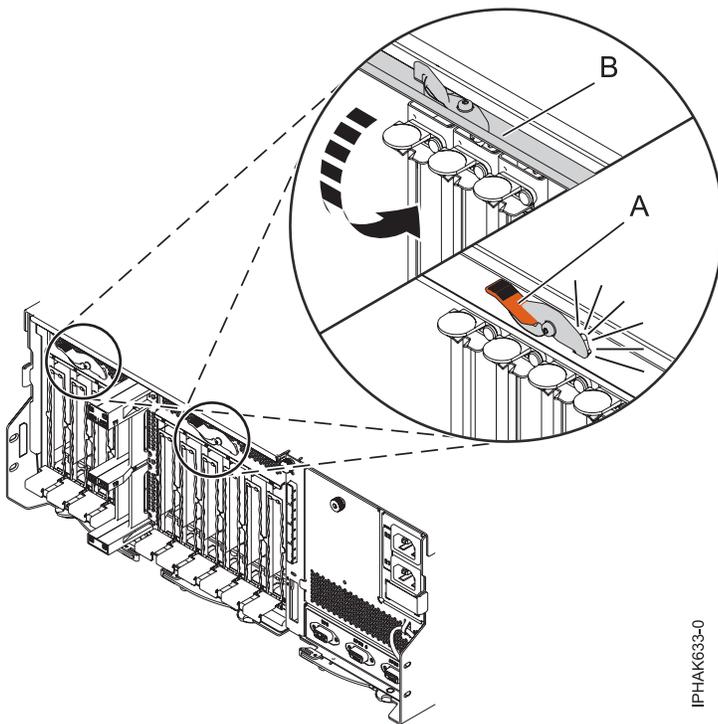

IPHAK633-0

Figure 103. Closing the access door

5. Return to the procedure that sent you here.

Installing a PCI adapter contained in a cassette with the power on in AIX

You can install a PCI adapter cassette in a 5802 or 5877 expansion unit that is running the AIX operating system with the system power on.

Before you begin: Prepare to install a PCI adapter cassette. See “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.

To install an adapter with the system power on in AIX, do the following steps:

1. Refer to “PCI hot-plug manager access for AIX” on page 253, and follow the steps in the access procedure to select **PCI Hot Plug Manager**. Then return here to continue.
2. From the PCI Hot-Plug Manager menu, select **Add a PCI Hot-Plug Adapter** and press Enter. The Add a Hot-Plug Adapter window displays.
3. Select the appropriate PCI slot from the ones listed on the screen, and press Enter.
4. Locate the PCI adapter slot and cassette you want to use.
5. If the cassette you want to use does not contain a PCI adapter, continue to the next step. If the cassette you want to use does contain an active PCI adapter, see “Removing a PCI adapter contained in a cassette from the expansion unit with the power on in AIX” on page 173.
6. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit” on page 171.
7. Install the adapter into the PCI adapter cassette. Refer to “PCI adapter single-width and double-width cassettes” on page 178.
8. Follow the instructions on the screen to install the adapter until the LED for the specified PCI slot is set to the Action state. See “Component LEDs” on page 255.
9. Install the PCI adapter cassette in the system. Refer to “Installing a PCI adapter cassette” on page 167.
10. Run the `cfgmgr` command to configure the adapter.
11. Verify that the new resource is functional. See Verify the installed part.

Installing a PCI adapter contained in a cassette with the power on in IBM i

You can install a PCI adapter cassette in a 5802 or 5877 expansion unit that is running the IBM i operating system with the system power on.

Before you begin: Prepare to install a PCI adapter cassette. See “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.

To install an adapter with the system power on in the i operating system, do the following steps:

1. Type **strsst** on the command line of the Main Menu and then press Enter.
2. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display. Press Enter.
3. Select **Start a service tool** from the System Service Tools (SST) display and press Enter.
4. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
5. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
6. Type 9 (Hardware contained within package) in the **System Unit** or **Expansion Unit** field of the unit where you are replacing the card. Press Enter.
7. Select the option to **Include empty positions**.
8. Select **Concurrent Maintenance** on the card position where you want to replace the card, and then press Enter.

9. Select the option **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to install the adapter.
10. Select the option **Toggle LED blink off/on** to stop the blinking LED.
11. Select the option **Power off domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
12. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power off complete
13. Locate the PCI adapter slot and cassette you want to use.
14. If the cassette you want to use does not contain a PCI adapter, continue to the next step. If the cassette you want to use does contain an active PCI adapter, see “Removing a PCI adapter contained in a cassette from the expansion unit with the power on in IBM i” on page 174.
15. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit” on page 171.
16. Install the adapter into the PCI adapter cassette. Refer to “PCI adapter single-width and double-width cassettes” on page 178.
17. Install the PCI adapter cassette in the system. Refer to “Installing a PCI adapter cassette” on page 167.
18. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
19. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
20. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
21. Verify that the new resource is functional. See Verify the installed part.

Installing a PCI adapter contained in a cassette with the power on in Linux

You can install a PCI adapter cassette in a 5802 or 5877 expansion unit that is running the Linux operating system with the system power on.

Before you begin: Prepare to install a PCI adapter cassette. See “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.

To install an adapter with the system power on in Linux, do the following steps:

1. Log in to the system console as the root user.
2. Use the `lsslot` tool to list the hot-plug PCI slots that are available in the server or logical partition:

```
lsslot -c pci -a
```

The following is an example of the information displayed by this command:

Slot	Description	Devices
U7879.001.DQD014E-P1-C1	PCI-X capable, 64 bit, 133MHz slot	Empty
U7879.001.DQD014E-P1-C4	PCI-X capable, 64 bit, 133MHz slot	Empty
U7879.001.DQD014E-P1-C5	PCI-X capable, 64 bit, 133MHz slot	Empty

Select the appropriate empty PCI slot from the ones listed by the command.

3. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit” on page 171.
4. Install the adapter into the PCI adapter cassette. Refer to “PCI adapter single-width and double-width cassettes” on page 178.
5. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be locked in the system.
6. Run the `drslot_chrp_pci` command to enable an adapter to be installed.

For example, to install an adapter in slot U7879.001.DQD014E-P1-C3, run:

```
drslot_chrp_pci -a -s U7879.001.DQD014E-P1-C3
```

The following displays:

The visual indicator for the specified PCI slot has been set to the identify state. Press Enter to continue or enter x to exit.

7. Press Enter.

The following displays:

The visual indicator for the specified PCI slot has been set to the action state. Insert the PCI card into the identified slot, connect any devices to be configured and press Enter to continue. Enter x to exit.

8. Install the PCI adapter cassette in the system. Refer to “Installing a PCI adapter cassette” on page 167.
9. Use the `lsslot` command to verify that U7879.001.DQD014E-P1-C3 is occupied.

```
Enter lsslot -c pci -s U7879.001.DQD014E-P1-C3
```

The following is an example of the information displayed by this command:

Slot	Description	Devices
U7879.001.DQD014E-P1-C3	PCI-X capable, 64 bit, 133MHz slot	0001:40:01.0

Removing or replacing a PCI adapter contained in a cassette from the expansion unit

You can remove or replace a PCI adapter cassette from the 5802 or 5877 expansion unit.

Removing a PCI adapter contained in a cassette from the expansion unit with the system power off

You can remove a PCI adapter cassette from the 5802 or 5877 expansion unit with the system power off.

Before you begin: Prepare to remove a PCI adapter cassette. See “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.

To remove an adapter, do the following steps:

1. Stop the system or logical partition. See Stop the system or logical partition.
2. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.


3. Determine the location of PCI adapter in the system.
4. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit.”
5. Place the cassette with the cover facing up on an approved ESD surface.
6. To remove the adapter from the cassette, refer to “PCI adapter single-width and double-width cassettes” on page 178.

Removing a PCI adapter cassette from the expansion unit

You can remove a PCI adapter cassette from the 5802 or 5877 expansion unit.

To remove a PCI adapter cassette, do the following steps:


1. Press down on latch **(A)** to release the access door. The access door is spring loaded, which causes it to rotate up into the open position **(B)**.

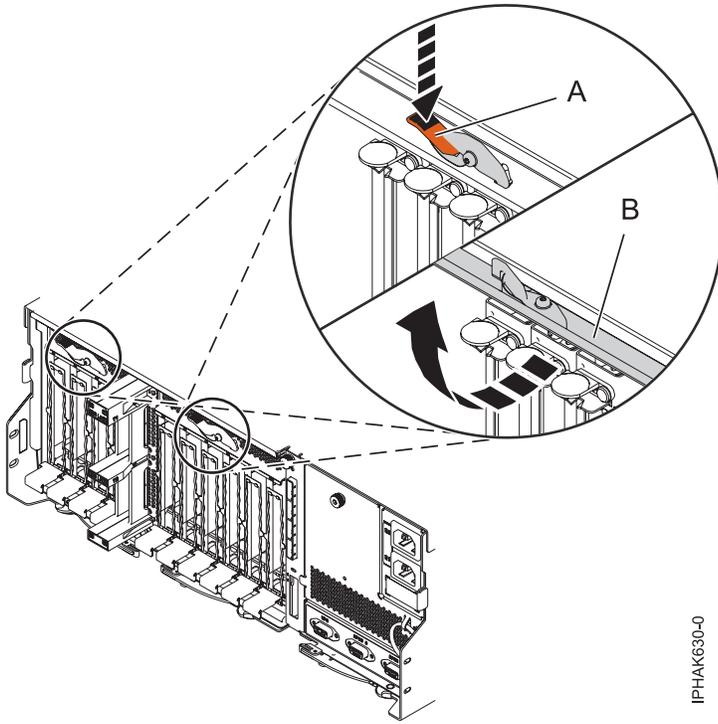

IPHAK630-0

Figure 104. Opening the access door

2. Lift up the lower cassette handle (C) and pull the cassette out of the unit.

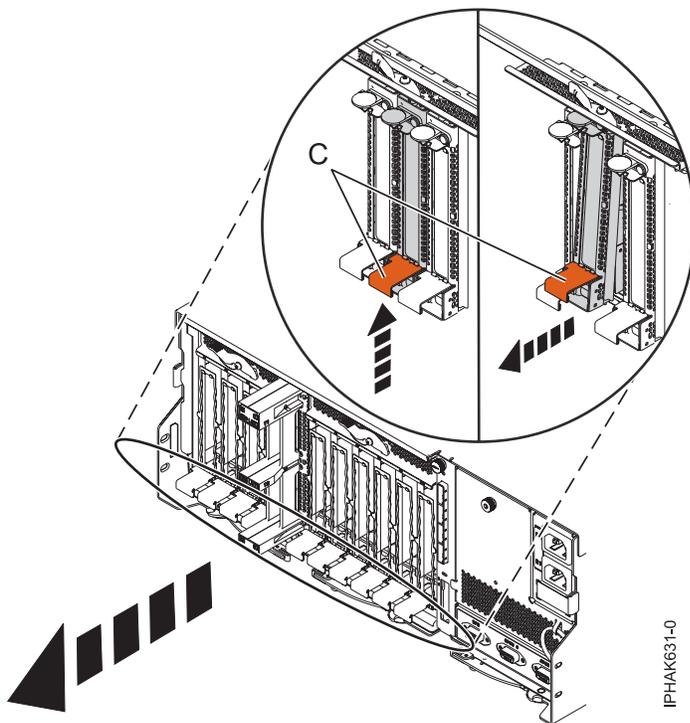

IPHAK631-0

Figure 105. Removing a PCI adapter cassette

Attention: A cassette that contains either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

3. Return to the procedure that sent you here.

Removing a PCI adapter contained in a cassette from the expansion unit with the power on in AIX

You can remove or replace a PCI adapter cassette from the 5802 or 5877 expansion unit that is running the AIX operating system with the system power on.

Before you begin: Prepare to remove a PCI adapter cassette. See “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.

Notes:

1. Use this procedure to remove a PCI adapter and leave the slot in the system unit empty.
2. If the adapter that is removed will be placed into a different slot or system, complete this removal procedure, and then install the adapter as described in “Installing a PCI adapter contained in a cassette with the power on in AIX” on page 169.
3. Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To remove an adapter, do the following steps:

1. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
2. Determine the location of PCI adapter in the system.
3. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system unit.

4. Ensure that any processes or applications that might use the adapter are stopped.
5. Enter the system diagnostics by logging in as root user or as the celogin user, and type **diag** at the AIX command line.
6. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
7. At the FUNCTION SELECTION menu, select **Task Selection**, and then press Enter.
8. At the Task Selection list, select **PCI Hot Plug Manager**.
9. Select **Unconfigure a Device**, and then press Enter.
10. Press F4 (or press Esc+4) to display the **Device Names** menu.
11. Select the adapter you are removing in the **Device Names** menu.
12. Use the Tab key to answer N0 to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, and then press Enter. The **ARE YOU SURE** screen displays.
13. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the **Command** field at the top of the screen.
14. Press F4 (or press Esc+4) twice to return to the **Hot Plug Manager** menu.
15. Select **Replace/remove PCI Hot Plug adapter**.
16. Select the slot that has the device to be removed from the system.
17. Select **Remove**. A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.
18. Label all cables that are attached to the adapter that you plan to remove.

19. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
20. Disconnect all cables attached to the adapter that you plan to remove.
21. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit” on page 171.
22. Place the cassette with the cover facing up on an approved ESD surface.
23. Continue to follow the screen instructions until you receive a message that the adapter removal is successful. Successful removal is indicated by the message OK, which is displayed next to the **Command** field at the top of the screen.
24. If you have other adapters to remove, press the F3 key to return to the PCI Hot-Plug Manager menu, and then return to step 20.
If you do not have other adapters to remove, continue with the next step.
25. Press F10 to exit the Hot-Plug Manager.
26. Run the **diag -a** command. If the system responds with a menu or prompt, follow the instructions to complete the device configuration.
27. To remove the adapter from the cassette, see “PCI adapter single-width and double-width cassettes” on page 178.
28. Place an empty cassette into the unused PCI slot for proper air flow.

Removing a PCI adapter contained in a cassette from the expansion unit with the power on in IBM i

You can remove a PCI adapter cassette from the 5802 or 5877 expansion unit that is running the IBM i operating system with the system power on.

Before you begin: Prepare to remove a PCI adapter cassette. See “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.

To remove an adapter, do the following steps:

1. Determine the location of PCI adapter in the system.
2. Type **strsst** on the command line of the Main Menu and then press Enter.
3. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display and press Enter.
4. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
5. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
6. Type **9** (Hardware contained within package) in the **System Unit** or **Expansion Unit** field of the unit where you are removing the card. Press Enter.
7. Select the option **Include empty positions**.
8. Select **Concurrent Maintenance** on the card position where you want to remove the card, and then press Enter.
9. Select the option **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to install the adapter.
10. Select the option **Toggle LED blink off/on** to stop the blinking LED.
11. Select the option **Power off domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
12. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power off complete
13. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit” on page 171.
14. Place the cassette with the cover facing up on an approved ESD surface.

15. To remove the adapter from the cassette, see “PCI adapter single-width and double-width cassettes” on page 178.

Removing a PCI adapter contained in a cassette from the expansion unit with the power on in Linux

You can remove a PCI adapter cassette from the 5802 or 5877 expansion unit that is running the Linux operating system with the system power on.

Do the following actions before beginning the procedure:

- Follow the steps in “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.
- Ensure that the system meets the “Prerequisites for hot-plugging PCI adapters in Linux” on page 256.
- Verify that the Linux, hot-plug PCI tools are installed. See “Verify that the Linux, hot-plug PCI tools are installed” on page 256

To remove an adapter, do the following steps:

1. Determine the location of the PCI adapter in the system.
2. Label and then disconnect all cables attached to the adapter you plan to remove.
3. Run the `drslot_chrp_pci` command to enable an adapter to be removed:
For example, to remove the PCI adapter in slot U7879.001.DQD014E-P1-C3 run this command:

```
drslot_chrp_pci -r -s U7879.001.DQD014E-P1-C3
```


Follow the instructions on the display to complete the task.
4. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit” on page 171.
5. Place the cassette with the cover facing up on an approved ESD surface.
6. To remove an adapter from the cassette, refer to “PCI adapter single-width and double-width cassettes” on page 178.

Replacing a PCI adapter contained in a cassette from the expansion unit with the power off

You can replace a PCI adapter cassette from the 5802 or 5877 expansion unit with the system power off.

You must have already completed the procedure “Removing a PCI adapter contained in a cassette from the expansion unit with the system power off” on page 171 to have the slot powered off.

To replace an adapter with the system power off, do the following steps:

1. If the adapter needs to be placed in a PCI adapter cassette, see “PCI adapter single-width and double-width cassettes” on page 178.
2. At the back of the system, lift the cassette cover flap and identify the cassette slot you want to use.
3. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.
4. Install the PCI adapter cassette in the system. Refer to “Installing a PCI adapter cassette” on page 167.
5. Reconnect the system to the power source.
6. Start the system or logical partition. Refer to Start the system or logical partition.
7. Verify that the new resource is functional. See Verify the installed part.

Replacing a PCI adapter contained in a cassette from the expansion unit with the power on in AIX

You can remove or replace a PCI adapter cassette from the 5802 or 5877 expansion unit that is running the AIX operating system with the system power on.

Before you begin: Prepare to replace a PCI adapter cassette. See “Preparing to install, remove, or replace a PCI adapter cassette” on page 166.

Important:

- Use this procedure if you intend to remove a failing PCI adapter and replace it with the same type of adapter. If you plan to remove a failing adapter and leave the slot empty, see “Removing a PCI adapter contained in a cassette from the expansion unit with the power on in AIX” on page 173.
- Do not use this procedure to remove an existing adapter and install a different type of adapter. To install a different adapter, remove the existing adapter as described in “Removing a PCI adapter contained in a cassette from the expansion unit with the power on in AIX” on page 173, and then install the new adapter as described in “Installing a PCI adapter contained in a cassette with the power on in AIX” on page 169.
- Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To replace an adapter, do the following steps:

1. Determine the location of the PCI adapter in the system.
2. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system unit.

3. Ensure that any processes or applications that might use the adapter are stopped.
4. Enter the system diagnostics by logging in as root user or as the celogin user, and type **diag** at the AIX command line.
5. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
6. At the FUNCTION SELECTION menu, select **Task Selection**, and then press Enter.
7. At the Task Selection list, select **PCI Hot Plug Manager**.
8. Select **Unconfigure a Device**, and then press Enter.
9. Press F4 (or Esc+4) to display the **Device Names** menu.
10. Select the adapter that you are removing in the **Device Names** menu.
11. Use the Tab key to answer YES to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, and then press Enter. The **ARE YOU SURE** screen displays.
12. Press Enter to verify the information. Successful unconfiguration is indicated by the message OK, which is displayed next to the **Command** field at the top of the screen.
13. Press F3 (or Esc+3) twice to return to the **Hot Plug Manager** menu.
14. Select **Replace/remove PCI Hot Plug adapter**.
15. Select the slot that has the device to be removed from the system.
16. Select **Replace**.

Note: A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.

17. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
18. Label and then disconnect all cables attached to the adapter that you plan to remove.
19. Remove the PCI adapter cassette from the system. Refer to “Removing a PCI adapter cassette from the expansion unit” on page 171.
20. Place the cassette with the cover facing up on an approved ESD surface.
21. Install the adapter into the PCI adapter cassette. Refer to “PCI adapter single-width and double-width cassettes” on page 178.
22. At the back of the system, lift the cassette cover flap and identify the cassette slot you want to use.

23. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.
24. Install the PCI adapter cassette in the system. Refer to “Installing a PCI adapter cassette” on page 167.
25. Press Enter and continue to follow the screen instructions until you receive a message that the replacement is successful. Successful replacement is indicated by the message OK, which is displayed next to the **Command** field at the top of the screen.
26. Press the F3 (or Esc+3) key to return to the **PCI Hot-Plug Manager** menu.
27. Press the F3 (or Esc+3) key to return to the **TASK** selection list.
28. Select **Log Repair Action**.
29. Select the resource just replaced, press Enter, press Commit (F7 or ESC 7), and then press Enter.
30. Press F3 (or Esc+3) to return to **TASK Selection List**.
31. Select **Hot Plug Task**, press Enter.
32. Select **PCI Hot Plug Manager**, and then select **Configure a defined device**, then press Enter.
33. Select the device just replaced from the list, and then press Enter. The device is now configured.
34. Press the F10 key to exit the diagnostic program.

Note: If you are running the stand-alone diagnostics, do not exit the program completely.

35. Verify the PCI adapter by using the following instructions:
 - a. Did you replace the adapter with the system power on?
 - Yes: Go to the next step.
 - No: Load the diagnostic program by doing the following steps:
 - If AIX is available, boot AIX, log in as root or CELOGIN, and then enter the **diag** command.
 - If AIX is not available, boot the stand-alone diagnostics
 - b. Type the **diag** command if you are not already displaying the diagnostic menus.
 - c. Select **Advance Diagnostic Routines**, and then select **Problem Determination**.
 - d. Select the name of the resource just replaced from the menu. If the resource just replaced is not shown, choose the resource associated with it. Press Enter, and then press **Commit** (F7 or Esc+7).
 - e. Did the Problem Determination identify any problems?
 - No: Continue to the next step.
 - Yes: A problem is identified
 - If you are a customer, record the error information, and then contact your service provider.
 - If you are an authorized service provider, return to map 210-5.
36. Press the F10 key to exit the diagnostic program.

Replacing a PCI adapter contained in a cassette from the expansion unit with the power on in IBM i

You can replace a PCI adapter cassette from the 5802 or 5877 expansion unit that is running the IBM i operating system with the system power on.

You must have already completed the procedure “Removing a PCI adapter contained in a cassette from the expansion unit with the power on in IBM i” on page 174 to have the slot powered off.

To replace an adapter, do the following steps:

1. If the adapter needs to be placed in the PCI adapter cassette, see “PCI adapter single-width and double-width cassettes” on page 178.
2. At the back of the system, lift the cassette cover flap and identify the cassette slot you want to use.
3. Install the PCI adapter cassette in the system. Refer to “Installing a PCI adapter cassette” on page 167.
4. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.

5. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
6. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
7. Verify that the new resource is functional. See Verify the installed part.

Replacing a PCI adapter contained in a cassette from the expansion unit with the power on in Linux

You can replace a PCI adapter cassette from the 5802 or 5877 expansion unit that is running the Linux operating system with the system power on.

You must have already completed the procedure “Replacing a PCI adapter contained in a cassette from the expansion unit with the power on in Linux” to have the slot powered off.

Note: Use this procedure only when you are replacing an adapter with an identical adapter. If you are replacing an adapter with an adapter that is not identical to the adapter removed, follow the steps in “Installing a PCI adapter contained in a cassette with the power on in Linux” on page 170.

To replace an adapter with the power on in Linux, do the following steps:

1. If the adapter needs to be placed in the PCI adapter cassette, see “PCI adapter single-width and double-width cassettes.”
2. At the back of the system, lift the cassette cover flap and identify the cassette slot you want to use.
3. Ensure the lower cassette handle is pressed up toward the retainer clip. This places the adapter in the correct position to be docked in the system.
4. Run the `drsslot_chrp_pci` command to enable an adapter to be replaced:

For example, to replace the PCI adapter in slot U7879.001.DQD014E-P1-C3 run this command:
`drsslot_chrp_pci -R -s U7879.001.DQD014E-P1-C3`

5. Follow the instructions on the display to complete the task. When you are instructed to insert the adapter in the adapter slot, see “Installing a PCI adapter cassette” on page 167.
6. Run the `lsslot` command to verify that the slot is occupied.

For example, Enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`

The following is an example of the information displayed by this command:

Slot	Description	Devices
U7879.001.DQD014E-P1-C3	PCI-X capable, 64 bit, 133MHz slot	0001:40:01.0

PCI adapter single-width and double-width cassettes

You can remove, replace, or install PCI adapters in a cassette.


Removing an adapter from the PCI adapter single-width cassette

You can remove a PCI adapter from a single-width cassette. .

To remove an adapter from the single-width cassette, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Remove the cassette from the system.
4. Remove the cassette cover by doing the following steps:
 - a. Slide the cover latch (A) to disengage it from the pivot pin (C) as shown in the following figure.
 - b. Lift the cover (B) off the pivot pin.

- c. Slide the cover off the cassette.

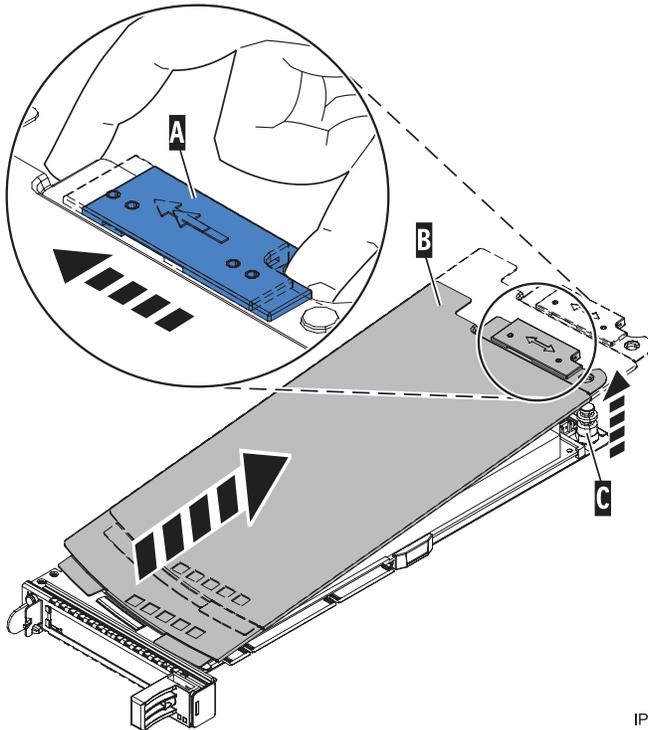

IPHAK520-0

Figure 106. PCI adapter cassette cover removed

5. Remove the adapter from the cassette by doing the following steps:
- Unlock the adapter retainers by rotating the retainer clip (A) into the horizontal position. See Figure 107 on page 180.

Notes:

- 1) The edge of the adapter located at the end of the cassette that contains the cassette handles is called the adapter **tailstock**.
 - 2) Two retainers are located at the top of the cassette, along the top edge of the adapter. Two more retainers are located at the edge of the cassette opposite of the adapter tailstock.
 - 3) When the retainer clip is in the horizontal position, the adapter retainers are unlocked and can slide away from the card.
 - 4) If the corner support retainer is used, unlock it, and then slide the corner support retainer away from the card.
- b. Push the adapter retainers (B) away from the adapter.
 - c. Unlock the adapter tailstock clamp (C).
 - d. Rotate the adapter out of the cassette by grasping the edge of the adapter opposite the tailstock, and then firmly rotate the adapter toward the bottom of the cassette.
 - e. Lift the adapter out of the tailstock retaining channel.

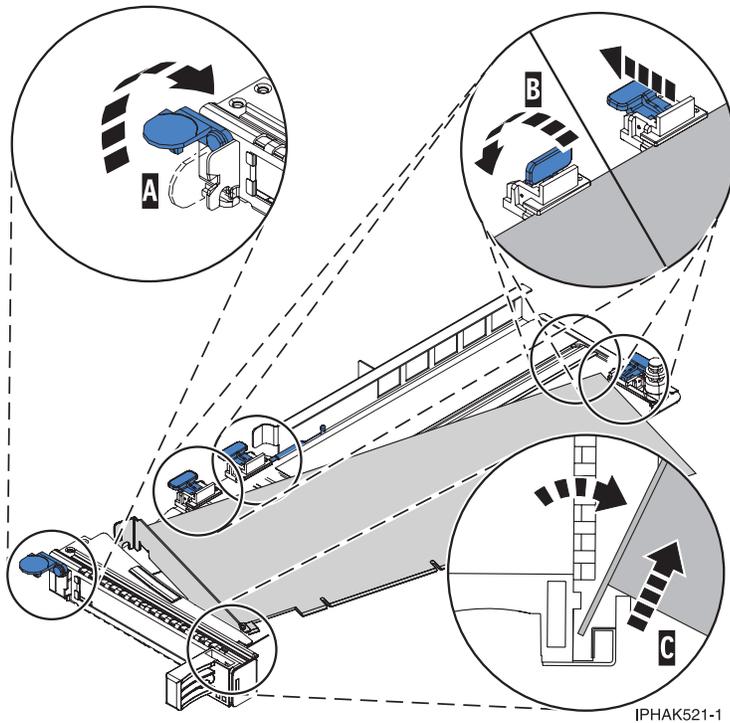


Figure 107. Adapter removed from the PCI adapter cassette


f. Put the adapter in a safe place.

Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

g. Place a PCI adapter or filler panel in the cassette. See “Placing a PCI adapter in a single-width cassette” on page 181.

h. Replace the cassette cover by doing the following steps:

- 1) Slide the cover **(B)** into position on the cassette.
- 2) While holding the cover latch **(A)** in the open position, place the cover over the pivot pin **(C)**.
- 3) Release the cover latch to lock the cover into place.

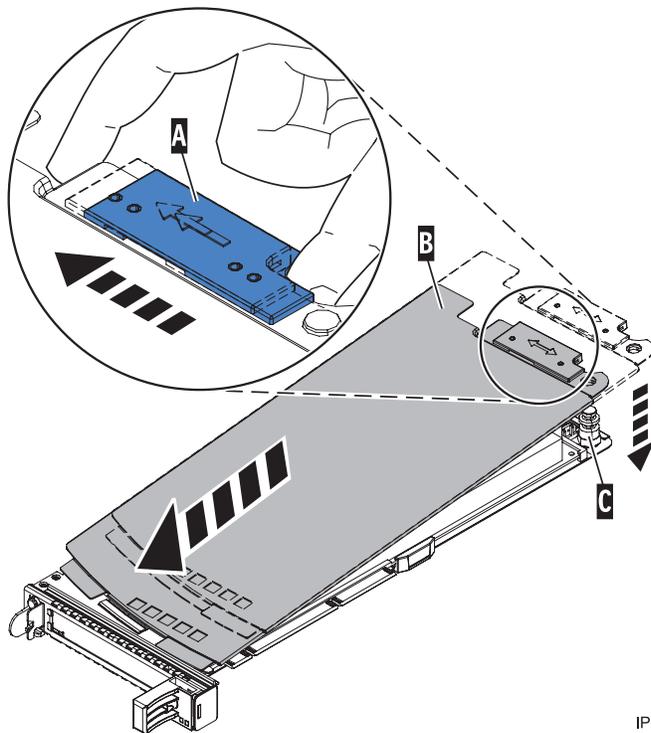

IPHAK530-0


Figure 108. PCI adapter cassette cover replaced

Placing a PCI adapter in a single-width cassette

You can place a PCI adapter in a single-width cassette. .

To place a PCI adapter in a cassette, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Remove any shipping handles or brackets attached to the adapter.
4. Remove the cassette cover by doing the following steps:
 - a. Slide the cover latch (A) to disengage it from the pivot pin (C) as shown in the following figure.
 - b. Lift the cover (B) off of the pivot pin.
 - c. Slide the cover off of the cassette.

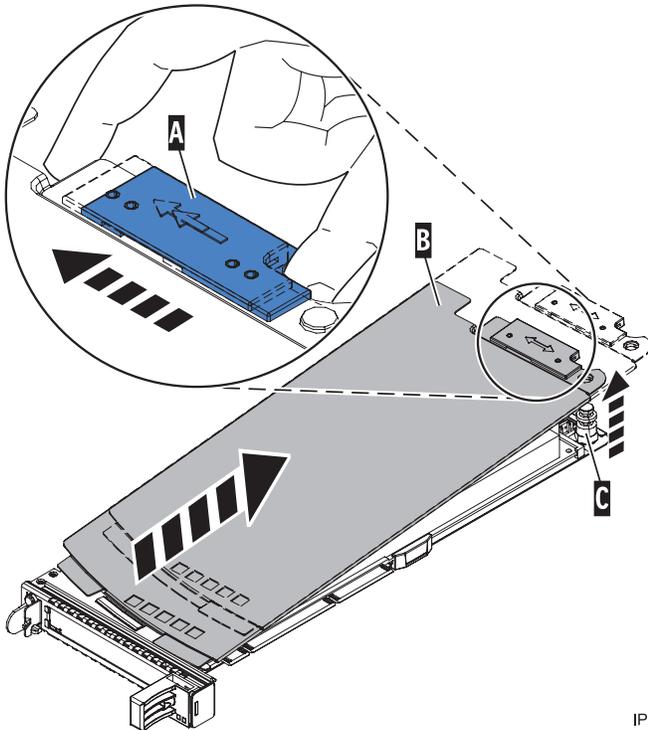

IPHAK520-0

Figure 109. PCI adapter single-width cassette cover removed

5. Ensure the cassette is prepared to receive an adapter by doing the following steps:
 - a. Ensure the cassette is empty by doing one of the following steps:
 - “Removing an adapter from the PCI adapter single-width cassette” on page 178.
 - Remove the adapter filler panel from the cassette.
 - b. Ensure that all of the adapter retainers (A) have been pushed out to the edges of the cassette to allow the placement of the adapter. See Figure 110 on page 183.

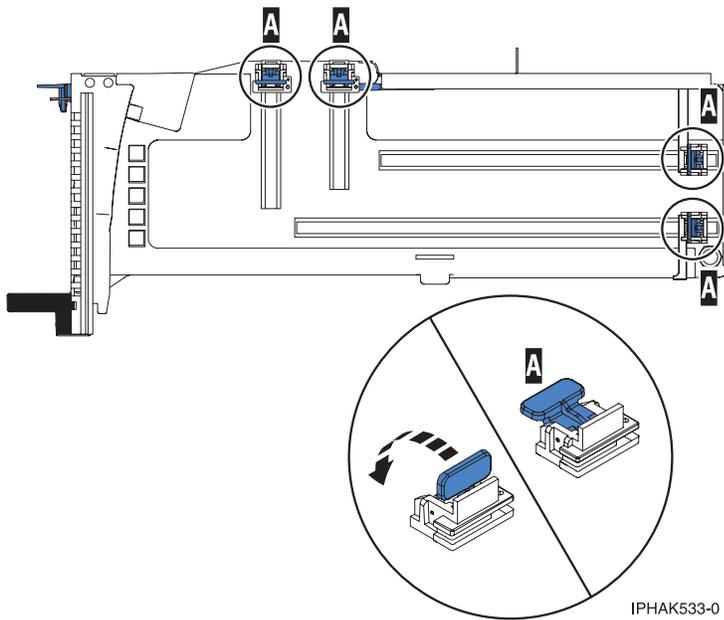


Figure 110. Adapter retainers

- c. Rotate the tailstock clamp into the open position.


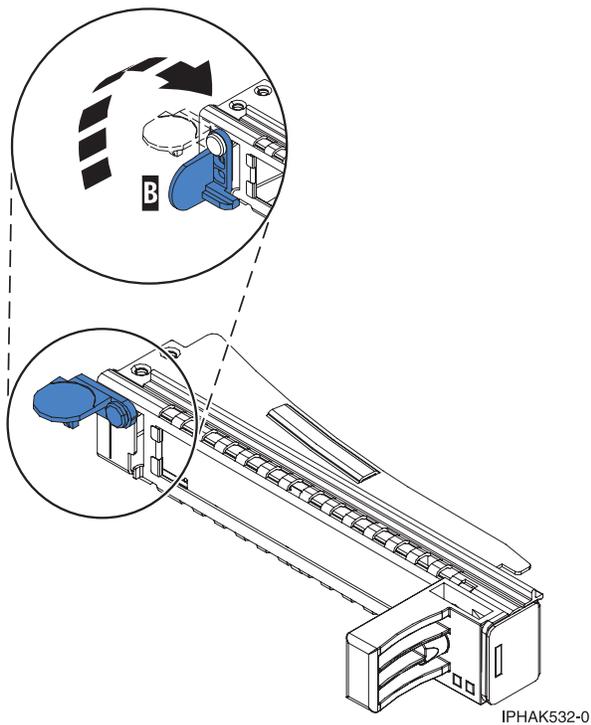


Figure 111. Tailstock clamp in the open position

6. Place the adapter in the cassette by doing the following steps:
 - a. With the tailstock clamp in the open position, insert the adapter firmly into the tailstock retaining channel (A). See Figure 112 on page 184.
 - b. Rotate the adapter toward the top of the cassette and into place.

c. Close the tailstock clamp (B). See Figure 112.

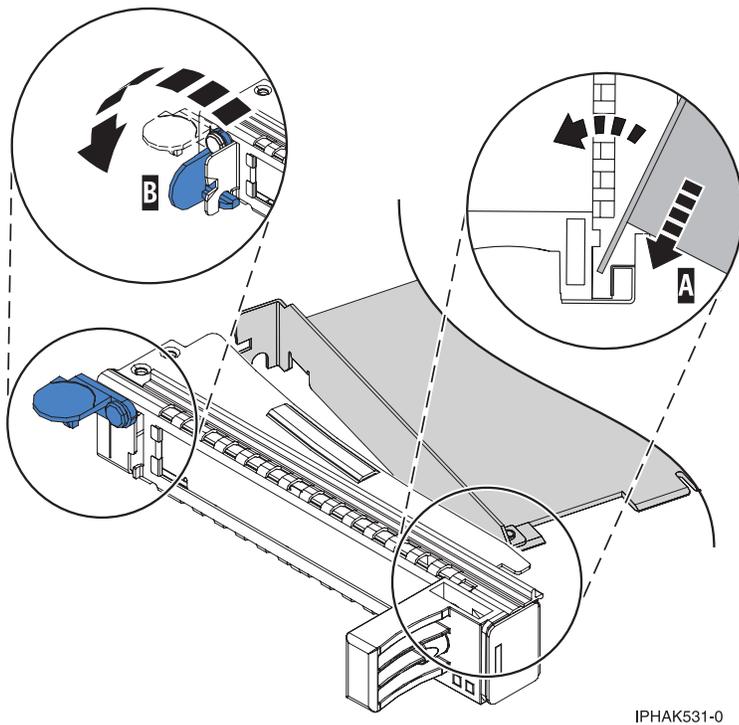

IPHAK531-0

Figure 112. Adapter removed from the PCI adapter single-width cassette

d. Position the adapter retainers to support the adapter, and then rotate the retainer clip into the closed position.

Notes:


- 1) Two retainers are located at the top of the cassette, along the top edge of the adapter. Two more retainers are located at the edge of the cassette opposite of the adapter tailstock.
- 2) When the adapter retainer clip is in the horizontal position, the adapter retainers are unlocked and can slide toward the adapter.
- 3) Place the retainers on the adapter according to the length of the adapter being used. Select the appropriate instructions:

Adapter-cassette retainer placement for large adapters

- a) Place and lock the retainers (B). See Figure 113 on page 185.

Attention: Use of the lower corner support retainer might interfere with the docking of the PCI card when positioned within the system. Ensure the retainer does not interfere with the adapter connectors on the system backplane.

- b) Ensure the adapter edge is seated in each retainer groove (A). If the shape of the adapter or the presence of a connector will not allow the adapter edge to be seated into the retainer groove, ensure the retainer is still locked firmly against that edge or connector.

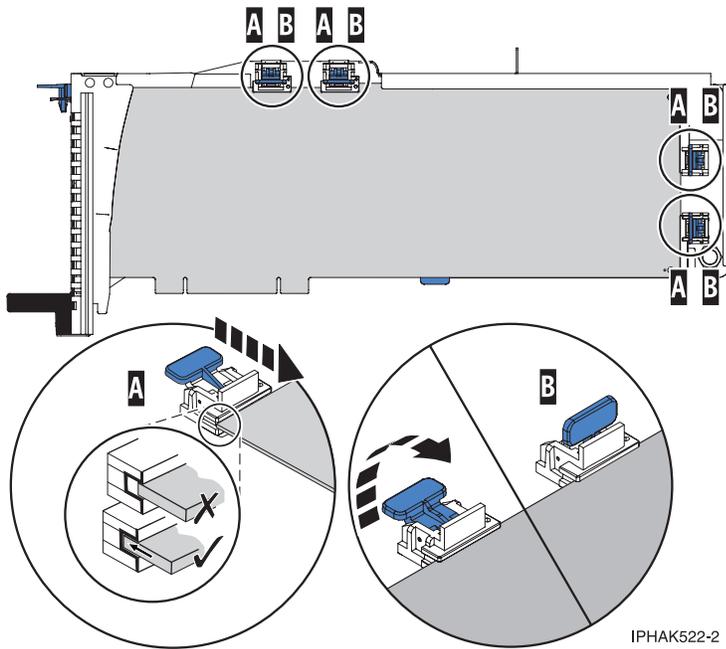

IPHA522-2

Figure 113. Large adapter in the PCI adapter cassette with the supports and stabilizer in place

Adapter-cassette retainer placement for medium-length adapters

- a) Remove the adapter stabilizer (C). See Figure 114 on page 186.
- b) Place and lock the retainers (B).
- c) Ensure the adapter edge is seated in each retainer groove (A). If the shape of the adapter or the presence of a connector will not allow the adapter edge to be seated into the retainer groove, ensure the retainer is still locked firmly against that edge or connector.

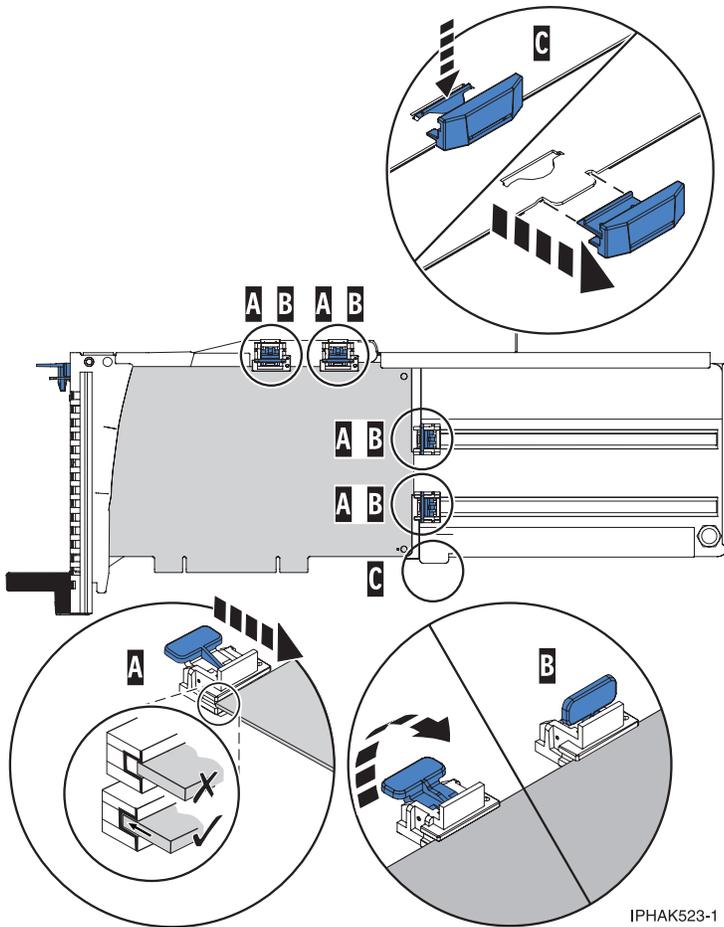


Figure 114. Medium-length adapter in the PCI adapter cassette with the supports in place

Adapter-cassette retainer placement for small adapters

- a) Remove the adapter stabilizer (C). See Figure 115 on page 187.
- b) Place the hookarm (D) into the hole in the corner of the adapter. This supports the card when it is undocked from the connector on the system backplane.
- c) Place and lock the retainers (B).
- d) Ensure the adapter edge is seated in each retainer groove (A). If the shape of the adapter or the presence of a connector will not allow the adapter edge to be seated into the retainer groove, ensure the retainer is still locked firmly against that edge or connector.


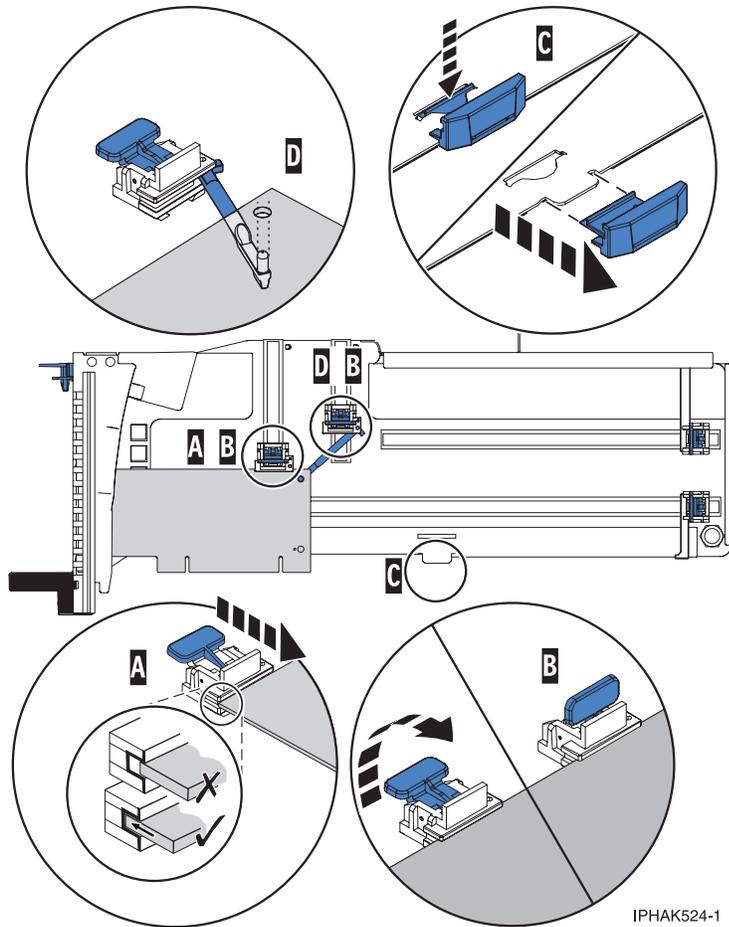


Figure 115. Small adapter in the PCI adapter cassette with the supports and the hookarm in place

7. Replace the cassette cover by doing the following steps:
 - a. Slide the cover (B) into position on the cassette as shown in the following figure.
 - b. While holding the cover latch (A) in the open position, place the cover over the pivot pin (C).
 - c. Release the cover latch to lock the cover into place.

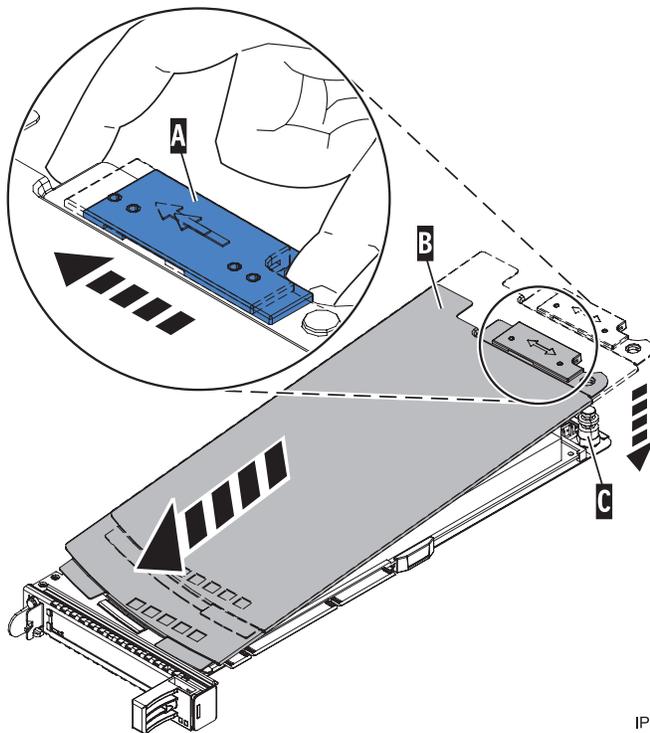

IPHAK530-0


Figure 116. PCI adapter cassette cover replaced

Removing an adapter from the PCI adapter double-wide cassette

You can remove a PCI adapter from a double-wide cassette. .

To remove an adapter from the cassette, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Remove the PCI adapter contained in a cassette from the system.
4. Remove any shipping handles or brackets attached to the adapter.
5. Remove the cassette cover by doing the following steps:
 - a. Slide the cover latch (A) to disengage it from the pivot pin (C) as shown in the following figure.
 - b. Lift the cover (B) off of the pivot pin.
 - c. Slide the cover off of the cassette.

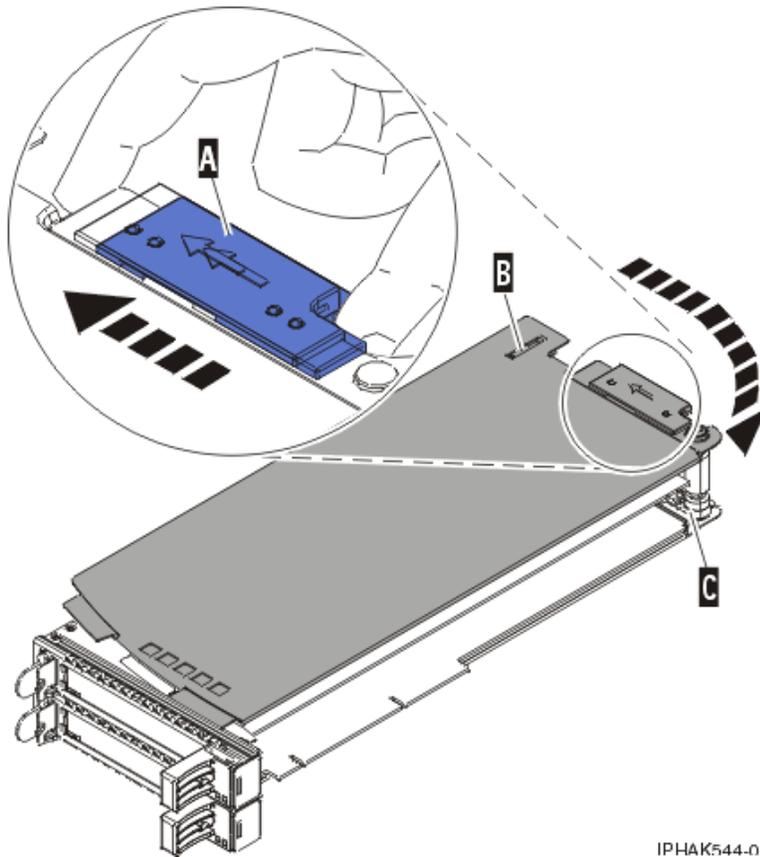

IPHAK544-0

Figure 117. PCI adapter cassette cover removed

- d. Unscrew pivot pin (C) and put it in a safe place
6. Remove the adapter from the cassette by doing the following steps:
 - a. Unlock the adapter retainers by rotating the retainer clip (A) into the horizontal position. See Figure 118 on page 190.

Notes:

- 1) The edge of the adapter located at the end of the cassette that contains the cassette handles is called the adapter **tailstock**.
 - 2) Two retainers are located at the top of the cassette, along the top edge of the adapter. Two more retainers are located at the edge of the cassette opposite of the adapter tailstock.
 - 3) When the retainer clip is in the horizontal position, the adapter retainers are unlocked and can slide away from the card.
 - 4) If the corner support retainer is used, unlock it, and then slide the corner support retainer away from the card.
- b. Push the adapter retainers (B) away from the adapter.
 - c. Unlock the adapter tailstock clamp (C).
 - d. Rotate the adapter out of the cassette by grasping the edge of the adapter opposite the tailstock, and then firmly rotate the adapter toward the bottom of the cassette.
 - e. Lift the adapter out of the tailstock retaining channel.

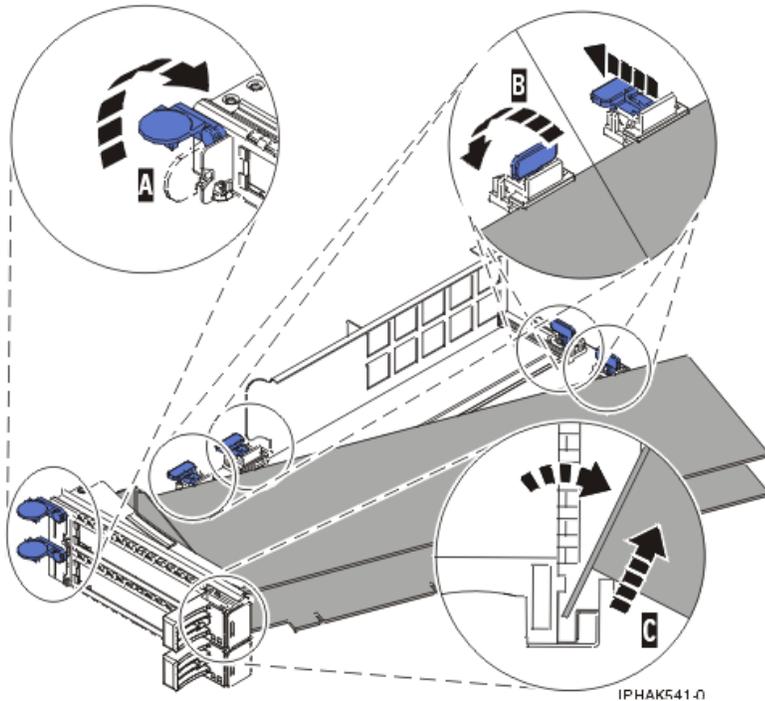


Figure 118. Adapter removed from the PCI adapter cassette

- f. Put the adapter in a safe place.


Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

- g. Place the adapter in the PCI adapter double-wide cassette. For information, see “Placing an adapter in the PCI adapter double-wide cassette” on page 191.

Note: If the cassette is not going to contain a PCI adapter, use this same procedure to place an adapter filler panel in the cassette.

- h. Replace the cassette cover by doing the following steps:

- 1) Screw pivot pin (C) into place.
- 2) Slide the cover (B) into position on the cassette.
- 3) While holding the cover latch (A) in the open position, place the cover over the pivot pin (C).
- 4) Release the cover latch to lock the cover into place.

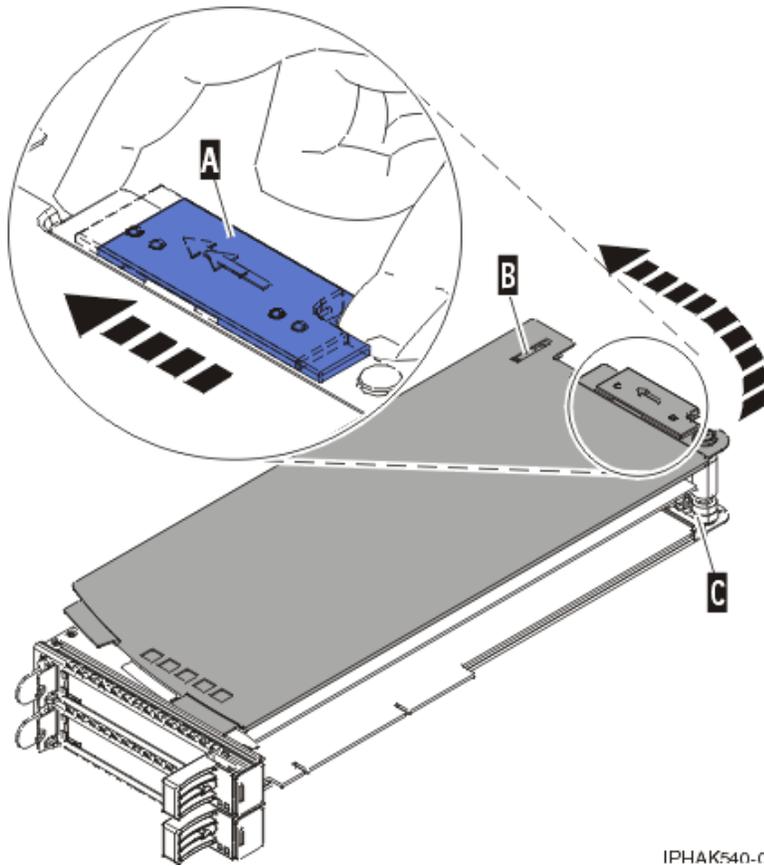

IPHAK540-c


Figure 119. PCI adapter cassette cover replaced

Placing an adapter in the PCI adapter double-wide cassette

You can place a PCI adapter in a double-wide cassette. .

To place an adapter in a cassette, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Remove the PCI adapter contained in a cassette from the system.
3. Remove the cassette cover by doing the following steps:
 - a. Slide the cover latch (A) to disengage it from the pivot pin (C) as shown in the following figure.
 - b. Lift the cover (B) off of the pivot pin.
 - c. Slide the cover off of the cassette.

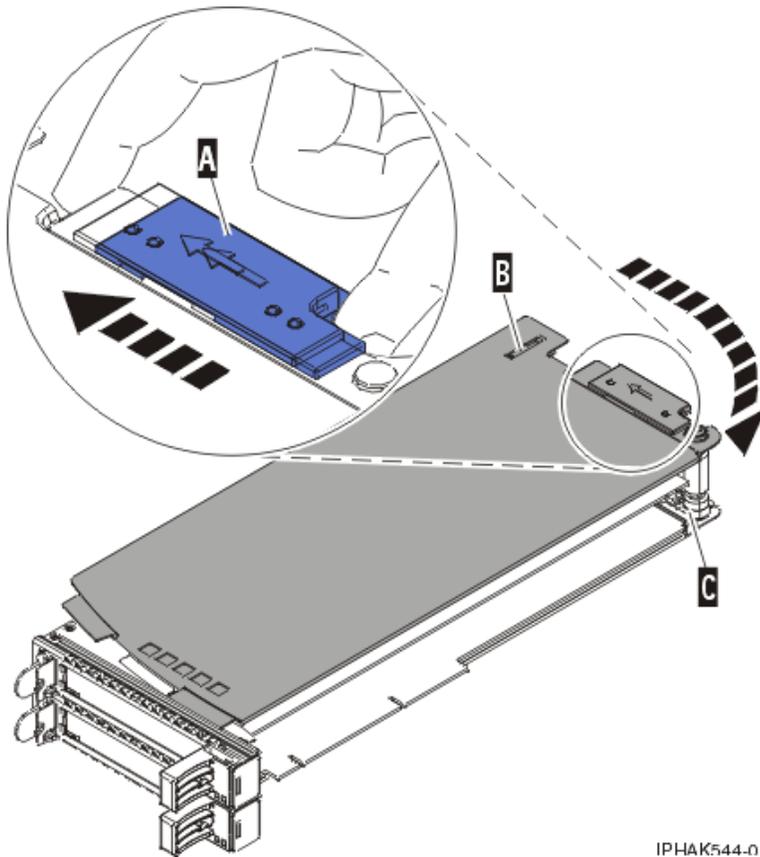

IPHAK544-0

Figure 120. PCI adapter cassette cover removed

- d. Unscrew pivot pin (C) and put it in a safe place.
4. Ensure the cassette is prepared to receive an adapter by doing the following steps:
 - a. Ensure the cassette is empty by doing one of the following steps:
 - Remove the adapter from the PCI adapter double-wide cassette. For information, see “Removing an adapter from the PCI adapter double-wide cassette” on page 188.
 - Remove the adapter filler panel from the cassette.
 - b. Ensure that all of the adapter retainers have been pushed out to the edges of the cassette to allow the placement of the adapter.
 - c. Place the tailstock clamp in the open position by pressing the cassette handle towards the retainer clip.
5. Place the adapter in the cassette by doing the following steps:
 - a. With the tailstock clamp in the open position, insert the adapter firmly into the tailstock retaining channel (A). See Figure 121 on page 193.
 - b. Rotate the adapter toward the top of the cassette and into place.
 - c. Close the tailstock clamp.

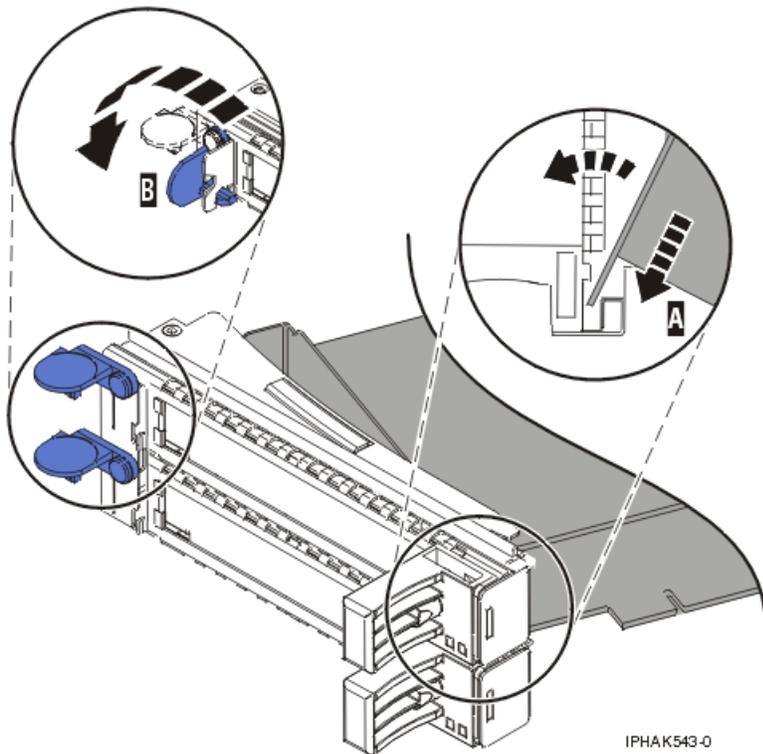


Figure 121. Adapter replaced in the PCI adapter cassette


- d. Position the adapter retainers to support the adapter, and then rotate the retainer clip **(B)** into the closed position. See Figure 121.

Notes:

- 1) Two retainers are located at the top of the cassette, along the top edge of the adapter. Two more retainers are located at the edge of the cassette opposite of the adapter tailstock.
- 2) When the adapter retainer clip is in the horizontal position, the adapter retainers are unlocked and can slide toward the adapter.
- 3) Place and lock the retainers **(B)**. See Figure 122 on page 194.

Attention: Use of the lower corner support retainer might interfere with the docking of the PCI card when positioned within the system. Ensure the retainer does not interfere with the adapter connectors on the system backplane.

- 4) Ensure the adapter edge is seated in each retainer groove **(A)**. If the shape of the adapter or the presence of a connector will not allow the adapter edge to be seated into the retainer groove, ensure the retainer is still locked firmly against that edge or connector.

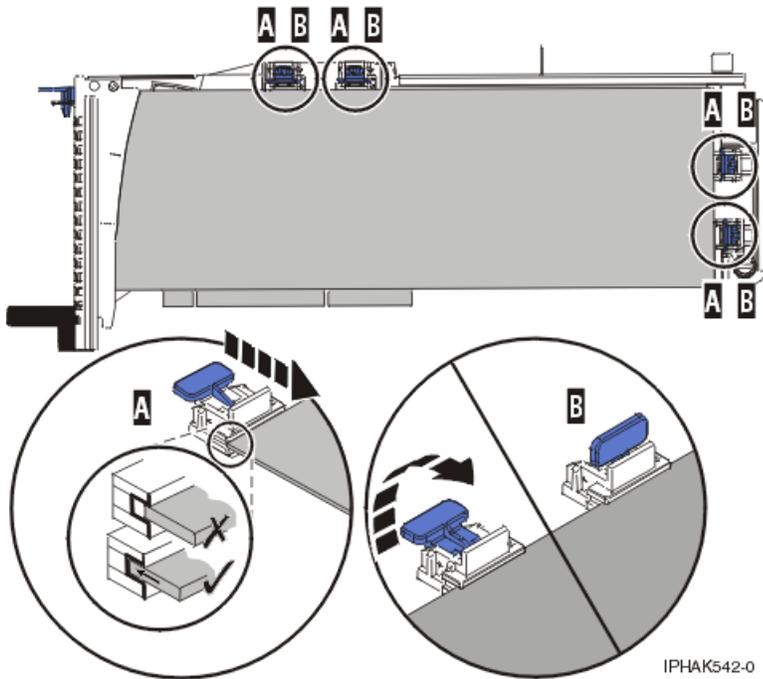

IPHAK542-0

Figure 122. Long adapter in the PCI adapter cassette with the supports and stabilizer in place

6. After the retainers are placed, replace the cassette cover by doing the following steps:
 - a. Screw pivot pin (C) into place.
 - b. Slide the cover (B) into position on the cassette as shown in the following figure.
 - c. While holding the cover latch (A) in the open position, place the cover over the pivot pin (C).
 - d. Release the cover latch to lock the cover into place.

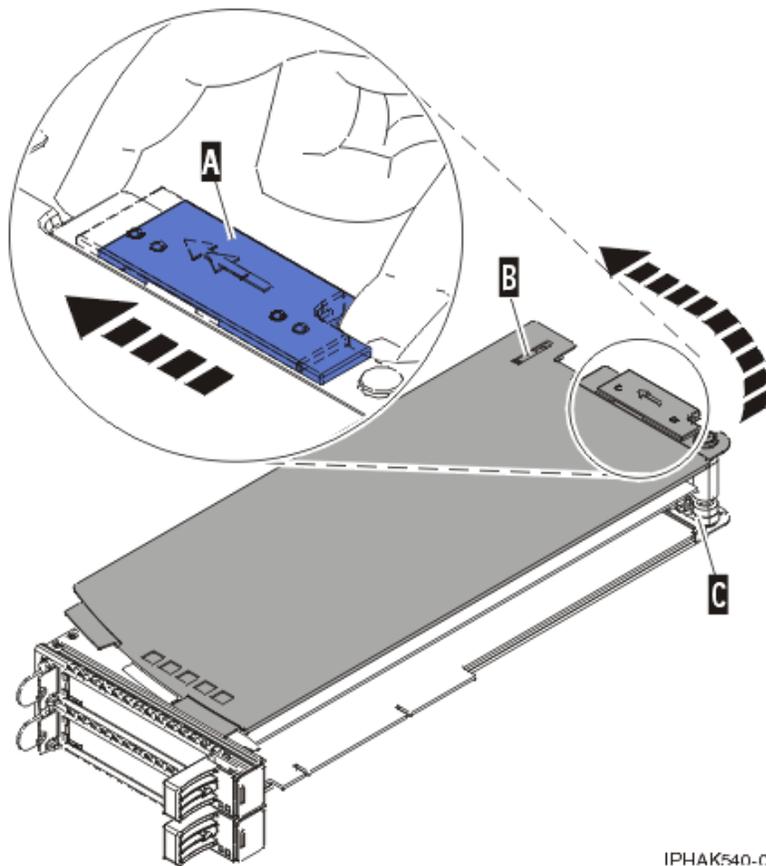


Figure 123. PCI adapter cassette cover replaced

7. Replace the PCI adapter contained in a cassette in the system.

Attention: A cassette containing either a PCI adapter or filler panel must be placed in the PCI adapter slot of the system unit for proper air flow and cooling.

Expansion units that do not use cassettes

You might need remove, replace, or install PCI adapters in expansion units that do not use cassettes.

Important: If you are installing a new feature, ensure that you have the software required to support the new feature and determine whether there are any existing PTF prerequisites to install. To do this, use the IBM Prerequisite Web site at http://www-912.ibm.com/e_dir/eServerPrereq.nsf .

Important:

- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input/output adapter (IOA), the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5703, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA might have been altered or the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

Installing a PCI adapter in an expansion unit that does not use cassettes

You can install a PCI adapter.

Installing a PCI adapter in an expansion unit that does not use cassettes, with the power off

You can install a PCI adapter with the power off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power off, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Determine in which slot to place the PCI adapter. For system-specific adapter placement information, see the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. Stop the system or logical partition. See Stop the system or logical partition.
5. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.
 - b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
 - For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
7. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
8. If necessary, remove the adapter expansion slot shield.
9. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

10. Place the adapter, component-side up, on a flat, antistatic surface.
11. Some PCI adapters are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.
12. Rotate the adapter locking latch counterclockwise as shown in Figure 124 on page 197 or Figure 125 on page 198.
13. Lift the black tab attached to the adapter retainer assembly, and keep the black tab in a vertical position.
14. Ensure the slot is empty. Remove the adapter filler plate if one is present. If an adapter is present in the slot you want to use, see the instructions in “Removing a PCI adapter in an expansion unit that

does not use cassettes” on page 215 and then return here.


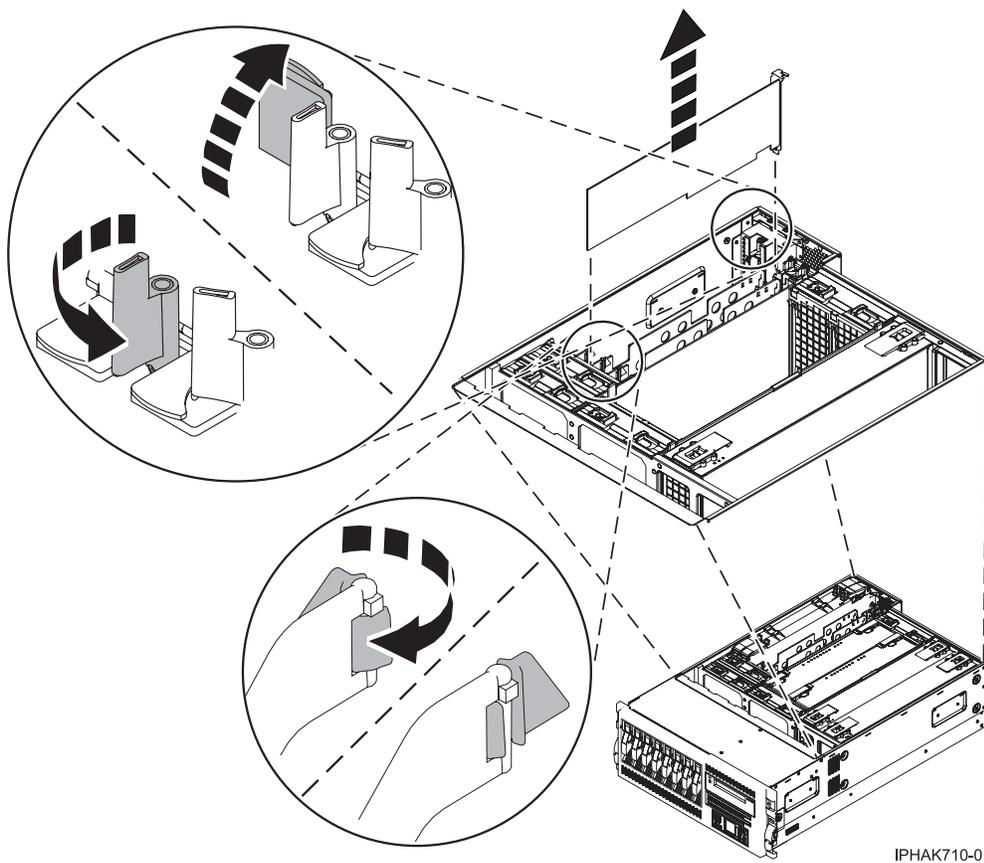



Figure 124. PCI adapter or filler plate removed from the rack-mounted unit

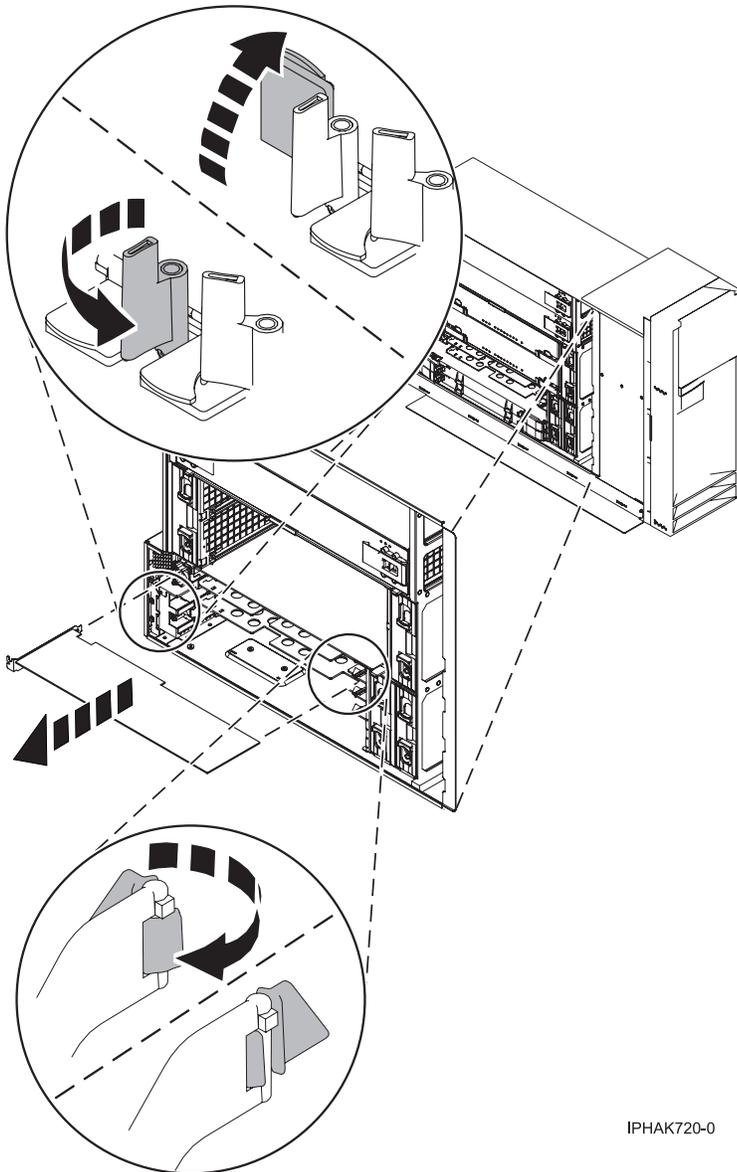

IPHAK720-0


Figure 125. PCI adapter or filler plate removed from the stand-alone unit

15. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
16. Press the adapter firmly into its connector.
17. Secure the adapter. Lower the tab onto the PCI adapter faceplate. Rotate the adapter locking latches clockwise as shown in Figure 126 on page 199 or Figure 127 on page 200.

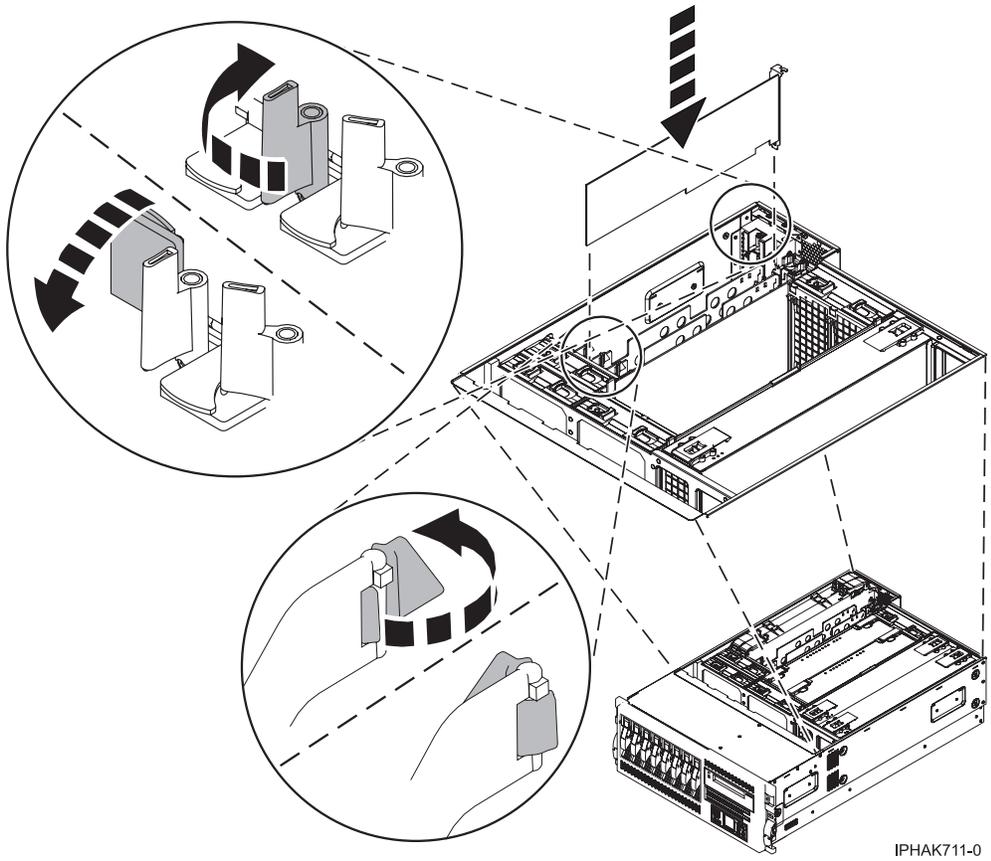

IPHAK711-0

Figure 126. PCI adapter replaced in the rack-mounted unit

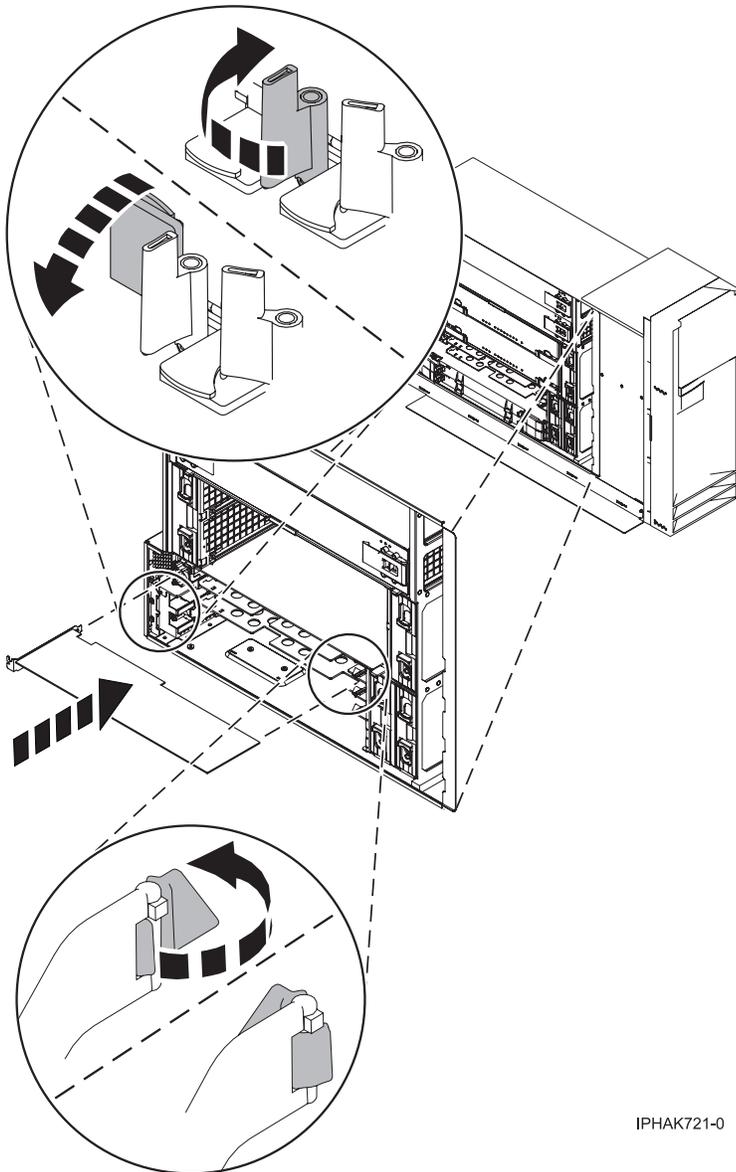

IPHAK721-0

Figure 127. PCI adapter replaced in the stand-alone unit

18. Connect any adapter cables.
19. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
20. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
21. Reconnect the power source to the system.
22. Start the system or logical partition. Refer to Start the system or logical partition.
23. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Installing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX

You can install a PCI adapter with the system power on in AIX.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power on in AIX, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Determine in which slot to place the PCI adapter. For system-specific adapter placement information, see the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
5. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.
 - b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
 - For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
6. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
7. If necessary, remove the adapter expansion slot shield.
8. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.
9. Place the adapter, component-side up, on a flat, antistatic surface.
10. Some PCI adapter cards are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.
11. Refer to “PCI hot-plug manager access for AIX” on page 253, and follow the steps in the access procedure to select **PCI Hot Plug Manager**. Then return here to continue.
12. From the PCI Hot-Plug Manager menu, select **Add a PCI Hot-Plug Adapter** and press Enter. The Add a Hot-Plug Adapter window displays.
13. Select the appropriate empty PCI slot from the ones listed on the screen, and press Enter.
14. Rotate the adapter locking latches counterclockwise as shown in the following figures.
15. Lift the black tab attached to the adapter retainer assembly, and keep the black tab in a vertical position.

16. Remove the adapter filler plate if one is present.


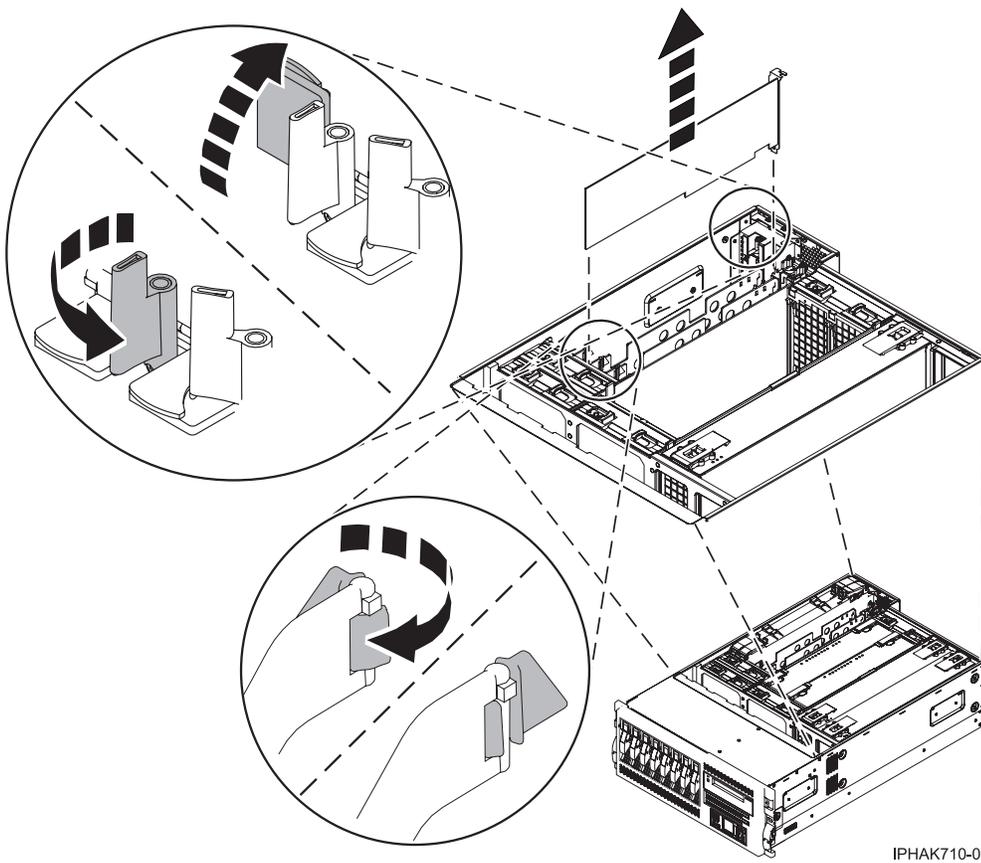



Figure 128. PCI adapter or filler plate removed from the rack-mounted unit

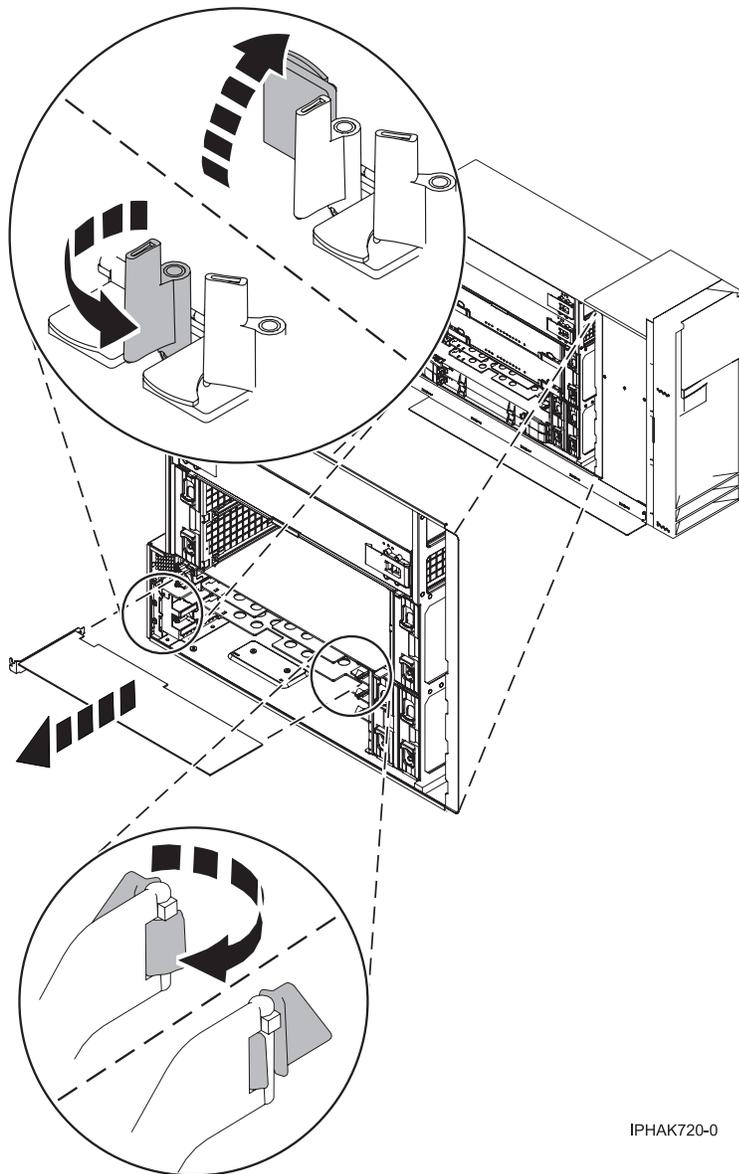

IPHAK720-0


Figure 129. PCI adapter or filler plate removed from the stand-alone unit

17. Follow the instructions on the screen to install the adapter until the LED for the specified PCI slot is set to the Action state. See "Component LEDs" on page 255.
18. When you are instructed to install the adapter in the adapter slot, carefully grasp the adapter by the edges and align the adapter in the slot guides. Insert the adapter fully into the adapter slot connector. If you are installing a full-length adapter, ensure that both ends of the adapter engage the card guides.
19. Press the adapter firmly into its connector.
20. Secure the adapter. Lower the tab onto the PCI adapter faceplate. Rotate the adapter locking latches clockwise as shown in the following figures.

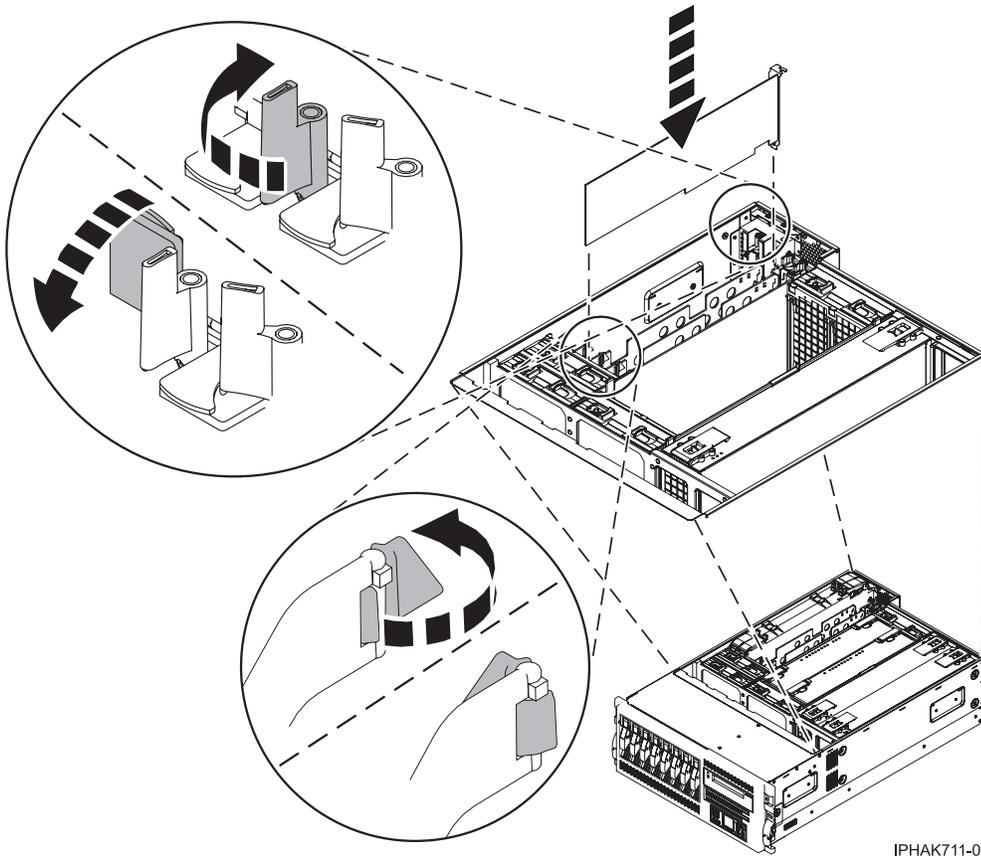

IPHAK711-0

Figure 130. PCI adapter replaced in the rack-mounted unit

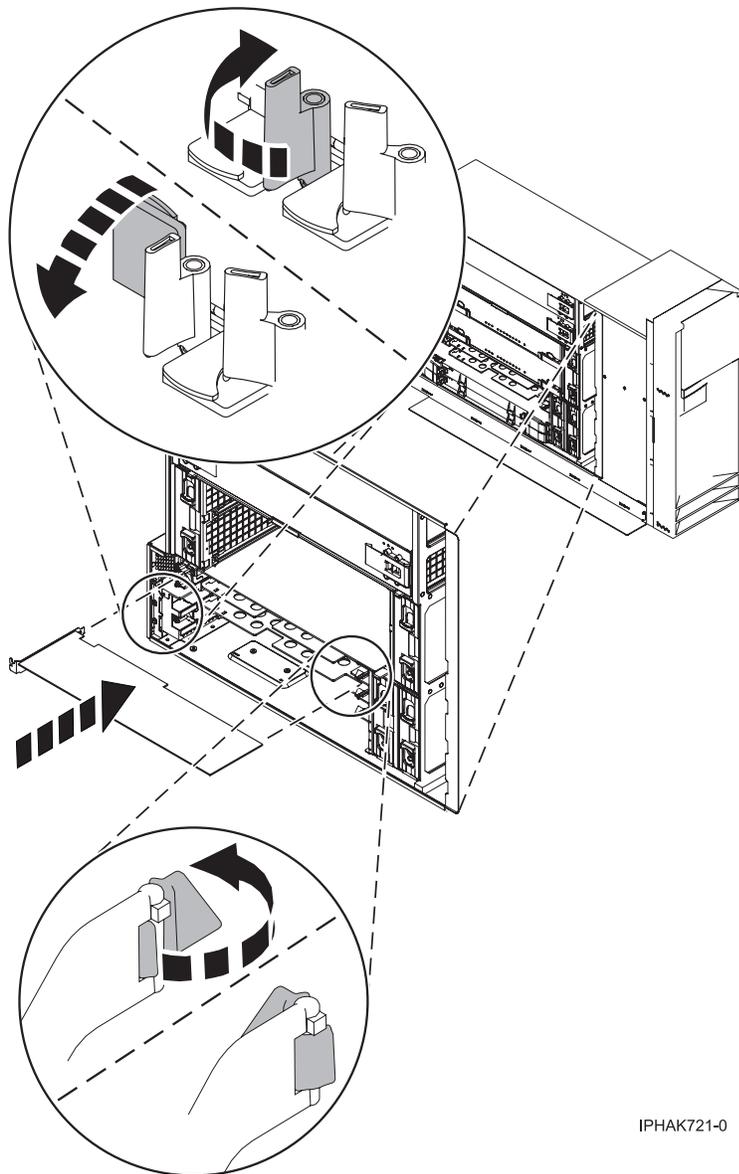

IPHAK721-0

Figure 131. PCI adapter replaced in the stand-alone unit

21. Connect any adapter cables.
22. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
23. Run the `cfgmgr` command to configure the adapter.
24. Verify that the new resource is functional. See [Verify the installed part](#).

Related information

- [Installing a feature using the Hardware Management Console](#)
- [Logical partitioning](#)

Installing a PCI adapter in an expansion unit that does not use cassettes, with the power on in IBM i

You can install a PCI adapter with the system power on in the i operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.


To install a PCI adapter with the system power on in the i operating system, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Determine in which slot to place the PCI adapter. For system-specific adapter placement information, see the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.
 - b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
 - For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
5. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
6. If necessary, remove the adapter expansion slot shield.
7. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.


8. Place the adapter, component-side up, on a flat, antistatic surface.
9. Some PCI adapters are shipped from the manufacturer with a blue handle or support bracket along the back edge of the card. To use adapters of this type in this system, you must remove the blue handle or support bracket from the card.
10. Type **strsst** on the command line of the Main Menu and then press Enter.
11. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display. Press Enter.
12. Select **Start a service tool** from the System Service Tools (SST) display and press Enter.
13. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
14. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
15. Type **9** (Hardware contained within package) in the *System Unit* or *Expansion Unit* field of the unit where you are replacing the card. Press Enter.
16. Select the option to **Include empty positions**.
17. Select **Concurrent Maintenance** on the card position where you want to replace the card and then press Enter.
18. Select the option to **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to install the adapter.
19. Select the option to **Toggle LED blink off/on** to stop the blinking LED.
20. Rotate the adapter locking latch counterclockwise as shown in the following figures.
21. Lift the black tab attached to the adapter retainer assembly, and keep the black tab in a vertical position.

22. Remove the adapter filler plate if one is present.

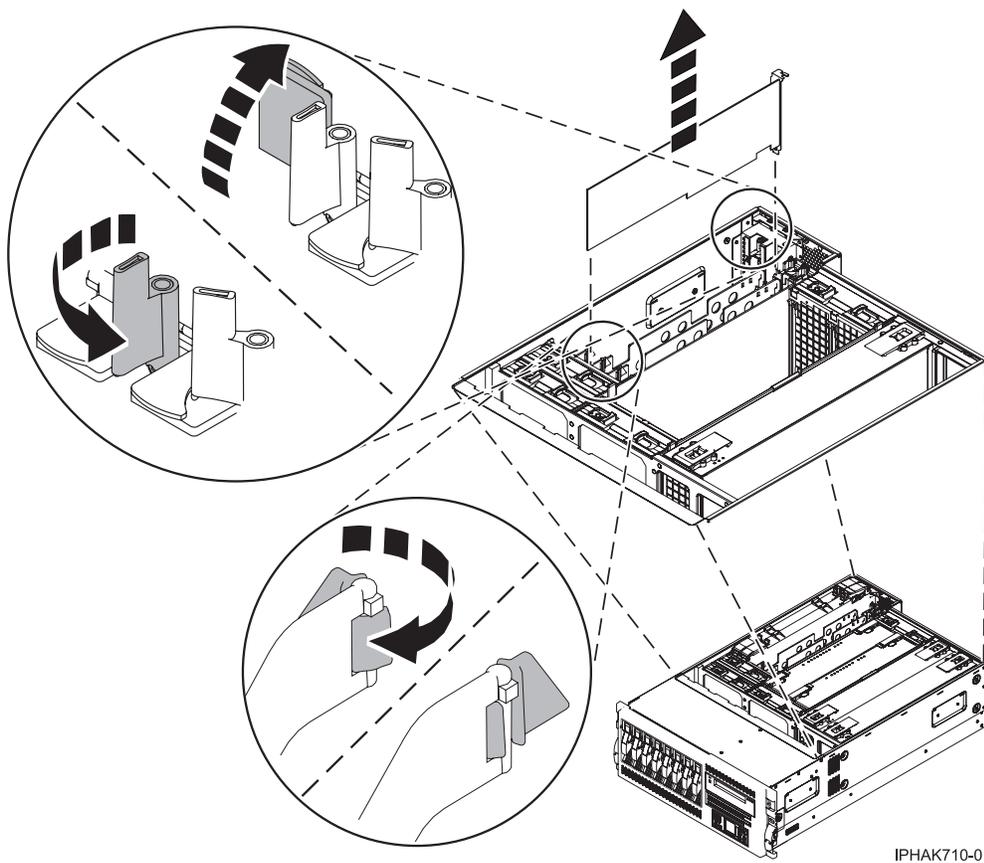

IPHAK710-0


Figure 132. PCI adapter or filler plate removed from the rack-mounted unit

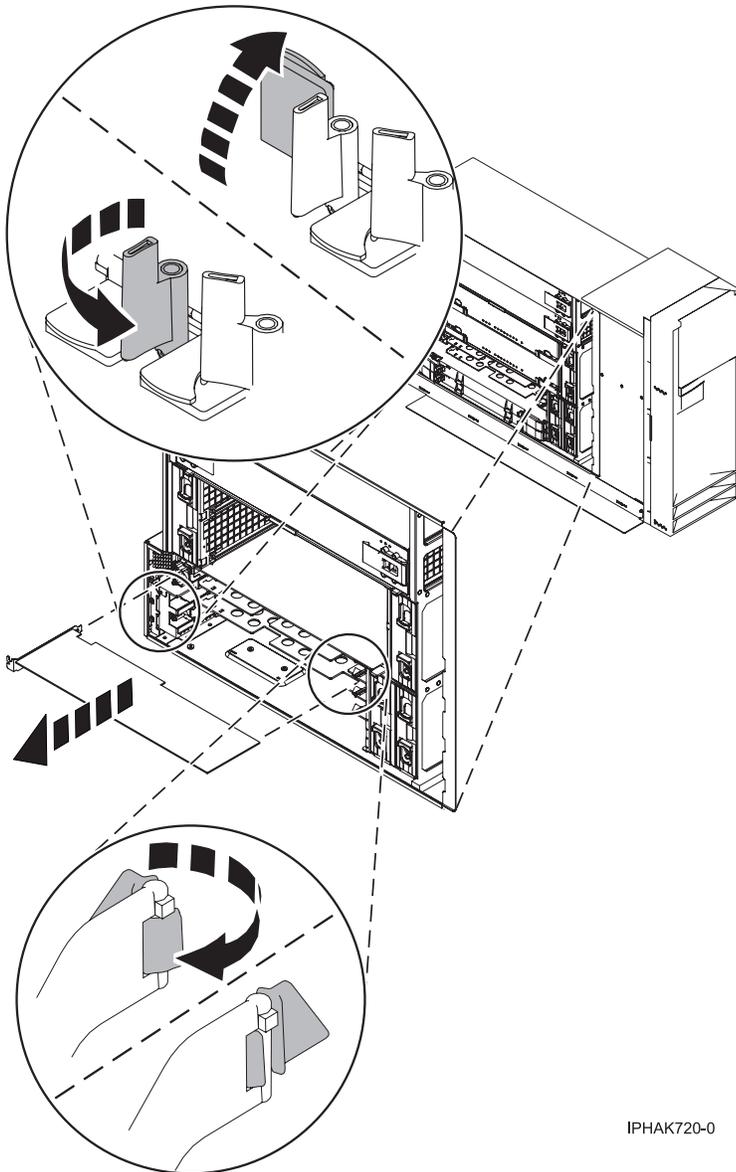

IPHAK720-0


Figure 133. PCI adapter or filler plate removed from the stand-alone unit

23. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
24. Press the adapter firmly into its connector.
25. Secure the adapter. Lower the tab onto the PCI adapter faceplate. Rotate the adapter locking latches clockwise as shown in the following figures.

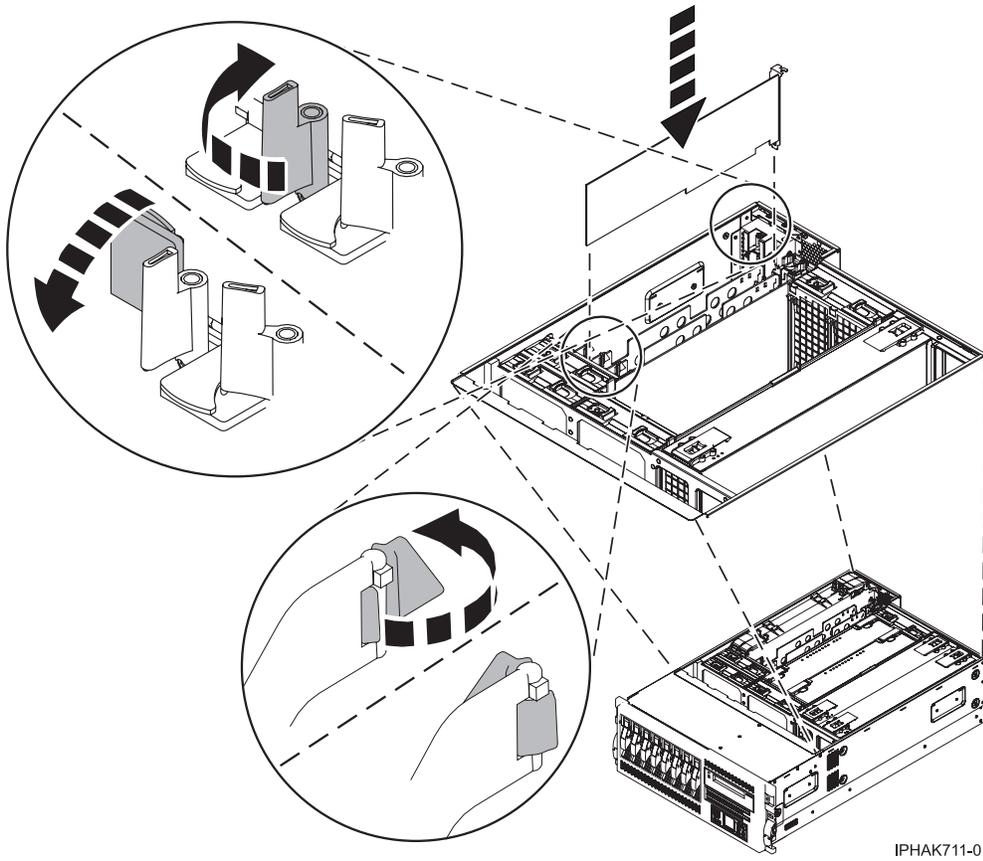

IPHAK711-0

Figure 134. PCI adapter replaced in the rack-mounted unit

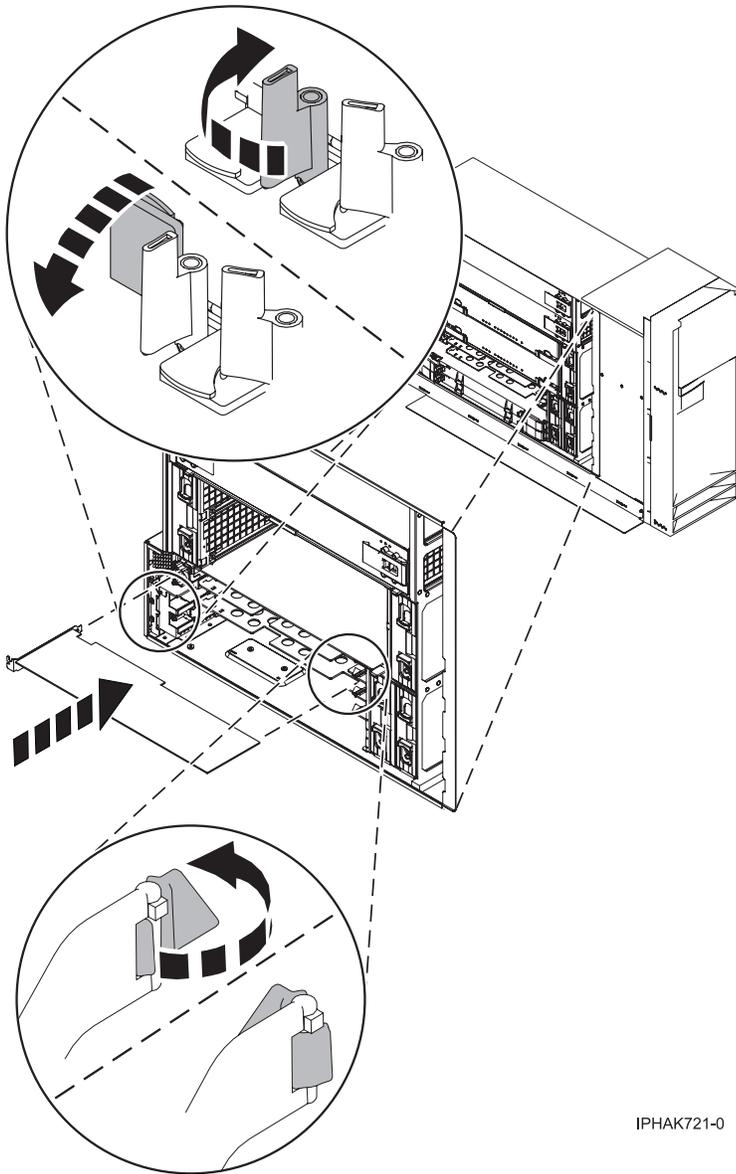

IPHAK721-0

Figure 135. PCI adapter replaced in the stand-alone unit

26. Connect any adapter cables.
27. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
28. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
29. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
30. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
31. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Installing a PCI adapter in an expansion unit that does not use cassettes, with the power on in Linux

You can install a PCI adapter with the system power on in Linux.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for installing a PCI adapter.

To install a PCI adapter with the system power on in Linux, do the following steps:

1. Ensure that the system meets the “Prerequisites for hot-plugging PCI adapters in Linux” on page 256.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. Verify that the Linux, hot-plug PCI tools are installed. See “Verify that the Linux, hot-plug PCI tools are installed” on page 256.
4. Determine in which slot to place the PCI adapter. For system-specific adapter placement information, see the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.
5. Perform the prerequisite tasks described in “Before you begin” on page 246.
6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.
 - b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
 - For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
7. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
8. If necessary, remove the adapter expansion slot shield.
9. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

10. Place the adapter, component-side up, on a flat, antistatic surface.
11. Log in to the system console as the root user.
12. Run the `lsslot` tool to list the hot-plug PCI slots that are available in the server or partition:

```
lsslot -c pci -a
```


The following is an example of the information displayed by this command:

```
# Slot      Description      Device(s)
U7879.001.DQD014E-P1-C1 PCI-X capable, 64 bit, 133MHz slot Empty
U7879.001.DQD014E-P1-C4 PCI-X capable, 64 bit, 133MHz slot Empty
U7879.001.DQD014E-P1-C5 PCI-X capable, 64 bit, 133MHz slot Empty
```

Select the appropriate empty PCI slot from the ones listed by the command.


13. Rotate the adapter locking latch counterclockwise as shown in the following figures.

14. Lift the black tab attached to the adapter retainer assembly, and keep the black tab in a vertical position.
15. Ensure the slot is empty. Remove the adapter filler plate if one is present.

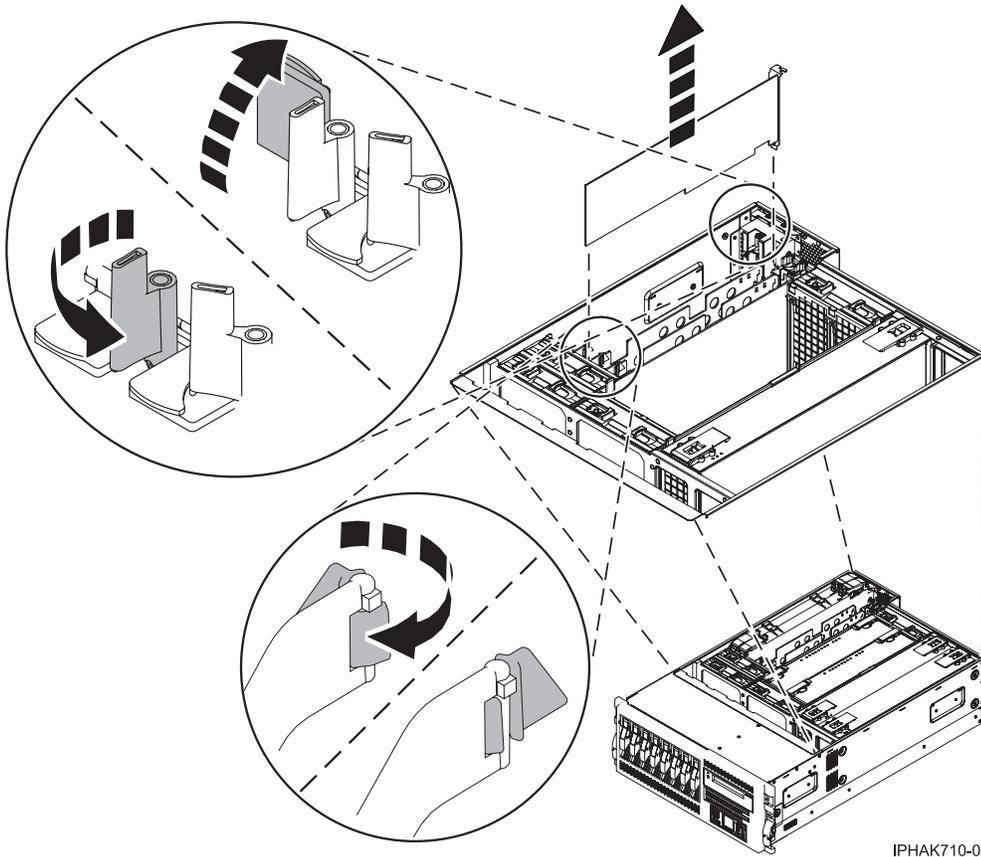

IPHAK710-0

Figure 136. PCI adapter or filler plate removed from the rack-mounted unit

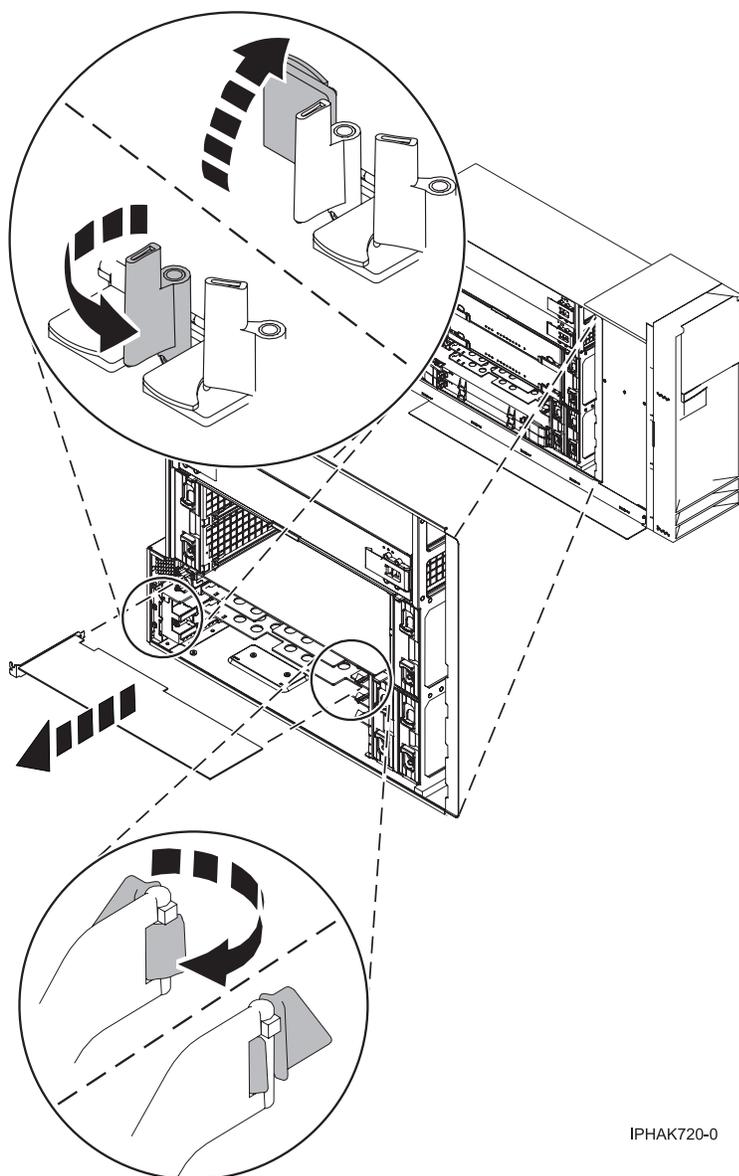

IPHAK720-0

Figure 137. PCI adapter or filler plate removed from the stand-alone unit

16. Run the `drslot_chrp_pci` command to enable an adapter to be installed. For example, to install an adapter into PCI slot U7879.001.DQD014E-P1-C3, enter the following command:

```
drslot_chrp_pci -a -s U7879.001.DQD014E-P1-C3
```

The following displays:

The visual indicator for the specified PCI slot has been set to the identify state.
Press Enter to continue or enter x to exit.

17. Press Enter.

The following displays:

The visual indicator for the specified PCI slot has been set to the action state.
Insert the PCI card into the identified slot, connect any devices to be configured
and press Enter to continue. Enter x to exit.

18. When you are instructed to install the adapter in the adapter slot, carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
19. Press the adapter firmly into its connector.

Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

20. Secure the adapter. Lower the tab onto the PCI adapter faceplate. Rotate the adapter locking latches clockwise as shown in the following figures.

21. Connect any adapter cables.

22. Run the `lsslot` command to verify that the slot is occupied.


For example, enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`

The following is an example of the information displayed by this command:

```
# Slot      Description      Device(s)
U7879.001.DQD014E-P1-C3 PCI-X capable, 64 bit, 133MHz slot 0001:40:01.0
```


23. If you are servicing a rack-mounted system, route the cables through the cable-management arm.

24. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.

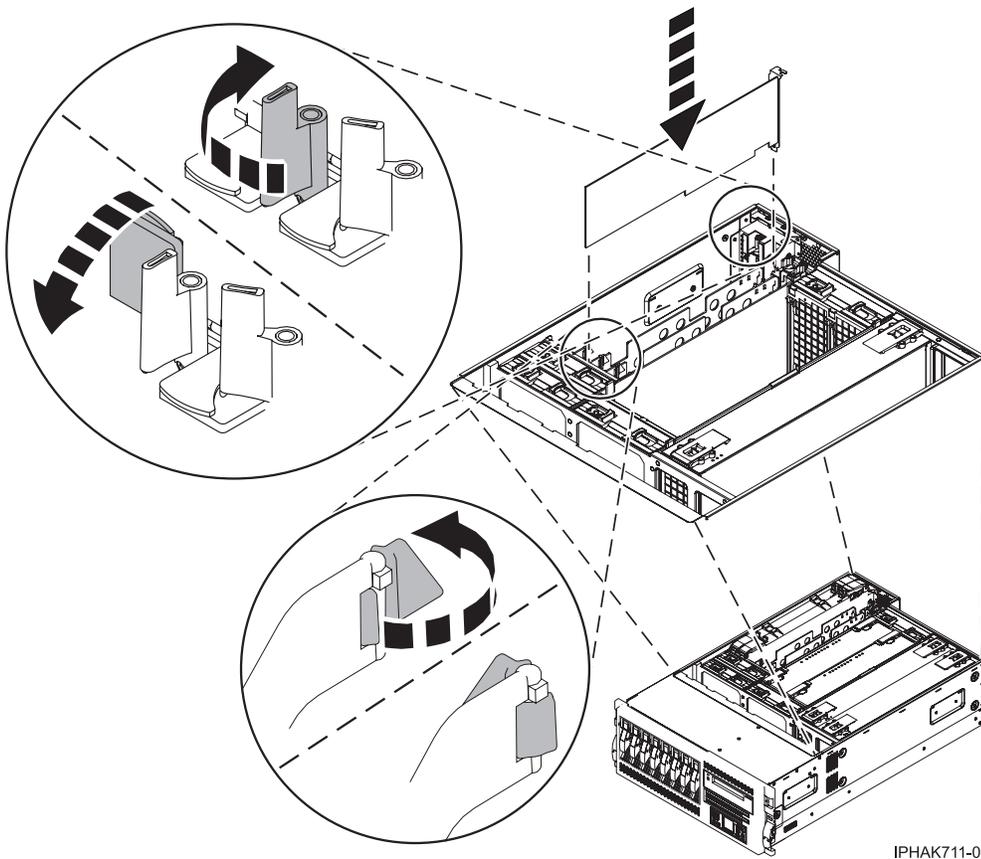

IPHA711-0

Figure 138. PCI adapter replaced in the rack-mounted unit

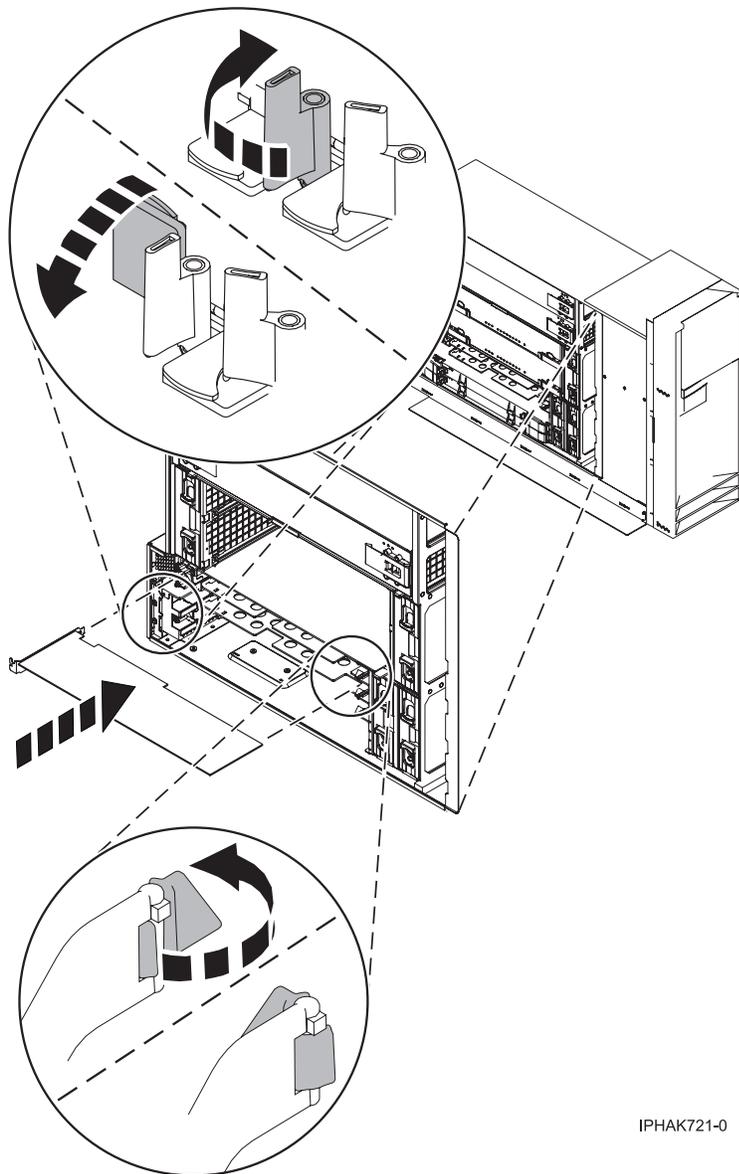

IPHAK721-0

Figure 139. PCI adapter replaced in the stand-alone unit

Related information

- Installing a feature using the Hardware Management Console
- Logical partitioning

Removing a PCI adapter in an expansion unit that does not use cassettes

You can remove a PCI adapter from an expansion unit that does not use cassettes.

Important:

- If you are exchanging a 2766, 2787, 280E, 576B, or 5774 Fibre Channel input/output adapter (IOA), the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, 280E, 576B, or 5774 IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.

- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5703, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA might have been altered or the storage IOA cache might have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

Removing a PCI adapter in an expansion unit that does not use cassettes, with the power off

You can remove a PCI adapter with the power off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

To remove a PCI adapter with the system power off, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. Stop the system or logical partition. See Stop the system or logical partition.
5. Disconnect the power source from the system by unplugging the system.

Note: This system might be equipped with a second power supply. Before continuing with this procedure, ensure that the power source to the system has been completely disconnected.

6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.
 - b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
 - For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
7. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
8. Determine which adapter you plan to remove, then label and disconnect all cables attached to that adapter.
9. Record the slot number and location of each adapter being removed.


Note: Adapter slots are numbered on the rear of the system.

10. Rotate the adapter locking latch counterclockwise as shown in the following figures.
11. Lift the black tab attached to the adapter retainer assembly, and keep the black tab in a vertical position.
12. Carefully grasp the PCI adapter by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.

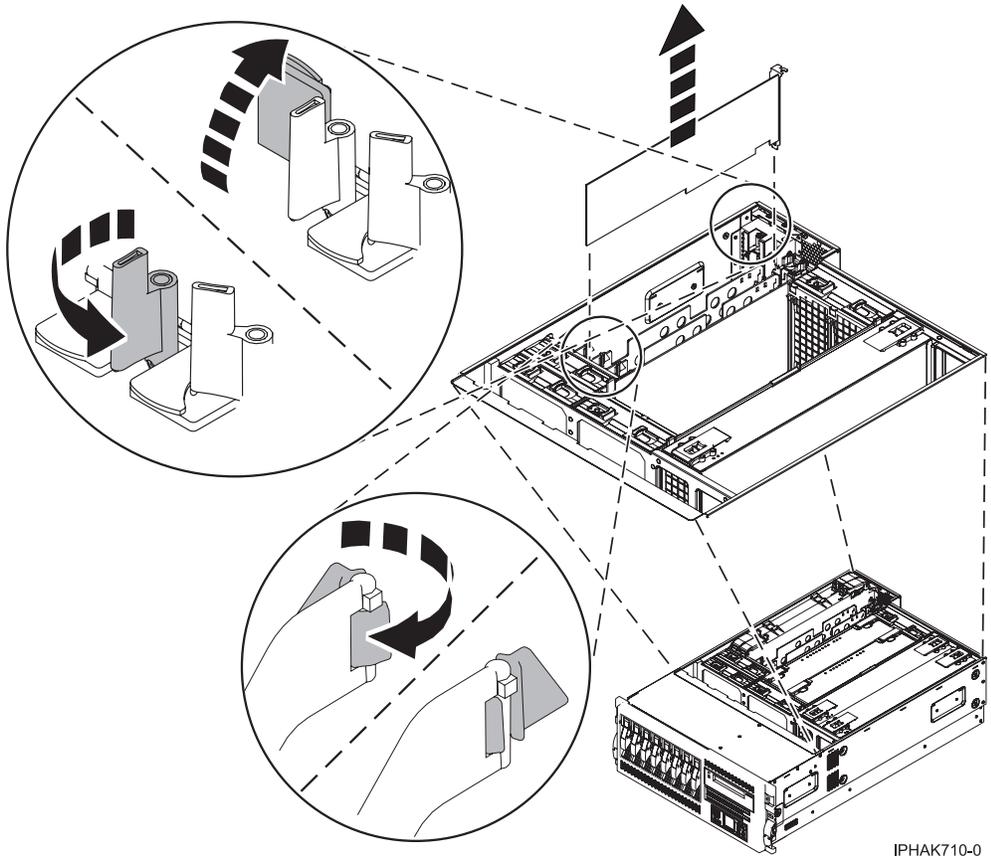

IPHAK710-0

Figure 140. PCI adapter removed from the rack-mounted system unit

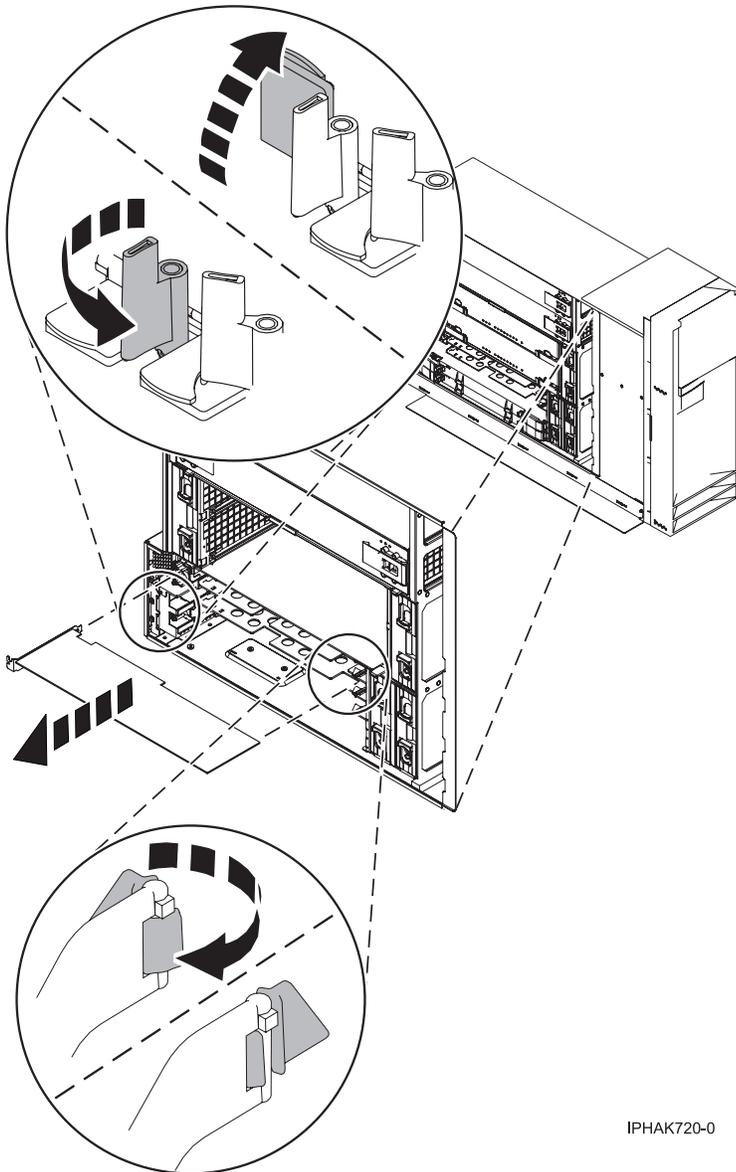

IPHAK720-0

Figure 141. PCI adapter removed from the stand-alone unit

13. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
14. If you plan to install another adapter into the vacated slot, go to “Replacing a PCI adapter in an expansion unit that does not use cassettes, with the power off” on page 230; otherwise, continue with the next step.
15. Seal the expansion slot using an expansion-slot cover.
16. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
17. Reconnect the power source to the system.
18. Start the system or logical partition. Refer to Start the system or logical partition.
19. To replace the PCI adapter, see “Replacing a PCI adapter in an expansion unit that does not use cassettes” on page 230.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX

You can remove a PCI adapter with the system power on in AIX.

To remove a failing adapter and replace it with the same adapter, see “Removing and replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX” on page 233. If the adapter that is removed will be placed into a different slot or system, complete this removal procedure, then install the adapter as described in “Installing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX” on page 201.


If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

Note: Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To remove a PCI adapter with the system power on in AIX, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.
 - b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
 - For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
5. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
6. Determine which adapters you plan to remove.
7. Record the slot number and location of each adapter being removed. Adapter slots are numbered on the rear of the system unit.
8. Ensure that any processes or applications that might use the adapter are stopped.
9. Follow these steps to place the adapter in the action state using the PCI Hot-Plug Manager:
 - a. Enter the system diagnostics by logging in as root user or as the celogin user, type **diag** at the AIX command line.
 - b. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
 - c. At the FUNCTION SELECTION menu, select **Task Selection**, and then press Enter.

- d. At the Task Selection list, select **PCI Hot Plug Manager**.
 - e. Select **Unconfigure a Device**, and then press Enter.
 - f. Press F4 (or Esc +4) to display the **Device Names** menu.
 - g. Select the adapter you are removing in the **Device Names** menu.
 - h. Use the Tab key to answer NO to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, and then press Enter. The ARE YOU SURE window is displayed.
 - i. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the **Command** field at the top of the screen.
 - j. Press F4 (or Esc +4) twice to return to the Hot Plug Manager menu.
 - k. Select **Replace/remove PCI Hot Plug adapter**.
 - l. Select the slot that has the device to be removed from the system.
 - m. Select **Remove**. A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.
 - n. Label all cables attached to the adapter you plan to remove.
 - o. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
 - p. Disconnect all cables attached to the adapter you plan to remove.
10. Label, and then disconnect all cables attached to the adapter you plan to remove.
 11. Rotate the adapter locking latch counterclockwise.
 12. Lift the black tab attached to the adapter retainer assembly, and keep the black tab in a vertical position.
 13. Carefully grasp the PCI adapter by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.

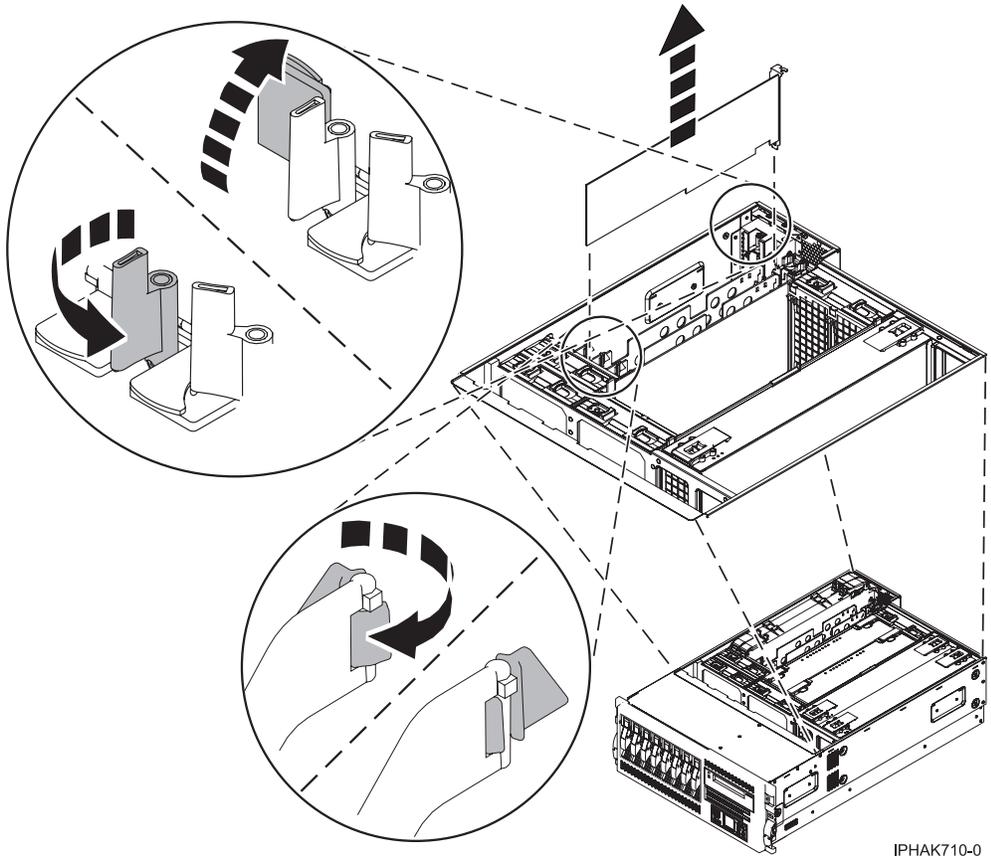

IPHAK710-0

Figure 142. PCI adapter removed from the rack-mounted system unit

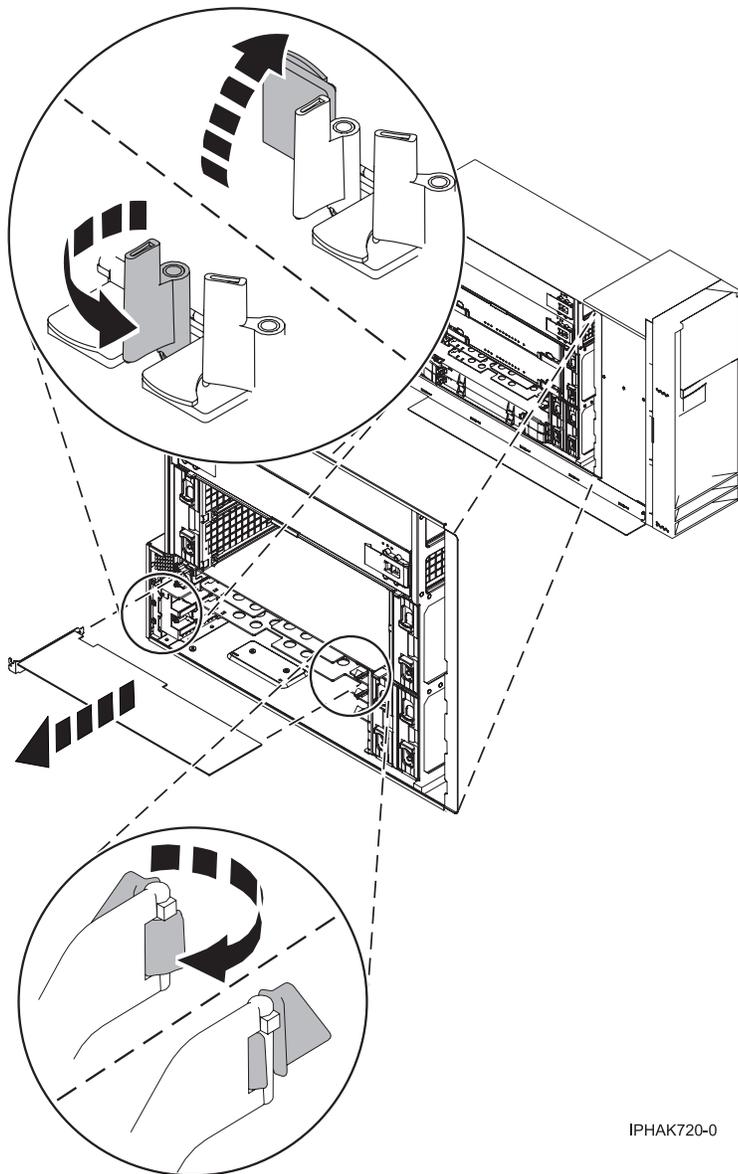

IPHAK720-0

Figure 143. PCI adapter removed from the stand-alone system unit

14. If you plan to install another adapter into the vacated slot, go to “Installing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX” on page 201; otherwise, continue with the next step.
15. Seal the expansion slot using an expansion-slot cover.
16. Lower the plastic retainer seat over the PCI adapter faceplate.
17. Rotate the locking latch clockwise until it clicks into the locked position.
18. Continue to follow the screen instructions until you receive a message that the adapter removal is successful. Successful removal is indicated by the OK message displayed next to the Command field at the top of the screen.
19. If you have other adapters to remove, press the F3 key to return to the PCI Hot-Plug Manager menu and then return to step 10 on page 220.
OR
If you do not have other adapters to remove, continue with the next step.
20. Press F10 to exit the Hot-Plug Manager.

21. Run the diag -a command. If the system responds with a menu or prompt, follow the instructions to complete the device configuration.
22. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
23. To replace the PCI adapter, see “Replacing a PCI adapter in an expansion unit that does not use cassettes” on page 230.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in IBM i

You can remove a PCI adapter with the system power on in the operating system.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

Important:

- If the adapter is the load source IOA or the load source IOP, or any other storage IOA or IOP with critical DASD attached for the system/partition, follow the on-screen instructions when you use HSM to power down the IOP or IOA. Instructions to use functions 68 and 69 on the control panel will be included.
- If the adapter is the console IOA or the console IOP for the system or partition, you must perform the maintenance from an IBM i operating system session connected through a different IOA or IOP, or you must power down the partition to perform maintenance.
- If you are removing, installing or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782) (CCIN 571F, 575B) topic, before proceeding with the instructions provided here.
- If you are exchanging a 2766, 2787, or 280E Fibre Channel IOA, the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, or 280E IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5703, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA may have been altered or the storage IOA cache may have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To remove a PCI adapter with the system power on in the i operating system, do the following steps:

1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Perform the prerequisite tasks described in “Before you begin” on page 246.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.

- b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
- For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
5. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
6. Type **strsst** on the command line of the Main Menu and press Enter.
7. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display. Press Enter.
8. Select **Start a service tool** from the System Service Tools (SST) display. Press Enter.
9. Select **Hardware service manager** from the Start a Service Tool display and press Enter.
10. Select **Packaging hardware resources (system, frames, cards)** from the Hardware Service Manager display. Press Enter.
11. Type **9** (Hardware contained within package) in the *System Unit* or *Expansion Unit* field of the unit where you are removing the card, then press Enter.
12. Select the option to **Include empty positions**.
13. Select **Concurrent Maintenance** on the card position where you want to remove the card and then press Enter.
14. Select the option to **Toggle LED blink off/on**. A light-emitting diode (LED) blinks identifying the position you chose. Physically verify that this is the slot where you want to remove the adapter.
15. Select the option to **Toggle LED blink off/on** to stop the blinking LED.
16. Select the option to **Power off domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
17. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power off complete
18. Label, and then disconnect all cables attached to the adapter you plan to remove.
19. Record the slot number and location of each adapter being removed.
- Note:** Adapter slots are numbered on the rear of the system.
20. Rotate the adapter locking latch counterclockwise.
21. Lift the black tab attached to the adapter retainer assembly, and keep the black tab in a vertical position.
22. Carefully grasp the PCI adapter by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.


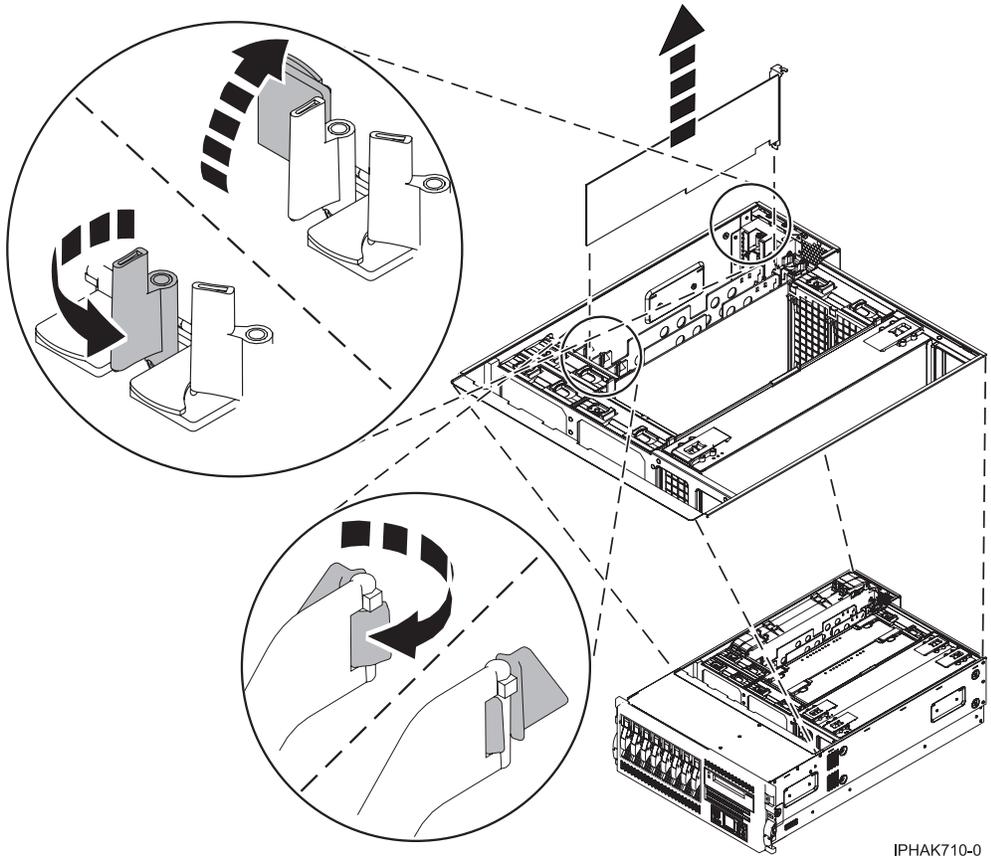


Figure 144. PCI adapter removed from the rack-mounted unit

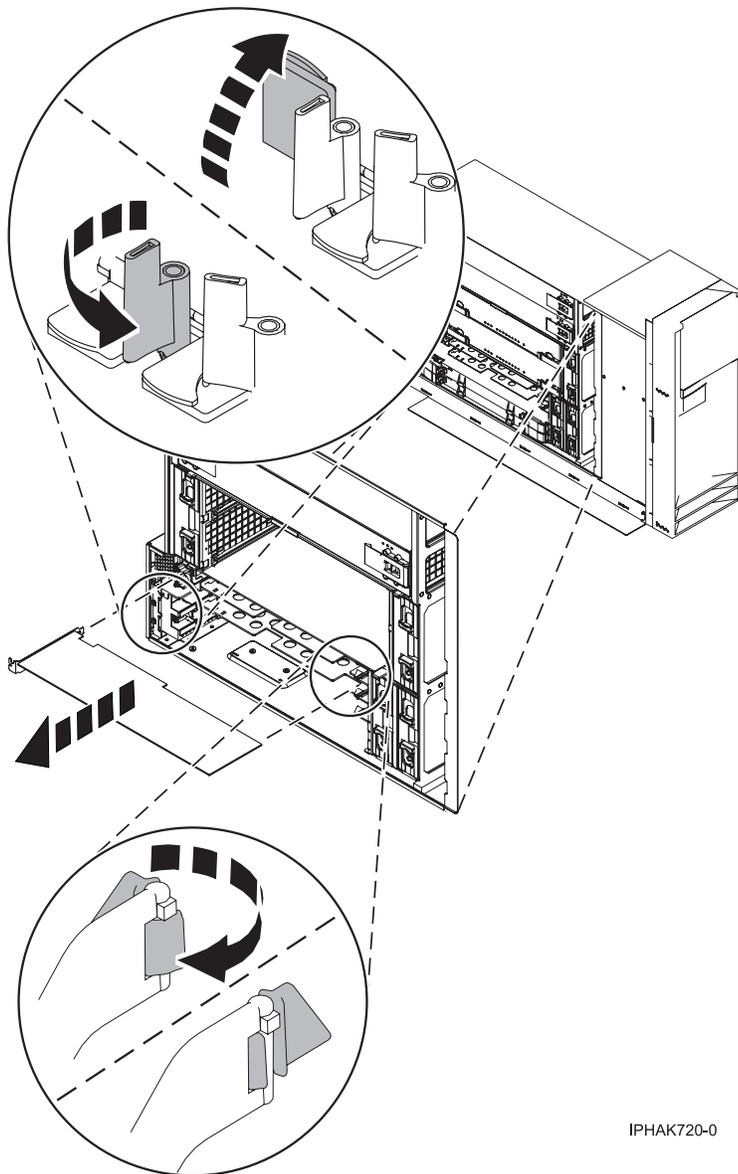

IPHAK720-0

Figure 145. PCI adapter removed from the stand-alone unit

23. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
24. Seal the expansion slot using an expansion-slot cover.
25. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.

Related information

- [Installing a feature using the Hardware Management Console](#)
- [Logical partitioning](#)

Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in Linux

You can remove a PCI adapter with the system power on in Linux.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for removing a PCI adapter.

To remove a PCI adapter with the system power on in Linux, do the following steps:

1. Ensure that the system meets the “Prerequisites for hot-plugging PCI adapters in Linux” on page 256.
2. Verify that the Linux, hot-plug PCI tools are installed. See “Verify that the Linux, hot-plug PCI tools are installed” on page 256.
3. Perform the prerequisite tasks described in “Before you begin” on page 246.
4. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
5. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
6. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.
 - b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
 - For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
7. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
8. Determine which adapter you plan to remove, then label and disconnect all cables attached to that adapter.
9. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system.

10. Label, and then disconnect all cables attached to the adapter you plan to remove.

Note: Before performing a PCI hot-plug removal of storage devices, ensure file systems on those devices are unmounted.


11. Run the `drslot_chrp_pci` command to enable an adapter to be removed:

For example, to remove the PCI adapter in slot U7879.001.DQD014E-P1-C3, run this command:

```
drslot_chrp_pci -r -s U7879.001.DQD014E-P1-C3
```


Follow the instructions on the display to complete the task.

12. Rotate the adapter locking latch **(A)** counterclockwise as shown in the following figures.
13. Lift the black tab **(B)** attached to the adapter retainer assembly, and keep the black tab in a vertical position.
14. Carefully grasp the PCI adapter by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.

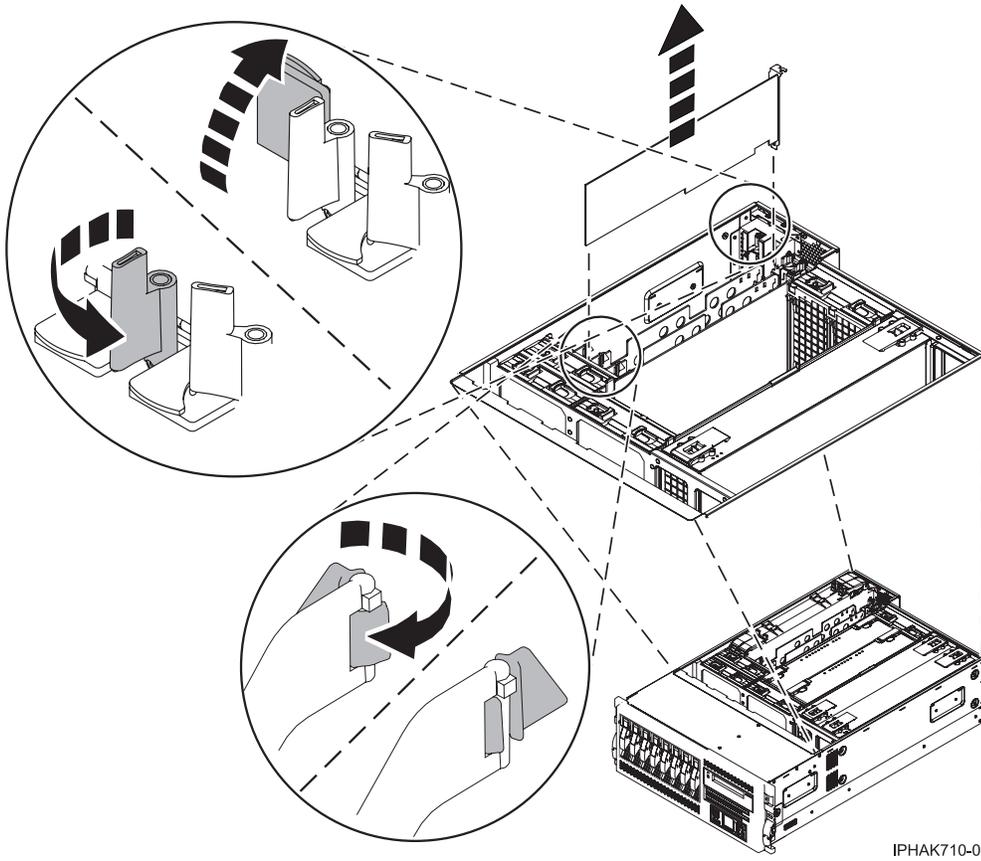

IPHAK710-0

Figure 146. PCI adapter removed from the rack-mounted unit

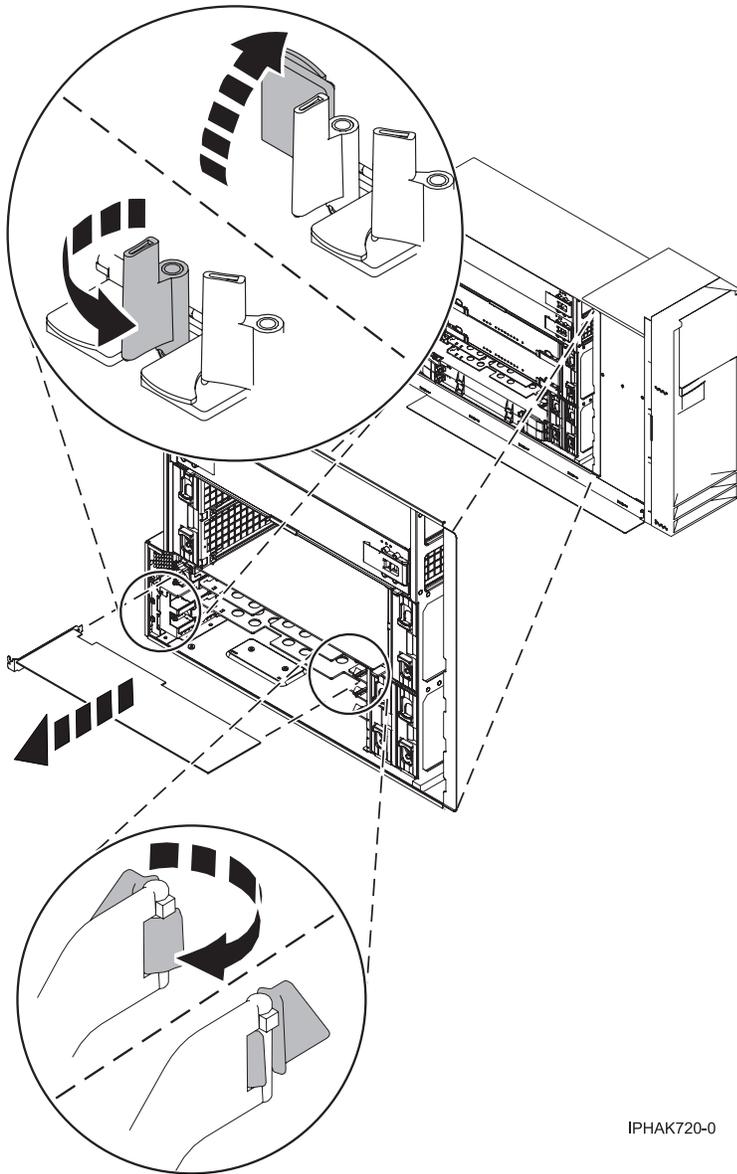

IPHAK720-0

Figure 147. PCI adapter removed from the stand-alone unit

15. If you are removing a PCI adapter as part of another procedure, return to that procedure. If not, continue to the next step.
16. If you plan to install another adapter into the vacated slot, go to “Replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in Linux” on page 243; otherwise, continue with the next step.
17. Seal the expansion slot using an expansion-slot cover.
18. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
19. Reconnect the power source to the system.
20. Start the system or logical partition. Refer to Start the system or logical partition.
21. To replace the PCI adapter, see “Replacing a PCI adapter in an expansion unit that does not use cassettes” on page 230.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Replacing a PCI adapter in an expansion unit that does not use cassettes

You can replace a PCI adapter in an expansion unit that does not use cassettes.

Replacing a PCI adapter in an expansion unit that does not use cassettes, with the power off

You can replace a PCI adapter with the power off.

You must have already completed the procedure “Removing a PCI adapter in an expansion unit that does not use cassettes, with the power off” on page 216 in order to have the slot powered off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

To replace a PCI adapter with the system power off, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Place the adapter, component-side up, on a flat, static-protective surface.
5. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
6. Press the adapter firmly into its connector.


Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

7. Lower the tab onto the PCI adapter faceplate. Rotate the adapter locking latches clockwise as shown in the following figures.

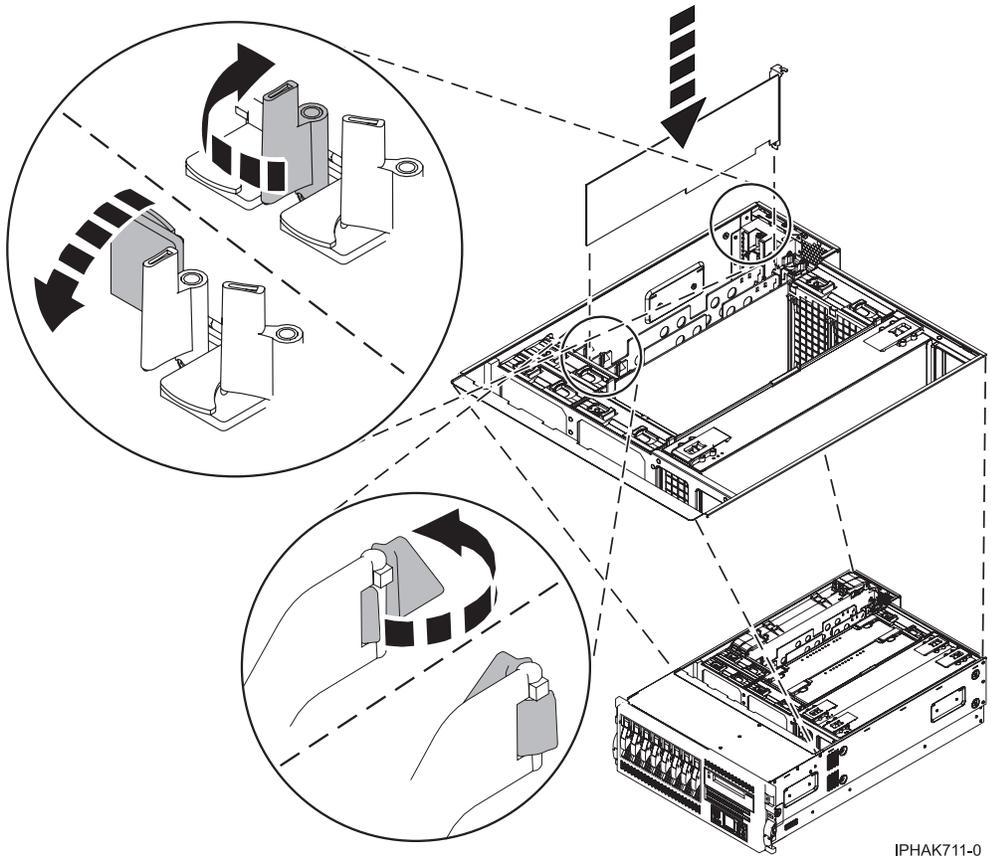

IPHAK711-0

Figure 148. PCI adapter replaced in the rack-mounted unit

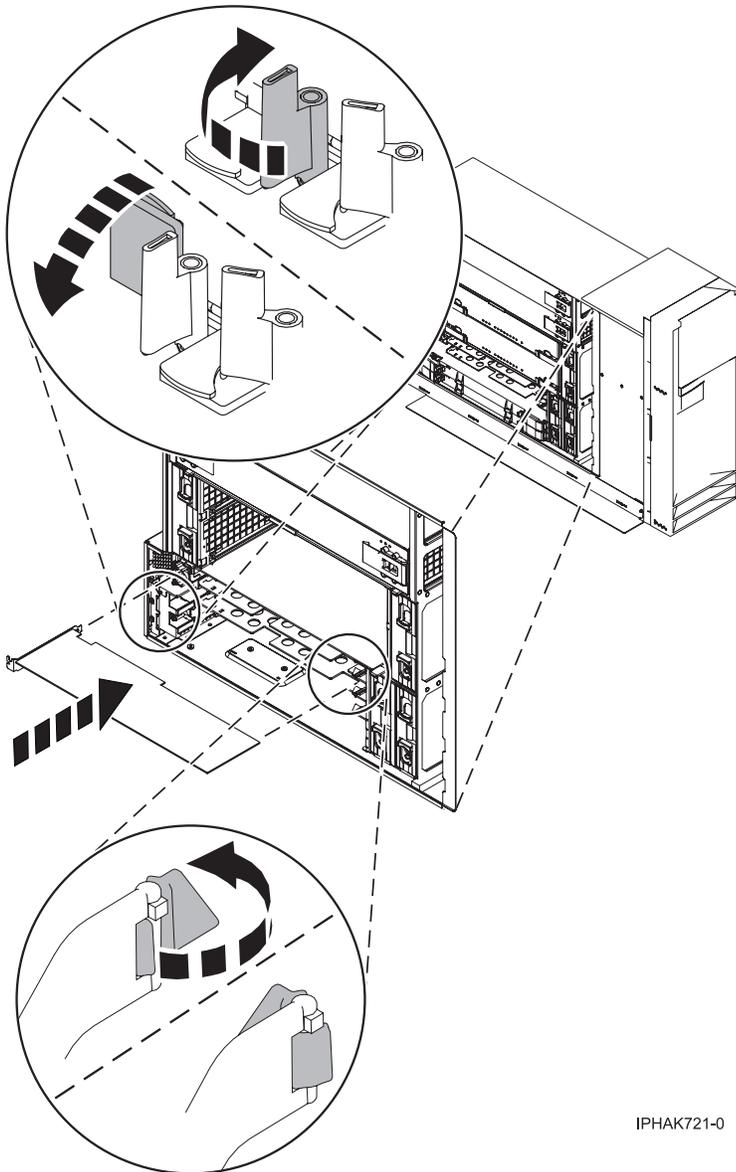

IPHAK721-0

Figure 149. PCI adapter replaced in the stand-alone unit

8. Connect the adapter cables.
9. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
10. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
11. Reconnect the power source to the system.
12. Start the system or logical partition. Refer to Start the system or logical partition
13. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Removing and replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX

You can replace a PCI adapter with the system power on in AIX.

Read the following notes to determine if this is the correct procedure for the task to be performed.

Note:

1. If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.
2. Use this procedure if you intend to remove a failing PCI adapter and replace it with the same type of adapter.
3. If you plan to remove a failing adapter and leave the slot empty, see “Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX” on page 219.
4. This procedure should not be used to remove an existing adapter and install a different type of adapter. To install a different adapter, remove the existing adapter as described in “Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX” on page 219, then install the new adapter as described in “Removing and replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in AIX.”
5. Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To replace a PCI adapter with the system power on in AIX, do the following steps:


1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If you are removing a failing PCI adapter, see Identifying a failing part. If you are removing the PCI adapter for other reasons, continue to the next step.
4. If you are installing, removing, or replacing a PCI adapter in a rack-mounted system or expansion unit, follow these steps to remove the service access cover. If you are servicing a stand-alone system, go to the next numbered step.
 - For the 0595, 5095, or D20 expansion unit, follow these steps:
 - a. Open the front rack door.
 - b. Place the system or expansion unit in the service position.
 - c. Remove or open the service access cover.
 - For all other rack-mounted expansion units, follow these steps:
 - a. Open the back rack door.
 - b. Remove the cover or covers.
5. If you are installing a PCI adapter in a stand-alone expansion unit, remove the back door.
6. Determine which adapters you plan to remove.
7. Record the slot number and location of each adapter being removed.

Note: Adapter slots are numbered on the rear of the system unit.

8. Ensure that any processes or applications that might use the adapter are stopped.
9. Enter the system diagnostics by logging in as root user or as the celogin user, type **diag** at AIX command line.
10. When the DIAGNOSTIC OPERATING INSTRUCTIONS menu displays, press Enter.
11. At the FUNCTION SELECTION menu, select **Task Selection**, then press enter.
12. At the Task Selection list, select **PCI Hot Plug Manager**.
13. Select **Unconfigure a Device**, then press Enter.
14. Press F4 (or Esc +4) to display the **Device Names** menu.
15. Select the adapter you are removing in the **Device Names** menu.
16. Use the Tab key to answer YES to **Keep Definition**. Use the Tab key again to answer YES to **Unconfigure Child Devices**, then press Enter. The **ARE YOU SURE** screen displays.
17. Press Enter to verify the information. Successful unconfiguration is indicated by the OK message displayed next to the Command field at the top of the screen.
18. Press F3 (or Esc +3) twice to return to the **Hot Plug Manager** menu.
19. Select **replace/remove PCI Hot Plug adapter**.
20. Select the slot that has the device to be removed from the system.
21. Select **replace**.


Note: A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.

22. Press Enter. This places the adapter in the action state, meaning it is ready to be removed from the system.
23. Label, and then disconnect all cables attached to the adapter you plan to remove.
24. Rotate the adapter locking latch counterclockwise.
25. Lift the black tab attached to the adapter retainer assembly, and keep the black tab in a vertical position.
26. Carefully grasp the PCI adapter by its top edge or upper corners, and remove it from the system. Store the adapter in a safe place.

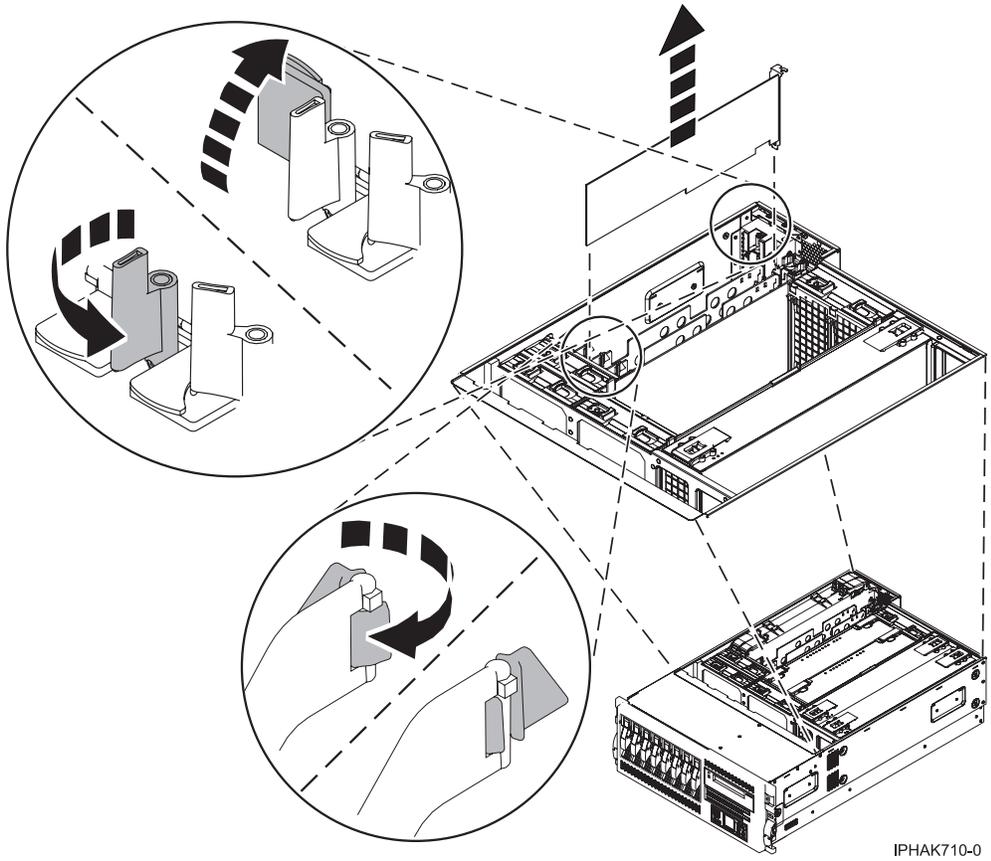

IPHAK710-0

Figure 150. PCI adapter removed from the rack-mounted unit

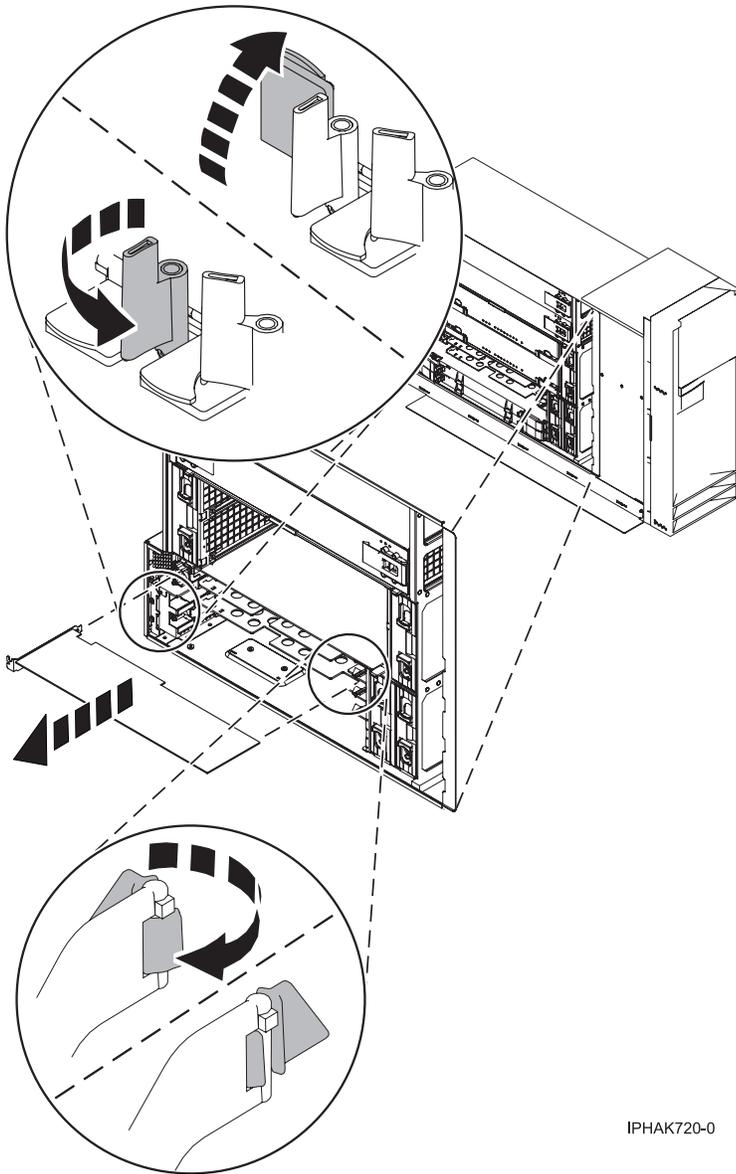

IPHAK720-0

Figure 151. PCI adapter removed from the stand-alone unit


27. If necessary, remove the replacement adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

28. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
29. Press the adapter firmly into its connector.


Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

30. Secure the adapter Lower the tab onto the PCI adapter faceplate. Rotate the adapter locking latches clockwise as shown in the following figures.

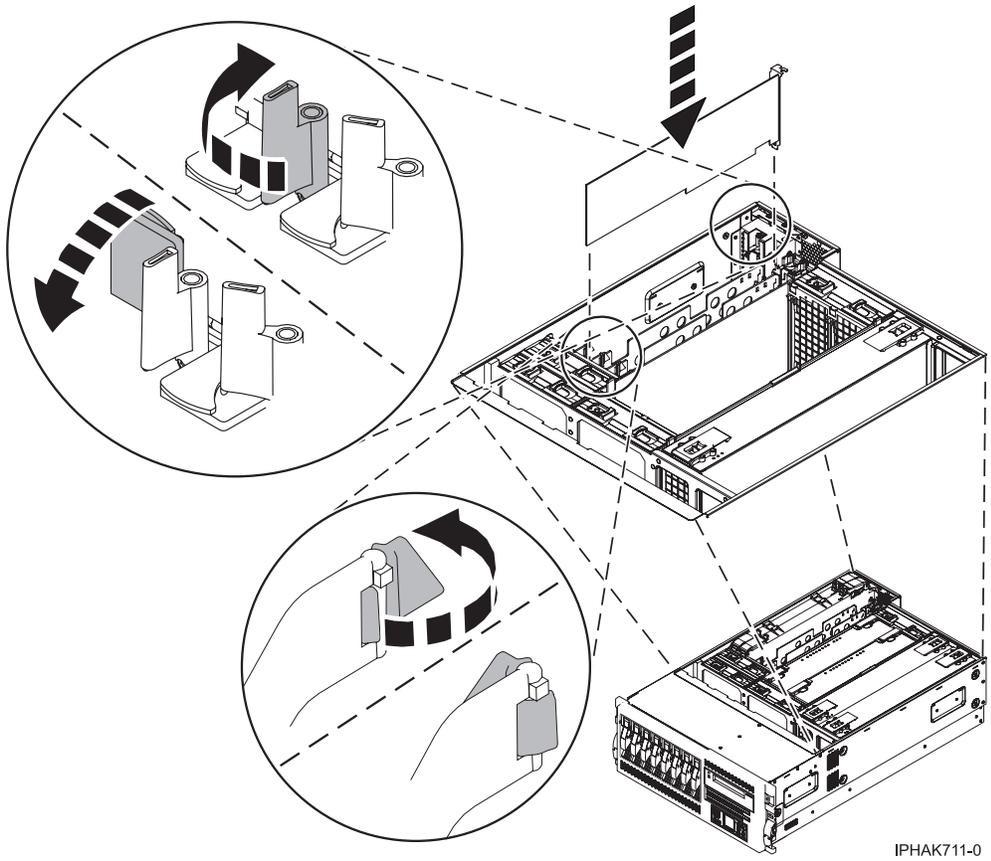

IPHAK711-0

Figure 152. PCI adapter replaced in the rack-mounted system unit

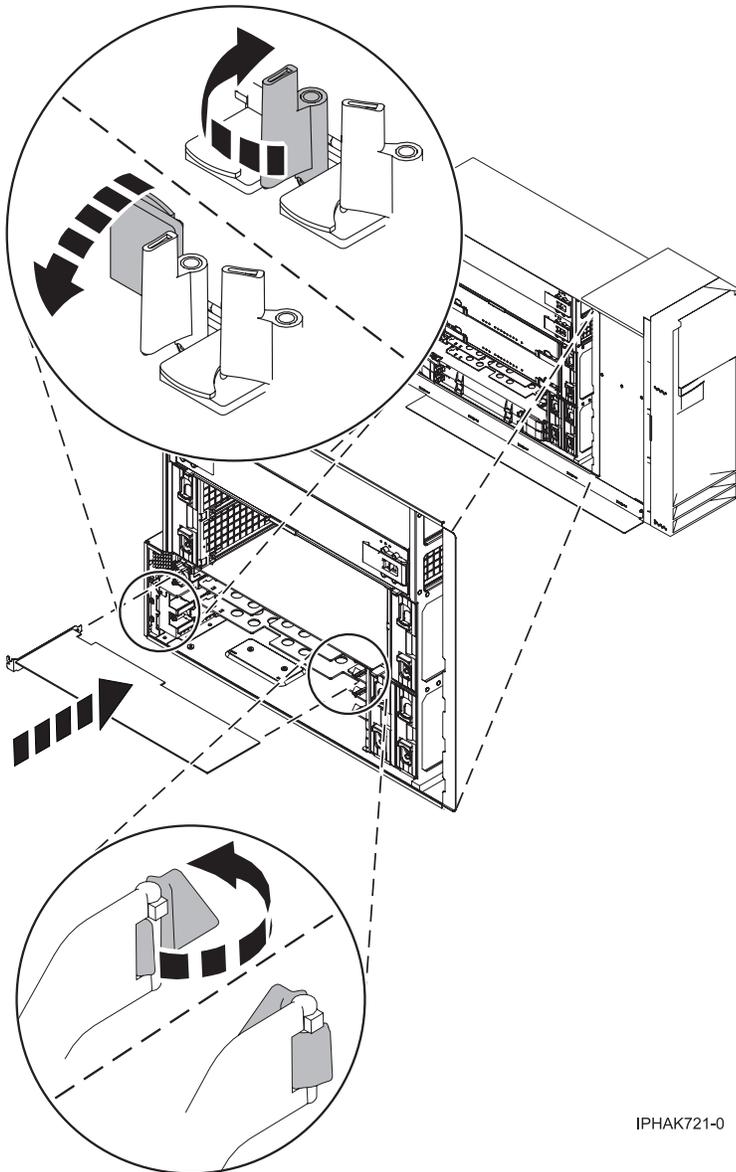

IPHAK721-0

Figure 153. PCI adapter replaced in the stand-alone system unit

31. Connect the adapter cables.
32. Press enter and continue to follow the instructions in the system diagnostics until you receive a message that the replacement is successful. Successful replacement is indicated by the OK message displayed next to the **Command** field at the top of the menu.
33. Press the F3 (or Esc+3) key to return to the **PCI Hot-Plug Manager** menu.
34. Press the F3 (or Esc+3) key to return to the **TASK** selection list.
35. Select **Log Repair Action**.
36. Select the resource just replaced, press Enter, press Commit (F7 or ESC 7), then press Enter.
37. Press F3 (or Esc+3) to return to **TASK Selection List**.
38. Select **Hot Plug Task**, press enter.
39. Select **PCI Hot Plug Manager**, then select **Configure a defined device**, then press Enter.
40. Select the device just replaced from the list, then press Enter. The device is now configured.
41. Press the F10 key to exit the diagnostic program.

Note: If you are running the stand-alone diagnostics, do not exit the program completely.

42. Verify the PCI adapter by using the following instructions:
 - a. Did you replace the adapter with the system power on?
 - Yes - Go to the next step.
 - No - Load the diagnostic program by doing the following:
 - If AIX is available, boot AIX, log in as root or CELOGIN, then enter the **diag** command.
 - If AIX is not available, boot the stand-alone diagnostics
 - b. Type the **diag** command if you are not already displaying the diagnostic menus
 - c. Select **Advance Diagnostic Routines**, then select **Problem Determination**.
 - d. Select the name of the resource just replaced from the menu. If the resource just replaced is not shown, choose the resource associated with it. Press Enter, then press **Commit** ((F7 or Esc+7)).
 - e. Did the Problem Determination identify any problems?
 - No: Continue to the next step.
 - Yes: A problem is identified
 - If you are a customer, record the error information, then contact your service provider.
 - If you are an authorized service provider, return to map 210-5.
43. Press the F10 key to exit the diagnostic program.
44. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
45. Verify that the new resource is functional. See Verify the installed part.

Related information

 Installing a feature using the Hardware Management Console

 Logical partitioning

Replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in IBM i

You can replace a PCI adapter with the system power on in the i operating system.

Attention: You must have already completed the procedure “Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in IBM i” on page 223 in order to have the slot powered off.

If your system is managed by the Hardware Management Console (HMC), use the HMC to complete the steps for replacing a PCI adapter.

Important:

- If the adapter is the load source IOA or the load source IOP, or any other storage IOA or IOP with critical DASD attached for the system/partition, follow the on-screen instructions when you use HSM to power down the IOP or IOA. Instructions to use functions 68 and 69 on the control panel will be included.
- If the adapter is the console IOA or the console IOP for the system or partition, you must perform the maintenance from an IBM i operating system session connected through a different IOA or IOP, or you must power down the partition to perform maintenance.
- If you are removing, installing or replacing a PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller, you must follow the special instructions in the PCI-X double-wide, quad-channel Ultra320 SCSI RAID controller (FC 5739, 5778, 5781, 5782) (CCIN 571F, 575B) topic, before proceeding with the instructions provided here.

- If you are exchanging a 2766, 2787, or 280E Fibre Channel IOA, the external storage subsystem must be updated to use the worldwide port name of the new 2766, 2787, or 280E IOA. For instructions, see “Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.” on page 258.
- If you are replacing a 2748, 2757, 2763, 2767, 2778, 2780, 2782, 5702, 5703, 5709, or 570B storage IOA, take note of the following: Depending on the configuration of the system, the storage IOA may have been altered or the storage IOA cache may have been disabled to allow the attachment of OEM storage that emulates a load source drive. If you are replacing a storage IOA that has its cache disabled, configure the replacement IOA the same way as the IOA that you removed. If you remove hardware from the replacement IOA, return that hardware with the failed IOA.

To replace a PCI adapter with the system power on in the i operating system, do the following steps:


1. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
2. Perform the prerequisite tasks described in “Before you begin” on page 246.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
5. Press the adapter firmly into its connector.


Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

6. Secure the adapter. Lower the tab onto the PCI adapter faceplate. Rotate the adapter locking latches clockwise as shown in the following figures.

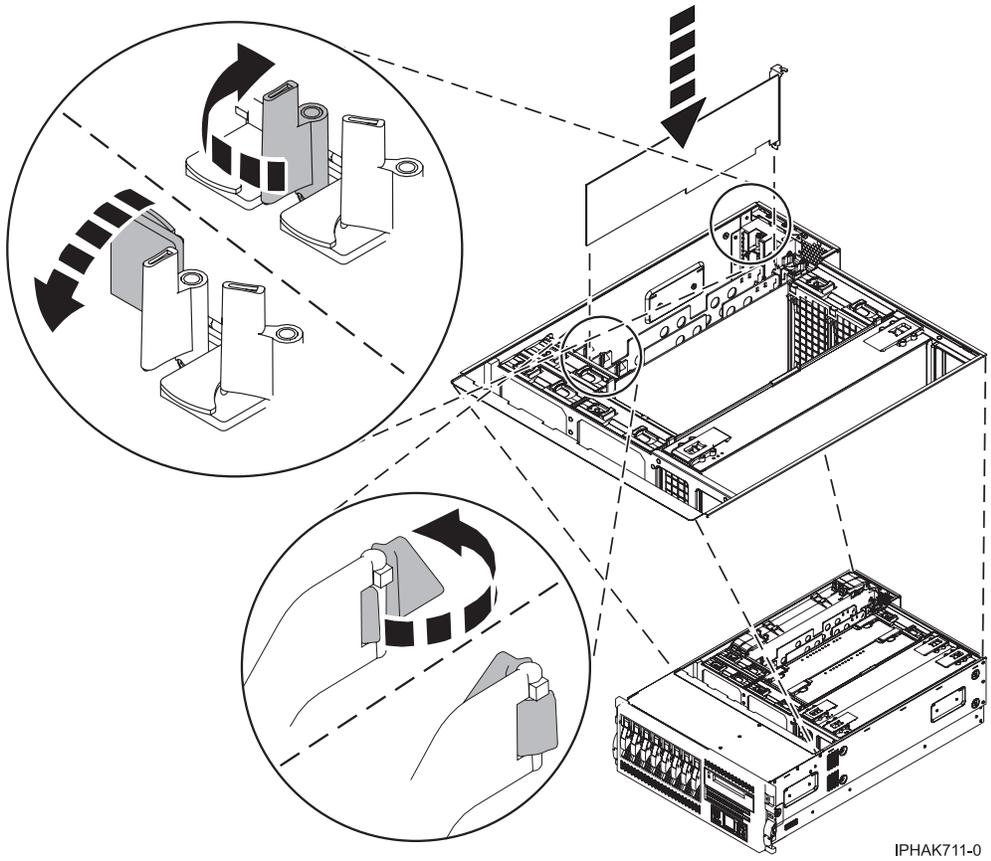

IPHAK711-0

Figure 154. PCI adapter replaced in the rack-mounted unit

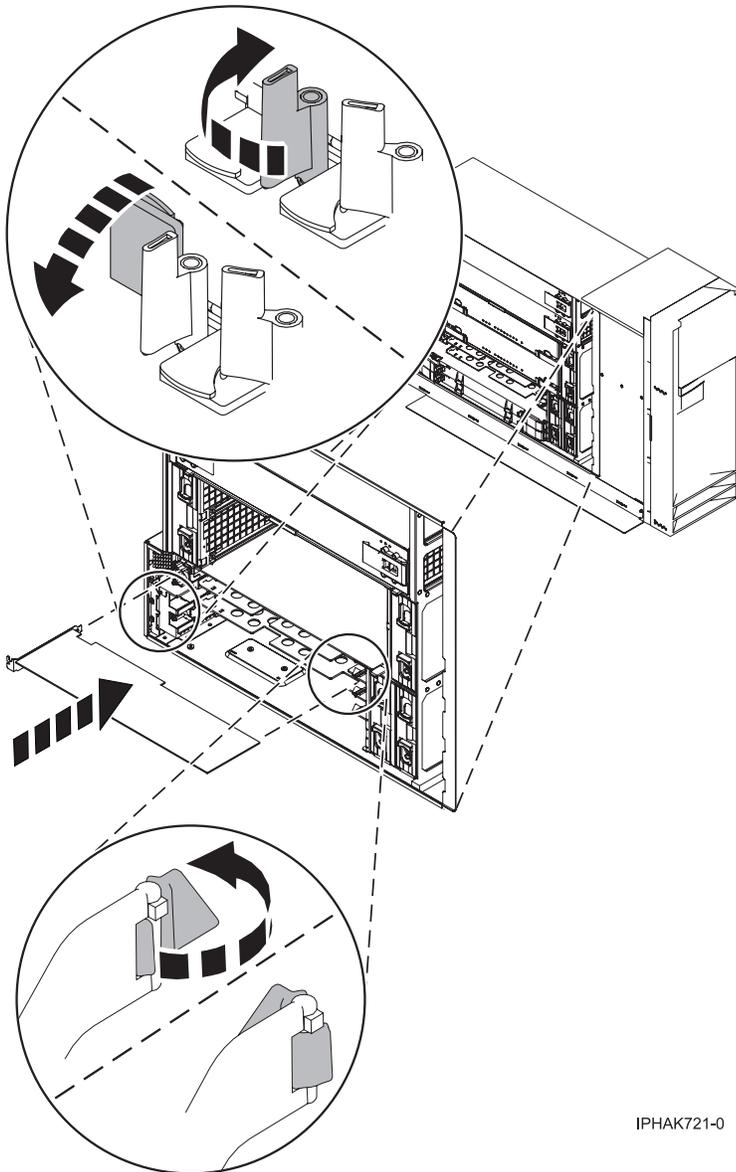

IPHAK721-0

Figure 155. PCI adapter replaced in the stand-alone unit

7. Connect the adapter cables.
8. Select **Power on domain** on the Hardware Resource Concurrent Maintenance display and press Enter.
9. Select **Assign to** on the resource that has an asterisk (*) on the Work with Controlling Resource display. Press Enter.
10. Wait for the Hardware Resource Concurrent Maintenance display to appear with this message:
Power on complete
11. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
12. Verify that the new resource is functional. See Verify the installed part.

Related information

-  Installing a feature using the Hardware Management Console
-  Logical partitioning

Replacing a PCI adapter in an expansion unit that does not use cassettes, with the power on in Linux

You can replace a PCI adapter with the system power on in Linux.

You must have already completed the procedure “Removing a PCI adapter in an expansion unit that does not use cassettes, with the power on in Linux” on page 226.

To replace a PCI adapter with the system power on in Linux, do the following steps:

1. Perform the prerequisite tasks described in “Before you begin” on page 246.
2. Take appropriate precautions for avoiding electric shock and handling static-sensitive devices. For information, see “Avoiding electric shock” on page 248 and “Handling static-sensitive devices” on page 249.
3. If necessary, remove the adapter from the antistatic package.

Attention: Avoid touching the components and gold connectors on the adapter.

4. Place the adapter, component-side up, on a flat, static-protective surface.
5. Run the `drs1ot_chrp_pci` command to enable an adapter to be replaced:
For example, to replace the PCI adapter in slot U7879.001.DQD014E-P1-C3 run this command:

```
drs1ot_chrp_pci -R -s U7879.001.DQD014E-P1-C3
```



Follow the instructions on the display to complete the task.
6. Press the adapter firmly into its connector.

Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

7. Carefully grasp the adapter by its top edge, and align the adapter with the expansion slot and its connector on the system backplane.
8. Press the adapter firmly into its connector.


Attention: When you install an adapter into the system, be sure that it is completely and correctly seated in its connector.

9. Secure the adapter. Lower the tab onto the PCI adapter faceplate. Rotate the adapter locking latches clockwise as shown in the following figures.

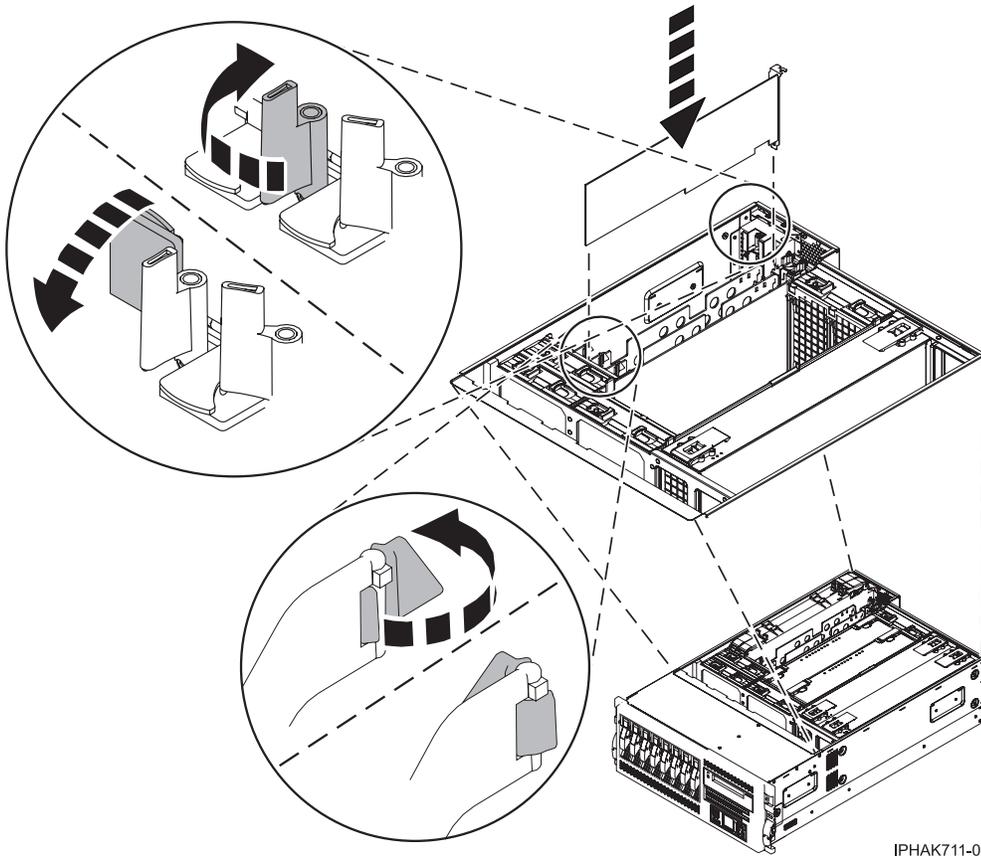

IPHAK711-0

Figure 156. PCI adapter replaced in the rack-mounted system unit

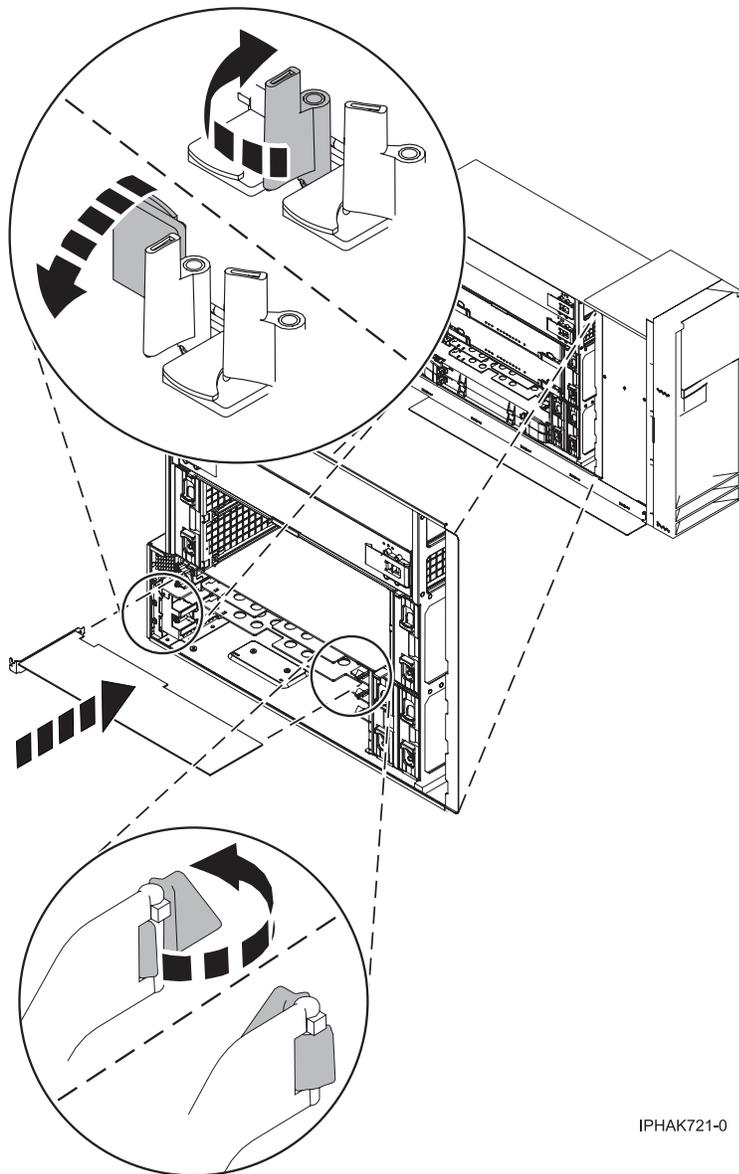

IPHAK721-0

Figure 157. PCI adapter replaced in the stand-alone system unit

10. Connect the adapter cables.
11. Run the `lsslot` command to verify that the slot is occupied.
 For example, Enter `lsslot -c pci -s U7879.001.DQD014E-P1-C3`
 The following is an example of the information displayed by this command:

# Slot	Description	Device(s)
U7879.001.DQD014E-P1-C3	PCI-X capable, 64 bit, 133MHz slot	0001:40:01.0
12. If you are servicing a rack-mounted system, route the cables through the cable-management arm.
13. Replace or close the system covers and, if applicable, return the rack-mounted system to the operating position.
14. Start the system or logical partition. Refer to Start the system or logical partition
15. Verify that the new resource is functional. See Verify the installed part.

Related information

- 🔗 Installing a feature using the Hardware Management Console
- 🔗 Logical partitioning

Related procedures for installing and removing PCI adapters

These procedures are related to installing and removing PCI adapters.

Before you begin

Understand prerequisites for installing, removing, or replacing features and parts.

DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- Connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. Attach the power cords to the outlets.
5. Turn on the devices.

(D005)

DANGER

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

CAUTION

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

(R001)

Before you begin a replacement or installation procedure, perform these tasks:

1. If you are installing a new feature, ensure that you have the software required to support the new feature.
To do this, go to the following Web site: http://www-912.ibm.com/e_dir/eServerPrereq.nsf
2. If you are performing an installation or replacement procedure that might put your data at risk, ensure, wherever possible, that you have a current backup of your system or logical partition (including operating systems, licensed programs, and data).
3. Review the installation or replacement procedure for the feature or part.
4. Note the significance of color on your system.

Blue or terra-cotta on a part of the hardware indicates a touch point where you can grip the hardware to remove it from or install it in the system, open or close a latch, and so on. Terra-cotta might also indicate that the part can be removed and replaced with the system or logical partition power on.

5. Ensure that you have access to a medium, flat-blade screwdriver.
6. If parts are incorrect, missing, or visibly damaged, do the following:
 - If you are replacing a part, contact your service provider or next level of support.
 - If you are installing a feature, contact one of the following service organizations:
 - Your service provider or next level of support.
 - In the United States, the IBM Rochester Manufacturing Automated Information Line (R-MAIL) at 1-800-300-8751.

In countries and regions outside of the United States, use the following Web site to locate your service and support telephone numbers:

<http://www.ibm.com/planetwide>

7. If you encounter difficulties during the installation, contact your service provider, your IBM reseller, or your next level of support.
8. If you are installing new hardware in a logical partition, you need to understand and plan for the implications of partitioning your system. For information, see Logical Partitioning.

Avoiding electric shock

Learn about precautions you should take to avoid electric shock when working on our around a computer system.

DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- Connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. Attach the power cords to the outlets.
5. Turn on the devices.

(D005)

Handling static-sensitive devices

Learn about precautions you should take to prevent damage to electronic components from static electricity discharge.

Electronic boards, adapters, media drives, and disk drives are sensitive to static electricity discharge. These devices are wrapped in antistatic bags to prevent this damage. Take the following precautions to prevent damage to these devices from static electricity discharge.

- Attach a wrist strap to an unpainted metal surface of your hardware to prevent electrostatic discharge from damaging your hardware.
- When using a wrist strap, follow all electrical safety procedures. A wrist strap is for static control. It does not increase or decrease your risk of receiving electric shock when using or working on electrical equipment.
- If you do not have a wrist strap, just prior to removing the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of 5 seconds.
- Do not remove the device from the antistatic bag until you are ready to install the device in the system.
- With the device still in its antistatic bag, touch it to the metal frame of the system.

- Grasp cards and boards by the edges. Avoid touching the components and gold connectors on the adapter.
- If you need to lay the device down while it is out of the antistatic bag, lay it on the antistatic bag. Before picking it up again, touch the antistatic bag and the metal frame of the system at the same time.
- Handle the devices carefully to prevent permanent damage.

Installing or replacing a PCI adapter with the system power on in Virtual I/O Server

You can install or replace a PCI adapter in the Virtual I/O Server logical partition or in the Integrated Virtualization Manager management partition.

The Virtual I/O Server includes a PCI Hot Plug Manager that is similar to the PCI Hot Plug Manager in the AIX operating system. The PCI Hot Plug Manager allows you to hot plug PCI adapters into the server and then activate them for the logical partition without having to reboot the system. Use the PCI Hot Plug Manager for adding, identifying, or replacing PCI adapters in the system that are currently assigned to the Virtual I/O Server.

Getting started

Prerequisites:

- If you are installing a new adapter, an empty system slot must be assigned to the Virtual I/O Server logical partition. This task can be done through dynamic logical partitioning (DLPAR) operations.
 - If you are using a Hardware Management Console (HMC), you must also update the logical partition profile of the Virtual I/O Server so that the new adapter is configured to the Virtual I/O Server after you restart the system.
 - If you are using the Integrated Virtualization Manager, an empty slot is probably already assigned to the Virtual I/O Server logical partition because all slots are assigned to the Virtual I/O Server by default. You only need to assign an empty slot to the Virtual I/O Server logical partition if you previously assigned all empty slots to other logical partitions.
- If you are installing a new adapter, ensure that you have the software required to support the new adapter and determine whether there are any existing PTF prerequisites to install. To do this, use the IBM Prerequisite Web site at http://www-912.ibm.com/e_dir/eServerPrereq.nsf 
- If you need help determining the PCI slot in which to place a PCI adapter, see the PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.

Follow these steps to access the Virtual I/O Server, PCI Hot Plug Manager:

1. If you are using the Integrated Virtualization Manager, connect to the command-line interface.
2. Use the **diagmenu** command to open the Virtual I/O Server diagnostic menu. The menus are similar to the AIX diagnostic menus.
3. Select **Task Selection**, then press Enter.
4. At the Task Selection list, select **PCI Hot Plug Manager**.

Installing a PCI adapter

To install a PCI adapter with the system power on in Virtual I/O Server, do the following steps:

1. From the PCI Hot Plug Manager, select **Add a PCI Hot Plug Adapter**, then press Enter. The Add a Hot-Plug Adapter window is displayed.
2. Select the appropriate empty PCI slot from those listed, and press Enter. A fast-blinking amber LED located at the back of the server near the adapter indicates that the slot has been identified.
3. Follow the instructions on the screen to install the adapter until the LED for the specified PCI slot is set to the Action state. The adapter installation is performed the same as in a stand-alone AIX logical partition and includes the following sequence of events:

- a. Set the adapter LED to the action state so that the indicator light for the adapter slot flashes
 - b. Physically install the adapter
 - c. Finish the adapter installation task in **diagmenu**.
4. Run the **cfgdev** command to configure the device for the Virtual I/O Server.

If you are installing a PCI, Fibre Channel adapter, it is now ready to be attached to a SAN and have LUNs assigned to the Virtual I/O Server for virtualization.

Replacing a PCI Adapter

Prerequisite: Before you can remove or replace a storage adapter, you must unconfigure that adapter. See “Unconfiguring storage adapters” for instructions.

To replace a PCI adapter with the system power on in Virtual I/O Server, do the following steps:

1. From the PCI Hot Plug Manager, select **Unconfigure a Device**, then press Enter.
2. Press F4 (or Esc +4) to display the **Device Names** menu.
3. Select the adapter you are removing in the **Device Names** menu.
4. In the **Keep Definition** field, use the Tab key to answer Yes. In the **Unconfigure Child Devices** field, use the Tab key again to answer YES, then press Enter.
5. Press Enter to verify the information on the **ARE YOU SURE** screen. Successful unconfiguration is indicated by the OK message displayed next to the Command field at the top of the screen.
6. Press F4 (or Esc +4) twice to return to the Hot Plug Manager.
7. Select **replace/remove PCI Hot Plug adapter**.
8. Select the slot that has the device to be removed from the system.
9. Select **replace**. A fast-blinking amber LED located at the back of the machine near the adapter indicates that the slot has been identified.
10. Press Enter which places the adapter in the action state, meaning it is ready to be removed from the system.

Unconfiguring storage adapters

Before you can remove or replace a storage adapter, you must unconfigure that adapter. Storage adapters are generally parent devices to media devices, such as disk drives or tape drives. Removing the parent requires that all attached child devices either be removed or placed in the define state.

Unconfiguring a storage adapter involves the following tasks:

- Closing all applications that are using the adapter you are removing, replacing, or moving
- Unmounting file systems
- Ensuring that all devices connected to the adapter are identified and stopped
- Listing all slots that are currently in use or a slot that is occupied by a specific adapter
- Identifying the adapter’s slot location
- Making parent and child devices unavailable
- Making the adapter unavailable

If the adapter supports physical volumes that are in use by a client logical partition, then You can perform steps on the client logical partition before unconfiguring the storage adapter. For instructions, see “Preparing the client logical partitions” on page 252. For example, the adapter might be in use because the physical volume was used to create a virtual target device, or it might be part of a volume group used to create a virtual target device.

Follow these steps to unconfigure SCSI, SSA, and Fibre Channel storage adapters:

1. Connect to the Virtual I/O Server command-line interface.
2. Use the `oem_setup_env` command to close all applications that are using the adapter you are unconfiguring.
3. Type `lsslot-c pci` to list all the hot plug slots in the system unit and display their characteristics.
4. Type `lsdev -C` to list the current state of all the devices in the system unit.
5. Type `umount` to unmount previously mounted file systems, directories, or files using this adapter.
6. Type `rmdev -l adapter -R` to make the adapter unavailable.

Attention: Do not use the `-d` flag with the `rmdev` command for hot plug operations because this action removes your configuration.

Preparing the client logical partitions

If the virtual target devices of the client logical partitions are not available, the client logical partitions can fail or they might be unable to perform I/O operations for a particular application. If you use the HMC to manage the system, you might have redundant Virtual I/O Server logical partitions, which allow for Virtual I/O Server maintenance and avoid downtime for client logical partitions. If you are replacing an adapter on the Virtual I/O Server and your client logical partition is dependent on one or more of the physical volumes accessed by that adapter, then You can take action on the client before you unconfigure the adapter.

The virtual target devices must be in the define state before the Virtual I/O Server adapter can be replaced. Do not remove the virtual devices permanently.

To prepare the client logical partitions so that you can unconfigure an adapter, complete the following steps depending on your situation.

Table 1. Situations and steps for preparing the client logical partitions

Situation	Steps
You have redundant hardware on the Virtual I/O Server for the adapter.	No action is required on the client logical partition.
HMC-managed systems only: You have redundant Virtual I/O Server logical partitions that, in conjunction with virtual client adapters, provide multiple paths to the physical volume on the client logical partition.	No action is required on the client logical partition. However, path errors might be logged on the client logical partition.
HMC-managed systems only: You have redundant Virtual I/O Server logical partitions that, in conjunction with virtual client adapters, provide multiple physical volumes that are used to mirror a volume group.	See the procedures for your client operating system. For example, for AIX, see Replacing a disk on the Virtual I/O Server in the IBM System p Advanced POWER® Virtualization Best Practices Redpaper. The procedure for Linux is similar to this procedure for AIX.
You do not have redundant Virtual I/O Server logical partitions.	Shut down the client logical partition. For instructions, see the following topics about shutting down logical partitions: <ul style="list-style-type: none"> • For systems that are managed by the HMC, see “Shutting down AIX logical partitions using the HMC”, “Shutting down IBM i logical partitions using the HMC”, and “Shutting down Linux logical partitions using the HMC” in the Logical partitioning.¹ • For systems that are managed by the Integrated Virtualization Manager, see “Shutting down logical partitions” on page 253.

¹The Logical partitioning can be found on the Hardware Information Web site at

http://publib.boulder.ibm.com/infocenter/systems/scope/hw/topic/iphdx/power_systems.htm 

Shutting down logical partitions

You can use the Integrated Virtualization Manager to shut down the logical partitions or to shut down the entire managed system.

Use any role other than View Only to perform this task.

The Integrated Virtualization Manager provides the following types of shutdown options for logical partitions:

- Operating System (recommended)
- Delayed
- Immediate

The recommended shutdown method is to use the client operating systems shutdown command. Use the immediate shutdown method only as a last resort because using this method causes an abnormal shutdown which might result in data loss.

If you choose the Delayed shutdown method, then be aware of the following considerations:

- Shutting down the logical partitions is equivalent to pressing and holding the white control-panel power button on a server that is not partitioned.
- Use this procedure only if you cannot successfully shut down the logical partitions through operating system commands. When you use this procedure to shut down the selected logical partitions, the logical partitions wait a predetermined amount of time to shut down. This allows the logical partitions time to end jobs and write data to disks. If the logical partition is unable to shut down within the predetermined amount of time, it ends abnormally, and the next restart might take a long time.

If you plan to shut down the entire managed system, shut down each client logical partition, then shut down the Virtual I/O Server management partition.

To shut down a logical partition, complete the following steps in the Integrated Virtualization Manager:

1. In the navigation area, select **View/Modify Partitions** under **Partition Management**. The View/Modify Partitions page is displayed.
2. Select the logical partition that you want to shut down.
3. From the Tasks menu, click **Shutdown**. The Shutdown Partitions page is displayed.
4. Select the shutdown type.
5. Optional: Select **Restart after shutdown completes** if you want the logical partition to start immediately after it shuts down.
6. Click **OK** to shut down the partition. The View/Modify Partitions page is displayed, and the logical partition state has a value of shut down.

PCI hot-plug manager access for AIX

You might need to service PCI adapters with the system power on in AIX. Use the procedures in this section to perform this task.

The instructions for servicing PCI adapters with the system power on in AIX refer you to these procedures when it is appropriate to perform them.

Note: For an adapter to be serviced with the system power on, both the adapter and the system unit must support hot-plug procedures. To identify adapters that are hot-pluggable in the system you are servicing, refer to the following placement information: PCI adapter placement for machine types 82xx and 91xx or the PCI adapter placement for machine type 94xx.

Accessing hot-plug management functions

You can use PCI Hot Plug Manager to service PCI adapters with the system power on in AIX. Use the procedures in this section to perform this task.

Note: Procedures performed on a PCI adapter with the system power on in AIX, also known as hot-plug procedures, require the system administrator to take the PCI adapter offline prior to performing the operation. Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

To access the hot-plug menus, do the following:

1. Log in as root user.
2. At the command line, type `smitty`.
3. Select **Devices**.
4. Select **PCI Hot Plug Manager** and press Enter.
5. The PCI Hot-Plug Manager menu displays. Return to the procedure that directed you here. The following section describes the menu options.

PCI hot-plug manager menu

You can use PCI Hot Plug Manager to service PCI adapters with the system power on in AIX. The following options are available from the PCI Hot Plug Manager menu.

Note: For information about the PCI slot LED states, see “Component LEDs” on page 255.

List PCI hot-plug slots

Provides a descriptive list of all slots that support PCI hot-plug capability. If the listing for a slot indicates it holds an “Unknown” device, select the **Install/configure Devices added after IPL** to configure the adapter in that slot.

Add a PCI hot-plug adapter

Allows the user to add a new PCI hot-plug-capable adapter to the slot with the system turned on. You will be asked to identify the PCI slot that you have selected prior to the actual operation. The selected PCI slot will go into the Action state and finally into the On state.

Note: The system will indicate the slot holds an “Unknown” device until you perform the **Install/configure devices added after IPL** option to configure the adapter.

Replace/remove a PCI hot-plug adapter

Allows the user to remove an existing adapter, or replace an existing adapter with an identical one. For this option to work, the adapter must be in the Defined state (see the “Unconfigure a Device” option).

You will be asked to identify the PCI slot prior to the actual operation. The selected PCI slot will go into the Action state.

Identify a PCI hot-plug slot

Allows the user to identify a PCI slot. The selected PCI slot will go into the Identify state. See “Component LEDs” on page 255.

Unconfigure a device

Allows the user to put an existing PCI adapter into the Defined state if the device is no longer in use.

This step must be completed successfully before starting any removal or replacement operation. If this step fails, the customer must take action to release the device.

Configure a defined device

Allows a new PCI adapter to be configured into the system if software support is already available for the adapter. The selected PCI slot will go into the On state.

Install/configure devices added after IPL

The system attempts to configure any new devices and tries to find and install any required software from a user-selected source.

The add, remove, and replace functions return information to the user indicating whether the operation was successful. If additional instructions are provided on the screen, complete the recommended actions. If the instructions do not resolve the problem, do the following:

- If the adapter is listed as Unknown, perform the **Install/configure devices Added After IPL** option to configure the adapter.
- If you receive a warning indicating that needed device packages are not installed, the system administrator must install the specified packages before you can configure or diagnose the adapter.
- If you receive a failure message indicating a hardware error, the problem might be either the adapter or the PCI slot. Isolate the problem by retrying the operation in a different PCI slot, or trying a different adapter in the slot. If you determine that you have failing hardware, call your service representative.
- *Do not* use **Install/configure devices added after IPL** if your system is set up to run HACMP™ clustering. Consult with your system administrator or software support to determine the correct method to configure the replacement device.

Component LEDs

Individual LEDs are located on or near the failing components. Use the information in this section to interpret the LEDs.

The LEDs are located either on the component itself or on the carrier of the component (for example, memory card, fan, memory module, or processor). LEDs are either green or amber.

Green LEDs indicate either of the following:

- Electrical power is present.
- Activity is occurring on a link. (The system could be sending or receiving information.)

Amber LEDs indicate a fault or identify condition. If your system or one of the components on your system has an amber LED turned on or blinking, identify the problem and take the appropriate action to restore the system to normal.

Resetting the LEDs in AIX:

Individual LEDs are located on or near the failing components. You can use this procedure to reset the LEDs after you have completed a repair action.

After the repair action is completed, do the following:

1. Log in as root user.
2. At the command line, type `diag`.
3. Select **Task Selection**.
4. Select **Log Repair Action**.

5. Select the device that was repaired.
6. Press F10 to exit diagnostics.

If the Attention LED remains on after you have completed the repair action and reset the LEDs, call for service support.

Prerequisites for hot-plugging PCI adapters in Linux

In the course of installing, removing, or replacing a PCI adapter with the system power on in Linux you might need complete some prerequisite tasks. Use the information in this section to identify those prerequisites.

The Linux, system administrator needs to take the PCI adapter offline prior to removing, replacing, or installing a PCI adapter with the system power on (hot-plugging). Before taking an adapter offline, the devices attached to the adapter must be taken offline as well. This action prevents a service representative or user from causing an unexpected outage for system users.

Before hot-plugging adapters for storage devices, ensure file systems on those devices are unmounted. After hot-plugging adapters for storage devices, ensure the file systems on those devices are remounted.

Before hot-plugging an adapter, ensure that the server or partition is at the correct level of the Linux operating system (Linux 2.6 or later).

Install the POWER Linux Service Aids. These service aids enable system serviceability, as well to improve system management.

If you are using a Linux on POWER distribution with Linux kernel version 2.6 or later, you can install the Service Aids that gives you access to more capabilities, which can help you diagnose problems on your system.

This software is available at the Service and productivity tools for Linux on POWER Web site (<http://techsupport.services.ibm.com/server/lopdiags>).

Verify that the Linux, hot-plug PCI tools are installed

In the course of installing, removing, or replacing a PCI adapter with the system power on in Linux you might need use the hot-plug PCI tools. Use the procedure in this section to verify that you have the hot-plug PCI tools installed.

1. Enter the following command to verify that the hot-plug PCI tools are installed:

```
rpm -aq | grep rpa-pci-hotplug
```

If the command does not list any rpa-pci-hotplug packages, the PCI Hot Plug tools are not installed.

2. Enter the following command to ensure that the rpaphp driver is loaded:

```
ls -l /sys/bus/pci/slots/
```

The directory should contain data. If the directory is empty, the driver is not loaded or the system does not contain hot-plug PCI slots. The following is an example of the information displayed by this command:

```
drwxr-xr-x 15 root root 0 Feb 16 23:31 .
drwxr-xr-x  5 root root 0 Feb 16 23:31 ..
drwxr-xr-x  2 root root 0 Feb 16 23:31 0000:00:02.0
drwxr-xr-x  2 root root 0 Feb 16 23:31 0000:00:02.2
drwxr-xr-x  2 root root 0 Feb 16 23:31 0000:00:02.4
drwxr-xr-x  2 root root 0 Feb 16 23:31 0001:00:02.0
drwxr-xr-x  2 root root 0 Feb 16 23:31 0001:00:02.2
drwxr-xr-x  2 root root 0 Feb 16 23:31 0001:00:02.4
drwxr-xr-x  2 root root 0 Feb 16 23:31 0001:00:02.6
```

```
drwxr-xr-x 2 root root 0 Feb 16 23:31 0002:00:02.0
drwxr-xr-x 2 root root 0 Feb 16 23:31 0002:00:02.2
drwxr-xr-x 2 root root 0 Feb 16 23:31 0002:00:02.4
drwxr-xr-x 2 root root 0 Feb 16 23:31 0002:00:02.6
```

If the directory does not exist, run the following command to mount the filesystem:

```
mount -t sysfs sysfs /sys
```

3. Ensure the following tools are available in the /usr/sbin directory.
 - lsslot
 - drslot_chrp_pci
4. Return to the procedure that sent you here.

Installing feature code 3650 or 3651 in the 9406-MMA

When you install feature code 3650 or 3651, you might find it difficult to insert and plug in the card assembly. This situation is caused by the interference of a bracket that is installed within the enclosure.

If you encounter this problem, contact IBM service and support to request removal of the bracket and installation of the feature at no charge. Removal of this bracket does not affect the functionality of the system. Only the systems in the following list might be affected.

Machine type	Model	Plant code	Serial number
9117	MMA	10	1CD7F
9117	MMA	10	1CD8F
9117	MMA	10	23C9F
9117	MMA	10	5FCEF
9117	MMA	10	629FF
9117	MMA	10	62A0F
9117	MMA	10	62A1F
9117	MMA	10	62A2F
9117	MMA	10	62B5F
9117	MMA	10	6411F
9117	MMA	10	6421F
9117	MMA	10	64BDF
9117	MMA	10	64D6F
9117	MMA	10	6512F
9117	MMA	10	6547F
9117	MMA	10	66F6F
9117	MMA	10	66F7F
9117	MMA	10	6AB0F
9117	MMA	10	6AC3F
9117	MMA	10	719FF
9117	MMA	10	85A9F
9117	MMA	10	85AAF
9117	MMA	10	85ABF
9117	MMA	10	85ACF
9117	MMA	10	85ADF

Machine type	Model	Plant code	Serial number
9117	MMA	10	85AEF
9117	MMA	10	8664F
9117	MMA	10	8693F
9117	MMA	10	86C4F
9117	MMA	10	86C5F
9117	MMA	10	8742F

Updating the worldwide port name for a new 2766, 2787, 280E, 576B, or 5774 IOA.

If you have exchanged a 2766, 2787, 280E, 576B, or 5774 Fibre Channel IOA, the IBM external storage subsystem must be updated to use the worldwide port name (WWPN) of the new 2766, 2787, 280E, 576B, or 5774 IOA. Any SAN hardware using WWPN zoning might also need updating.

For instructions on how to update the external storage subsystem or SAN hardware configurations, see the documentation for those systems.

The WWPN for the Fibre Channel IOA can be found using the Hardware Service Manager in SST or DST. Display detail on the 2766, 2787, 280E, 576B, or 5774 IOA Logical Hardware Resource information, and use the port worldwide name field.

The 16-digit WWPN can also be determined by appending the digits "1000" to the beginning of the 12-digit IEEE address found on the tailstock label of the Fibre Channel IOA.

PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller (FC 5739, 5778, 5781, 5782; CCIN 571F, 575B)

Learn about the features, specifications, and installation notes for the PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller.

The PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller is a high-performance SCSI adapter combined with an auxiliary-write cache adapter to form a double-wide, adapter pair. The two adapters are screwed together. This topic contains the following sections:

- "Features"
- "Specifications" on page 259
- "Placement information" on page 260
- "Logical partitioning" on page 260
- "Placing the adapter in a double-wide cassette" on page 260
- "Installing the cassette containing the adapter in a system" on page 260
- "Power LED" on page 260
- "Concurrent maintenance procedure" on page 261

Features

- 3 external U320 SCSI ports
- 1 internal U320 SCSI port dedicated to connecting the controller to the auxiliary-write cache adapter
- Up to 36 Direct Access Storage Devices (DASD) can be externally attached per adapter
- 320 MB/s data rate per SCSI bus
- Supports low voltage differential (LVD) disk devices only
- Supports RAID 5 and 6 (3–18 drive sets)

- 390 MB/1.5 GB compressed write cache
- 415 MB/1.6 GB compressed read cache
- PCI-X DDR support (storage adapter side)
- IOP or IOPless (5739 requires an IOP. 5778 does not.)

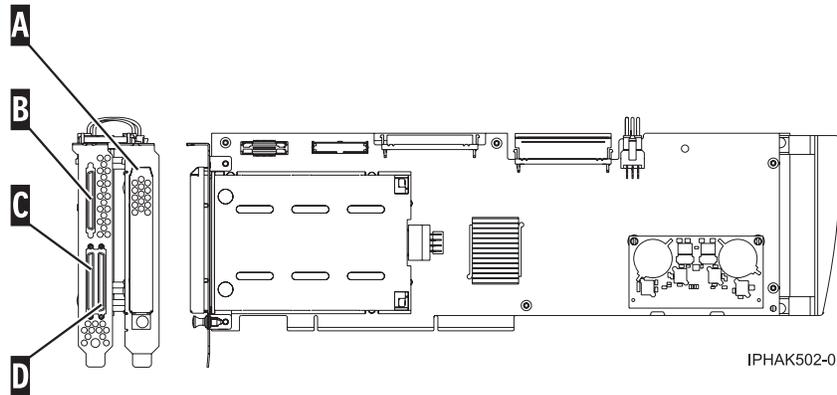


Figure 158. Adapter

- (A) Battery cover
- (B) SCSI port 2
- (C) SCSI port 0
- (D) SCSI port 1

Specifications

Item	Description
Adapter FRU number	42R6578
Cache battery FRU number	42R3965
Unit description	<ul style="list-style-type: none"> • 64 bit, 133 MHz, 3.3 V • PCI-X 2.0 compliant • Double-wide adapter, requires 2, adjacent, long slots. The SCSI controller side of the adapter pair requires a 64-bit slot. (The controller side is the side with the external SCSI connectors.) • The auxiliary-write cache adapter contains a dual, concurrently maintainable, cache-battery pack, which maintains cache memory on both adapters in the event of an abnormal termination.
Operating system or partition requirements	<ul style="list-style-type: none"> • IBM i V5R3, V5R3M5, and V5R4 with PTFs. • AIX 5L™ Version 5.2 with the 5200-10 Technology Level, or later • AIX 5L Version 5.3 with the 5300-06 Technology Level, or later • Red Hat Enterprise Linux version 4 U4, or later • SUSE Linux Enterprise Server 10, or later <p>Check the IBM Prerequisite Web page for further details and updates. You can find a link to that Web page at the end of this topic.</p>
Maximum number	See Placement information.

Placement information

For placement information for this adapters, see the PCI adapter placement for machine type 94xx or the PCI adapter placement for machine types 82xx and 91xx. You can find links to the placement information at the end of this topic.

Logical partitioning

When used in an logical partition (LPAR) environment, this double-wide adapter must have both slots of the adapter assigned to the same logical partition. When implementing dynamic logical partitioning (DLPAR), both slots of the adapter must be managed together.

Placing the adapter in a double-wide cassette

To place this double-wide adapter in a double-wide cassette, first remove the adapter handle ((**B**)), and the two plastic covers from the SCSI jumper cable ((**A**)), as shown in the following figure. (The two plastic covers are only found on adapters made before August 2008.) Then follow the general procedures to place a double-wide adapter in a double-wide cassette. See [Placing an adapter in the PCI adapter double-wide cassette](#) or [Placing a PCI adapter in a double-wide, generation 2.5 cassette](#). You can find links to these topics at the end of this topic. .

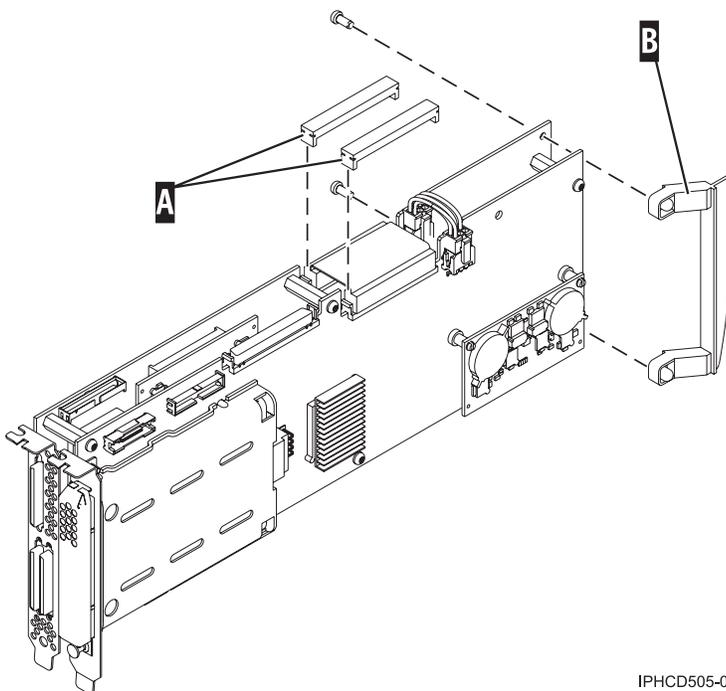


Figure 159. Preparing the adapter for placement in a cassette

Installing the cassette containing the adapter in a system

To install the cassette containing the adapter into a system unit or expansion unit, following the procedures in Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters and cassettes. You can find a link to that topic at the end of this topic..

Power LED

For a double-wide adapter, there is only one power LED visible for both slots.

Concurrent maintenance procedure

Concurrent maintenance of this adapter is not supported through the Hardware Management Console (HMC). Concurrent maintenance must be done from the Hardware Service Manager (HSM) of the system or owning partition. The HSM will automatically power off both PCI slots when either slot is selected.

Important:

- Both PCI slots must be powered off when installing or removing this adapter with the system power on.
- If this adapter is the load source IOA, or under the load source IOP, or any other storage IOA/IOP with critical DASD attached for the system, this concurrent maintenance procedure should be done by a qualified service provider. At step 12, the HSM will direct you to use control panel functions 68 and 69 to power off the domain.

Follow this procedure:

1. Start an IBM i session for the system or partition containing the adapter and sign on to the system or partition.
2. Type **strsst** on the command line of the Main Menu and then press Enter.
3. Type your service tools user ID and service tools password on the System Service Tools (SST) Sign On display and press Enter.
4. Select **Start a service tool** from the System Service Tools (SST) display and press Enter.
5. Select **Hardware service manager** from the Start a Service Tools display and press Enter.
6. Select **Logical hardware resources (system, frames, cards)** from the Hardware Service Manager display and press Enter.
7. Select **System bus resources** and press Enter. The display changes to the Logical Hardware Resources on System Bus display.
8. Page down and locate **Combined Function IOP** that controls the IOA to be serviced.
9. Enter 9 in the Opt field for the **Combined Function IOP** to be serviced.
10. Locate the **Storage IOA** resource for the adapter to be serviced and enter 8 in the Opt field for that resource.
11. Enter 3 for **Concurrent maintenance** in the Opt field for the **Storage IOA** resource to be serviced. The display changes to the Hardware Resource Concurrent Maintenance display.
12. Press F9 to power off the domain.
13. Press Enter to confirm start power off. The display changes to the Hardware Resource Concurrent Maintenance Status display, which shows the status of the power off.
When the power off is complete, the display returns to the Hardware Resource Concurrent Maintenance display. The display will show that the **Power Status** is off for **Storage IOA**. Leave this display up on the HSM while you remove and replace the adapter.
14. Check the slot power LED state for the slot in which the adapter resides to verify that the adapter is powered off.
For a double-wide adapter, there is only one power LED visible for both slots.
15. Remove and replace the adapter. Removal and replacement procedures are covered in the topic Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters and cassettes. You can find a link to that topic at the end of this topic..
16. After the replacement is complete, return to the Hardware Resource Concurrent Maintenance display on the HSM.
17. If you were previously instructed to use operator panel function 69 to power on the adapter, do so now. Then go to step 22 on page 262, otherwise continue with next step.
18. Enter F10 to power the adapter on.
19. Press Enter to begin power on.

20. If the Work with Controlling Resource display appears, enter 7 in the Opt field for the **Combined function IOP** to assign the IOA to.

The Hardware Resource Concurrent Maintenance Status display shows the status of the power on.

21. When the power on is complete, the display returns to the Hardware Resource Concurrent Maintenance display. The display will show that the **Power Status** is on for the **Storage IOA**.

22. Check the LED status to verify that the adapter is powered on.

For a double-wide adapter, there is only one power LED visible for both slots.

23. Return to the procedure that sent you here.

Related concepts

“Model 8234-EMA, 9117-MMA, 9119-FHA, 9125-F2A, 9406-MMA and attached expansion units, PCI adapters, and cassettes” on page 66

You can remove, replace, or install PCI adapter cassettes.

Related tasks

“Placing a PCI adapter in a double-wide, generation 2.5 cassette” on page 152

You can place a PCI-X double-wide, quad-channel Ultra320 SCSI RAID Controller in a generation 2.5, double-wide cassette. Use the procedure in this topic to perform this task.

“Placing an adapter in the PCI adapter double-wide cassette” on page 148

You might need to place a PCI adapter in a double-wide cassette. .

Related reference

[IBM Prerequisite Web page](#)

Find prerequisite information for features you currently have or plan to add to your system.

[PCI adapter placement for machine types 82xx and 91xx](#)

Find PCI adapter placement information for machine types 82xx and 91xx.

[PCI adapter placement for machine type 94xx](#)

Find PCI adapter placement information for machine type 94xx.


Removing and replacing expansion unit cover or door

You might need to remove, replace, or install covers or doors on an expansion unit as a part of accessing components or performing a service action.

Remove the back cover from the 0588 expansion unit

You might need to remove the cover to access components or perform service. Use the instructions in this section to accomplish this task.

Open the back cover and remove the air flow shield, as shown in the following figure.

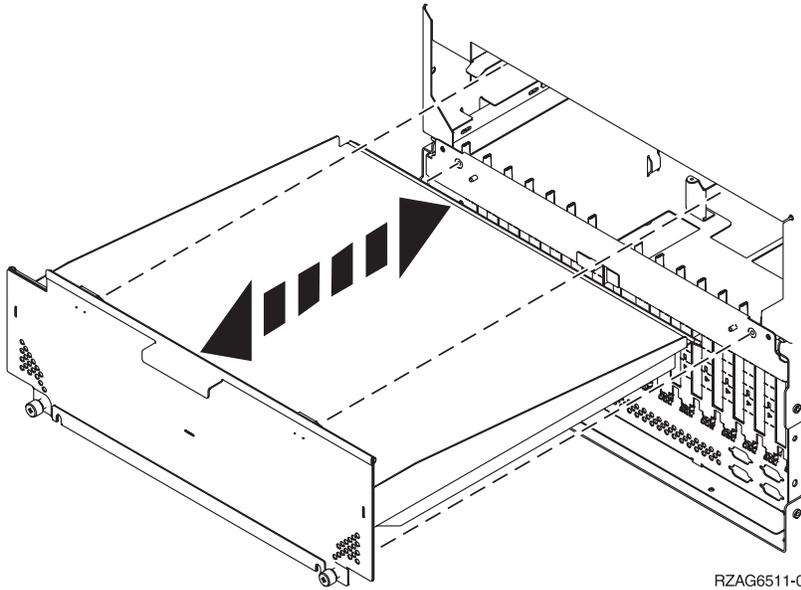

Opening the 0595, 5095, or D20 service access cover

Learn how to open the service access cover to service the 0595, 5095, or D20 expansion unit.

To open the service access cover, do the following steps:

1. Ensure the expansion unit is in the service position as described in “Placing the rack-mounted system or expansion unit in the service position” on page 280.
2. Loosen the three thumbscrews located on the cover at the back of the system.
3. Lift the cover into the open position.

Removing the rear door from the 5074, 5079, or 5094 expansion unit

You can remove the door to access components or perform service. Use the instructions in this section to accomplish this task.

To remove the rear door from the expansion unit, follow these steps:

- Open the rear door **(A)** as shown in the following figure.
- Press the latch **(B)** to remove the door.

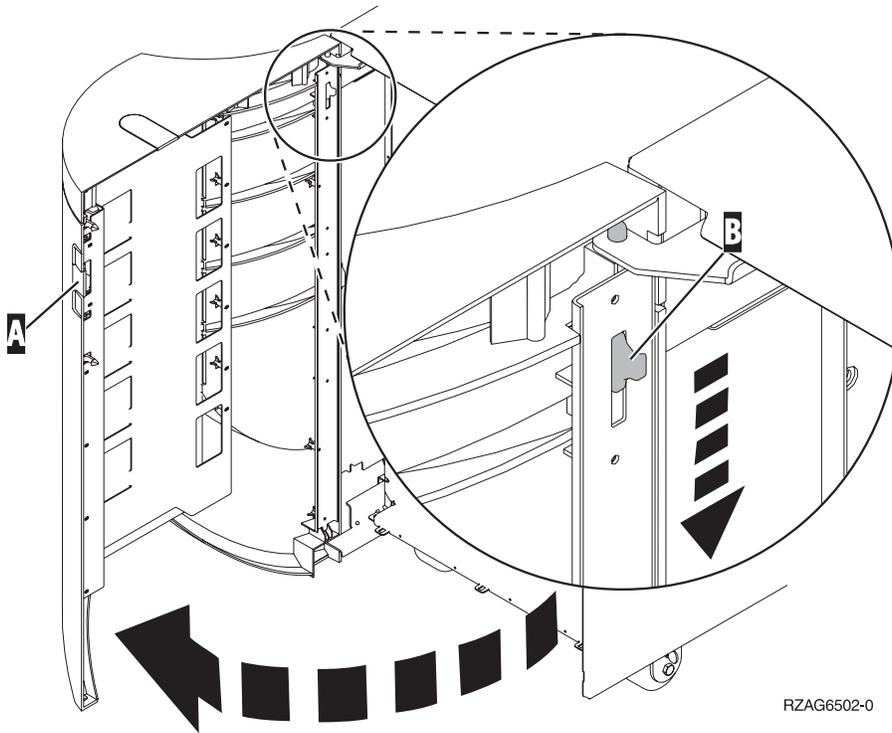


Figure 160. Removing the expansion unit rear door

Removing the rear door from the 5088, 5094, or 5096 expansion unit

You can remove the door to access components or perform service. Use the instructions in this section to accomplish this task.

To remove the rear door from the expansion unit, follow these steps:

- Open the rear door (A) as shown in the following figure.
- Press the latch (B) to remove the door.

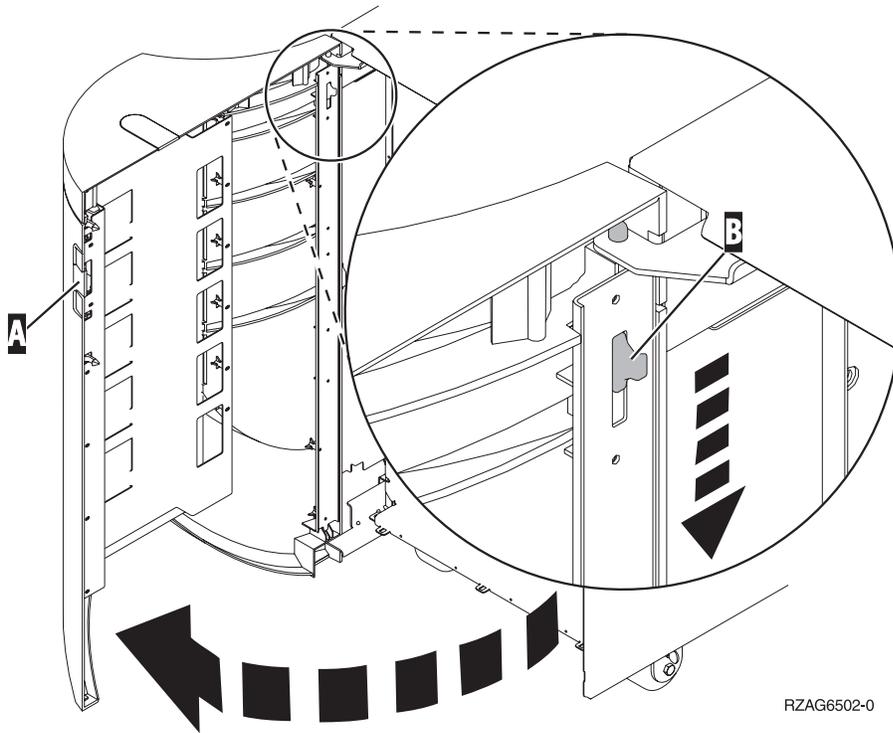



Figure 161. Removing the expansion unit rear door

Remove the back door and cover from the 5095 expansion unit

You might need to remove the door and cover to access components or perform service. Use the instructions in this section to accomplish this task.

To remove the back door and cover from the expansion unit, follow these steps:

1. Place your hand near the bottom of the back cover and lift up and out.
Attention: If you remove the cover while the server is powered on, errors might occur due to electromagnetic interference.
2. Remove the left cover, view from back, by loosening the thumbscrews and sliding the cover from front to back until it stops.

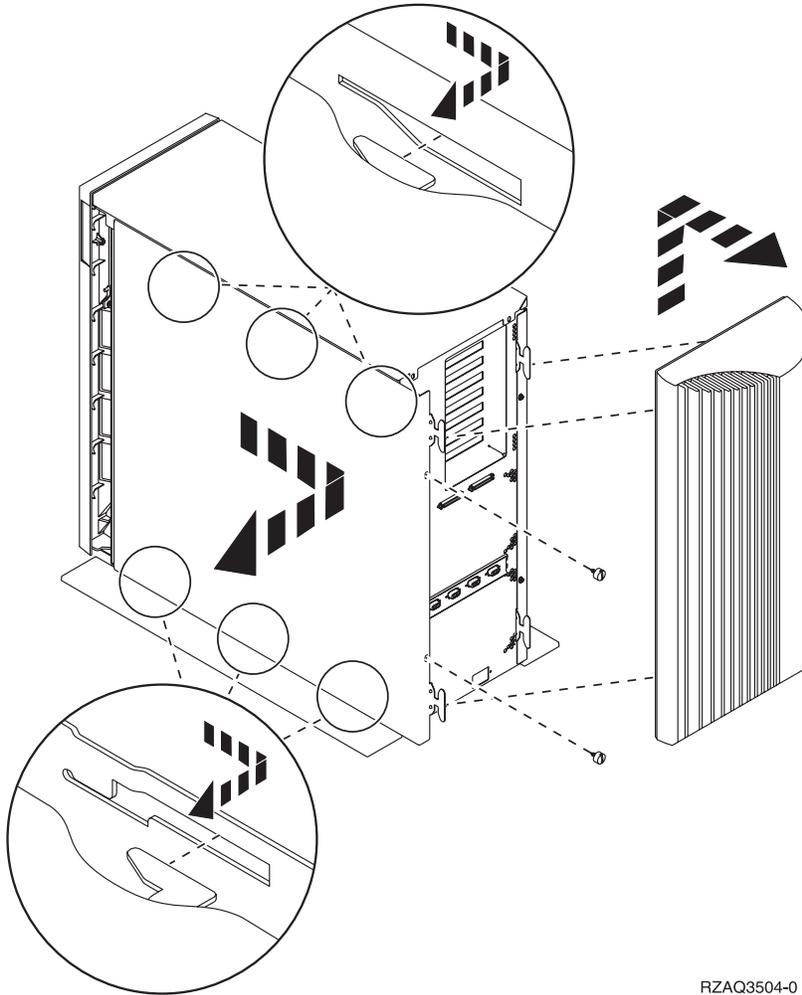

RZAQ3504-0

3. Pull the cover out.

Removing the front cover on the 7314-G30 or 5796

You might need to remove the front cover to perform service to the system.

To remove the front cover follow these steps.

1. Remove the two thumbscrews **(B)** located on the left and right of the cover.

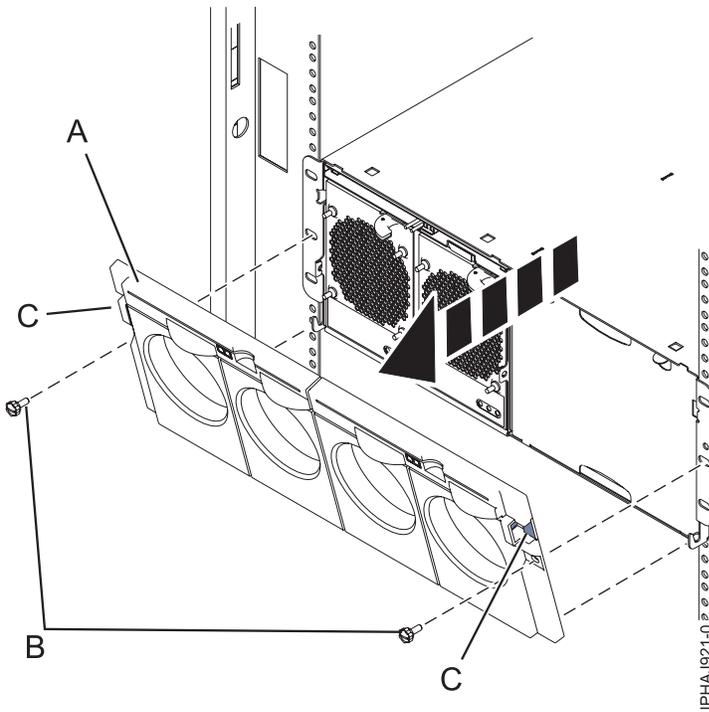


Figure 162. Remove the front cover for model 7314-G30 or 5796

2. Press in on the two latches (C) located left and right of the cover to release the cover.
3. Lift the cover (A) out and away from the chassis.

Tip: If an airflow block is present on an unpopulated side of the chassis do not remove it unless you are populating that side of the chassis.

Removing the rear door from the 5088, 5094, or 5096 expansion unit

You can remove the door to access components or perform service. Use the instructions in this section to accomplish this task.

To remove the rear door from the expansion unit, follow these steps:

- Open the rear door (A) as shown in the following figure.
- Press the latch (B) to remove the door.

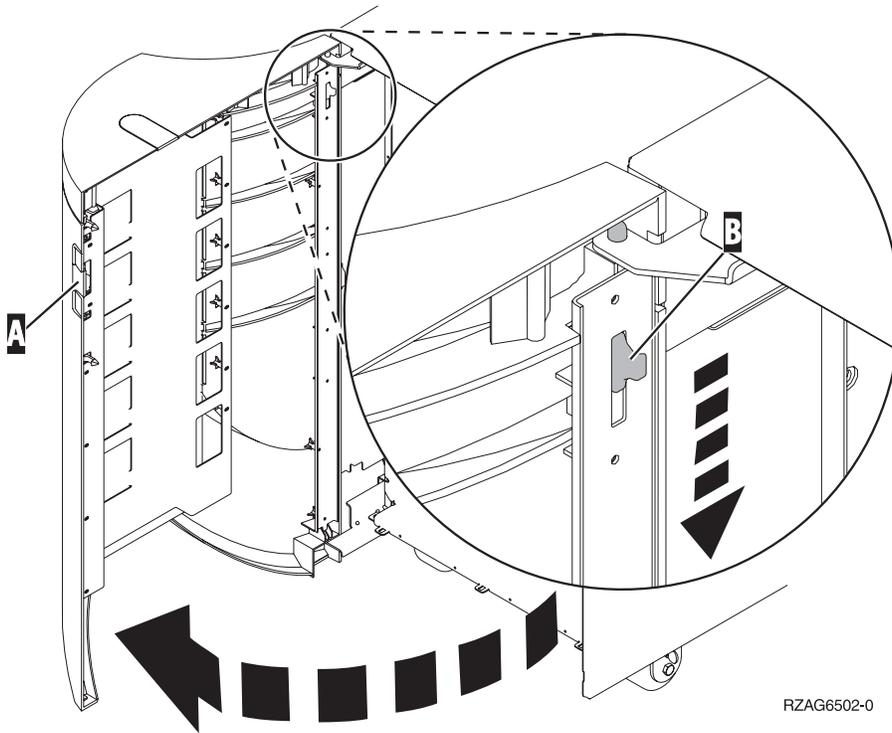


Figure 163. Removing the expansion unit rear door

Installing the front cover on the 7314-G30 or 5796

Use this procedure to install the front cover after installing the system or performing a service action.

If you only have one side of the chassis populated, ensure that the airflow block is present on the unpopulated side.

1. Insert the posts on the bottom of the cover (A) into the hooks on the chassis of the enclosure.
2. Press in on the two latches (C) on the right and left of the front cover.

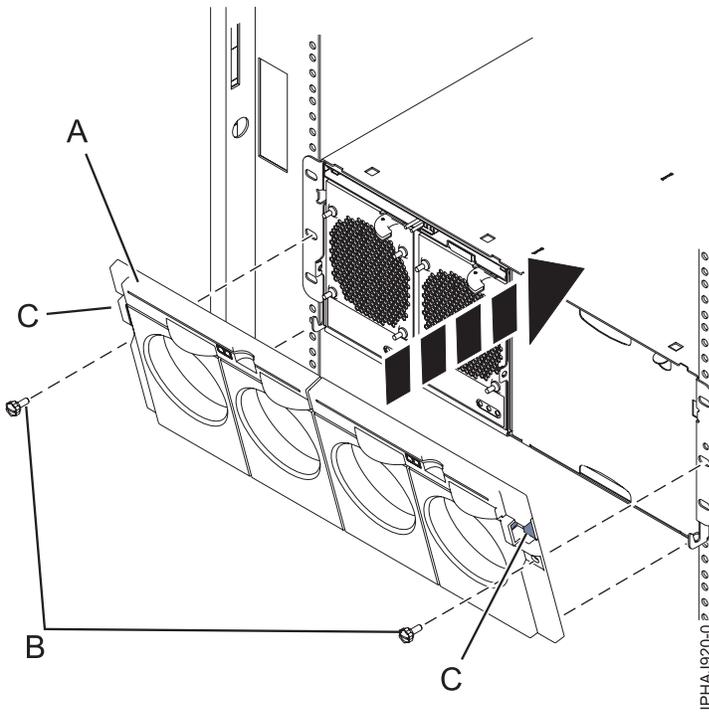


Figure 164. Front cover on a model 7314-G30 or 5796

3. Push the cover onto the chassis and release the latches. The cover should securely snap into place.
4. Replace the two thumbscrews (B) into the slots on the left and right of the front cover.

Removing the front cover from a 7311-D11, 5791, or 5794 expansion unit

Use this procedure to remove the cover to access components or perform a service action.

To remove the front cover, follow these steps:

1. Open the rack front door, if necessary.
2. Press down on both release tabs and pivot the cover from the top forward.
3. Pull the cover out and away from the expansion unit.

Installing the front cover on a 7311-D11, 5791, or 5794 expansion unit

Use this procedure to install the cover after accessing components or performing service.

To install the front cover, follow these steps:

1. Position the cover on the front of the expansion unit so that the pins on the cover line up with the slots on the front of the expansion unit.
2. Insert the tabs on the bottom of the cover into the slots at the front of the expansion unit.
3. Push the cover up and forward until the tabs on the top secure the cover in place.

Removing the front cover from a 7311-D20 expansion unit

Use this procedure to remove the cover to access components or perform service.

To remove the expansion unit front cover, follow these steps:

1. If necessary, open the front rack door.
2. Remove the thumbs screws that are securing the covers to the rack.

3. Push both cover-release latches in the direction of the arrows to release the cover as shown in the following figure.

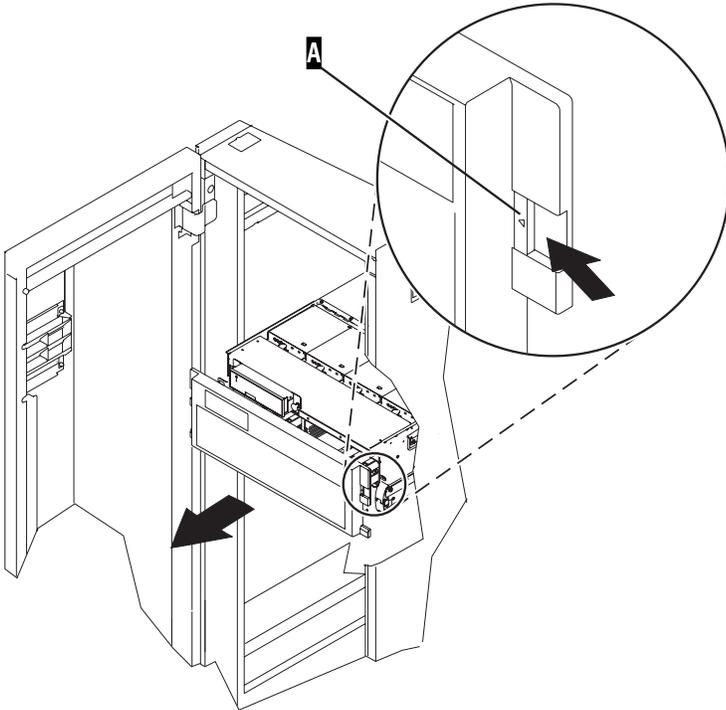


Figure 165. Removing the front cover

4. Pivot the cover from the bottom and swing the top of the cover out.
5. Pull the bottom of the cover up and then away from the expansion unit. This releases the two tabs located on the bottom of the cover.
6. Put the cover in a safe place.

Installing the front cover on a 7311-D20 expansion unit

Use this procedure to install the cover after accessing components or performing service.

To install the expansion unit front cover, follow these steps:

1. If necessary, open the front rack door.
2. Insert the two tabs located on the bottom edge of the cover into their locking slots, located on the expansion unit frame.
3. Pivot the front cover up toward the top of the expansion unit frame.
4. Align the tabs to the matching slots located on the front of the expansion unit frame.
5. Gently push the tabs into the slots until the cover seats against the front of the expansion unit.
6. Install the thumbs screws to secure the covers to the rack.
7. Close the front rack door.

Removing and Replacing Covers and Doors

Use these instructions to remove, replace, or install covers to access components or perform service.

Removing the service access cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50

Use this procedure to remove the service access cover to perform service or to gain access to internal components.

1. Place the system into the service position. For instructions, see “Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position” on page 285.
2. Loosen the two thumbscrews (A) located at the back of the cover.
3. Slide the cover (B) toward the back of the system unit. When the front of the service access cover clears the upper frame ledge, lift the cover up and off the system unit.

Attention: For proper cooling and airflow, install the cover before starting the system. Operating the system without the cover for more than 30 minutes could damage the system components.

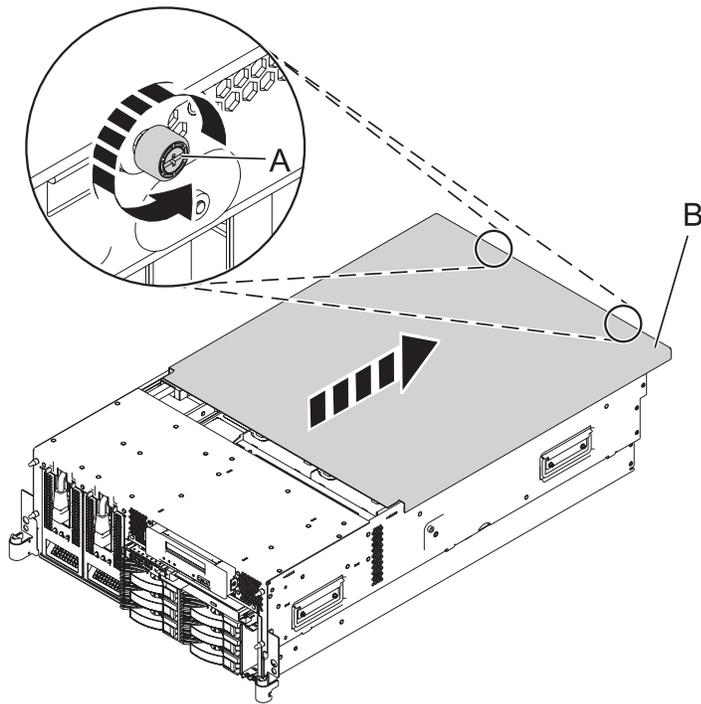


Figure 166. Remove the service access cover from a rack-mounted model

Installing the service access cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50

Use this procedure to install the service access cover after performing service or accessing internal components.

1. Place the service access cover (A) on the top of the system unit, approximately 25 mm (1 in.) from the front of the system unit.
2. Hold the service access cover against the system unit, and slide it toward the front of the system. The tabs on the service access cover slide beneath the upper chassis ledge, and the two thumbscrews align with the screw holes at the back of the system unit.

Important: Ensure that the fan LED cables do not get caught on the front edge of the service access cover as you move it forward.

3. Tighten the thumbscrews (B) located at the back of the cover.

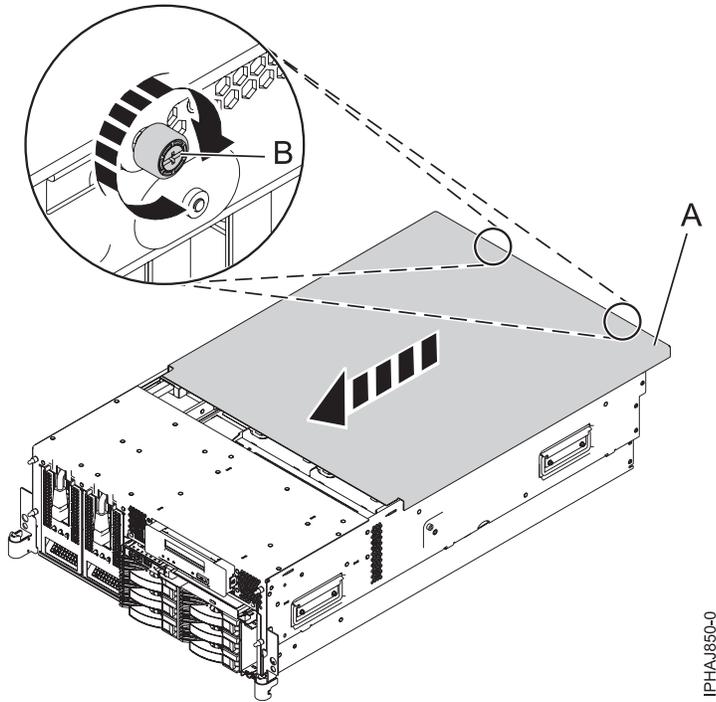


Figure 167. Install the service access cover on the rack-mounted model

Removing the service access cover from a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50

Use this procedure to remove the service access cover to perform service or to gain access to internal components.

To remove the service access cover from a stand-alone model, do the following steps:

1. Loosen the two thumbscrews (A) located at the back of the service access cover as shown in the following figure.
2. Slide the service access cover (B) toward the back of the system. When the front of the cover clears the front frame ledge, lift the cover off the system.

Attention: For proper cooling and airflow, install the cover before starting the system. Operating the system without the cover for more than 30 minutes might damage the system components.

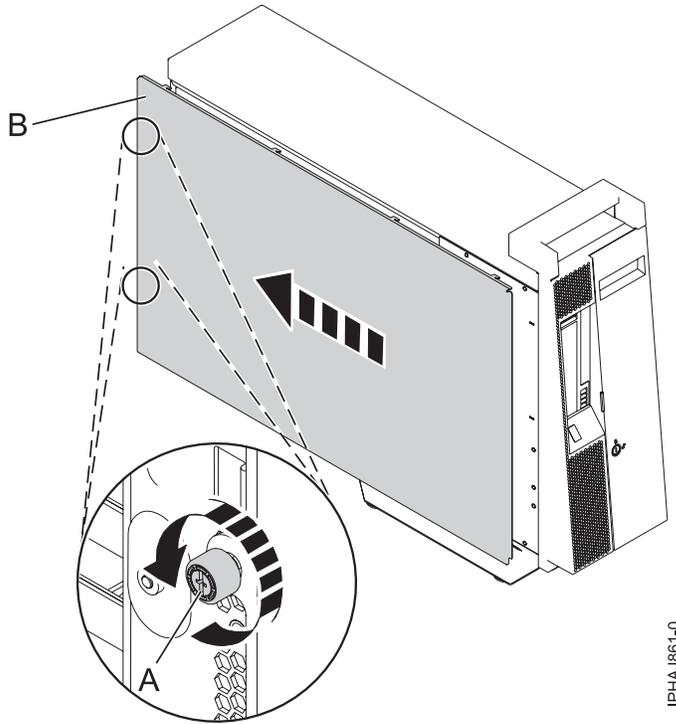


Figure 168. Removing the service access cover from the stand-alone model

Installing the service access cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50

Use this procedure to install the service access cover after performing service or accessing internal components.

1. Align the service access cover pins with the slots in the system. The flanges on the top and bottom of the cover wrap around the system frame.
2. Hold the service access cover against the system unit (**A**) and slide it toward the front of the system.
3. Tighten the two thumbscrews (**B**) located at the back of the cover.

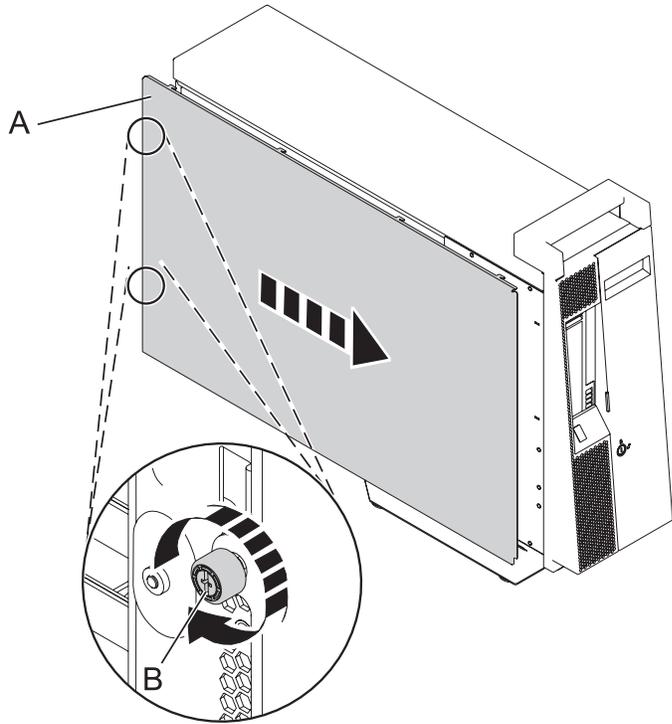


Figure 169. Installing the service access cover on a stand-alone model

Removing the front cover from a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50

Use this procedure to remove the cover to access components or perform service.

1. Remove the two thumbscrews (A) that secure the system to the rack (B) as shown in the following figure.
2. Push in the release latches (C) and pull the cover away from the system.

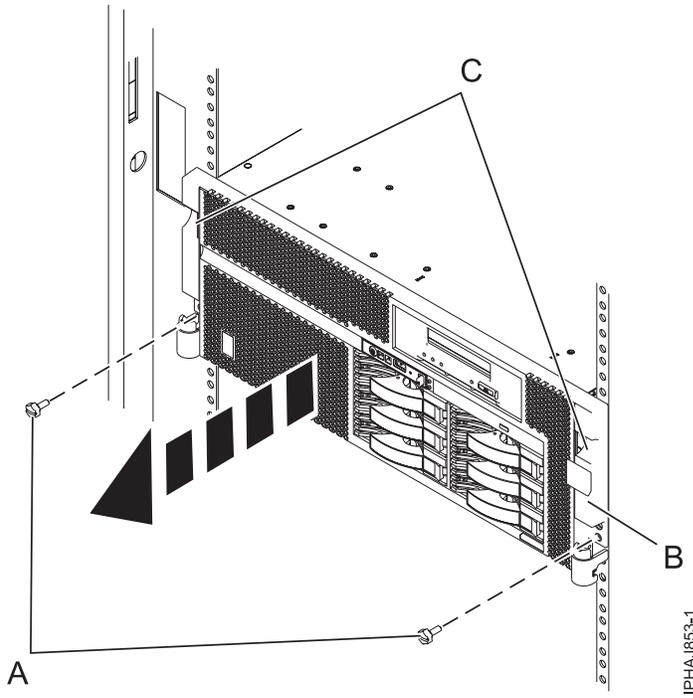


Figure 170. Removing the front cover from a rack-mounted model

Installing the front cover on a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50

Use this procedure to install the cover after accessing components or performing service.

1. Push in the release latches **(B)** and push the cover onto the system.
2. Gently push the cover in until the two cover-release latches **(B)** are seated in their respective slots as shown in the following figure.
3. Replace the two thumbscrews **(C)** that secure the system to the rack **(A)**.

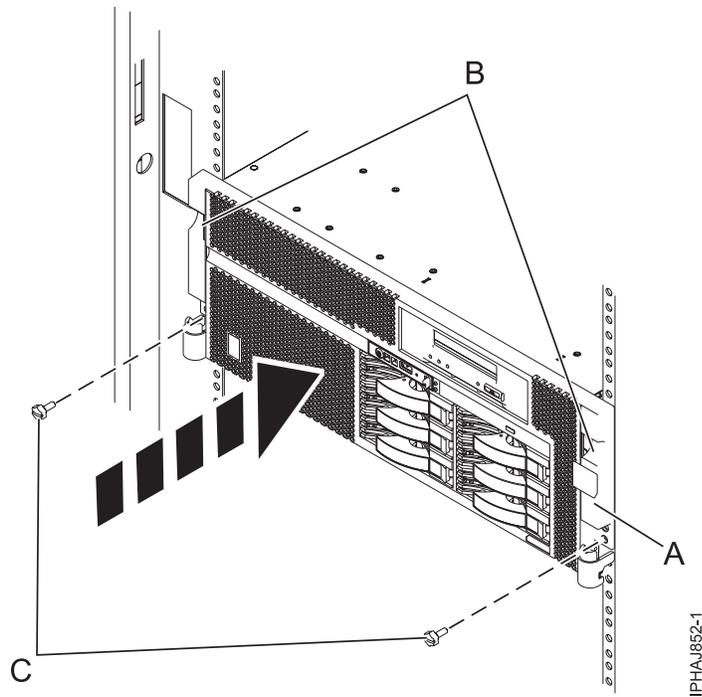


Figure 171. Installing the front cover on a rack-mounted model

Removing the door from the 8204-E8A or 9409-M50

Use this procedure to remove the door to access components or perform service.

1. Open the front door by grasping the door handle and pulling the door out and away from the system unit.
2. To remove the door, press down on the top back edge of the door.
3. Gently swivel the top back edge of the door forward and out past the top of the system unit.
4. Lift the door up to release it from the lower retaining post.

Installing or replacing the door on the 8204-E8A or 9409-M50

Use this procedure to install the door after accessing components or performing service.

1. Set the door on the lower retaining post.
2. Rotate the door toward the top of the system unit.
3. Press down on the lower back edge of the door, and seat the top post into its matching slot.
4. Close and secure the door.

Removing the front cover from the stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50

Use this procedure to remove the cover to access components or perform service.

1. Open the door that covers the disk drives by unlocking and pulling the door open.
2. Press down on the cover-release tab (A) as shown in the following figure.
3. Pull the top of the cover (B) out and away from the system.

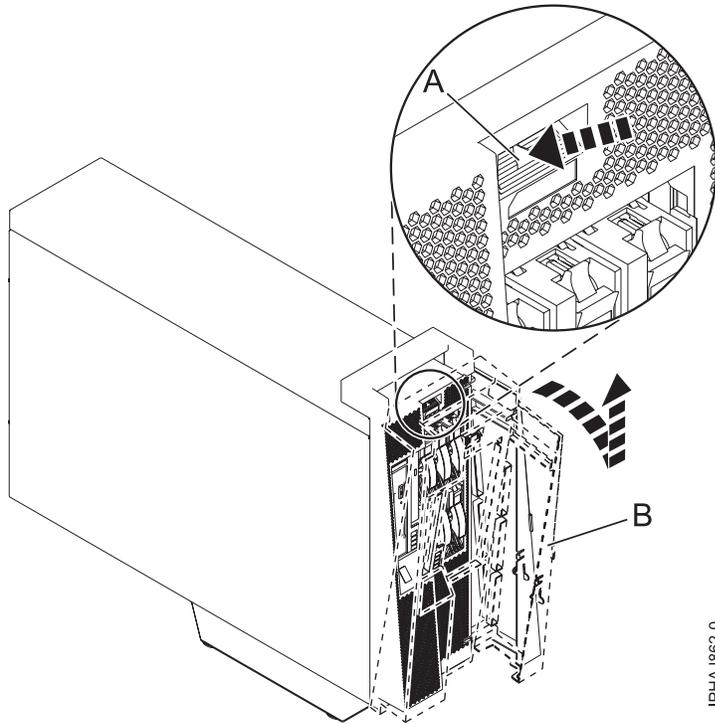


Figure 172. Remove the door from the model

4. Gently pull the cover up and off the base.

Installing the front cover on a stand-alone 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50

Use this procedure to install the cover after accessing components or performing service.

1. Place the two lower cover-locking tabs into the retaining slots located on the base of the system unit as shown in the following figure.

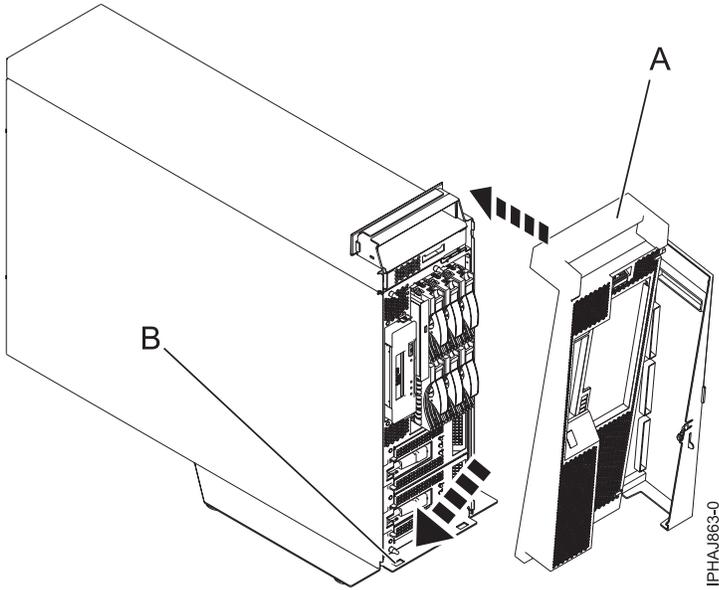


Figure 173. Replacing the cover on the model

2. Push the cover up toward the top of the system (A), ensuring that the aligning pins are aligned with their matching slots (B) located on the system.
3. Gently push the cover in until the cover-release tab snaps into place.
4. Close and secure the door.

Front cover for the 8234-EMA, 9117-MMA, or 9406-MMA


Use these procedures to remove and replace the cover to access components or perform service.

Removing the front cover from the 8234-EMA, 9117-MMA, or 9406-MMA:

Use this procedure to remove the cover to access components or perform service.

To remove the front cover follow these steps:

1. If necessary, open the front rack door.
2. Loosen the thumbscrew on the right side of the cover as shown in the following figure.

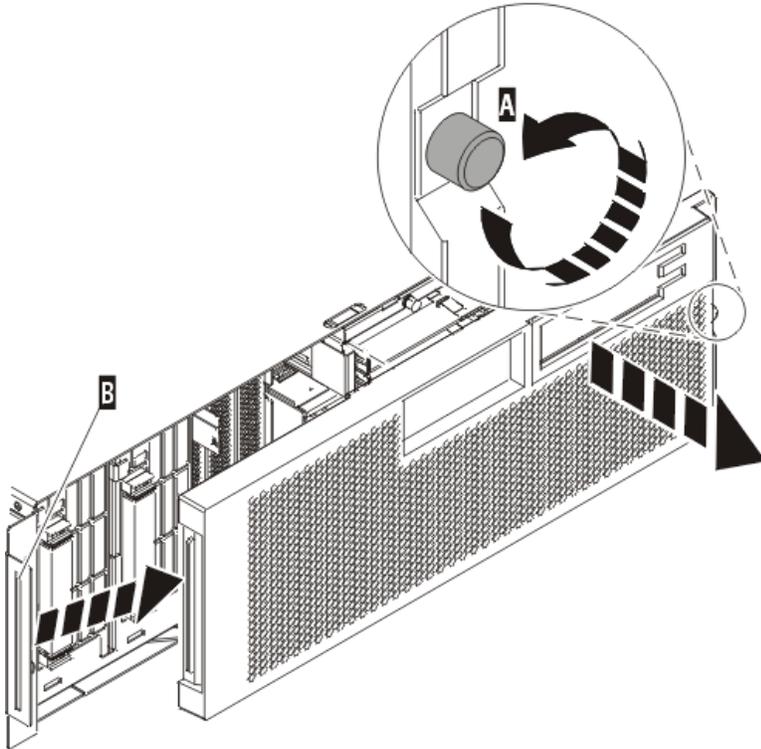

IPHA1F01-1

Figure 174. Removing the front cover


3. Slide the cover to the right, and remove it from the system unit.

Installing the front cover on the 8234-EMA, 9117-MMA, or 9406-MMA:

Use this procedure to install the cover after accessing components or performing service.

To install the front cover follow these steps:

1. Position the cover on the front of the system unit so that the tab on the left side of the cover is in the matching slot on the left side of the system unit as shown in the following figure.

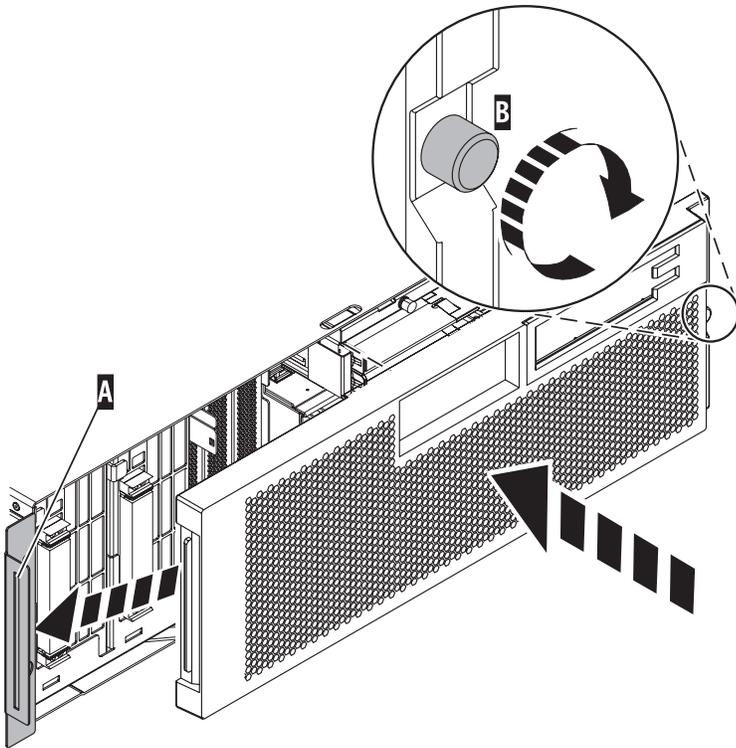

IPHAJ500-1

Figure 175. Installing the front cover

2. Tighten the thumbscrew on the right side of the cover.
3. Close the front rack door.

Placing the rack-mounted system or expansion unit in the service position or operating position

Use these procedures to place a system or expansion unit into the service position or operating position to perform service or to gain access to internal components.

Placing the rack-mounted system or expansion unit in the service position

Use this procedure to perform service or gain access to internal components by placing the rack-mounted system or expansion unit in the service position.

Note: Some of the figures in these procedures might not look exactly like the system or expansion unit that you have. However, the steps to perform the task are the same.

DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- Connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. Attach the power cords to the outlets.
5. Turn on the devices.

(D005)

DANGER

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

CAUTION

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

(R001)

To place a rack-mounted system or expansion unit into the service position, follow these steps:

1. If necessary, open the front rack door.
2. Remove the two thumbscrews (A) that secure the system or expansion unit (B) to the rack as shown in the following figure.

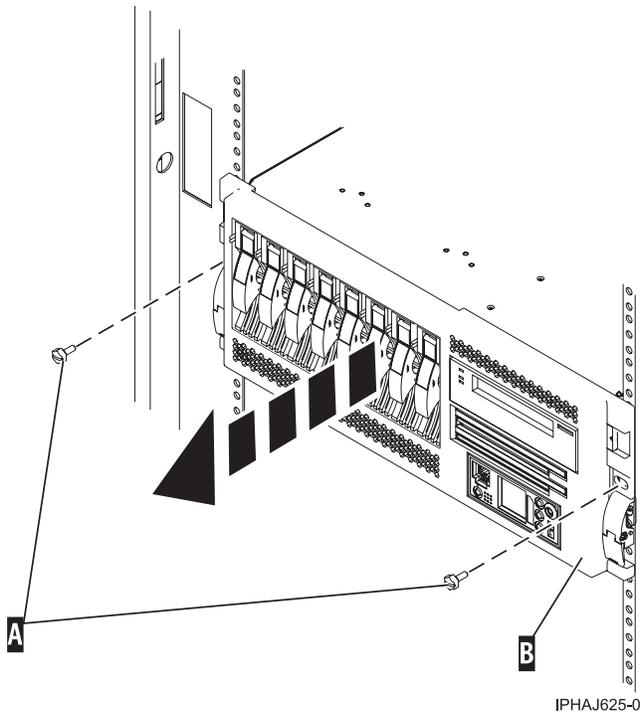


Figure 176. Removing the thumbscrews from the system and rack

3. Release the rack latches (A) on both the left and right sides as shown in the following figure.

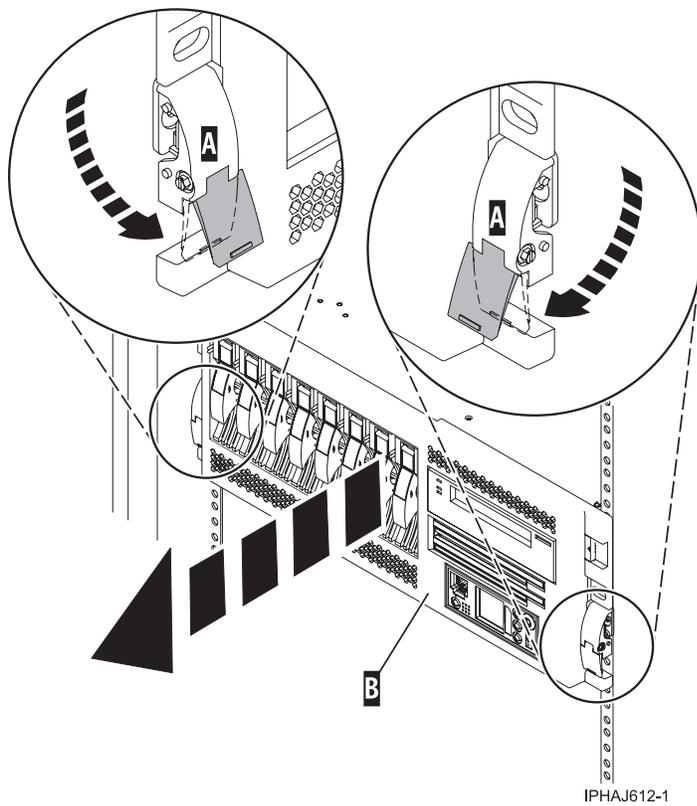


Figure 177. Releasing the rack latches

4. Read the following note, and then slowly pull the system or expansion unit out from the rack until the rails are fully extended and locked.

Remember:

- If the procedure you are performing requires you to unplug cables from the back of the system or expansion unit, do so before you pull the unit out from the rack.
- Ensure that the cables at the rear of the system or expansion unit do not catch or bind as you pull the unit out from the rack.
- Ensure the rails are fully extended. When the rails are fully extended, the rail safety latches lock into place. This action prevents the system or expansion unit from being pulled out too far.

Placing the rack-mounted system or expansion unit in the operating position


Use this procedure to place the rack-mounted system or expansion unit in the operating position to make the unit available for use.

Tip: Some of the figures in these procedures might not look exactly like the system or expansion unit that you have. However, the steps to perform the task are the same.

To place the rack-mounted system or expansion unit into the operating position, follow these steps:

1. Simultaneously release the blue rail safety latches (A), located near the front of each rail, and push the system or expansion unit into the rack as shown in the following figure.

Note: Ensure that the cables at the rear of the system or expansion unit do not catch or bind as you push the unit back into the rack.

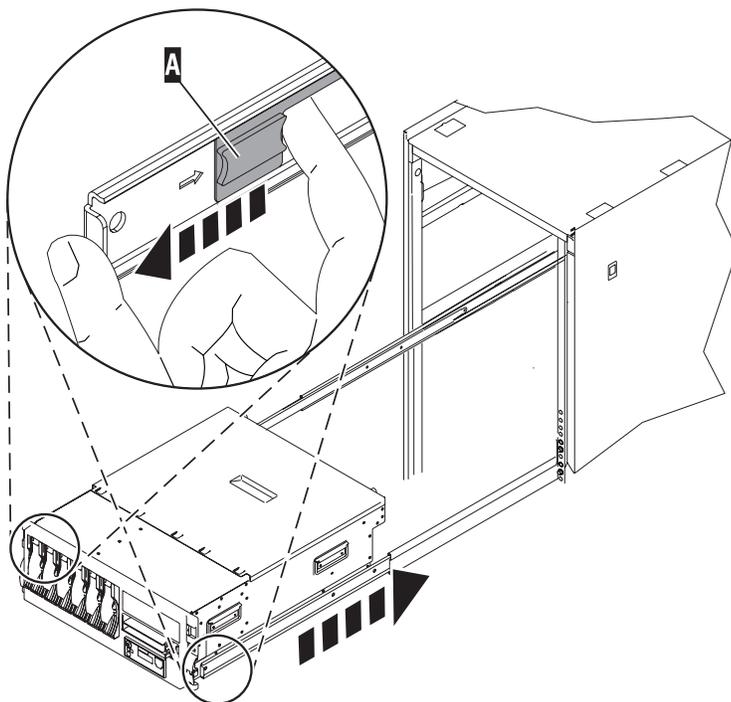

IPHBF509-1

Figure 178. Releasing the rail safety latches

2. Replace and tighten the two thumbscrews (C) that secure the system or expansion unit (A) to the rack as shown in the following figure.

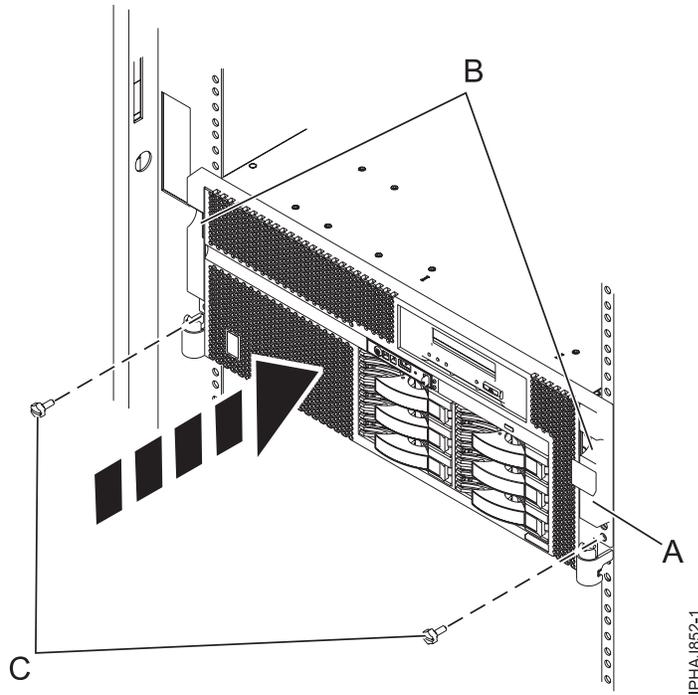


Figure 179. Pushing the system into the rack and attaching the thumbscrews

3. Close the front rack door.

Placing a rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the service position

Use this procedure to perform service or gain access to internal components by placing the rack-mounted system or expansion unit in the service position.

Note: Some of the figures in these procedures might not look exactly like the system or expansion unit that you have. However, the steps to perform the task are the same.

DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- Connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. Attach the power cords to the outlets.
5. Turn on the devices.

(D005)

DANGER

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

CAUTION

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

(R001)

To place the rack-mounted system or expansion unit into the service position, follow these steps:

1. If necessary, open the front rack door.
2. Remove the two thumbscrews (A) that secure the system unit to the rack as shown in the following figure.
3. Release the rack latches (B) on both the left and right sides as shown in the following figure.

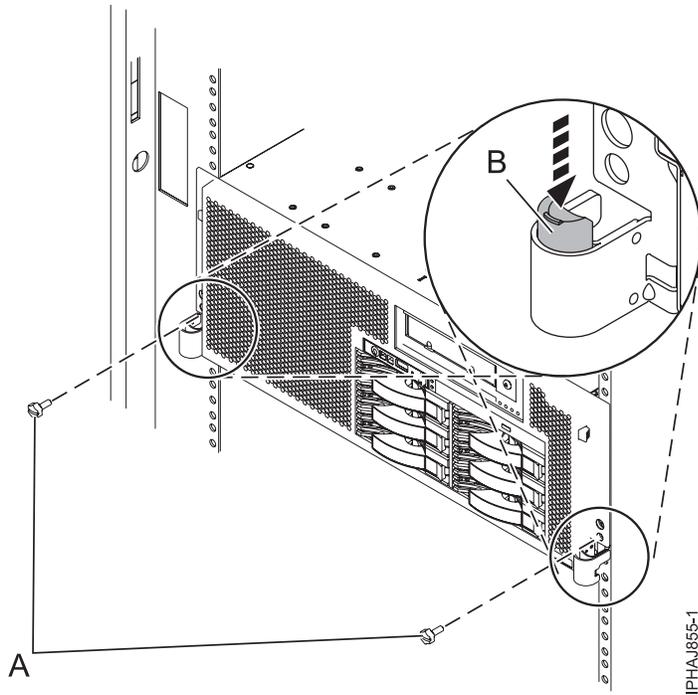


Figure 180. Releasing the rack latches

4. Read the following note, and then slowly pull the system or expansion unit out from the rack until the rails are fully extended and locked.

Remember:

- If the procedure you are performing requires you to unplug cables from the back of the system or expansion unit, do so before you pull the unit out from the rack.
- Ensure that the cables at the rear of the system or expansion unit do not catch or bind as you pull the unit out from the rack.
- Ensure the rails are fully extended. When the rails are fully extended, the rail safety latches lock into place. This action prevents the system or expansion unit from being pulled out too far.

Placing the rack-mounted 8203-E4A, 8204-E8A, 9407-M15, 9408-M25, or 9409-M50 in the operating position

Use this procedure to place the rack-mounted system or expansion unit in the operating position to make the unit available for use.

To place the rack-mounted model into the operating position follow these steps:

Tip: Some of the figures in these procedures might not look exactly like the system or expansion unit that you have. However, the steps to perform the task are the same.

1. Simultaneously release the blue rail safety latches (**B**), located near the front of each rail, and push the system or expansion unit into the rack as shown in the following figure.

Note: Ensure that the cables at the rear of the system or expansion unit do not catch or bind as you push the unit back into the rack.

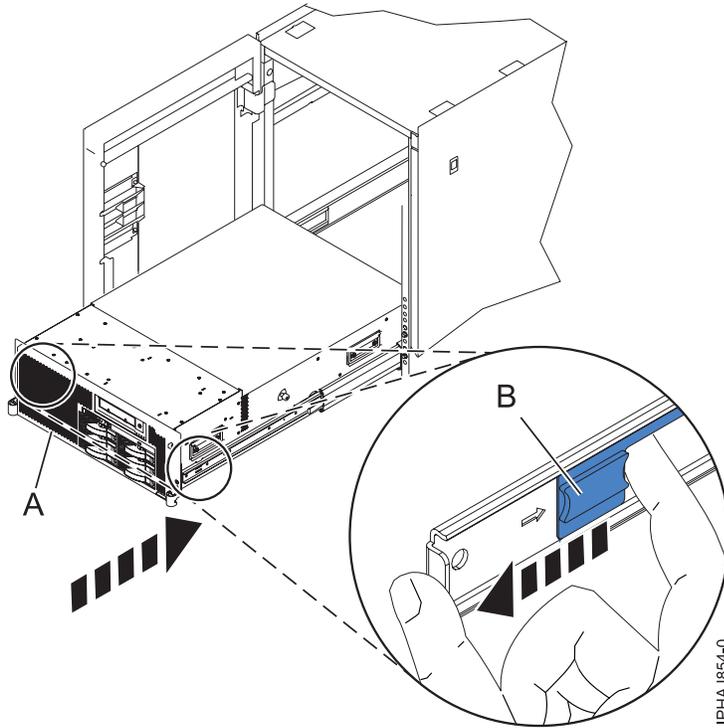


Figure 181. Releasing the rail safety latches

2. Replace and tighten the two thumbscrews (C) that secure the system or expansion unit (A) to the rack as shown in the following figure.

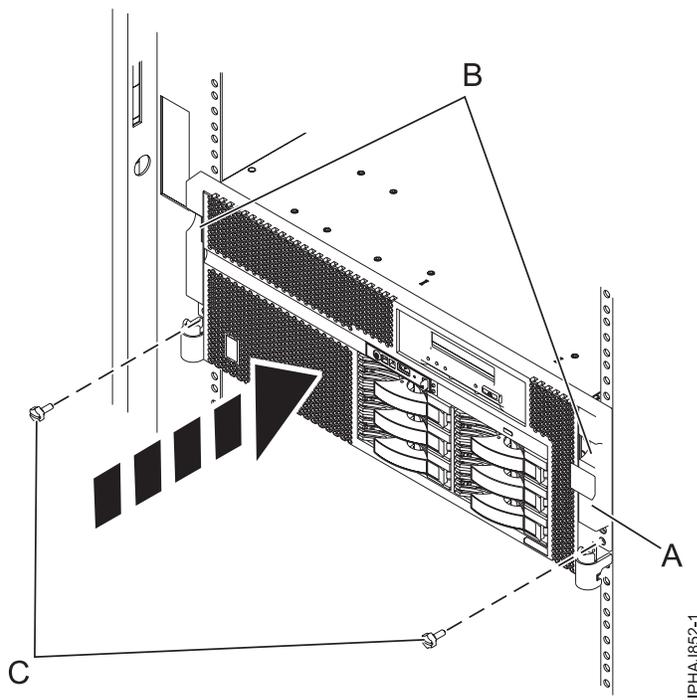


Figure 182. Replacing the thumbscrews

3. Close the front rack door.

Appendix. Notices

This information was developed for products and services offered in the U.S.A.

The manufacturer may not offer the products, services, or features discussed in this document in other countries. Consult the manufacturer's representative for information on the products and services currently available in your area. Any reference to the manufacturer's product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any intellectual property right of the manufacturer may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any product, program, or service.

The manufacturer may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to the manufacturer.

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law: THIS INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. The manufacturer may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to Web sites not owned by the manufacturer are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this product and use of those Web sites is at your own risk.

The manufacturer may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning products not produced by this manufacturer was obtained from the suppliers of those products, their published announcements or other publicly available sources. This manufacturer has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to products not produced by this manufacturer. Questions on the capabilities of products not produced by this manufacturer should be addressed to the suppliers of those products.

All statements regarding the manufacturer's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

The manufacturer's prices shown are the manufacturer's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

If you are viewing this information in softcopy, the photographs and color illustrations may not appear.

The drawings and specifications contained herein shall not be reproduced in whole or in part without the written permission of the manufacturer.

The manufacturer has prepared this information for use with the specific machines indicated. The manufacturer makes no representations that it is suitable for any other purpose.

The manufacturer's computer systems contain mechanisms designed to reduce the possibility of undetected data corruption or loss. This risk, however, cannot be eliminated. Users who experience unplanned outages, system failures, power fluctuations or outages, or component failures must verify the accuracy of operations performed and data saved or transmitted by the system at or near the time of the outage or failure. In addition, users must establish procedures to ensure that there is independent data verification before relying on such data in sensitive or critical operations. Users should periodically check the manufacturer's support websites for updated information and fixes applicable to the system and related software.

Trademarks

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the Web at Copyright and trademark information at www.ibm.com/legal/copytrade.shtml.

Microsoft[®], and Windows[®] are trademarks of Microsoft Corporation in the United States, other countries, or both.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Red Hat, the Red Hat "Shadow Man" logo, and all Red Hat-based trademarks and logos are trademarks or registered trademarks of Red Hat, Inc., in the United States and other countries.

Other company, product, or service names may be trademarks or service marks of others.

Electronic emission notices

Class A Notices

The following Class A statements apply to the IBM servers that contain the POWER6 processor.

Federal Communications Commission (FCC) statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment

generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A respecte est conforme à la norme NMB-003 du Canada.

European Community Compliance Statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

European Community contact:
IBM Technical Regulations
Pascalstr. 100, Stuttgart, Germany 70569
Tele: 0049 (0)711 785 1176
Fax: 0049 (0)711 785 1283
E-mail: tjahn@de.ibm.com

Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

VCCI Statement - Japan

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

The following is a summary of the VCCI Japanese statement in the box above.

This product is a Class A Information Technology Equipment and conforms to the standards set by the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Electromagnetic Interference (EMI) Statement - People's Republic of China

声 明

此为 A 级产品,在生活环境中,
该产品可能会造成无线电干扰。
在这种情况下,可能需要用户对其
干扰采取切实可行的措施。

Declaration: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may need to perform practical action.

Electromagnetic Interference (EMI) Statement - Taiwan

警告使用者：

這是甲類的資訊產品，在
居住的環境中使用時，可
能會造成射頻干擾，在這
種情況下，使用者會被要
求採取某些適當的對策。

The following is a summary of the EMI Taiwan statement above.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user will be required to take adequate measures.

IBM Taiwan Contact Information:

台灣IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

Electromagnetic Interference (EMI) Statement - Korea

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 만약 잘못 판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

Please note that this equipment has obtained EMC registration for commercial use. In the event that it has been mistakenly sold or purchased, please exchange it for equipment certified for home use.

Germany Compliance Statement

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:

"Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A.

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Konformitätserklärung nach des EMVG ist die IBM Deutschland GmbH, 70548 Stuttgart.

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.

Electromagnetic Interference (EMI) Statement - Russia

ВНИМАНИЕ! Настоящее изделие относится к классу А.
В жилых помещениях оно может создавать радиопомехи, для снижения которых необходимы дополнительные меры

Terms and conditions

Permissions for the use of these publications is granted subject to the following terms and conditions.

Personal Use: You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative works of these publications, or any portion thereof, without the express consent of the manufacturer.

Commercial Use: You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of the manufacturer.

Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the publications or any data, software or other intellectual property contained therein.

The manufacturer reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by the manufacturer, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

THE MANUFACTURER MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THESE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.

BULL CEDOC
357 AVENUE PATTON
B.P.20845
49008 ANGERS CEDEX 01
FRANCE

REFERENCE
86 A1 61EW 04