

Progress Codes

ESCALA Power7



REFERENCE  
86 A1 45FF 04



# ESCALA Models Reference

The ESCALA Power7 publications concern the following models:

Bull Escala E1-700 / E3-700	(31E/2B ,8231-E2B)
Bull Escala E1-705	(31E/1C, 8231-E1C)
Bull Escala E1-715	(31E/1D, 8231-E1D)
Bull Escala E3-705	(31E/2C, 8231-E2C)
Bull Escala E3-715	(31E/2D, 8231-E2D)
Bull Escala E2-700 / E2-700T	(02E/4B, 8202-E4B)
Bull Escala E2-705 / E2-705T	(02E/4C, 8202-E4C)
Bull Escala E2-715 / E2-715T	(02E/4D, 8202-E4D)
Bull Escala E4-700 / E4-700T	(05F/6B, 8205-E6B)
Bull Escala E4-705	(05E/6C, 8205-E6C)
Bull Escala E4-715	(05E/6D, 8205-E6D)
Bull Escala E5-700	(33E/8B, 8233-E8B)
Bull Escala E5-715	(08E/8D, 8408-E8D)
Bull Escala M5-715	(09R/MD, 9109-RMD)
Bull Escala M6-700	(17M/MB, 9117-MMB)
Bull Escala M6-705	(17M/MC, 9117-MMC)
Bull Escala M6-715	(17M/MD, 9117-MMD)
Bull Escala M7-700	(79M/HB, 9179-MHB)
Bull Escala M7-705	(79M/HC, 9179-MHC)
Bull Escala M7-715	(79M/HD, 9179-MHD)
Bull Escala H9-700	(19F/HB, 9119-FHB)

References to 8236-E8C models are irrelevant.

## Hardware

February 2013

BULL CEDOC  
357 AVENUE PATTON  
B.P.20845  
49008 ANGERS CEDEX 01  
FRANCE

The following copyright notice protects this book under Copyright laws which prohibit such actions as, but not limited to, copying, distributing, modifying, and making derivative works.

Copyright © Bull SAS 2013

Printed in France

## **Trademarks and Acknowledgements**

We acknowledge the rights of the proprietors of the trademarks mentioned in this manual.

All brand names and software and hardware product names are subject to trademark and/or patent protection.

Quoting of brand and product names is for information purposes only and does not represent trademark misuse.

*The information in this document is subject to change without notice. Bull will not be liable for errors contained herein, or for incidental or consequential damages in connection with the use of this material.*

---

## Contents

<b>Safety notices</b> . . . . .	<b>v</b>
<b>Progress codes overview</b> . . . . .	<b>1</b>
<b>AIX IPL progress codes</b> . . . . .	<b>3</b>
<b>AIX diagnostic load progress indicators</b> . . . . .	<b>41</b>
<b>Dump progress indicators (dump status codes)</b> . . . . .	<b>45</b>
<b>AIX crash progress codes (category 1)</b> . . . . .	<b>47</b>
<b>AIX crash progress codes (category 2)</b> . . . . .	<b>49</b>
<b>AIX crash progress codes (category 3)</b> . . . . .	<b>51</b>
<b>(C1xx) Service processor progress codes</b> . . . . .	<b>53</b>
<b>(C2xx) Virtual service processor progress codes</b> . . . . .	<b>75</b>
<b>(C3xx, C5xx, C6xx) IPL status progress codes.</b> . . . . .	<b>79</b>
<b>(C7xx) Server firmware IPL status progress codes</b> . . . . .	<b>85</b>
<b>(C9xx) IPL status progress codes</b> . . . . .	<b>87</b>
<b>(CAxx) Partition firmware progress codes</b> . . . . .	<b>91</b>
<b>(CF00) Linux kernel boot progress codes</b> . . . . .	<b>107</b>
<b>(D1xx) Service processor firmware progress codes</b> . . . . .	<b>109</b>
<b>(D1xx) Service processor status progress codes</b> . . . . .	<b>111</b>
<b>(D1xx) Service processor dump status progress codes</b> . . . . .	<b>113</b>
<b>(D1xx) Platform dump status progress codes</b> . . . . .	<b>117</b>
<b>(D2xx) Partition status progress codes</b> . . . . .	<b>119</b>
<b>(D6xx) General status progress codes.</b> . . . . .	<b>121</b>
<b>(D9xx) General status progress codes.</b> . . . . .	<b>123</b>
<b>Notices</b> . . . . .	<b>125</b>
Trademarks . . . . .	126
Electronic emission notices . . . . .	126
Class A Notices. . . . .	127
Class B Notices. . . . .	130
Terms and conditions. . . . .	133



---

## Safety notices

Safety notices may be printed throughout this guide:

- **DANGER** notices call attention to a situation that is potentially lethal or extremely hazardous to people.
- **CAUTION** notices call attention to a situation that is potentially hazardous to people because of some existing condition.
- **Attention** notices call attention to the possibility of damage to a program, device, system, or data.

### World Trade safety information

Several countries require the safety information contained in product publications to be presented in their national languages. If this requirement applies to your country, a safety information booklet is included in the publications package shipped with the product. The booklet contains the safety information in your national language with references to the U.S. English source. Before using a U.S. English publication to install, operate, or service this product, you must first become familiar with the related safety information in the booklet. You should also refer to the booklet any time you do not clearly understand any safety information in the U.S. English publications.

### German safety information

Das Produkt ist nicht für den Einsatz an Bildschirmarbeitsplätzen im Sinne § 2 der Bildschirmarbeitsverordnung geeignet.

### Laser safety information

IBM® servers can use I/O cards or features that are fiber-optic based and that utilize lasers or LEDs.

### Laser compliance

IBM servers may be installed inside or outside of an IT equipment rack.

## DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- Connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices.

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. Attach the power cords to the outlets.
5. Turn on the devices.

(D005)

## DANGER

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

#### CAUTION

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

(R001)

**CAUTION:**

Removing components from the upper positions in the rack cabinet improves rack stability during relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building:

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions:
  - Remove all devices in the 32U position and above.
  - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
  - Ensure that there are no empty U-levels between devices installed in the rack cabinet below the 32U level.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 230 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
  - Lower the four leveling pads.
  - Install stabilizer brackets on the rack cabinet.
  - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off of the pallet and bolt the rack cabinet to the pallet.

(R002)


(L001)



(L002)



(L003)

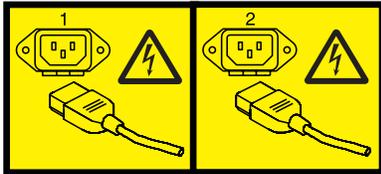

or



All lasers are certified in the U.S. to conform to the requirements of DHHS 21 CFR Subchapter J for class 1 laser products. Outside the U.S., they are certified to be in compliance with IEC 60825 as a class 1 laser product. Consult the label on each part for laser certification numbers and approval information.

**CAUTION:**

This product might contain one or more of the following devices: CD-ROM drive, DVD-ROM drive, DVD-RAM drive, or laser module, which are Class 1 laser products. Note the following information:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of the controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

(C026)

**CAUTION:**

Data processing environments can contain equipment transmitting on system links with laser modules that operate at greater than Class 1 power levels. For this reason, never look into the end of an optical fiber cable or open receptacle. (C027)

**CAUTION:**

This product contains a Class 1M laser. Do not view directly with optical instruments. (C028)

**CAUTION:**

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following information: laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam. (C030)

**CAUTION:**

The battery contains lithium. To avoid possible explosion, do not burn or charge the battery.

*Do Not:*

- \_\_\_ Throw or immerse into water
- \_\_\_ Heat to more than 100°C (212°F)
- \_\_\_ Repair or disassemble

Exchange only with the IBM-approved part. Recycle or discard the battery as instructed by local regulations. In the United States, IBM has a process for the collection of this battery. For information, call 1-800-426-4333. Have the IBM part number for the battery unit available when you call. (C003)

## **Power and cabling information for NEBS (Network Equipment-Building System) GR-1089-CORE**

The following comments apply to the IBM servers that have been designated as conforming to NEBS (Network Equipment-Building System) GR-1089-CORE:

The equipment is suitable for installation in the following:

- Network telecommunications facilities
- Locations where the NEC (National Electrical Code) applies

The intrabuilding ports of this equipment are suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding ports of this equipment *must not* be metallically connected to the interfaces that connect to the OSP (outside plant) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metallically to OSP wiring.

**Note:** All Ethernet cables must be shielded and grounded at both ends.

The ac-powered system does not require the use of an external surge protection device (SPD).

The dc-powered system employs an isolated DC return (DC-I) design. The DC battery return terminal *shall not* be connected to the chassis or frame ground.

---

## Progress codes overview

Progress codes (or checkpoints) offer information about the stages involved in powering on and performing initial program load (IPL). Progress codes do not always indicate an error. Use progress code information if your server has paused indefinitely without displaying a system reference code. The information provided indicates the most appropriate action for that progress code.

Use this information for reference only. To perform any service action, use the management console.



---

## AIX IPL progress codes

This section provides descriptions for the numbers and characters that display on the operator panel and descriptions of the location codes used to identify a particular item.

**Note:** The AIX® IPL progress codes occur only when running the AIX operating system or booting standalone diagnostics. The codes do not occur on servers running the Linux operating system or on Linux partitions.

### Operator panel display numbers

This section contains a list of the various numbers and characters that display in the operator panel display. There are three categories of numbers and characters.

- The first group tracks the progress of the configuration program.
- The second group tracks the progress of the diagnostics.
- The third group provides information about messages that follow an 888 sequence.

### AIX configuration program indicators

The numbers in this list display on the operator panel as the system loads the AIX operating system and prepares the hardware by loading software drivers.

**Note:** Some systems may produce 4-digit codes. If the leftmost digit of a 4-digit code is 0, use the three rightmost digits.

---

**02E6**      **02E6**

**Explanation:** The PCI Differential Ultra SCSI adapter or the Universal PCI Differential Ultra SCSI adapter being configured.

---

**02E7**      **02E7**

**Explanation:** Configuration method unable to determine if the SCSI adapter type is SE or DE type.

---

**0440**      **0440**

**Explanation:** 9.1GB Ultra SCSI Disk Drive being identified or configured.

---

**0441**      **0441**

**Explanation:** 18.2 GB Ultra SCSI Disk Drive being identified or configured.

---

**0444**      **0444**

**Explanation:** 2-Port Multiprotocol PCI Adapter (ASIC) being identified or configured.

---

**0447**      **0447**

**Explanation:** PCI 64-bit Fibre Channel Arbitrated Loop Adapter being configured.

---

**0458**      **0458**

**Explanation:** 36 GB DAT72 Tape Drive

---

**0459**      **0459**

**Explanation:** 36 GB DAT72 Tape Drive

---

**045D**      **045D**

**Explanation:** 200 GB HH LTO2 Tape drive

---

**0500**      **0500**

**Explanation:** Querying Standard I/O slot.

---

**0501**      **0501**

**Explanation:** Querying card in Slot 1.

---

**0502**      **0502**

**Explanation:** Querying card in Slot 2.

---

**0503**      **0503**

## 0504 • 0530

**Explanation:** Querying card in Slot 3.

---

0504      0504

**Explanation:** Querying card in Slot 4.

---

0505      0505

**Explanation:** Querying card in Slot 5.

---

0506      0506

**Explanation:** Querying card in Slot 6.

---

0507      0507

**Explanation:** Querying card in Slot 7.

---

0508      0508

**Explanation:** Querying card in Slot 8.

---

0510      0510

**Explanation:** Starting device configuration.

---

0511      0511

**Explanation:** Device configuration completed.

---

0512      0512

**Explanation:** Restoring device configuration files from media.

---

0513      0513

**Explanation:** Restoring basic operating system installation files from media.

---

0516      0516

**Explanation:** Contacting server during network boot.

---

0517      0517

**Explanation:** Mounting client remote file system during network IPL.

---

0518      0518

**Explanation:** Remote mount of the **root (/)** and **/usr** file systems failed during network boot.

---

0520      0520

**Explanation:** Bus configuration running.

---

0521      0521

**Explanation:** **/etc/init** invoked **cfgmgr** with invalid options; **/etc/init** has been corrupted or incorrectly modified (irrecoverable error).

---

0522      0522

**Explanation:** The configuration manager has been invoked with conflicting options (irrecoverable error).

---

0523      0523

**Explanation:** The configuration manager is unable to access the ODM database (irrecoverable error).

---

0524      0524

**Explanation:** The configuration manager is unable to access the **config.rules** object in the ODM database (irrecoverable error).

---

0525      0525

**Explanation:** The configuration manager is unable to get data from a customized device object in the ODM database (irrecoverable error).

---

0526      0526

**Explanation:** The configuration manager is unable to get data from a customized device driver object in the ODM database (irrecoverable error).

---

0527      0527

**Explanation:** The configuration manager was invoked with the phase 1 flag; running phase 1 at this point is not permitted (irrecoverable error).

---

0528      0528

**Explanation:** The configuration manager cannot find sequence rule, or no program name was specified in the ODM database (irrecoverable error).

---

0529      0529

**Explanation:** The configuration manager is unable to update ODM data (irrecoverable error).

---

0530      0530

**Explanation:** The **savebase** program returned an error.

---

---

0531      0531

**Explanation:** The configuration manager is unable to access the PdAt object class (irrecoverable error).

---

0532      0532

**Explanation:** There is not enough memory to continue (malloc failure); irrecoverable error.

---

0533      0533

**Explanation:** The configuration manager could not find a configuration method for a device.

---

0534      0534

**Explanation:** The configuration manager could not find a configuration method for a device.

---

0535      0535

**Explanation:** HIPPI diagnostics interface driver being configured.

---

0536      0536

**Explanation:** The configuration manager encountered more than one sequence rule specified in the same phase (irrecoverable error).

---

0537      0537

**Explanation:** The configuration manager encountered an error when invoking the program in the sequence rule.

---

0538      0538

**Explanation:** The configuration manager is going to invoke a configuration method.

---

0539      0539

**Explanation:** The configuration method has terminated, and control has returned to the configuration manager.

---

0541      0541

**Explanation:** A DLT tape device is being configured.

---

0542      0542

**Explanation:** 7208-345 60 GB tape drive, 7334-410 60 GB tape drive

---



---

0549      0549

**Explanation:** Console could not be configured for the Copy a System Dump Menu.

---

0551      0551

**Explanation:** IPL vary-on is running.

---

0552      0552

**Explanation:** IPL vary-on failed.

---

0553      0553

**Explanation:** IPL phase 1 is complete.

---

0554      0554

**Explanation:** The boot device could not be opened or read, or unable to define NFS swap device during network boot.

---

0555      0555

**Explanation:** An ODM error occurred when trying to vary-on the rootvg, or unable to create an NFS swap device during network boot.

---

0556      0556

**Explanation:** Logical Volume Manager encountered error during IPL vary-on.

---

0557      0557

**Explanation:** The root file system does not mount.

---

0558      0558

**Explanation:** There is not enough memory to continue the system IPL.

---

0559      0559

**Explanation:** Less than 2 MB of good memory are available to load the AIX kernel.

---

0569      0569

**Explanation:** FCS SCSI protocol device is being configured (32 bits).

---

0570      0570

**Explanation:** Virtual SCSI devices being configured.

---

---

0571      0571

**Explanation:** HIPPI common function device driver being configured.

---

0572      0572

**Explanation:** HIPPI IPI-3 master transport driver being configured.

---

0573      0573

**Explanation:** HIPPI IPI-3 slave transport driver being configured.

---

0574      0574

**Explanation:** HIPPI IPI-3 transport services user interface device driver being configured.

---

0575      0575

**Explanation:** A 9570 disk-array driver being configured.

---

0576      0576

**Explanation:** Generic async device driver being configured.

---

0577      0577

**Explanation:** Generic SCSI device driver being configured.

---

0578      0578

**Explanation:** Generic commo device driver being configured.

---

0579      0579

**Explanation:** Device driver being configured for a generic device.

---

0580      0580

**Explanation:** HIPPI TCP/IP network interface driver being configured.

---

0581      0581

**Explanation:** Configuring TCP/IP.

---

0582      0582

**Explanation:** Configuring Token-Ring data link control.

---



---

0583      0583

**Explanation:** Configuring an Ethernet data link control.

---

0584      0584

**Explanation:** Configuring an IEEE Ethernet data link control.

---

0585      0585

**Explanation:** Configuring an SDLC MPQP data link control.

---

0586      0586

**Explanation:** Configuring a QLLC X.25 data link control.

---

0587      0587

**Explanation:** Configuring a NETBIOS.

---

0588      0588

**Explanation:** Configuring a Bisync Read-Write (BSCRW).

---

0589      0589

**Explanation:** SCSI target mode device being configured.

---

0590      0590

**Explanation:** Diskless remote paging device being configured.

---

0591      0591

**Explanation:** Configuring an LVM device driver.

---

0592      0592

**Explanation:** Configuring an HFT device driver.

---

0593      0593

**Explanation:** Configuring SNA device drivers.

---

0594      0594

**Explanation:** Asynchronous I/O being defined or configured.

---

---

**0595**      **0595**  
**Explanation:** X.31 pseudo-device being configured.

---

**0596**      **0596**  
**Explanation:** SNA DLC/LAPE pseudo-device being configured.

---

**0597**      **0597**  
**Explanation:** OCS software being configured.

---

**0598**      **0598**  
**Explanation:** OCS hosts being configured during system reboot.

---

**0599**      **0599**  
**Explanation:** Configuring FDDI data link control.

---

**059B**      **059B**  
**Explanation:** FCS SCSI protocol device being configured (64 bits).

---

**05C0**      **05C0**  
**Explanation:** Streams-based hardware drive being configured.

---

**05C1**      **05C1**  
**Explanation:** Streams-based X.25 protocol being configured.

---

**05C2**      **05C2**  
**Explanation:** Streams-based X.25 COMIO emulator driver being configured.

---

**05C3**      **05C3**  
**Explanation:** Streams-based X.25 TCP/IP interface driver being configured.

---

**05C4**      **05C4**  
**Explanation:** FCS adapter device driver being configured.

---

**05C5**      **05C5**  
**Explanation:** SCB network device driver for FCS being configured.

---



---

**05C6**      **05C6**  
**Explanation:** AIX SNA channel being configured.

---

**0600**      **0600**  
**Explanation:** Starting network boot portion of `/sbin/rc.boot`.

---

**0602**      **0602**  
**Explanation:** Configuring network parent devices.

---

**0603**      **0603**  
**Explanation:** `/usr/lib/methods/defsys`, `/usr/lib/methods/cfgsys`, or `/usr/lib/methods/cfgbus` failed.

---

**0604**      **0604**  
**Explanation:** Configuring physical network boot device.

---

**0605**      **0605**  
**Explanation:** Configuration of physical network boot device failed.

---

**0606**      **0606**  
**Explanation:** Running `/usr/sbin/ifconfig` on logical network boot device.

---

**0607**      **0607**  
**Explanation:** `/usr/sbin/ifconfig` failed.

---

**0608**      **0608**  
**Explanation:** Attempting to retrieve the `client.info` file with `tftp`. **Note:** Note that a flashing 608 indicates multiple attempt(s) to retrieve the `client_info` file are occurring.

---

**0609**      **0609**  
**Explanation:** The `client.info` file does not exist or it is zero length.

---

**060B**      **060B**  
**Explanation:** 18.2 GB 68-pin LVD SCSI Disk Drive being configured.

---

## 0610 • 063A

---

**0610**      **0610**

**Explanation:** Attempting remote mount of NFS file system.

---

**0611**      **0611**

**Explanation:** Remote mount of the NFS file system failed.

---

**0612**      **0612**

**Explanation:** Accessing remote files; unconfiguring network boot device.

---

**0613**      **0613**

**Explanation:** 8 mm 80 GB VXA-2 tape device

---

**0614**      **0614**

**Explanation:** Configuring local paging devices.

---

**0615**      **0615**

**Explanation:** Configuration of a local paging device failed.

---

**0616**      **0616**

**Explanation:** Converting from diskless to dataless configuration.

---

**0617**      **0617**

**Explanation:** Diskless to dataless configuration failed.

---

**0618**      **0618**

**Explanation:** Configuring remote (NFS) paging devices.

---

**0619**      **0619**

**Explanation:** Configuration of a remote (NFS) paging device failed.

---

**061B**      **061B**

**Explanation:** 36.4 GB 80-pin LVD SCSI Disk Drive being configured.

---

**061D**      **061D**

**Explanation:** 36.4 GB 80-pin LVD SCSI Disk Drive being configured.

---

---

**061E**      **061E**

**Explanation:** 18.2 GB 68-pin LVD SCSI Disk Drive being configured.

---

**0620**      **0620**

**Explanation:** Updating special device files and ODM in permanent file system with data from boot RAM file system.

---

**0621**      **0621**

**Explanation:** 9.1 GB LVD 80-pin SCSI Drive being configured.

---

**0622**      **0622**

**Explanation:** Boot process configuring for operating system installation.

---

**062D**      **062D**

**Explanation:** 9.1 GB 68-pin LVD SCSI Disk Drive being configured.

---

**062E**      **062E**

**Explanation:** 9.1GB 68-pin LVD SCSI Disk Drive being configured.

---

**0636**      **0636**

**Explanation:** TURBOWAYS™ 622 Mbps PCI MMF ATM Adapter.

---

**0637**      **0637**

**Explanation:** Dual Channel PCI-2 Ultra2 SCSI Adapter being configured.

---

**0638**      **0638**

**Explanation:** 4.5 GB Ultra SCSI Single Ended Disk Drive being configured.

---

**0639**      **0639**

**Explanation:** 9.1 GB 10K RPM Ultra SCSI Disk Drive (68-pin).

---

**063A**      **063A**

**Explanation:** See 62D.

---

---

**063B**      **063B****Explanation:** 9.1 GB 80-pin LVD SCSI Disk Drive being configured.

---

**063C**      **063C****Explanation:** See 60B.

---

**063D**      **063D****Explanation:** 18.2 GB 80-pin LVD SCSI Disk Drive being configured.

---

**063E**      **063E****Explanation:** 36.4 GB 68-pin LVD SCSI Disk Drive being configured.

---

**063F**      **063F****Explanation:** See 61B.

---

**0640**      **0640****Explanation:** 9.1 GB 10K RPM Ultra SCSI Disk Drive (80-pin).

---

**0643**      **0643****Explanation:** 18.2 GB LVD 80-pin SCA-2 connector SCSI Disk Drive being configured.

---

**0646**      **0646****Explanation:** High-Speed Token-Ring PCI Adapter being configured.

---

**064A**      **064A****Explanation:** See 62E.

---

**064B**      **064B****Explanation:** 9.1 GB 80-pin LVD SCSI Disk Drive being configured.

---

**064C**      **064C****Explanation:** See 61E.

---

**064D**      **064D****Explanation:** 18.2 GB LVD 80-pin Drive/Carrier being configured.

---

**064E**      **064E****Explanation:** 36.4 GB 68-pin LVD SCSI Disk Drive being configured.

---

**064F**      **064F****Explanation:** See 61D.

---

**0650**      **0650****Explanation:** SCSD disk drive being configured.

---

**0653**      **0653****Explanation:** 18.2 GB Ultra-SCSI 16-bit Disk Drive being configured.

---

**0655**      **0655****Explanation:** GXT130P Graphics adapter being configured.

---

**0657**      **0657****Explanation:** GXT2000P graphics adapter being configured.

---

**0658**      **0658****Explanation:** 2102 Fibre Channel Disk Subsystem Controller Drawer being identified or configured.

---

**0663**      **0663****Explanation:** The ARTIC960RxD Digital Trunk Quad PCI Adapter or the ARTIC960RxF Digital Trunk Resource Adapter being configured.

---

**0664**      **0664****Explanation:** 32x (MAX) SCSI-2 CD-ROM drive being configured.

---

**0667**      **0667****Explanation:** PCI 3-Channel Ultra2 SCSI RAID Adapter being configured.

---

**0669**      **0669****Explanation:** PCI Gigabit Ethernet Adapter being configured.

---

**066A**      **066A****Explanation:** PCI Gigabit Ethernet Adapter being configured.

---

**066C**      **066C**  
**Explanation:** 10/100/1000 Base-T Ethernet PCI Adapter.

---

**066D**      **066D**  
**Explanation:** PCI 4-Channel Ultra-3 SCSI RAID Adapter.

---

**066E**      **066E**  
**Explanation:** 4.7 GB DVD-RAM drive.

---

**0674**      **0674**  
**Explanation:** ESCON™ Channel PCI Adapter being configured.

---

**0678**      **0678**  
**Explanation:** 12 GB 4 mm SCSI tape drive

---

**067B**      **067B**  
**Explanation:** PCI Cryptographic Coprocessor being configured.

---

**0682**      **0682**  
**Explanation:** 20x0 (MAX) SCSI-2 CD-ROM Drive being configured.

---

**0689**      **0689**  
**Explanation:** 4.5 GB Ultra SCSI Single Ended Disk Drive being configured.

---

**068C**      **068C**  
**Explanation:** 20 GB 4-mm Tape Drive being configured.

---

**068E**      **068E**  
**Explanation:** POWER GXT6000P PCI Graphics Adapter.

---

**0690**      **0690**  
**Explanation:** 9.1 GB Ultra SCSI Single Ended Disk Drive being configured.

---

**069B**      **069B**  
**Explanation:** 64-bit/66 MHz PCI ATM 155 MMF PCI adapter being configured.

---

**069D**      **069D**  
**Explanation:** 64-bit/66 MHz PCI ATM 155 UTP PCI adapter being configured.

---

**06CC**      **06CC**  
**Explanation:** SSA disk drive being configured.

---

**0700**      **0700**  
**Explanation:** A 1.1 GB 8-bit SCSI disk drive being identified or configured.

---

**0701**      **0701**  
**Explanation:** A 1.1 GB 16-bit SCSI disk drive being identified or configured.

---

**0702**      **0702**  
**Explanation:** A 1.1 GB 16-bit differential SCSI disk drive being identified or configured.

---

**0703**      **0703**  
**Explanation:** A 2.2 GB 8-bit SCSI disk drive being identified or configured.

---

**0704**      **0704**  
**Explanation:** A 2.2 GB 16-bit SCSI disk drive being identified or configured.

---

**0705**      **0705**  
**Explanation:** The configuration method for the 2.2 GB 16-bit differential SCSI disk drive is being run. If an irrecoverable error occurs, the system halts.

---

**0706**      **0706**  
**Explanation:** A 4.5 GB 16-bit SCSI disk drive being identified or configured.

---

**0707**      **0707**  
**Explanation:** A 4.5 GB 16-bit differential SCSI disk drive being identified or configured.

---

**0708**      **0708**  
**Explanation:** An L2 cache being identified or configured.

---

---

**0709**      **0709**

**Explanation:** 128 port ISA adapter being configured

---

**0710**      **0710**

**Explanation:** POWER GXT150M graphics adapter being identified or configured.

---

**0711**      **0711**

**Explanation:** Unknown adapter being identified or configured.

---

**0712**      **0712**

**Explanation:** Graphics slot bus configuration is executing.

---

**0713**      **0713**

**Explanation:** The IBM ARTIC960 device being configured.

---

**0714**      **0714**

**Explanation:** A video capture adapter being configured.

---

**0717**      **0717**

**Explanation:** TP Ethernet Adapter being configured.

---

**0718**      **0718**

**Explanation:** GXT500 Graphics Adapter being configured.

---

**0720**      **0720**

**Explanation:** Unknown read/write optical drive type being configured.

---

**0721**      **0721**

**Explanation:** Unknown disk or SCSI device being identified or configured.

---

**0722**      **0722**

**Explanation:** Unknown disk drive being identified or configured.

---

**0723**      **0723**

**Explanation:** Unknown CD-ROM drive being identified or configured.

---



---

**0724**      **0724**

**Explanation:** Unknown tape drive being identified or configured.

---

**0725**      **0725**

**Explanation:** Unknown display adapter being identified or configured.

---

**0726**      **0726**

**Explanation:** Unknown input device being identified or configured.

---

**0727**      **0727**

**Explanation:** Unknown async device being identified or configured.

---

**0728**      **0728**

**Explanation:** Parallel printer being identified or configured.

---

**0729**      **0729**

**Explanation:** Unknown parallel device being identified or configured.

---

**0730**      **0730**

**Explanation:** Unknown diskette drive being identified or configured.

---

**0731**      **0731**

**Explanation:** PTY being identified or configured.

---

**0732**      **0732**

**Explanation:** Unknown SCSI initiator type being configured.

---

**0733**      **0733**

**Explanation:** 7 GB 8-mm tape drive being configured.

---

**0734**      **0734**

**Explanation:** 4x SCSI-2 640 MB CD-ROM Drive being configured.

---

**0736**      **0736**

**Explanation:** Quiet Touch keyboard and speaker cable being configured.

---

## 0741 • 078B

---

**0741**      **0741**  
**Explanation:** 1080 MB SCSI Disk Drive being configured.

---

**0745**      **0745**  
**Explanation:** 16 GB 4-mm Tape Auto Loader being configured.

---

**0746**      **0746**  
**Explanation:** SCSI-2 Fast/Wide PCI Adapter being configured.

---

**0747**      **0747**  
**Explanation:** SCSI-2 Differential Fast/Wide PCI Adapter being configured.

---

**0749**      **0749**  
**Explanation:** 7331 Model 205 Tape Library being configured.

---

**0751**      **0751**  
**Explanation:** SCSI 32-bit SE F/W RAID Adapter being configured.

---

**0754**      **0754**  
**Explanation:** 1.1 GB 16-bit SCSI disk drive being configured.

---

**0755**      **0755**  
**Explanation:** 2.2 GB 16-bit SCSI disk drive being configured.

---

**0756**      **0756**  
**Explanation:** 4.5 GB 16-bit SCSI disk drive being configured.

---

**0757**      **0757**  
**Explanation:** External 13 GB 1/4-inch tape being configured.

---

**0763**      **0763**  
**Explanation:** SP Switch MX Adapter being configured.

---

**0764**      **0764**  
**Explanation:** SP System Attachment Adapter being configured.

---

---

**0772**      **0772**  
**Explanation:** 4.5 GB SCSI F/W Disk Drive being configured.

---

**0773**      **0773**  
**Explanation:** 9.1 GB SCSI F/W Disk Drive being configured.

---

**0774**      **0774**  
**Explanation:** 9.1 GB External SCSI Disk Drive being configured.

---

**0776**      **0776**  
**Explanation:** PCI Token-Ring Adapter being identified or configured.

---

**0777**      **0777**  
**Explanation:** 10/100 Ethernet Tx PCI Adapter being identified or configured.

---

**0778**      **0778**  
**Explanation:** POWER GXT3000P 3D PCI Graphics adapter being configured.

---

**077B**      **077B**  
**Explanation:** 4-Port 10/100 Ethernet Tx PCI Adapter being identified or configured.

---

**077C**      **077C**  
**Explanation:** A 1.0 GB 16-bit SCSI disk drive being identified or configured.

---

**0783**      **0783**  
**Explanation:** 4-mm DDS-2 Tape Autoloader being configured.

---

**0789**      **0789**  
**Explanation:** 2.6 GB External Optical Drive being configured.

---

**078B**      **078B**  
**Explanation:** POWER GXT4000P PCI Graphics Adapter.

---

---

**078D**      **078D**

**Explanation:** GXT300P 2D Graphics adapter being configured.

---

**0790**      **0790**

**Explanation:** Multi-bus Integrated Ethernet Adapter being identified or configured.

---

**0797**      **0797**

**Explanation:** TURBOWAYS 155 UTP/STP ATM Adapter being identified or configured.

---

**0798**      **0798**

**Explanation:** Video streamer adapter being identified or configured.

---

**0799**      **0799**

**Explanation:** 2-Port Multiprotocol PCI adapter being identified or configured.

---

**079C**      **079C**

**Explanation:** ISA bus configuration executing.

---

**07C0**      **07C0**

**Explanation:** CPU/System Interface being configured.

---

**07C1**      **07C1**

**Explanation:** Business Audio Subsystem being identified or configured.

---

**07CC**      **07CC**

**Explanation:** PCMCIA bus configuration executing.

---

**0800**      **0800**

**Explanation:** TURBOWAYS 155 MMF ATM Adapter being identified or configured.

---

**0803**      **0803**

**Explanation:** 7336 Tape Library robotics being configured.

---

**0804**      **0804**

**Explanation:** 8x Speed SCSI-2 CD-ROM Drive being configured.

---



---

**0806**      **0806**

**Explanation:** POWER GXT800 PCI Graphics adapter being configured.

---

**0807**      **0807**

**Explanation:** SCSI Device Enclosure being configured.

---

**080C**      **080C**

**Explanation:** SSA 4-Port Adapter being identified or configured.

---

**0811**      **0811**

**Explanation:** Processor complex being identified or configured.

---

**0812**      **0812**

**Explanation:** Memory being identified or configured.

---

**0813**      **0813**

**Explanation:** Battery for time-of-day, NVRAM, and so on being identified or configured, or system I/O control logic being identified or configured.

---

**0814**      **0814**

**Explanation:** NVRAM being identified or configured.

---

**0815**      **0815**

**Explanation:** Floating-point processor test.

---

**0816**      **0816**

**Explanation:** Operator panel logic being identified or configured.

---

**0817**      **0817**

**Explanation:** Time-of-day logic being identified or configured.

---

**0819**      **0819**

**Explanation:** Graphics input device adapter being identified or configured.

---

**0821**      **0821**

**Explanation:** Standard keyboard adapter being identified or configured.

---

---

**0823**      **0823**

**Explanation:** Standard mouse adapter being identified or configured.

---

**0824**      **0824**

**Explanation:** Standard tablet adapter being identified or configured.

---

**0825**      **0825**

**Explanation:** Standard speaker adapter being identified or configured.

---

**0826**      **0826**

**Explanation:** Serial Port 1 adapter being identified or configured.

---

**0827**      **0827**

**Explanation:** Parallel port adapter being identified or configured.

---

**0828**      **0828**

**Explanation:** Standard diskette adapter being identified or configured.

---

**0831**      **0831**

**Explanation:** 3151 adapter being identified or configured, or Serial Port 2 being identified or configured.

---

**0834**      **0834**

**Explanation:** 64-port async controller being identified or configured.

---

**0835**      **0835**

**Explanation:** 16-port async concentrator being identified or configured.

---

**0836**      **0836**

**Explanation:** 128-port async controller being identified or configured.

---

**0837**      **0837**

**Explanation:** A 128-port remote asynchronous node (RAN) is being identified or configured.

---

**0838**      **0838**

**Explanation:** Network Terminal Accelerator Adapter being identified or configured.

---

**0839**      **0839**

**Explanation:** 7318 Serial Communications Server being configured.

---

**0840**      **0840**

**Explanation:** PCI Single-Ended Ultra SCSI Adapter being configured.

---

**0841**      **0841**

**Explanation:** 8-port async adapter (EIA-232) being identified or configured.

---

**0842**      **0842**

**Explanation:** 8-port async adapter (EIA-422A) being identified or configured.

---

**0843**      **0843**

**Explanation:** 8-port async adapter (MIL-STD-188) being identified or configured.

---

**0844**      **0844**

**Explanation:** 7135 RAIDiant Array disk drive subsystem controller being identified or configured.

---

**0845**      **0845**

**Explanation:** 7135 RAIDiant Array disk drive subsystem drawer being identified or configured.

---

**0846**      **0846**

**Explanation:** RAIDiant Array SCSI 1.3 GB Disk Drive being configured.

---

**0847**      **0847**

**Explanation:** 16-port serial adapter (EIA-232) being identified or configured.

---

**0848**      **0848**

**Explanation:** 16-port serial adapter (EIA-422) being identified or configured.

---

---

0849      0849

**Explanation:** X.25 Interface Coprocessor/2 adapter being identified or configured.

---

0850      0850

**Explanation:** Token-Ring network adapter being identified or configured.

---

0851      0851

**Explanation:** T1/J1 Portmaster adapter being identified or configured.

---

0852      0852

**Explanation:** Ethernet adapter being identified or configured.

---

0854      0854

**Explanation:** 3270 Host Connection Program/6000 connection being identified or configured.

---

0855      0855

**Explanation:** Portmaster Adapter/A being identified or configured.

---

0857      0857

**Explanation:** FSLA adapter being identified or configured.

---

0858      0858

**Explanation:** 5085/5086/5088 adapter being identified or configured.

---

0859      0859

**Explanation:** FDDI adapter being identified or configured.

---

085C      085C

**Explanation:** Token-Ring High-Performance LAN adapter being identified or configured.

---

0861      0861

**Explanation:** Optical adapter being identified or configured.

---



---

0862      0862

**Explanation:** Block Multiplexer Channel Adapter being identified or configured.

---

0865      0865

**Explanation:** ESCON<sup>®</sup> Channel Adapter or emulator being identified or configured.

---

0866      0866

**Explanation:** SCSI adapter being identified or configured.

---

0867      0867

**Explanation:** Async expansion adapter being identified or configured.

---

0868      0868

**Explanation:** SCSI adapter being identified or configured.

---

0869      0869

**Explanation:** SCSI adapter being identified or configured.

---

0870      0870

**Explanation:** Serial disk drive adapter being identified or configured.

---

0871      0871

**Explanation:** Graphics subsystem adapter being identified or configured.

---

0872      0872

**Explanation:** Grayscale graphics adapter being identified or configured.

---

0874      0874

**Explanation:** Color graphics adapter being identified or configured.

---

0875      0875

**Explanation:** Vendor generic communication adapter being configured.

---

---

0876      0876

**Explanation:** 8-bit color graphics processor being identified or configured.

---

0877      0877

**Explanation:** POWER Gt3/POWER Gt4 being identified or configured.

---

0878      0878

**Explanation:** POWER Gt4 graphics processor card being configured.

---

0879      0879

**Explanation:** A 24-bit color MEV2 type graphics card is being configured.

---

0880      0880

**Explanation:** POWER Gt1 adapter being identified or configured.

---

0887      0887

**Explanation:** POWER Gt1 adapter being identified or configured.

---

0889      0889

**Explanation:** SCSI adapter being identified or configured.

---

0890      0890

**Explanation:** SCSI-2 Differential Fast/Wide and Single-Ended Fast/Wide Adapter/A being configured.

---

0891      0891

**Explanation:** Vendor SCSI adapter being identified or configured.

---

0892      0892

**Explanation:** Vendor display adapter being identified or configured.

---

0893      0893

**Explanation:** Vendor LAN adapter being identified or configured.

---



---

0894      0894

**Explanation:** Vendor async/communications adapter being identified or configured.

---

0895      0895

**Explanation:** Vendor IEEE 488 adapter being identified or configured.

---

0896      0896

**Explanation:** Vendor VME bus adapter being identified or configured.

---

0897      0897

**Explanation:** S/370 Channel Emulator adapter being identified or configured.

---

0898      0898

**Explanation:** POWER Gt1x graphics adapter being identified or configured.

---

0899      0899

**Explanation:** 3490 attached tape drive being identified or configured.

---

089C      089C

**Explanation:** A multimedia SCSI CD-ROM being identified or configured.

---

0900      0900

**Explanation:** GXT110P Graphics Adapter being identified or configured.

---

0901      0901

**Explanation:** Vendor SCSI device being identified or configured.

---

0902      0902

**Explanation:** Vendor display device being identified or configured.

---

0903      0903

**Explanation:** Vendor async device being identified or configured.

---

---

**0904**      **0904**

**Explanation:** Vendor parallel device being identified or configured.

---

**0905**      **0905**

**Explanation:** A vendor (non-IBM) adapter is being identified or configured.

---

**0908**      **0908**

**Explanation:** POWER GXT1000™ Graphics subsystem being identified or configured.

---

**0910**      **0910**

**Explanation:** 1/4 GB Fiber Channel/266 Standard Adapter being identified or configured.

---

**0911**      **0911**

**Explanation:** Fiber Channel/1063 Adapter Short Wave being configured.

---

**0912**      **0912**

**Explanation:** 2.0 GB SCSI-2 differential disk drive being identified or configured.

---

**0913**      **0913**

**Explanation:** 1.0 GB differential disk drive being identified or configured.

---

**0914**      **0914**

**Explanation:** 5 GB 8-mm differential tape drive being identified or configured.

---

**0915**      **0915**

**Explanation:** 4 GB 4-mm tape drive being identified or configured.

---

**0916**      **0916**

**Explanation:** A generic (non-IBM) Non-SCSI tape drive adapter is being identified or configured.

---

**0917**      **0917**

**Explanation:** A 2.0 GB 16-bit differential SCSI disk drive being identified or configured.

---



---

**0918**      **0918**

**Explanation:** A 2.0 GB 16-bit single-ended SCSI disk drive being identified or configured.

---

**0920**      **0920**

**Explanation:** Bridge Box being identified or configured.

---

**0921**      **0921**

**Explanation:** 101 keyboard being identified or configured.

---

**0922**      **0922**

**Explanation:** 102 keyboard being identified or configured.

---

**0923**      **0923**

**Explanation:** Kanji keyboard being identified or configured.

---

**0924**      **0924**

**Explanation:** Two-button mouse being identified or configured.

---

**0925**      **0925**

**Explanation:** Three-button mouse being identified or configured.

---

**0926**      **0926**

**Explanation:** 5083 tablet being identified or configured.

---

**0927**      **0927**

**Explanation:** 5083 tablet being identified or configured.

---

**0928**      **0928**

**Explanation:** Standard speaker being identified or configured.

---

**0929**      **0929**

**Explanation:** Dials being identified or configured.

---

**0930**      **0930**

**Explanation:** Lighted program function keys (LPFK) being identified or configured.

---

---

**0931**      **0931**
**Explanation:** IP router being identified or configured.
 

---

**0933**      **0933**
**Explanation:** Async planar being identified or configured.
 

---

**0934**      **0934**
**Explanation:** Async expansion drawer being identified or configured.
 

---

**0935**      **0935**
**Explanation:** 3.5-inch diskette drive being identified or configured.
 

---

**0936**      **0936**
**Explanation:** 5.25-inch diskette drive being identified or configured.
 

---

**0937**      **0937**
**Explanation:** An HIPPI adapter being configured.
 

---

**0938**      **0938**
**Explanation:** Serial HIPPI PCI adapter being configured.
 

---

**0942**      **0942**
**Explanation:** Serial HIPPI PCI adapter being configured.
 

---

**0943**      **0943**
**Explanation:** A 3480 or 3490 control unit attached to a System/370 Channel Emulator/A adapter are being identified or configured.
 

---

**0944**      **0944**
**Explanation:** 100 MB ATM adapter being identified or configured.
 

---

**0945**      **0945**
**Explanation:** 1.0 GB SCSI differential disk drive being identified or configured.
 

---

**0946**      **0946**
**Explanation:** A generic (non-IBM) Serial Port 3 adapter is being identified or configured.
 

---



---

**0947**      **0947**
**Explanation:** A 730 MB SCSI disk drive being configured.
 

---

**0948**      **0948**
**Explanation:** Portable disk drive being identified or configured.
 

---

**0949**      **0949**
**Explanation:** Unknown direct bus-attach device being identified or configured.
 

---

**0950**      **0950**
**Explanation:** Missing SCSI device being identified or configured.
 

---

**0951**      **0951**
**Explanation:** 670 MB SCSI disk drive being identified or configured.
 

---

**0952**      **0952**
**Explanation:** 355 MB SCSI disk drive being identified or configured.
 

---

**0953**      **0953**
**Explanation:** 320 MB SCSI disk drive being identified or configured.
 

---

**0954**      **0954**
**Explanation:** 400 MB SCSI disk drive being identified or configured.
 

---

**0955**      **0955**
**Explanation:** 857 MB SCSI disk drive being identified or configured.
 

---

**0956**      **0956**
**Explanation:** 670 MB SCSI disk drive electronics card being identified or configured.
 

---

**0957**      **0957**
**Explanation:** 120 MB DBA disk drive being identified or configured.
 

---

---

0958      0958

**Explanation:** 160 MB Database Administrator (DBA) disk drive being identified or configured.

---

0959      0959

**Explanation:** 160 MB SCSI disk drive being identified or configured.

---

0960      0960

**Explanation:** 1.37 GB SCSI disk drive being identified or configured.

---

0964      0964

**Explanation:** Internal 20 GB 8-mm tape drive identified or configured.

---

0968      0968

**Explanation:** 1.0 GB SCSI disk drive being identified or configured.

---

0970      0970

**Explanation:** Half-inch, 9-track tape drive being identified or configured.

---

0971      0971

**Explanation:** 150 MB 1/4-inch tape drive being identified or configured.

---

0972      0972

**Explanation:** 2.3 GB 8-mm SCSI tape drive being identified or configured.

---

0973      0973

**Explanation:** Other SCSI tape drive being identified or configured.

---

0974      0974

**Explanation:** CD-ROM drive being identified or configured.

---

0975      0975

**Explanation:** An optical disk drive being identified or configured.

---



---

0977      0977

**Explanation:** M-Audio Capture and Playback Adapter being identified or configured.

---

0981      0981

**Explanation:** 540 MB SCSI-2 single-ended disk drive being identified or configured.

---

0984      0984

**Explanation:** 1 GB 8-bit disk drive being identified or configured.

---

0985      0985

**Explanation:** M-Video Capture Adapter being identified or configured.

---

0986      0986

**Explanation:** 2.4 GB SCSI disk drive being identified or configured.

---

0987      0987

**Explanation:** An Enhanced SCSI CD-ROM drive being identified or configured.

---

0989      0989

**Explanation:** 200 MB SCSI disk drive being identified or configured.

---

0990      0990

**Explanation:** 2.0 GB SCSI-2 single-ended disk drive being identified or configured.

---

0991      0991

**Explanation:** 525 MB 1/4-inch cartridge tape drive being identified or configured.

---

0994      0994

**Explanation:** 5 GB 8-mm tape drive being identified or configured.

---

0995      0995

**Explanation:** 1.2GB 1/4-inch cartridge tape drive being identified or configured.

---

## 0996 • 201B

---

**0996**      **0996**  
**Explanation:** A single-port, multiprotocol communications adapter being identified or configured.

---

**0997**      **0997**  
**Explanation:** FDDI adapter being identified or configured.

---

**0998**      **0998**  
**Explanation:** 2.0 GB 4-mm tape drive being identified or configured.

---

**0999**      **0999**  
**Explanation:** 7137 or 3514 Disk Array Subsystem being configured.

---

**0D46**      **0D46**  
**Explanation:** Token-Ring cable.

---

**0D81**      **0D81**  
**Explanation:** T2 Ethernet Adapter being configured.

---

**2000**      **2000**  
**Explanation:** Dynamic LPAR CPU Addition

---

**2001**      **2001**  
**Explanation:** Dynamic LPAR CPU Removal

---

**2002**      **2002**  
**Explanation:** Dynamic LPAR Memory Addition

---

**2003**      **2003**  
**Explanation:** Dynamic LPAR Memory Removal

---

**2004**      **2004**  
**Explanation:** DLPAR Maximum Memory size too large

---

**2005**      **2005**  
**Explanation:** Partition migration operation in progress

---

**2006**      **2006**  
**Explanation:** Partition hibernation phase in progress

---

---

**2007**      **2007**  
**Explanation:** Dynamic LPAR Encryption Accelerator operation in progress

---

**2010**      **2010**  
**Explanation:** HTX miscompare

---

**2011**      **2011**  
**Explanation:** Configuring device model 2107 fcp

---

**2012**      **2012**  
**Explanation:** Configuring device model 2107 iscsi

---

**2013**      **2013**  
**Explanation:** Configuring MR-1750 (device model 1750) fcp

---

**2014**      **2014**  
**Explanation:** Configuring MR-1750 (device model 1750) iscsi

---

**2015**      **2015**  
**Explanation:** Configuring SVC (device model 2145) fcp

---

**2016**      **2016**  
**Explanation:** Configuring SVCCISCO (device model 2062) fcp

---

**2017**      **2017**  
**Explanation:** Configuring SVCCISCO (device model 2062) iscsi

---

**2018**      **2018**  
**Explanation:** Configuring Virtual Management Channel driver

---

**2019**      **2019**  
**Explanation:** Configuring vty server

---

**201B**      **201B**  
**Explanation:** Configuring a virtual SCSI optical device

---

---

**201D**      **201D**  
**Explanation:** Configuring USB Serial Device

---

**2020**      **2020**  
**Explanation:** Configuring InfiniBand™ ICM kernel component

---

**2021**      **2021**  
**Explanation:** Configuring TCP InfiniB and Interface kernel component

---

**2022**      **2022**  
**Explanation:** Configuring PCI Express bus

---

**2023**      **2023**  
**Explanation:** Configuring InfiniBand adapter configured as PCI Memory Controller

---

**2024**      **2024**  
**Explanation:** Configuring InfiniBand adapter PCI Memory Controller w/ alt PCI Device ID

---

**2025**      **2025**  
**Explanation:** Configuring VASI (Virtual Asynchronous Services Interface) Adapter

---

**2026**      **2026**  
**Explanation:** Configuring nfso option in rc.boot

---

**2027**      **2027**  
**Explanation:** Configuring MPIO DS4K Device

---

**2028**      **2028**  
**Explanation:** Boot process searching for cluster repository disk

---

**2030**      **2030**  
**Explanation:** Configuring USB Audio Device

---

**2040**      **2040**  
**Explanation:** Configuring device model DS3/4K fcp

---

**2041**      **2041**  
**Explanation:** Configuring device model DS3/4K isci

---



---

**2042**      **2042**  
**Explanation:** Configuring device model DS3/4K sas

---

**2064**      **2064**  
**Explanation:** Attempt to configure 64-bit enviroment failed

---

**2501**      **2501**  
**Explanation:** Configuring Common Character Mode (CCM) enabled graphic adapter

---

**2502**      **2502**  
**Explanation:** Configuring PCI-X 266 Planar 3 GB SAS integrated adapter

---

**2503**      **2503**  
**Explanation:** Configuring PCI-X 266 Planar 3 GB SAS RAID integrated adapter

---

**2504**      **2504**  
**Explanation:** Configuring a PCIe x1 Auxiliary Cache a dapter

---

**2505**      **2505**  
**Explanation:** Configuring a PCI-X266 Planar 3Gb SAS RAID Adapter

---

**2506**      **2506**  
**Explanation:** Configuring JS12/JS23 PCI-X266 Planar 3Gb SAS Adapter

---

**2507**      **2507**  
**Explanation:** Configuring JS22 PCI-X266 Planar 3Gb SAS Adapter

---

**2512**      **2512**  
**Explanation:** Configuring PCI-X DDR quad channel Ultra320 SCSI RAID adapter

---

**2513**      **2513**  
**Explanation:** Configuring PCI-X DDR quad channel Ultra320 SCSI RAID adapter

---

**2514**      **2514**  
**Explanation:** Configuring PCI-X DDR quad channel Ultra320 SCSI RAID adapter

---

---

**2515**      **2515**  
**Explanation:** Configuring a PCI-X DDR JBOD SAS adapter

---

**2516**      **2516**  
**Explanation:** Configuring a PCI-X Express DDR JBOD SAS adapter

---

**2517**      **2517**  
**Explanation:** Configuring PCI-XDDR RAID SAS adapter

---

**2518**      **2518**  
**Explanation:** Configuring PCIe RAID SAS adapter

---

**2519**      **2519**  
**Explanation:** Configuring PCI-X DDR RAID Adapter

---

**251B**      **251B**  
**Explanation:** Configuring PCI-Express High End RAID Adapter

---

**251D**      **251D**  
**Explanation:** Configuring PCI-X DDR Auxiliary Cache Controller

---

**251E**      **251E**  
**Explanation:** Configuring PCI-Express Auxiliary Write Cache Controller

---

**2520**      **2520**  
**Explanation:** PCI Dual-Channel Ultra-3 SCSI adapter being identified or configured.

---

**2521**      **2521**  
**Explanation:** Configuring Integrated Dual Channel Ultra 3 SCSI

---

**2522**      **2522**  
**Explanation:** PCI-X Dual Channel Ultra320 SCSI Adapter

---

**2523**      **2523**  
**Explanation:** PCI-X Ultra320 SCSI RAID Adapter

---



---

**2524**      **2524**  
**Explanation:** Configuring Integrated DART (Cog)

---

**2525**      **2525**  
**Explanation:** Configuring integrated PCI-X dual channel U320 SCSI RAID enablement card.

---

**2526**      **2526**  
**Explanation:** PCI-X Ultra320 SCSI RAID Battery Pack

---

**2527**      **2527**  
**Explanation:** PCI-X Quad Channel U320 SCSI RAID Adapter

---

**2528**      **2528**  
**Explanation:** PCI-X Dual Channel Ultra320 SCSI adapter

---

**2529**      **2529**  
**Explanation:** PCI-X Dual Channel Ultra320 SCSI RAID adapter

---

**252B**      **252B**  
**Explanation:** PCI-X Dual Channel Ultra320 SCSI RAID adapter

---

**252D**      **252D**  
**Explanation:** PCI-X DDR Dual Channel Ultra320 SCSI RAID adapter

---

**252E**      **252E**  
**Explanation:** Configuring PCI-X DDR Auxiliary Cache Adapter

---

**2530**      **2530**  
**Explanation:** 10/100 Mbps Ethernet PCI Adapter II being configured.

---

**2531**      **2531**  
**Explanation:** Configuring 10 Gigabit-LR Ethernet PCI-X adapter

---

**2532**      **2532**  
**Explanation:** Configuring 10 Gigabit-SR Ethernet PCI-X adapter

---

---

2533	2533
<b>Explanation:</b> 10 GB Ethernet -SR PCI-X 2.0 DDR adapter being configured	

---

2534	2534
<b>Explanation:</b> 10 GB Ethernet -LR PCI-X 2.0 DDR adapter being configured	

---

2535	2535
<b>Explanation:</b> 4-Port 10/100/1000 Base-TX Ethernet PCI-X Adapter being configured.	

---

2536	2536
<b>Explanation:</b> Configuring Gigabit Ethernet-SX adapter	

---

2537	2537
<b>Explanation:</b> Configuring Ethernet-SX PCIe Adapter	

---

2538	2538
<b>Explanation:</b> Configuring Ethernet-TX PCIe Adapter	

---

2539	2539
<b>Explanation:</b> Configuring PCI Express 10Gb Ethernet-SX adapter	

---

253B	253B
<b>Explanation:</b> Configuring 15000 rpm 292 GB FC Disk	

---

253D	253D
<b>Explanation:</b> Configuring 7200 rpm 400 GB FC-NL Disk	

---

253E	253E
<b>Explanation:</b> Configuring 7200 rpm 400 GB FC-NL Disk	

---

2540	2540
<b>Explanation:</b> Configuring 10K rpm 300 GB FC Disk	

---

2541	2541
<b>Explanation:</b> Configuring 10K rpm 146 GB FC Disk	

---

2542	2542
<b>Explanation:</b> Configuring 10K rpm 73 GB FC Disk	

---



---

2543	2543
<b>Explanation:</b> Reserved	

---

2544	2544
<b>Explanation:</b> Configuring 15K rpm 146 GB FC Disk	

---

2545	2545
<b>Explanation:</b> Configuring 15K rpm 73 GB FC Disk	

---

2546	2546
<b>Explanation:</b> Configuring 15K rpm 36 GB FC Disk	

---

2547	2547
<b>Explanation:</b> Generic 522 bites per sector SCSI JBOD (not osdisk) Disk Drive	

---

2548	2548
<b>Explanation:</b> Configuring 36 GB 2.5 inch SCSD SFF HDD	

---

2549	2549
<b>Explanation:</b> Configuring 73 GB 2.5 inch SCSD SFF HDD	

---

254A	254A
<b>Explanation:</b> Configuring 4-port FCS adapter	

---

254B	254B
<b>Explanation:</b> Configuring enclosure for FCS adapter	

---

254C	254C
<b>Explanation:</b> Configuring 2-port FCS adapter	

---

254D	254D
<b>Explanation:</b> Configuring enclosure for FCS adapter	

---

254E	254E
<b>Explanation:</b> Fibre Channel Expansion Card	

---

254F	254F
<b>Explanation:</b> Configuring FCS SCSI Protocol device	

---

## 2550 • 256E

---

**2550**      **2550**  
**Explanation:** Configuring a POWER GXT4500P graphics adapter

---

**2551**      **2551**  
**Explanation:** Configuring a POWER GXT6500P graphics adapter

---

**2552**      **2552**  
**Explanation:** Configuring 36 GB SAS 2.5 inch SFF HDD

---

**2553**      **2553**  
**Explanation:** Configuring 73 GB SAS 2.5 inch SFF HDD

---

**2554**      **2554**  
**Explanation:** Configuring 36 GB SAS 3.5 inch HDD

---

**2555**      **2555**  
**Explanation:** Configuring 73 GB SAS 3.5 inch HDD

---

**2556**      **2556**  
**Explanation:** Configuring 146 GB SAS 3.5 inch HDD

---

**2557**      **2557**  
**Explanation:** Configuring 300 GB SAS 3.5 inch HDD

---

**2558**      **2558**  
**Explanation:** Configuring 15K rpm 300 GB SCSI HDD (80 pin)

---

**2559**      **2559**  
**Explanation:** Configuring 15K rpm 36 GB SCSI HDD

---

**255B**      **255B**  
**Explanation:** Configuring 15K rpm 73 GB SCSI HDD

---

**255D**      **255D**  
**Explanation:** Configuring 15K rpm 146 GB SCSI HDD

---

**255E**      **255E**  
**Explanation:** Configuring 15K rpm 300 GB SCSI HDD

---

---

**2560**      **2560**  
**Explanation:** Configuring USB Keyboard

---

**2561**      **2561**  
**Explanation:** Configuring USB Mouse

---

**2562**      **2562**  
**Explanation:** Keyboard/Mouse Attachment Card-PCI being configured.

---

**2563**      **2563**  
**Explanation:** All USB Busses are being enumerated

---

**2564**      **2564**  
**Explanation:** Keyboard/Mouse Attachment Card-PCI being configured.

---

**2565**      **2565**  
**Explanation:** Configuring adapter or native EHCI USB

---

**2566**      **2566**  
**Explanation:** USB 3.5 inch Micro Diskette Drive

---

**2567**      **2567**  
**Explanation:** Configuring JS20 integrated OHCI USB adapter

---

**2568**      **2568**  
**Explanation:** Generic USB CD-ROM Drive

---

**2569**      **2569**  
**Explanation:** Configuring USB DVDROM drive

---

**256B**      **256B**  
**Explanation:** Configuring USB 3D mouse

---

**256D**      **256D**  
**Explanation:** 4Gb Fibre Channel adapter being configured

---

**256E**      **256E**  
**Explanation:** Configuring a 4-port 10/100/1000 Base-TX PCI express adapter

---

---

2570	2570
<b>Explanation:</b> Configuring an IBM cryptographic accelerator PCI adapter	

---

2571	2571
<b>Explanation:</b> 2-Port PCI Asynchronous EIA-232 Adapter	

---

2572	2572
<b>Explanation:</b> PCI-X Cryptographic Coprocessor Card	

---

2573	2573
<b>Explanation:</b> Configuring 146 GB SAS SFF HDD	

---

2574	2574
<b>Explanation:</b> Configuring 15K rpm 36 GB SAS SFF HDD	

---

2575	2575
<b>Explanation:</b> Configuring 15K rpm 73GB SAS SFF HDD	

---

2576	2576
<b>Explanation:</b> Configuring 4-port PCIe Serial Adapter	

---

2577	2577
<b>Explanation:</b> Battery: IBM Cryptographic PCI-X Adapter	

---

2578	2578
<b>Explanation:</b> Configuring IBM Y4 Cryptographic Coprocessor PCIe Adapter	

---

2579	2579
<b>Explanation:</b> Battery: IBM Y4 Cryptographic PCIe Adapter	

---

257B	257B
<b>Explanation:</b> Configuring 4-port FC-AL RAID Adapter	

---

257D	257D
<b>Explanation:</b> Configuring 8-port FC-AL RAID Adapter	

---



---

2580	2580
<b>Explanation:</b> Configuring a SCSI accessed fault-tolerant enclosure (SAF-TE) device	

---

2581	2581
<b>Explanation:</b> 1 GB iSCSI TOE PCI-X adapter is being configured (copper connector)	

---

2582	2582
<b>Explanation:</b> iSCSI protocol device associated with an iSCSI adapter is being configured	

---

2583	2583
<b>Explanation:</b> 1 GB iSCSI TOE PCI-X adapter being configured (copper connector)	

---

2584	2584
<b>Explanation:</b> IDE DVD-RAM drive being configured	

---

2585	2585
<b>Explanation:</b> IDE DVD-ROM drive being configured	

---

2586	2586
<b>Explanation:</b> Configuring host Ethernet adapter	

---

2587	2587
<b>Explanation:</b> Configuring a Slimline DVD-ROM drive	

---

2588	2588
<b>Explanation:</b> Configuring a 4.7 GB Slimline DVD-RAM drive	

---

2589	2589
<b>Explanation:</b> Configuring the common SCSI protocol driver	

---

258B	258B
<b>Explanation:</b> Configuring Logical Host Ethernet Adapter	

---

258D	258D
<b>Explanation:</b> Configuring MPT2 Common SCSI protocol driver	

---

## 2590 • 25B9

---

2590      2590

**Explanation:** IDE CD-ROM drive being configured

---

2591      2591

**Explanation:** IDE DVD-ROM drive being configured.

---

2592      2592

**Explanation:** IDE DVD-ROM drive being configured.

---

2593      2593

**Explanation:** IDE DVD-RAM drive being configured.

---

2594      2594

**Explanation:** 4.7 GB IDE Slimline DVD-RAM drive

---

2595      2595

**Explanation:** IDE Slimline DVD-ROM drive

---

2596      2596

**Explanation:** Configuring USB CDROM drive

---

2597      2597

**Explanation:** Configuring USB DVDROM drive

---

2598      2598

**Explanation:** Configuring USB CDROM drive

---

2599      2599

**Explanation:** Configuring USB DVDROM

---

259B      259B

**Explanation:** Configuring Slimline UBE IDE DVD-RAM drive

---

259D      259D

**Explanation:** Configuring Slimline UBE IDE DVD-RAM drive

---

25A0      25A0

**Explanation:** I/O Planar Control Logic for IDE devices

---

25A1      25A1

**Explanation:** Configuring USB Mass Storage Device

---

---

25A2      25A2

**Explanation:** Configuring USB DVD-RAM

---

25A3      25A3

**Explanation:** Configuring PCIe Integrated Serial Adapter

---

25A4      25A4

**Explanation:** Configuring PCIe 2-port Serial Adapter

---

25B0      25B0

**Explanation:** Configuring iSCSI protocol device

---

25B1      25B1

**Explanation:** Configuring Tivoli Storage Manager FC asynchronous event protocol driver

---

25B2      25B2

**Explanation:** Configuring Virtual I/O Ethernet Adapter

---

25B3      25B3

**Explanation:** Configuring VSCSI client adapter

---

25B4      25B4

**Explanation:** Configuring VSCSI virtual disk

---

25B5      25B5

**Explanation:** Configuring VSCSI virtual CDROM

---

25B6      25B6

**Explanation:** Configuring Virtual I/O Bus

---

25B7      25B7

**Explanation:** Configuring VSCSI virtual SCSI server driver

---

25B8      25B8

**Explanation:** Configuring VSCSI virtual target device

---

25B9      25B9

**Explanation:** Ethernet Adapter (Fiber)

---

---

<b>25BB</b>	<b>25BB</b>
<b>Explanation:</b> Configuring Slimline UBE IDE DVDROM Drive	

---

<b>25BD</b>	<b>25BD</b>
<b>Explanation:</b> Configuring Slimline UBE IDE DVDROM Drive	

---

<b>25C0</b>	<b>25C0</b>
<b>Explanation:</b> Gigabit Ethernet-SX PCI-X adapter	

---

<b>25C1</b>	<b>25C1</b>
<b>Explanation:</b> 10/100/1000 base-TX Ethernet PCI-X adapter	

---

<b>25C2</b>	<b>25C2</b>
<b>Explanation:</b> Dual Port Gigabit SX Ethernet PCI-X Adapter	

---

<b>25C3</b>	<b>25C3</b>
<b>Explanation:</b> 10/100/1000 Base-TX Dual Port PCI-Adapter	

---

<b>25C4</b>	<b>25C4</b>
<b>Explanation:</b> Broadcom Dual-Port Gigabit Ethernet PCI-X Adapter	

---

<b>25D0</b>	<b>25D0</b>
<b>Explanation:</b> Configuring a PCI audio adapter	

---

<b>25D1</b>	<b>25D1</b>
<b>Explanation:</b> Configuring ATI controller	

---

<b>25D2</b>	<b>25D2</b>
<b>Explanation:</b> LSI SAS adapter	

---

<b>25D3</b>	<b>25D3</b>
<b>Explanation:</b> Configuring 2-port 6Gb LSI SAS Expansion adapter	

---

<b>25D4</b>	<b>25D4</b>
<b>Explanation:</b> Configuring 2-port 6Gb LSI SAS Expansion CFFe Adapter	

---

<b>25D5</b>	<b>25D5</b>
<b>Explanation:</b> Configuring 4-port 6Gb LSI SAS Expansion adapter	

---

<b>25E0</b>	<b>25E0</b>
<b>Explanation:</b> Configuring Switch network interface adapter	

---

<b>25E1</b>	<b>25E1</b>
<b>Explanation:</b> Configuring Switch network interface adapter	

---

<b>25E2</b>	<b>25E2</b>
<b>Explanation:</b> Configuring Switch network interface adapter	

---

<b>25E3</b>	<b>25E3</b>
<b>Explanation:</b> Configuring Switch network interface adapter	

---

<b>25E4</b>	<b>25E4</b>
<b>Explanation:</b> Configuring GXT7000e Advanced 3D PCI Express Graphics Adapter	

---

<b>25E5</b>	<b>25E5</b>
<b>Explanation:</b> Configuring PCI-E 2D Graphics Adapter	

---

<b>25E6</b>	<b>25E6</b>
<b>Explanation:</b> Configuring Low Profile PCI-E 2D Graphics Adapter	

---

<b>25E7</b>	<b>25E7</b>
<b>Explanation:</b> Reserved	

---

<b>25E8</b>	<b>25E8</b>
<b>Explanation:</b> Configuring PCI-X 2D Graphics Adapter	

---

<b>25F0</b>	<b>25F0</b>
<b>Explanation:</b> Configuring SCSD iSCSI Disk Drive	

---

<b>25F1</b>	<b>25F1</b>
<b>Explanation:</b> Configuring SCSD iSCSI CDROM Drive	

---

## 25F2 • 2614

---

**25F2**      **25F2**

**Explanation:** Configuring SCSD iSCSI Read/Write Optical Device

---

**25F3**      **25F3**

**Explanation:** Configuring OEM iSCSI Disk Drive

---

**25F4**      **25F4**

**Explanation:** Configuring OEM iSCSI CD-ROM Drive

---

**25F5**      **25F5**

**Explanation:** Configuring OEM iSCSI Read/Write Optical Device

---

**25F6**      **25F6**

**Explanation:** Configuring iSCSI SCSD Tape Drive

---

**25F7**      **25F7**

**Explanation:** Configuring iSCSI ost Tape Drive

---

**25F8**      **25F8**

**Explanation:** Configuring a 1 GB PCI-X iSCSI TOE Ethernet adapter (copper)

---

**25F9**      **25F9**

**Explanation:** Reserved

---

**25FA**      **25FA**

**Explanation:** Reserved

---

**2600**      **2600**

**Explanation:** PCI 64-bit Fibre Channel Arbitrated Loop Adapter being configured.

---

**2601**      **2601**

**Explanation:** PCI 64-bit Fibre Channel Arbitrated Loop Adapter being configured.

---

**2602**      **2602**

**Explanation:** PCI 64-Bit 4 GB fibre channel adapter

---

**2603**      **2603**

**Explanation:** Configuring 4Gb PCIe Fibre Channel Adapter

---

---

**2604**      **2604**

**Explanation:** Configuring Emulex FC daughter card (SFF)

---

**2605**      **2605**

**Explanation:** Configuring Emulex 8Gb PCIe 1-port FC adapter

---

**2606**      **2606**

**Explanation:** Configuring 8Gb FC Dual Port PCIe Adapter

---

**2607**      **2607**

**Explanation:** Configuring Emulex 8Gb PCIe 2-port FC daughter card

---

**2608**      **2608**

**Explanation:** Configuring 8Gb PCIe 4-port FC adapter

---

**2609**      **2609**

**Explanation:** Configuring Emulex 16Gb PCIe2 2-port FC adapter

---

**260B**      **260B**

**Explanation:** Configuring Emulex SLI-4 FC SCSI protocol driver

---

**2610**      **2610**

**Explanation:** Configuring Quantum SDLT320 tape drive

---

**2611**      **2611**

**Explanation:** 36/72 GB 4 mm internal tape drive

---

**2612**      **2612**

**Explanation:** 80/160 GB internal tape drive with VXA2 technology

---

**2613**      **2613**

**Explanation:** 200/400 GB LTO2 Tape drive

---

**2614**      **2614**

**Explanation:** VXA3 160/320 GB Tape Drive

---

---

**2615**      **2615**  
**Explanation:** Configuring a DAT160 80GB tape drive

---

**2616**      **2616**  
**Explanation:** Configuring a 36/72GB 4mm Internal Tape Drive

---

**2617**      **2617**  
**Explanation:** Configuring a LTO3 400 GB tape drive

---

**2618**      **2618**  
**Explanation:** Configuring a SAS 400 GB/1.6 TB Ultrium 4 tape drive

---

**2619**      **2619**  
**Explanation:** Configuring 3.5 inch 80GB DAT160 SAS Tape Drive

---

**2620**      **2620**  
**Explanation:** Configuring InfiniBand adapter

---

**2621**      **2621**  
**Explanation:** PCI-X Dual-port 4x HCA Adapter being configured

---

**2622**      **2622**  
**Explanation:** Configuring InfiniBand Device

---

**2623**      **2623**  
**Explanation:** Configuring 4x InfiniBand PCI-E adapter

---

**2624**      **2624**  
**Explanation:** Configuring 4X PCIe DDR InfiniB and Host Channel adapter

---

**2625**      **2625**  
**Explanation:** Configuring 4X PCIe QDR InfiniBand Host Channel adapter

---

**2626**      **2626**  
**Explanation:** Configuring 4X PCIe QDR InfiniBand Host Channel Blade adapter

---



---

**2627**      **2627**  
**Explanation:** Configuring 4X PCIe QDR InfiniBand Host Channel Mezz adapter

---

**2628**      **2628**  
**Explanation:** Configuring PCIe RoCE Adapter

---

**2629**      **2629**  
**Explanation:** Identifying PCIe QDR Host Channel Adapter

---

**262B**      **262B**  
**Explanation:** Configuring PCIe RoCE Adapter

---

**2630**      **2630**  
**Explanation:** Configuring integrated IDE controller

---

**2631**      **2631**  
**Explanation:** Integrated IDE controller

---

**2632**      **2632**  
**Explanation:** Configuring RoHS compliant 73GB 80pin 15Krpm ATX carrier

---

**2633**      **2633**  
**Explanation:** Configuring RoHS compliant 146GB 80pin 15Krpm ATX carrier

---

**2634**      **2634**  
**Explanation:** Configuring RoHS compliant 300GB 80pin 15Krpm ATX carrier

---

**2640**      **2640**  
**Explanation:** IDE Disk Drive, 2.5 inch

---

**2641**      **2641**  
**Explanation:** 73 GB SCSI disk drive 68 pin 10K rpm being identified or configured.

---

**2642**      **2642**  
**Explanation:** 73 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured.

---

---

**2643**      **2643**

**Explanation:** 73 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured. (For OpenPower™ systems)

---

**2644**      **2644**

**Explanation:** 146 GB SCSI disk drive 68 pin 10K rpm being identified or configured.

---

**2645**      **2645**

**Explanation:** 146 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured.

---

**2646**      **2646**

**Explanation:** 146 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured. (For OpenPower systems)

---

**2647**      **2647**

**Explanation:** 300 GB SCSI disk drive 68 pin 10K rpm being identified or configured.

---

**2648**      **2648**

**Explanation:** 300 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured.

---

**2649**      **2649**

**Explanation:** 300 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured. (For OpenPower systems)

---

**264B**      **264B**

**Explanation:** 36 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured.

---

**264D**      **264D**

**Explanation:** 36 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured. (For OpenPower systems)

---

**264E**      **264E**

**Explanation:** 73 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured.

---

**2650**      **2650**

**Explanation:** ESS iSCSI devices being identified or configured.

---

**2651**      **2651**

**Explanation:** SVC being identified or configured.

---

**2652**      **2652**

**Explanation:** SVCCISCOi being identified or configured.

---

**2653**      **2653**

**Explanation:** 73 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured. (For HV systems)

---

**2654**      **2654**

**Explanation:** 146 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured.

---

**2655**      **2655**

**Explanation:** 146 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured. (For OpenPower systems)

---

**2656**      **2656**

**Explanation:** 73 GB SCSI disk drive 80 pin 15K rpm being identified or configured.

---

**2657**      **2657**

**Explanation:** 146 GB SCSI disk drive 80 pin 15K rpm being identified or configured.

---

**2658**      **2658**

**Explanation:** 73 GB SCSI disk drive 80 pin 10K rpm being identified or configured.

---

**2659**      **2659**

**Explanation:** 146 GB SCSI disk drive 80 pin 10K rpm being identified or configured.

---

**265B**      **265B**

**Explanation:** 300 GB SCSI disk drive 80 pin 10K rpm being identified or configured.

---

**265D**      **265D**

**Explanation:** Configuring generic SATA Attached IDE DVD/DRAM

---

---

**265E**      **265E**  
**Explanation:** Configuring generic SATA Attached IDE DVDROM Device

---

**2660**      **2660**  
**Explanation:** Configuring generic SATA DVDROM Device

---

**2661**      **2661**  
**Explanation:** Configuring generic SATA DVDROM Device

---

**2662**      **2662**  
**Explanation:** Configuring generic SATA Optical Device

---

**2663**      **2663**  
**Explanation:** Configuring generic SAS SCSD Disk Drive

---

**2664**      **2664**  
**Explanation:** Configuring generic SAS Disk Drive

---

**2665**      **2665**  
**Explanation:** Configuring generic SAS RAID Array

---

**2666**      **2666**  
**Explanation:** Configuring generic SAS PDISK

---

**2667**      **2667**  
**Explanation:** An electronics tray, also known as the enclosure services manager is being identified or configured

---

**2668**      **2668**  
**Explanation:** Configuring generic Virtual SAS SCSI Enclosure Services Device

---

**2669**      **2669**  
**Explanation:** Configuring generic SAS Target Mode Device

---

**266B**      **266B**  
**Explanation:** Configuring generic SAS Other Target Mode Device

---



---

**266D**      **266D**  
**Explanation:** Configuring generic SAS SCSD Tape Drive

---

**266E**      **266E**  
**Explanation:** Configuring generic SAS Tape Drive

---

**2670**      **2670**  
**Explanation:** 73 GB SFF SAS Disk Drive 10K rpm being identified or configured

---

**2671**      **2671**  
**Explanation:** 146 GB SFF SAS Disk Drive 10K rpm being identified or configured

---

**2672**      **2672**  
**Explanation:** 300 GB SFF SAS Disk Drive 10K rpm being identified or configured

---

**2673**      **2673**  
**Explanation:** Configuring 73 GB 3.5 inch SAS DASD

---

**2674**      **2674**  
**Explanation:** Configuring 146 GB 3.5 inch SAS DASD

---

**2675**      **2675**  
**Explanation:** Configuring 300 GB 3.5 inch SAS DASD

---

**2676**      **2676**  
**Explanation:** Configuring 7200 rpm 750 GB FC-NL Disk

---

**2677**      **2677**  
**Explanation:** Configuring 7200 rpm 1000 GB FC-NL Disk

---

**2678**      **2678**  
**Explanation:** Configuring 36GB 3.5 inch SAS DASD

---

**2679**      **2679**  
**Explanation:** Configuring Slimline SATA DVDROM drive

---

## 267B • 26B4

---

**267B**      **267B**  
**Explanation:** Configuring Slimline SATA DVDRAM drive

---

**267D**      **267D**  
**Explanation:** Configuring 15K rpm 450 GB FC Disk

---

**2680**      **2680**  
**Explanation:** A generic SAS adapter is being identified or configured

---

**2681**      **2681**  
**Explanation:** DVD tray assembly.

---

**2684**      **2684**  
**Explanation:** Configuring 73 GB 15K RPM SFF Disk Drive

---

**2685**      **2685**  
**Explanation:** Configuring 146 GB 15K RPM SFF Disk Drive

---

**2687**      **2687**  
**Explanation:** Configuring 73 GB SAS SFF Solid State Drive

---

**2690**      **2690**  
**Explanation:** Configuring 600 GB 15K RPM SAS Disk Drive

---

**2691**      **2691**  
**Explanation:** Configuring 15K rpm 600 GB FC Disk

---

**2692**      **2692**  
**Explanation:** Configuring 146 GB 15K RPM SFF SAS HDD

---

**2693**      **2693**  
**Explanation:** Configuring 300 GB 15K RPM SFF SAS HDD

---

**2694**      **2694**  
**Explanation:** Configuring 146 GB 10K rpm 2.5 inch SFF SAS HDD

---

---

**2695**      **2695**  
**Explanation:** Configuring 300 GB 10K rpm 2.5 inch SFF SAS HDD

---

**2696**      **2696**  
**Explanation:** Configuring 73 GB 15K RPM SFF SAS Drive

---

**2697**      **2697**  
**Explanation:** Configuring 146 GB 15K RPM SFF SAS Drive

---

**2698**      **2698**  
**Explanation:** Configuring 7200 rpm 2TB SATA Drive

---

**2699**      **2699**  
**Explanation:** Configuring 600 GB 10K RPM SAS SFF Disk Drive

---

**269B**      **269B**  
**Explanation:** Configuring 450 GB 10K RPM SFF SAS Hard Drive

---

**269D**      **269D**  
**Explanation:** Configuring 600 GB 10K RPM SFF SAS Hard Drive

---

**26B0**      **26B0**  
**Explanation:** Configuring 73 GB 3.5 inch FC-AL Solid State Drive

---

**26B1**      **26B1**  
**Explanation:** Configuring 146 GB 3.5 inch FC-AL Solid State Drive

---

**26B2**      **26B2**  
**Explanation:** Configuring 292 GB 3.5 inch FC-AL Solid State Drive

---

**26B3**      **26B3**  
**Explanation:** Configuring 100 GB SATA 1.8 inch Solid State Drive

---

**26B4**      **26B4**  
**Explanation:** Configuring 200 GB SATA Solid State Drive

---

---

**26B5**      **26B5**  
**Explanation:** Configuring 400 GB SATA 1.8 inch Solid State Drive

---

**26B6**      **26B6**  
**Explanation:** Configuring 300 GB SAS SFF Solid State Drive

---

**26B7**      **26B7**  
**Explanation:** Configuring 600 GB FC 3.5 inch Solid State Drive

---

**26B8**      **26B8**  
**Explanation:** Configuring 200 GB 2.5 inch Smart Modular SSD

---

**26B9**      **26B9**  
**Explanation:** Configuring 400 GB 2.5 inch SFF SAS SSD

---

**26BD**      **26BD**  
**Explanation:** Reserved

---

**26D0**      **26D0**  
**Explanation:** Configuring DAT320 160GB SAS Tape Drive

---

**26D1**      **26D1**  
**Explanation:** Configuring DAT320 160GB USB Tape Drive

---

**26D2**      **26D2**  
**Explanation:** Configuring 600 GB 10K RPM SFF SAS Disk Drive

---

**26D3**      **26D3**  
**Explanation:** Configuring 300 GB 15K RPM SFF SAS Disk Drive

---

**26D4**      **26D4**  
**Explanation:** Configuring 900 GB 2.5 inch 10K RPM SFF SAS HDD

---

**26D5**      **26D5**  
**Explanation:** Configuring 300 GB 2.5 inch 15K RPM SFF SAS HDD

---



---

**26D6**      **26D6**  
**Explanation:** Configuring 450 GB 2.5 inch 15K RPM SFF SAS HDD

---

**26D7**      **26D7**  
**Explanation:** Configuring 900 GB 10K RPM SAS SFF Disk Drive

---

**26D8**      **26D8**  
**Explanation:** Configuring 1 TB 7.2K RPM 3.5 inch SAS HDD

---

**26D9**      **26D9**  
**Explanation:** Configuring 2 TB 7.2K RPM 3.5 inch SAS HDD

---

**26DB**      **26DB**  
**Explanation:** Configuring 3 TB 7.2K RPM 3.5 inch SAS HDD

---

**26DD**      **26DD**  
**Explanation:** Configuring 900 GB 10K RPM 2.5 inch SFF SAS HDD

---

**26E0**      **26E0**  
**Explanation:** Configuring Internal RDX USB Dock

---

**26E1**      **26E1**  
**Explanation:** Configuring External RDX USB Dock

---

**26E2**      **26E2**  
**Explanation:** Reserved

---

**26E3**      **26E3**  
**Explanation:** Reserved

---

**26E4**      **26E4**  
**Explanation:** Reserved

---

**26E5**      **26E5**  
**Explanation:** Configuring SAS HH LTO-5 Tape Drive

---

**26E6**      **26E6**  
**Explanation:** Configuring USB Tape Drive

---

## 26E7 • 2741

---

**26E7**      **26E7**  
**Explanation:** Configuring Enhanced Internal RDX USB Dock

---

**26E9**      **26E9**  
**Explanation:** Configuring Enhanced External RDX USB Dock

---

**26EB**      **26EB**  
**Explanation:** Reserved

---

**26ED**      **26ED**  
**Explanation:** Reserved

---

**2700**      **2700**  
**Explanation:** Configuring NPIV FC SCSI protocol device

---

**2701**      **2701**  
**Explanation:** Configuring NPIV FC SCSI protocol device

---

**2702**      **2702**  
**Explanation:** Boot failed due to insufficient VRM

---

**2703**      **2703**  
**Explanation:** Configuring Paging Device - Logical Volume

---

**2704**      **2704**  
**Explanation:** Configuring Paging Device - Disk

---

**2705**      **2705**  
**Explanation:** Configuring Virtual Tape

---

**2706**      **2706**  
**Explanation:** Configuring Pool Device

---

**2707**      **2707**  
**Explanation:** Configuring Virtual Fiber Channel (vfc) Host Device

---

**2708**      **2708**  
**Explanation:** Configuring VSCSI Virtual Tape

---

---

**2709**      **2709**  
**Explanation:** Configuring Virtual Block Storage Device

---

**270B**      **270B**  
**Explanation:** Configuring Cluster Storage Framework

---

**270D**      **270D**  
**Explanation:** Configuring Virtual SCSI Log

---

**2710**      **2710**  
**Explanation:** Configuring OHCI USB Native or 4-port PCIe Adapter

---

**2711**      **2711**  
**Explanation:** Configuring Loopback Device

---

**2720**      **2720**  
**Explanation:** Configuring Slimline SATA DVD/ROM Drive

---

**2722**      **2722**  
**Explanation:** Configuring 2.5 TB SAS HH LTO-6 Tape Drive

---

**2723**      **2723**  
**Explanation:** Configuring 2.5 TB FC HH LTO-6 Tape Drive

---

**2730**      **2730**  
**Explanation:** Configuring VIOS Object

---

**2731**      **2731**  
**Explanation:** Configuring VIOS Cluster Object

---

**2732**      **2732**  
**Explanation:** Configuring VIOS LPM Pseudo device

---

**2740**      **2740**  
**Explanation:** Configuring 400 GB 2.5 inch SFF SAS SSD

---

**2741**      **2741**  
**Explanation:** Reserved

---

---

**2742**      **2742**  
**Explanation:** Configuring Interposer w/ 400 GB SATA 1.8 inch SSD

---

**2750**      **2750**  
**Explanation:** Configuring 16Gb PCIe2 2-port FC Mezz adapter

---

**2751**      **2751**  
**Explanation:** Configuring Copper 10Gb PCIe2 2-port FCoE Adapter

---

**2752**      **2752**  
**Explanation:** Configuring Copper 10Gb PCIe2 2-port FCoE VF

---

**2753**      **2753**  
**Explanation:** Configuring SR 10Gb PCIe2 2-port FCoE Adapter

---

**2754**      **2754**  
**Explanation:** Configuring SR 10Gb PCIe2 2-port FCoE VF

---

**2755**      **2755**  
**Explanation:** Configuring 16Gb PCIe2 4-port FC NGP Mezz Adapter

---

**2756**      **2756**  
**Explanation:** Configuring 16Gb PCIe2 2-port FC adapter

---

**2757**      **2757**  
**Explanation:** Configuring 16Gb PCIe2 2-port FC adapter

---

**2770**      **2770**  
**Explanation:** Configuring 2-port 10Gb RoCE Mezz Adapter

---

**2771**      **2771**  
**Explanation:** Configuring 2-port 10Gb RoCE Mezz Adapter

---



---

**2800**      **2800**  
**Explanation:** Configuring virtual suspend device

---

**2801**      **2801**  
**Explanation:** Configuring virtual suspend adapter

---

**2D00**      **2D00**  
**Explanation:** Reserved

---

**2D01**      **2D01**  
**Explanation:** PCI-X Quad Channel U320 SCSI RAID Battery Pack

---

**2D02**      **2D02**  
**Explanation:** Generic USB Reference to Controller/Adapter

---

**2D03**      **2D03**  
**Explanation:** Reserved

---

**2D04**      **2D04**  
**Explanation:** Reserved

---

**2D05**      **2D05**  
**Explanation:** PCI-X266 Planar 3 GB SAS RAID adapter battery pack

---

**2D06**      **2D06**  
**Explanation:** Reserved

---

**2D07**      **2D07**  
**Explanation:** Configuring a PCI X DDR Auxiliary Cache adapter

---

**2D08**      **2D08**  
**Explanation:** Configuring PCI Express x8 Ext Dual-x4 3Gb SAS RAID Adapter

---

**2D09**      **2D09**  
**Explanation:** Configuring PCI-X Ext x2 3Gb SAS RAID Adapter

---

**2D0B**      **2D0B**  
**Explanation:** PCI express x8 Ext Dual-x4 3Gb SAS RAID adapter being configured.

---

## 2D0D • 2D29

---

**2D0D**      **2D0D**  
**Explanation:** Configuring PCI Express x8 Ext. Dual-x4 3Gb SAS RAID Adapter

---

**2D0E**      **2D0E**  
**Explanation:** Reserved

---

**2D10**      **2D10**  
**Explanation:** Configuring RSSM Storage Device

---

**2D11**      **2D11**  
**Explanation:** Configuring PCIe2 RAID SAS Adapter Quad-port 6Gb

---

**2D12**      **2D12**  
**Explanation:** Configuring PCIe2 SAS Adapter Quad-port 6Gb

---

**2D13**      **2D13**  
**Explanation:** Configuring PCIe2 SAS Adapter Quad-port 6Gb

---

**2D14**      **2D14**  
**Explanation:** PCI express x8 Planar 3Gb SAS Adapter being configured.

---

**2D15**      **2D15**  
**Explanation:** PCI express x8 Planar 3Gb SAS RAID Adapter being configured.

---

**2D16**      **2D16**  
**Explanation:** PCI-X DDR Planar 3Gb SAS Adapter

---

**2D17**      **2D17**  
**Explanation:** PCI-X DDR Planar 3Gb SAS RAID Adapter

---

**2D18**      **2D18**  
**Explanation:** PCI-X DDR Planar 3Gb SAS RAID Adapter

---

**2D19**      **2D19**  
**Explanation:** Reserved

---

---

**2D1B**      **2D1B**  
**Explanation:** Reserved

---

**2D1D**      **2D1D**  
**Explanation:** Configuring PCIe2 RAID SAS Adapter Dual-port 6Gb

---

**2D20**      **2D20**  
**Explanation:** PCIe2 1.8GB Cache RAID SAS Adapter Tri-port 6Gb

---

**2D21**      **2D21**  
**Explanation:** Configuring PCIe2 3.6GB Cache RAID SAS Adapter Quad-port 6Gb

---

**2D22**      **2D22**  
**Explanation:** Configuring PCIe2 3.6GB Cache RAID SAS Adapter Quad-port 6Gb

---

**2D23**      **2D23**  
**Explanation:** Configuring PCIe x1 Planar 3Gb SAS Adapter

---

**2D24**      **2D24**  
**Explanation:** Configuring PCIe2 3.6GB Cache RAID SAS Enclosure 6Gb

---

**2D25**      **2D25**  
**Explanation:** Configuring PCIe x4 Planar 3Gb SAS Adapter

---

**2D26**      **2D26**  
**Explanation:** Configuring PCIe x4 Planar 3Gb SAS RAID Adapter

---

**2D27**      **2D27**  
**Explanation:** Configuring PCIe x4 Internal 3Gb SAS Adapter

---

**2D28**      **2D28**  
**Explanation:** Configuring PCIe x4 Internal 3Gb SAS RAID Adapter

---

**2D29**      **2D29**  
**Explanation:** Configuring PCIe x8 Internal 3Gb SAS Adapter

---

---

**2D30**      **2D30**

**Explanation:** Configuring PCIe2 1.8GB RAID and SSD SAS Adapter 6Gb

---

**2D31**      **2D31**

**Explanation:** Configuring PCIe2 3.6GB RAID and SSD SAS Adapter 6Gb

---

**2D40**      **2D40**

**Explanation:** Configuring PCIe RAID and SSD SAS 3Gb Adapter

---

**2D41**      **2D41**

**Explanation:** Reserved

---

**2E00**      **2E00**

**Explanation:** Configuring SLIM Expansion Gb Ethernet-SX PCI-X Adapter

---

**2E01**      **2E01**

**Explanation:** 10Gb Ethernet-SR PCIe Adapter

---

**2E02**      **2E02**

**Explanation:** 10Gb Ethernet-LR PCIe Adapter

---

**2E03**      **2E03**

**Explanation:** Configuring 10Gb Ethernet-SR PCIe Host Bus Adapter

---

**2E04**      **2E04**

**Explanation:** Configuring 10Gb Ethernet-CX4 PCIe Host Bus Adapter

---

**2E08**      **2E08**

**Explanation:** Configuring 4X Copper Twinax 10Gb PCIe Ethernet Adapter

---

**2E09**      **2E09**

**Explanation:** Configuring 4X Copper Twinax 1Gb PCIe Ethernet Adapter

---

**2E0B**      **2E0B**

**Explanation:** Configuring 4X SR SFP+ 10Gb PCIe Ethernet Adapter

---



---

**2E0D**      **2E0D**

**Explanation:** Configuring 4X SR SFP+ 1Gb PCIe Ethernet Adapter

---

**2E10**      **2E10**

**Explanation:** Configuring Qlogic 2432 FC Adapter

---

**2E11**      **2E11**

**Explanation:** Configuring Qlogic 8Gb PCIe FC Adapter

---

**2E12**      **2E12**

**Explanation:** 8 Gb Fibre Channel adapter being configured

---

**2E13**      **2E13**

**Explanation:** Configuring Qlogic 4Gb PCIe FC Blade Expansion Adapter

---

**2E14**      **2E14**

**Explanation:** Configuring Qlogic 8Gb PCIe FC Blade Expansion Adapter

---

**2E15**      **2E15**

**Explanation:** Configuring Qlogic 8Gb PCIe FC Blade Expansion Adapter

---

**2E16**      **2E16**

**Explanation:** Configuring Qlogic 8Gb 2-port PCIe FC Mezz Card

---

**2E17**      **2E17**

**Explanation:** Configuring low-profile 8Gb 4-port PCIe2 FC Adapter

---

**2E18**      **2E18**

**Explanation:** Reserved Configuring Qlogic 8Gb 2-port PCIe2 FC Adapter

---

**2E20**      **2E20**

**Explanation:** Configuring 10Gb PCIe FCoE CNA Slot FC Adapter

---

**2E21**      **2E21**

**Explanation:** Configuring Qlogic 10Gb PCIe FCoE CNA FC Daughtercard

---

## 2E22 • 2F01

---

2E22      2E22

**Explanation:** Configuring 10Gb PCIe FCoE CNA Slot Ethernet Adapter

---

2E23      2E23

**Explanation:** Configuring 10Gb PCIe2 FCoE VF

---

2E28      2E28

**Explanation:** Configuring 10Gb PCIe2 FCoE ITE Mezz VF

---

2E30      2E30

**Explanation:** Configuring 10Gb PCIe SFP+ SR Ethernet Adapter

---

2E31      2E31

**Explanation:** Configuring 10Gb PCIe SFP+ Twinax Ethernet Adapter

---

2E32      2E32

**Explanation:** Configuring 1Gb PCIe UTP Ethernet Adapter

---

2E33      2E33

**Explanation:** Configuring 1Gb 4-port PCIe Ethernet Adapter

---

2E34      2E34

**Explanation:** Configuring 1Gb 2-port PCIe Ethernet Adapter

---

2E35      2E35

**Explanation:** Configuring PCIe Combo 8Gb FC with 1Gb Ethernet

---

2E36      2E36

**Explanation:** Configuring 1Gb 2-port PCIe Integrated Ethernet Adapter

---

2E37      2E37

**Explanation:** Configuring PCIe2 4-port 10GbE Mezz Adapter

---

2E38      2E38

**Explanation:** Configuring Int Multifunction Adapter w/ SR Optical 10GbE

---

---

2E39      2E39

**Explanation:** Configuring Int Multifunction Adapter w/ Copper SFP+ 10GbE

---

2E3B      2E3B

**Explanation:** Configuring Int Multifunction Adapter w/ Base-TX 10/100/1000 1GbE

---

2E3D      2E3D

**Explanation:** Configuring 1Gb 2-port PCIe Ethernet Adapter

---

2E40      2E40

**Explanation:** Configuring 1Gb 2-port PCIe Ethernet Adapter

---

2E41      2E41

**Explanation:** Configuring 1Gb 2-port PCIe Ethernet Adapter

---

2E52      2E52

**Explanation:** Configuring 10GbE 8-port NGP Mezz adapter

---

2E53      2E53

**Explanation:** Configuring 10GbE-SR 4-port adapter

---

2E55      2E55

**Explanation:** Configuring 10GbE-SR/1GBaseT 4-port adapter

---

2E57      2E57

**Explanation:** Configuring 10GbE-Cu 4-port Integrated adapter

---

2E63      2E63

**Explanation:** Configuring 10GbE 2-port GX++ Gen2 adapter

---

2F00      2F00

**Explanation:** Configuring BluRay Writer

---

2F01      2F01

**Explanation:** Configuring BluRay Reader

---

---

3000      3000

**Explanation:** GPFS Raid Services



---

## AIX diagnostic load progress indicators

This section contains a list of the various numbers and characters that display in the operator panel display that track the progress of diagnostics.

**Note:** Some systems might produce 4-digit codes. If the leftmost digit of a 4-digit code is 0, use the three rightmost digits.

---

**0C00**      **0C00**

**Explanation:** AIX Install/Maintenance loaded successfully.

---

**0C01**      **0C01**

**Explanation:** Insert the first diagnostic diskette.

---

**0C02**      **0C02**

**Explanation:** Diskettes inserted out of sequence.

---

**0C03**      **0C03**

**Explanation:** The wrong diskette is in diskette drive.

---

**0C04**      **0C04**

**Explanation:** The loading stopped with an irrecoverable error.

---

**0C05**      **0C05**

**Explanation:** A diskette error occurred.

---

**0C06**      **0C06**

**Explanation:** The `rc.boot` configuration shell script is unable to determine type of boot.

---

**0C07**      **0C07**

**Explanation:** Insert the next diagnostic diskette.

---

**0C08**      **0C08**

**Explanation:** RAM file system started incorrectly.

---

**0C09**      **0C09**

**Explanation:** The diskette drive is reading or writing a diskette.

---

**0C10**      **0C10**

**Explanation:** Unknown system platform

---

**0C20**      **0C20**

**Explanation:** An unexpected halt occurred, and the system is configured to enter the kernel debug program instead of entering a system dump.

---

**0C21**      **0C21**

**Explanation:** The `ifconfig` command was unable to configure the network for the client network host.

---

**0C22**      **0C22**

**Explanation:** The `tftp` command was unable to read client's `ClientHostName.info` file during a client network boot.

---

**0C24**      **0C24**

**Explanation:** Unable to read client's `ClientHostName.info` file during a client network boot.

---

**0C25**      **0C25**

**Explanation:** Client did not mount remote miniroot during network install.

---

**0C26**      **0C26**

**Explanation:** Client did not mount the `/usr` file system during the network boot.

---

**0C29**      **0C29**

**Explanation:** The system was unable to configure the network device.

---

**0C31**      **0C31**

**Explanation:** Select the console display for the diagnostics. To select No console display, set the key mode switch to Normal, then to Service. The diagnostic programs then load and run the diagnostics automatically. If you continue to get the message, check the cables and make sure you are using the serial port.

---

**0C32**      **0C32**

## 0C33 • 0C61

**Explanation:** A directly attached display (HFT) was selected.

---

0C33      0C33

**Explanation:** A TTY terminal attached to serial ports S1 or S2 was selected.

---

0C34      0C34

**Explanation:** A file was selected. The console messages store in a file.

---

0C35      0C35

**Explanation:** No console found.

---

0C40      0C40

**Explanation:** Configuration files are being restored.

---

0C41      0C41

**Explanation:** Could not determine the boot type or device.

---

0C42      0C42

**Explanation:** Extracting data files from diskette.

---

0C43      0C43

**Explanation:** Cannot access the boot/install tape.

---

0C44      0C44

**Explanation:** Initializing installation database with target disk information.

---

0C45      0C45

**Explanation:** Cannot configure the console.

---

0C46      0C46

**Explanation:** Normal installation processing.

---

0C47      0C47

**Explanation:** Could not create a physical volume identifier (PVID) on disk.

---

0C48      0C48

**Explanation:** Prompting you for input.

---

0C49      0C49

**Explanation:** Could not create or form the JFS log.

---

0C50      0C50

**Explanation:** Creating root volume group on target disks.

---

0C51      0C51

**Explanation:** No paging devices were found.

---

0C52      0C52

**Explanation:** Changing from RAM environment to disk environment.

---

0C53      0C53

**Explanation:** Not enough space in the **/tmp** directory to do a preservation installation.

---

0C54      0C54

**Explanation:** Installing either BOS or additional packages.

---

0C55      0C55

**Explanation:** Could not remove the specified logical volume in a preservation installation.

---

0C56      0C56

**Explanation:** Running user-defined customization.

---

0C57      0C57

**Explanation:** Failure to restore BOS.

---

0C58      0C58

**Explanation:** Displaying message to turn the key.

---

0C59      0C59

**Explanation:** Could not copy either device special files, device ODM, or volume group information from RAM to disk.

---

0C61      0C61

**Explanation:** Failed to create the boot image.

---

---

**0C62**      **0C62**

**Explanation:** Loading platform dependent debug files.

---

**0C63**      **0C63**

**Explanation:** Loading platform dependent data files.

---

**0C64**      **0C64**

**Explanation:** Failed to load platform dependent data files.

---

**0C70**      **0C70**

**Explanation:** Problem Mounting diagnostic boot media. An example of the boot media would be a CD-ROM disc.

---

**0C71**      **0C71**

**Explanation:** AIX diagnostics are not supported on this system, or there is not enough memory to run the diagnostics.

---

**0C72**      **0C72**

**Explanation:** There is a problem copying files from the diagnostic boot media into the RAM file system. An example of the boot media would be a CD-ROM disc.

---

**0C99**      **0C99**

**Explanation:** Diagnostics have completed. This code is only used when there is no console.



---

## Dump progress indicators (dump status codes)

The following dump progress indicators, or dump status codes, are part of a Type 102 message.

**Note:** When a lowercase c is listed, it displays in the lower half of the character position. Some systems produce 4-digit codes. The two leftmost positions can have blanks or zeros. Use the two rightmost digits.

---

00C0      00C0

**Explanation:** The dump completed successfully.

**Explanation:** Unknown dump failure.

---

00C1      00C1

**Explanation:** The dump failed due to an I/O error.

---

00C2      00C2

**Explanation:** A dump, requested by the user, is started.

---

00C3      00C3

**Explanation:** The dump is inhibited.

---

00C4      00C4

**Explanation:** The dump device is not large enough.

---

00C5      00C5

**Explanation:** The dump did not start, or the dump crashed.

---

00C6      00C6

**Explanation:** Dumping to a secondary dump device.

---

00C7      00C7

**Explanation:** Reserved.

---

00C8      00C8

**Explanation:** The dump function is disabled.

---

00C9      00C9

**Explanation:** A dump is in progress.

---

00CB      00CB

**Explanation:** A firmware-assisted system dump is in progress

---

00CC      00CC



---

## AIX crash progress codes (category 1)

Crash codes produce a Type 102 message. A Type 102 message indicates that a software or hardware error occurred during system execution of an application.

For category 1 crash codes, dump analysis is the appropriate first action in Problem Determination. Begin the Problem Determination process with software support.

---

**888-102-300 888-102-300**

**Explanation:** Data storage interrupt from the processor.

---

**888-102-32X 888-102-32X**

**Explanation:** Data storage interrupt because of an I/O exception from IOCC.

---

**888-102-38X 888-102-38X**

**Explanation:** Data storage interrupt because of an I/O exception from SLA.

---

**888-102-400 888-102-400**

**Explanation:** Instruction storage interrupt.

---

**888-102-700 888-102-700**

**Explanation:** Program interrupt.



---

## AIX crash progress codes (category 2)

Crash codes produce a Type 102 message. A Type 102 message indicates that a software or hardware error occurred during system execution of an application.

For category 2 crash codes, dump analysis most likely will not aid in Problem Determination. Begin the Problem Determination process with hardware support.

---

**888-102-200 888-102-200**

**Explanation:** Machine check because of a memory bus error.

---

**888-102-201 888-102-201**

**Explanation:** Machine check because of a memory timeout.

---

**888-102-202 888-102-202**

**Explanation:** Machine check because of a memory card failure.

---

**888-102-203 888-102-203**

**Explanation:** Machine check because of an out of range address.

---

**888-102-204 888-102-204**

**Explanation:** Machine check because of an attempt to write to ROS.

---

**888-102-205 888-102-205**

**Explanation:** Machine check because of an uncorrectable address parity.

---

**888-102-206 888-102-206**

**Explanation:** Machine check because of an uncorrectable ECC error.

---

**888-102-207 888-102-207**

**Explanation:** Machine check because of an unidentified error.

---

**888-102-208 888-102-208**

**Explanation:** Machine check due to an L2 uncorrectable ECC.

---

**888-102-500 888-102-500**

**Explanation:** External interrupt because of a scrub memory bus error.

---

**888-102-501 888-102-501**

**Explanation:** External interrupt because of an unidentified error.

---

**888-102-51X 888-102-51X**

**Explanation:** External interrupt because of a DMA memory bus error.

---

**888-102-52X 888-102-52X**

**Explanation:** External interrupt because of an IOCC channel check.

---

**888-102-53X 888-102-53X**

**Explanation:** External interrupt from an IOCC bus timeout; x represents the IOCC number.

---

**888-102-54X 888-102-54X**

**Explanation:** External interrupt because of an IOCC keyboard check.

---

**888-102-800 888-102-800**

**Explanation:** Floating point is not available.



---

## AIX crash progress codes (category 3)

Crash codes produce a Type 102 message. A Type 102 message indicates that a software or hardware error occurred during system execution of an application.

For category 3 crash codes, both software and hardware support may be needed in Problem Determination. Go to the 888 sequence in the operator panel display to assist in problem isolation.

---

888-102-000 888-102-000

**Explanation:** Unexpected system interrupt.

---

888-102-558 888-102-558

**Explanation:** There is not enough memory to continue the system IPL.

---

888-102-600 888-102-600

**Explanation:** AIX 4.3.3.3 and above: Alignment Interrupt. If pre-AIX 4.3.3.3: AIX has crashed because the Portability Assist Layer (PAL) for this machine type has detected a problem.

---

888-102-605 888-102-605

**Explanation:** AIX 4.3.3.3 and above: AIX has crashed because the Portability Assist Layer (PAL) for this machine type has detected a problem.



---

## (C1xx) Service processor progress codes

---

**C10010XX**    **C10010XX**

**Explanation:** Pre-standby

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1001F00**    **C1001F00**

**Explanation:** Pre-standby: starting initial transition file

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1001F0D**    **C1001F0D**

**Explanation:** Pre-standby: discovery completed in initial transition file.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

**Problem determination:** While this checkpoint is being displayed, the service processor card is reading the system VPD; this may take as long as 15 minutes (on systems with maximum configurations or many disk drives) before displaying the next checkpoint. You should wait at least 15 minutes for this checkpoint to change before deciding that the system is hung.

---

**C1001F0F**    **C1001F0F**

**Explanation:** Pre-standby: waiting for standby synchronization from initial transition file

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1001FFF**    **C1001FFF**

**Explanation:** Pre-standby: completed initial transition file

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X01**    **C1009X01**

**Explanation:** Hardware object manager: (HOM): the cancontinue flag is being cleared.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation

Procedures chapter in your host server Service Guide.

---

**C1009X02**    **C1009X02**

**Explanation:** Hardware object manager: (HOM): erase HOM IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X04**    **C1009X04**

**Explanation:** Hardware object manager: (HOM): build cards IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X08**    **C1009X08**

**Explanation:** Hardware object manager: (HOM): build processors IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X0C**    **C1009X0C**

**Explanation:** Hardware object manager: (HOM): build chips IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X10**    **C1009X10**

**Explanation:** Hardware object manager: (HOM): initialize HOM.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X14**    **C1009X14**

**Explanation:** Hardware object manager: (HOM): validate HOM.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X18**    **C1009X18**

## C1009X1C • C1009X44

**Explanation:** Hardware object manager: (HOM): GARD in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X1C C1009X1C

**Explanation:** Hardware object manager: (HOM): clock test in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X20 C1009X20

**Explanation:** Frequency control IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X24 C1009X24

**Explanation:** Asset protection IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X28 C1009X28

**Explanation:** Memory configuration IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X2C C1009X2C

**Explanation:** Processor CFAM initialization in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X30 C1009X30

**Explanation:** Processor self-synchronization in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X34 C1009X34

**Explanation:** Processor mask attentions being initialiaed.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X38 C1009X38

**Explanation:** Processor check ring IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X39 C1009X39

**Explanation:** Processor L2 line delete in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X3A C1009X3A

**Explanation:** Load processor gpnr IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X3C C1009X3C

**Explanation:** Processor ABIST step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X40 C1009X40

**Explanation:** Processor LBIST step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C1009X44 C1009X44

**Explanation:** Processor array initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C1009X46**    **C1009X46**

**Explanation:** Processor AVP initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X48**    **C1009X48**

**Explanation:** Processor flush IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X4C**    **C1009X4C**

**Explanation:** Processor wiretest IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X50**    **C1009X50**

**Explanation:** Processor long scan IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X54**    **C1009X54**

**Explanation:** Start processor clocks IPL step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X58**    **C1009X58**

**Explanation:** Processor SCOM initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X5C**    **C1009X5C**

**Explanation:** Processor interface alignment procedure in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C1009X5E**    **C1009X5E**

**Explanation:** Processor AVP L2 test case in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X60**    **C1009X60**

**Explanation:** Processor random data test in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X64**    **C1009X64**

**Explanation:** Processor enable machine check test in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X66**    **C1009X66**

**Explanation:** Concurrent initialization in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X68**    **C1009X68**

**Explanation:** Processor fabric initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X6C**    **C1009X6C**

**Explanation:** Processor PSI initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009X70**    **C1009X70**

**Explanation:** ASIC CFAM initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

## C1009X74 • C1009XA4

---

C1009X74 C1009X74

**Explanation:** ASIC mask attentions being set up.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X78 C1009X78

**Explanation:** ASIC check rings being set up.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X7C C1009X7C

**Explanation:** ASIC ABIST test being run.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X80 C1009X80

**Explanation:** ASIC LBIST test being run.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X82 C1009X82

**Explanation:** ASIC RGC being reset.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X84 C1009X84

**Explanation:** ASIC being flushed.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X88 C1009X88

**Explanation:** ASIC long scan initialization in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X8C C1009X8C

**Explanation:** ASIC start clocks in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X90 C1009X90

**Explanation:** Wire test in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X92 C1009X92

**Explanation:** ASIC restore erepair in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X94 C1009X94

**Explanation:** ASIC transmit/receive initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X98 C1009X98

**Explanation:** ASIC wrap test in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X9C C1009X9C

**Explanation:** ASIC SCOM initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009X9E C1009X9E

**Explanation:** ASIC HSS set up in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009XA0 C1009XA0

**Explanation:** ASIC onyx BIST in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1009XA4 C1009XA4

**Explanation:** ASIC interface alignment step in progress.

**Response:** Perform isolation procedure FSPSPC1. To

locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XA8 C1009XA8**

**Explanation:** ASIC random data test in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XAC C1009XAC**

**Explanation:** ASIC enable machine check step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XB0 C1009XB0**

**Explanation:** ASIC I/O initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XB4 C1009XB4**

**Explanation:** ASIC DRAM initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XB8 C1009XB8**

**Explanation:** ASIC memory diagnostic step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XB9 C1009XB9**

**Explanation:** PSI diagnostic step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XBB C1009XBB**

**Explanation:** Restore L3 line delete step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XBD C1009XBD**

**Explanation:** AVP memory test case in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XC0 C1009XC0**

**Explanation:** Node interface alignment procedure in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XC4 C1009XC4**

**Explanation:** Dump initialization step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XC8 C1009XC8**

**Explanation:** Start PRD step in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XCC C1009XCC**

**Explanation:** Message passing waiting period has begun.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XD0 C1009XD0**

**Explanation:** Message passing waiting period has begun.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1009XD4 C1009XD4**

**Explanation:** EI (Elastic Interface) calibration step in progress .

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

## C100B101 • C100C10D

---

### C100B101 C100B101

**Explanation:** Firmware update via the USB port on the service processor: the firmware image is being installed on one side of the flash.

---

### C100B102 C100B102

**Explanation:** Firmware update via the USB port on the service processor: the firmware image is being installed on the other side of the flash.

---

### C100B103 C100B103

**Explanation:** Firmware update via the USB port on the service processor: the firmware installation has been completed successfully. This checkpoint will stay in the control (operator) panel's display for about 10 seconds after the installation is complete, then it will be cleared.

---

### C100B104 C100B104

**Explanation:** Firmware update via the USB port on the service processor: the firmware installation has failed.

---

### C100C100 C100C100

**Explanation:** Starting power-up.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C102 C100C102

**Explanation:** Network initialization complete; waiting on VPD from processor.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C103 C100C103

**Explanation:** Waiting on VPD from processor.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C104 C100C104

**Explanation:** Processor VPD collection is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C106 C100C106

**Explanation:** Checking of the number of processors is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C107 C100C107

**Explanation:** Waiting on VPD from sensors.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C108 C100C108

**Explanation:** Sensor VPD collection is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C10A C100C10A

**Explanation:** Waiting for BPC's IP addresses to be sent from the HMC. The control panel toggles between C100C10A and C100C10B every 5 seconds or so until the addresses are received.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C10B C100C10B

**Explanation:** Waiting for BPC's IP addresses to be sent from the HMC.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C10C C100C10C

**Explanation:** Waiting for the BPC to come up to standby and turn off block power. The control panel toggles between C100C10C and C100C10D every 5 seconds or so until the BPC is at standby and the block power has been turned off.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C10D C100C10D

**Explanation:** Waiting for the BPC to come up to standby and turn off block power.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation

Procedures chapter in your host server Service Guide.

---

**C100C110**    **C100C110**

**Explanation:** Waiting for serial polling. The control panel toggles between C100C110 and C100C111 every 5 seconds or so until valid PBC UART data is received from the DCAs.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C111**    **C100C111**

**Explanation:** Waiting for serial polling.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C112**    **C100C112**

**Explanation:** Collecting the TMS is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C114**    **C100C114**

**Explanation:** Waiting for the BPC to respond to the TMS command from SPCN. The control panel toggles between C100C114 and C100C115 every 5 seconds or so until the BPC has responded.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C115**    **C100C115**

**Explanation:** Waiting for the BPC to respond to the TMS command from SPCN.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C116**    **C100C116**

**Explanation:** Waiting for the BPC to respond to the enclosure TMS command from SPCN. The control panel toggles between C100C116 and C100C117 every 5 seconds or so until the BPC has responded.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C117**    **C100C117**

**Explanation:** Waiting for the BPC to respond to the enclosure TMS command from SPCN.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C118**    **C100C118**

**Explanation:** Waiting for the BPC to respond to the secure VPD command from SPCN. The control panel toggles between C100C118 and C100C119 every 5 seconds or so until the BPC has responded.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C119**    **C100C119**

**Explanation:** Waiting for the BPC to respond to the secure VPD command from SPCN.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C120**    **C100C120**

**Explanation:** Waiting for power off delay to be complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C121**    **C100C121**

**Explanation:** Waiting for power off delay to be complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C122**    **C100C122**

**Explanation:** Power off delay is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C128**    **C100C128**

**Explanation:** Waiting for the processor subsystem to show up in the BPC polling data. The control panel toggles between C100C128 and C100C129 every 5 seconds or so until the processor subsystem is present in the polling data.

**Response:** Perform isolation procedure FSPSPC1. To

## C100C129 • C100C166

locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C129 C100C129

**Explanation:** Waiting for the processor subsystem to show up in the BPC polling data.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C140 C100C140

**Explanation:** Checking the voltage adjustment.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C142 C100C142

**Explanation:** Checking of the voltage adjustment is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C14E C100C14E

**Explanation:** Waiting for the voltage adjustment delay to be complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C14F C100C14F

**Explanation:** Waiting for the voltage adjustment delay to be complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C150 C100C150

**Explanation:** Checking the VRM voltage adjustment.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C152 C100C152

**Explanation:** Waiting for the VRM voltage adjustment delay to be complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C153 C100C153

**Explanation:** Waiting for the VRM voltage adjustment delay to be complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C154 C100C154

**Explanation:** Checking of the VRM voltage adjustment is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C160 C100C160

**Explanation:** Power check in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C162 C100C162

**Explanation:** Checking for power supply power.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C164 C100C164

**Explanation:** Waiting for the power supply power to come up.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C165 C100C165

**Explanation:** Waiting for the power supply power to come up.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### C100C166 C100C166

**Explanation:** REGS power check in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C168**    **C100C168**

**Explanation:** Waiting for the REGS power check to be complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C169**    **C100C169**

**Explanation:** Waiting for the REGS power check to be complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C170**    **C100C170**

**Explanation:** Waiting for the BPC's response to the power-on request.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C171**    **C100C171**

**Explanation:** Waiting for the BPC's response to the power-on request.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C172**    **C100C172**

**Explanation:** BPC's response to the power-on request has been received; waiting on all processor subsystems to respond with **powered up** to BPC's polling query. The control panel toggles between C100C172 and C100C173 every 5 seconds or so until all processor subsystems report that they are powered up.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C173**    **C100C173**

**Explanation:** Waiting on all processor subsystems to respond with **powered up** to BPC's polling query.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C100C174**    **C100C174**

**Explanation:** Waiting for the BPC to report why power-on failed. The control panel toggles between C100C174 and C100C175 every 5 seconds or so until the report is received.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C175**    **C100C175**

**Explanation:** Waiting for the BPC to report why power-on failed.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C180**    **C100C180**

**Explanation:** Activating the power good signals.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C184**    **C100C184**

**Explanation:** The power-on delay is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1A0**    **C100C1A0**

**Explanation:** Waiting on the power good signals.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1A1**    **C100C1A1**

**Explanation:** Waiting on the power good signals.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1A2**    **C100C1A2**

**Explanation:** Waiting on the power good signal is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C100C1B0 C100C1B0**

**Explanation:** Waiting to power down.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1B1 C100C1B1**

**Explanation:** Waiting to power down.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1B2 C100C1B2**

**Explanation:** The power down delay is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1B4 C100C1B4**

**Explanation:** The SPCN is waiting for power down.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1B5 C100C1B5**

**Explanation:** The SPCN is waiting for power down.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1B6 C100C1B6**

**Explanation:** Powering down the device is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1B7 C100C1B7**

**Explanation:** Reserved.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1B8 C100C1B8**

**Explanation:** The request to power off the processor subsystem is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1BA C100C1BA**

**Explanation:** Waiting on the BPC to respond to the power-off command to the I/O drawers from SPCN. The control panel toggles between C100C1BA and C100C1BB every 5 seconds or so until the I/O drawers respond.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1BB C100C1BB**

**Explanation:** Waiting on the BPC to respond to the power-off command to the I/O drawers from SPCN.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1BE C100C1BE**

**Explanation:** The power down operation is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1CF C100C1CF**

**Explanation:** A critical fault has occurred. An SRC will be posted and logged soon.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100C1FF C100C1FF**

**Explanation:** The power-on process is complete.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C100D009 C100D009**

**Explanation:** Licensed Internal Code (system) running initialization

---

**C1011F00 C1011F00**

**Explanation:** Pre-standby: starting independent initial transition file (primary/secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1011FFF C1011FFF**

**Explanation:** Pre-standby: completed independent initial transition file (primary/secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1021F00 C1021F00**

**Explanation:** Pre-standby: starting primaryInitial transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1021FFF C1021FFF**

**Explanation:** Pre-standby: completed primaryInitial transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1031F00 C1031F00**

**Explanation:** Pre-standby: starting secondaryInitial transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1031FFF C1031FFF**

**Explanation:** Pre-standby: completed secondaryInitial transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C103A1XX C103A1XX**

**Explanation:** Hypervisor code modules are being transferred to system storage

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C103A2XX C103A2XX**

**Explanation:** Hypervisor data areas are being built in system storage

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C103A3XX C103A3XX**

**Explanation:** Hypervisor data structures are being transferred to system storage

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C103A400 C103A400**

**Explanation:** Special purpose registers are loaded and instructions are started on the system processors

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C103A401 C103A401**

**Explanation:** Instructions have been started on the system processors

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C103C2XX C103C2XX**

**Explanation:** The service processor is waiting for the batteries in the uninterruptible power supply (UPS) to charge prior to automatic power on-IPL. The last byte (xx) will increment while waiting on the UPS batteries.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1041F00 C1041F00**

**Explanation:** Pre-standby: starting GardedInitial transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1041FFF C1041FFF**

**Explanation:** Pre-standby: completed GardedInitial transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C104550X C104550X**

**Explanation:** The system reboot is waiting until the sibling service processor reaches the termination state. The last nibble (x) will toggle between 0 and 1.

---

## C10F2000 • C1212000

---

C10F2000 C10F2000

**Explanation:** Halt: starting halt transition file

---

C10F20FF C10F20FF

**Explanation:** Halt: completing halt transition file

---

C1112000 C1112000

**Explanation:** Power on: starting Standby-PowerOnTransition transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C11120FF C11120FF

**Explanation:** Power on: completed Standby-PowerOnTransition transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1122000 C1122000

**Explanation:** Power on: starting PowerOnTransition-PoweredOn transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C11220FF C11220FF

**Explanation:** Power on: completed PowerOnTransition-PoweredOn transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1132000 C1132000

**Explanation:** Power on: starting PoweredOn-IplTransition transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C11320FF C11320FF

**Explanation:** Power on: completed PoweredOn-IplTransition transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

C115E359 C115E359

**Explanation:** Vital product data (VPD) collection in progress. This progress code may be displayed for a long time on large systems.

**Response:** Perform isolation procedure FSPSPC1 only if this progress code does not appear to be updating after an hour or more. To locate the isolation procedure go to the Isolation Procedures chapter in your host server service guide.

---

C116C2XX C116C2XX

**Explanation:** System power interface is listening for power fault events from SPCN. The last byte (xx) will increment up from 00 to 1F every second while it waits.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1202000 C1202000

**Explanation:** IPL transition: starting PowerOn/IplTransition-Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C12020FF C12020FF

**Explanation:** IPL transition: completed PowerOn/IplTransition-Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C12040XX C12040XX

**Explanation:** IPL lock time left until expiration. The last byte (xx) will count down as the IPL lock time runs out (FF-00).

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1212000 C1212000

**Explanation:** IPL transition: starting Standard/IplTransition-Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C12120FF**    **C12120FF**

**Explanation:** IPL transition: completed  
Standard/IplTransition-Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1222000**    **C1222000**

**Explanation:** IPL transition: starting  
Flash/IplTransition-Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C12220FF**    **C12220FF**

**Explanation:** IPL transition: completed  
Flash/IplTransition-Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1232000**    **C1232000**

**Explanation:** IPL transition: starting  
PostDump/IplTransition-Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C12320FF**    **C12320FF**

**Explanation:** IPL transition: completed  
PostDump/IplTransition-Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1242000**    **C1242000**

**Explanation:** IPL transition: starting  
Idle/IplTransition-Ipl transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C12420FF**    **C12420FF**

**Explanation:** IPL transition: completed  
Idle/IplTransition-Ipl transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C1252000**    **C1252000**

**Explanation:** IPL transition: starting  
Standby/IplTransition-Ipl transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C12520FF**    **C12520FF**

**Explanation:** IPL transition: completed  
Standby/IplTransition-Ipl transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1382000**    **C1382000**

**Explanation:** IPL: starting HostStarted-BcuSwitched transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C13820FF**    **C13820FF**

**Explanation:** IPL: completed HostStarted-BcuSwitched transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1392000**    **C1392000**

**Explanation:** IPL: starting BcuSwitched-Runtime transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C13920FF**    **C13920FF**

**Explanation:** IPL: completed BcuSwitched-Runtime transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1402000**    **C1402000**

**Explanation:** IPL: starting Normal/fast/Ipl-HostStarted transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

C14020FF C14020FF

**Explanation:** IPL: completed Normal/fast/Ipl-HostStarted transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1412000 C1412000

**Explanation:** IPL: starting Normal/slow/Ipl-HostStarted transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C14120FF C14120FF

**Explanation:** IPL: completed Normal/slow/Ipl-HostStarted transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1422000 C1422000

**Explanation:** IPL: starting PostDump/Ipl-HostStarted transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C14220FF C14220FF

**Explanation:** IPL: completed PostDump/Ipl-HostStarted transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1432000 C1432000

**Explanation:** IPL: starting Ipl-IdleTransition transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C14320FF C14320FF

**Explanation:** IPL: completed Ipl-IdleTransition transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1442000 C1442000

**Explanation:** IPL: starting IdleTransition-Idle transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C14420FF C14420FF

**Explanation:** IPL: completed IdleTransition-Idle transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1452000 C1452000

**Explanation:** IPL: starting Ipl-StandbyVerificationTransition transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C14520FF C14520FF

**Explanation:** IPL: completed Ipl-StandbyVerificationTransition transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1462000 C1462000

**Explanation:** IPL: starting StandbyVerificationTransition-Standby transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C14620FF C14620FF

**Explanation:** IPL: completed StandbyVerificationTransition-Standby transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1472000 C1472000

**Explanation:** IPL: starting normal/ipl-hoststarted transition file (master)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C14720FF C14720FF**

**Explanation:** IPL: completing normal/ipl-hoststarted transition file (master)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1482000 C1482000**

**Explanation:** IPL: starting normal/backup/ipl-hoststarted transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C14820FF C14820FF**

**Explanation:** IPL: completing normal/backup/ipl-hoststarted transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C162E402 C162E402**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the service processor.

**Failing Item:**  
• SVCPROC

---

**C162E403 C162E403**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the operator panel.

**Failing Item:**  
• CTLPNL

---

**C162E405 C162E405**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the VPD card.

**Failing Item:**  
• CAPACTY

---

**C162E408 C162E408**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the system backplane.

**Failing Item:**  
• SYSBKPL

---

---

**C162E410 C162E410**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from a processor.

**Failing Item:**  
• ANYPROC

---

**C162E41C C162E41C**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the system.

**Failing Item:**  
• CAPACTY

---

**C162E41E C162E41E**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the enclosure.

**Failing Item:**  
• SYSBKPL

---

**C162E420 C162E420**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the IO backplane.

**Failing Item:**  
• IO\_HUB

---

**C162E421 C162E421**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the IO hub.

**Failing Item:**  
• IO\_HUB

---

**C162E430 C162E430**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from SPCN.

**Failing Item:**  
• SVCPROC

---

**C162E4A0 C162E4A0**

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from the VSBP Starting Point.

**Failing Item:**  
• CAPACTY

---

---

C162E4D0 C162E4D0

**Explanation:** If the system hangs on this checkpoint, the service processor is unable to collect VPD from memory DIMM.

**Failing Item:**

- MEMDIMM

---

C1645300 C1645300

**Explanation:** Starting a data synchronization operation between the primary service processor and the secondary service processor.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1645301 C1645301

**Explanation:** Completed a data synchronization operation between the primary service processor and the secondary service processor.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1645304 C1645304

**Explanation:** Redundancy enablement in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1645305 C1645305

**Explanation:** Redundancy enablement in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1645306 C1645306

**Explanation:** Redundancy enablement in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C16453XX C16453XX

**Explanation:** A large data synchronization operation from the primary service processor to the secondary service processor is taking place. The last nibble (x) will toggle between 2 and 3.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1802000 C1802000

**Explanation:** Termination: starting TerminationTransition-Termination transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C18020FF C18020FF

**Explanation:** Termination: completed TerminationTransition-Termination transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1902000 C1902000

**Explanation:** Power off: starting Any-Dpo transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C19020FF C19020FF

**Explanation:** Power off: completed Any-Dpo transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1912000 C1912000

**Explanation:** Power off: starting Any-PowerOffTransition transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C19120FF C19120FF

**Explanation:** Power off: completed Any-PowerOffTransition transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1922000 C1922000

**Explanation:** Power off: starting PowerOffTransition-PoweredOff transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C19220FF**    **C19220FF**

**Explanation:** Power off: completed  
PowerOffTransition-PoweredOff transition file  
(primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C02000**    **C1C02000**

**Explanation:** Secondary VERIFICATION: starting  
Standby-StandbyVerification transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C020FF**    **C1C020FF**

**Explanation:** Secondary verification: completed  
Standby-StandbyVerification transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C12000**    **C1C12000**

**Explanation:** Secondary verification: starting  
StandbyVerification-Standby transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C120FF**    **C1C120FF**

**Explanation:** Secondary verification: completed  
StandbyVerification-Standby transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C22000**    **C1C22000**

**Explanation:** Secondary verification: starting  
Runtime-secondaryVerification transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C220FF**    **C1C220FF**

**Explanation:** Secondary verification: completed  
Runtime-secondaryVerification transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C1C32000**    **C1C32000**

**Explanation:** Secondary verification: starting  
secondaryVerification-Runtime transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C320FF**    **C1C320FF**

**Explanation:** Secondary verification: completed  
secondaryVerification-Runtime transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C3C218**    **C1C3C218**

**Explanation:** The service processor is polling the system power control network (SPCN) firmware looking for power fault events.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C42000**    **C1C42000**

**Explanation:** Failover: starting failover/failover-termination transition file (master)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C420FF**    **C1C420FF**

**Explanation:** Failover: completed failover/failover-termination transition file (master)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C52000**    **C1C52000**

**Explanation:** Failover: starting failover/backup/  
failover-termination transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1C520FF**    **C1C520FF**

**Explanation:** Failover: completed failover/backup/  
failover-termination transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

C1C62000 C1C62000

**Explanation:** Failover: starting failover/failover-runtime transition file (master).

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1C620FF C1C620FF

**Explanation:** Failover: completed failover/failover-runtime transition file (master).

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1C72000 C1C72000

**Explanation:** Failover: starting failover/backup/failover-standby transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1C720FF C1C720FF

**Explanation:** Failover: completed failover/backup/failover-standby transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CA2000 C1CA2000

**Explanation:** Connection monitoring failover: starting survfailover/backup/failover-runtime transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CA20FF C1CA20FF

**Explanation:** Connection monitoring failover: completed survfailover/backup/failover-runtime transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CB2000 C1CB2000

**Explanation:** Connection monitoring failover: starting survfailover/backup/failover-termination transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation

Procedures chapter in your host server Service Guide.

---

C1CB20FF C1CB20FF

**Explanation:** Connection monitoring failover: completed survfailover/backup/failover-termination transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE200 C1CBE200

**Explanation:** VPD collection in progress

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE2FF C1CBE2FF

**Explanation:** VPD collection ending

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE300 C1CBE300

**Explanation:** Checking the status of VPD collection

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE3FF C1CBE3FF

**Explanation:** The end of checking the status of VPD collection

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE400 C1CBE400

**Explanation:** VPD recollection is in progress.

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE401 C1CBE401

**Explanation:** VPD recollection because of a change in the VPD is in progress

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE402 C1CBE402**

**Explanation:** The old VPD values are being cleared from memory

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE403 C1CBE403**

**Explanation:** The RLCA is being initialized during VPD recollection

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE404 C1CBE404**

**Explanation:** VPD is being recollected

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE405 C1CBE405**

**Explanation:** VPD is being recollected

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE406 C1CBE406**

**Explanation:** VPD is being recollected

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE407 C1CBE407**

**Explanation:** The recollected VPD is being validated

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE408 C1CBE408**

**Explanation:** The VPD tables are being rebuilt with the recollected data

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**C1CBE409 C1CBE409**

**Explanation:** The NVRAM VPD data is being recollected

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE40A C1CBE40A**

**Explanation:** The RLCA VPD data is being recollected

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE40B C1CBE40B**

**Explanation:** The recollected RLCA VPD data is being written to memory

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE40C C1CBE40C**

**Explanation:** The recollected HVAT VPD data is being written to memory

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE40D C1CBE40D**

**Explanation:** The registers are being updated with the recollected VPD

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE40E C1CBE40E**

**Explanation:** The module table is being rewritten with the recollected VPD

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1CBE40F C1CBE40F**

**Explanation:** The LED table is being rewritten with the recollected VPD

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

C1CBE410 C1CBE410

**Explanation:** The LED table is being rewritten with the recollected VPD

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE411 C1CBE411

**Explanation:** The security of the recollected VPD is being verified

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE4FE C1CBE4FE

**Explanation:** The state is being updated during VPD recollection

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE4FF C1CBE4FF

**Explanation:** The recollection of VPD is ending

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE500 C1CBE500

**Explanation:** The VPD of a single FRU is being recollected

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE600 C1CBE600

**Explanation:** The VPD of a single FRU module is being recollected

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CBE6FF C1CBE6FF

**Explanation:** The VPD recollection from a single FRU is ending

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CC2000 C1CC2000

**Explanation:** Connection monitoring failover: starting survfailover/backup/failover-standby transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1CC20FF C1CC20FF

**Explanation:** Connection monitoring failover: completed survfailover/backup/failover-standby transition file (secondary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1D22000 C1D22000

**Explanation:** Dump: starting DumpTransition-Dump transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1D2200D C1D2200D

**Explanation:** Dump: calling hardware dump from DumpTransition-Dump transition file (master)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1D2200F C1D2200F

**Explanation:** Dump: calling main store dump from DumpTransition-Dump transition file (master)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1D220FF C1D220FF

**Explanation:** Dump: completed DumpTransition-Dump transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

C1E82000 C1E82000

**Explanation:** Exit error: starting ExitError/Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1E820FF**    **C1E820FF**

**Explanation:** Exit error: completed ExitError/Ipl transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1E92000**    **C1E92000**

**Explanation:** Extract exit error: starting ExtractExitError/ipl transition file (master)

---

**C1E920FF**    **C1E920FF**

**Explanation:** Extract exit error: completed ExtractExitError/ipl transition file (master)

---

**C1EA2000**    **C1EA2000**

**Explanation:** Extract exit error: starting ExtractExitError/Backup/ipl transition file (secondary)

---

**C1EA20FF**    **C1EA20FF**

**Explanation:** Extract exit error: completed ExtractExitError/Backup/ipl transition file (secondary)

---

**C1F22000**    **C1F22000**

**Explanation:** Reset/reload: starting Reset/Ipl-LimitedRuntime transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1F220FF**    **C1F220FF**

**Explanation:** Reset/reload: completed Reset/Ipl-LimitedRuntime transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1F32000**    **C1F32000**

**Explanation:** Reset/reload: starting Reset/Ipl-Runtime transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1F320FF**    **C1F320FF**

**Explanation:** Reset/reload: completed Reset/Ipl-Runtime transition file (primary)

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation

Procedures chapter in your host server Service Guide.

---

**C1F42000**    **C1F42000**

**Explanation:** Reset/reload: starting Reset/Ipl-TerminationTransition transition file (master).

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**C1F420FF**    **C1F420FF**

**Explanation:** Reset/reload: completed Reset/Ipl-TerminationTransition transition file (master).

**Response:** Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.



---

## (C2xx) Virtual service processor progress codes

The C2xx progress codes indicate the progress of a partition IPL that is controlled by the virtual service processor.

The codes represent normal events which do not require any action to be taken. If a partition IPL stalls at a C2xxxxx progress code, a problem has occurred. Collect all of the SRC words and contact your next level of support.

---

**C2001000**    **C2001000**

**Explanation:** Partition auto-IPL during a platform IPL

---

**C2001010**    **C2001010**

**Explanation:** IPL source

---

**C2001100**    **C2001100**

**Explanation:** Adding partition resources to the secondary configuration

---

**C20011FF**    **C20011FF**

**Explanation:** Partition resources added successfully

---

**C2001200**    **C2001200**

**Explanation:** Checking if IPL is allowed

---

**C20012FF**    **C20012FF**

**Explanation:** Partition IPL is allowed to proceed

---

**C2001300**    **C2001300**

**Explanation:** Initializing ISL roadmap

---

**C20013FF**    **C20013FF**

**Explanation:** ISL roadmap initialized successfully

---

**C2001400**    **C2001400**

**Explanation:** Initializing SP Communication Area #1

---

**C2001410**    **C2001410**

**Explanation:** Initializing IPL parameters

---

**C20014FF**    **C20014FF**

**Explanation:** IPL parameters initialized successfully

---

**C2002100**    **C2002100**

**Explanation:** Power on SPCN racks

---

**C2002110**    **C2002110**

**Explanation:** Issuing a rack power on command

---

**C200211F**    **C200211F**

**Explanation:** Rack power on command successful

---

**C20021FF**    **C20021FF**

**Explanation:** SPCN rack power on phase complete

---

**C2002200**    **C2002200**

**Explanation:** Begin acquiring slot locks

---

**C20022FF**    **C20022FF**

**Explanation:** End acquiring slot locks

---

**C2002300**    **C2002300**

**Explanation:** Begin acquiring VIO slot locks

---

**C20023FF**    **C20023FF**

**Explanation:** End acquiring VIO slot locks

---

**C2002400**    **C2002400**

**Explanation:** Begin powering on slots

---

**C2002450**    **C2002450**

**Explanation:** Waiting for power on of slots to complete

---

**C20024FF**    **C20024FF**

**Explanation:** End powering on slots

---

**C2002500**    **C2002500**

**Explanation:** Begin power on VIO slots

## C20025FF • C2006000

---

C20025FF C20025FF

**Explanation:** End powering on VIO slots

---

C2003100 C2003100

**Explanation:** Validating ISL command parameters

---

C2003111 C2003111

**Explanation:** Waiting for Bus object to become operational

---

C2003112 C2003112

**Explanation:** Waiting for bus unit to become disabled

---

C2003115 C2003115

**Explanation:** Waiting for creation of bus object

---

C2003150 C2003150

**Explanation:** Sending ISL command to bus unit

---

C20031FF C20031FF

**Explanation:** Waiting for ISL command completion

---

C20032FF C20032FF

**Explanation:** ISL command complete successfully

---

C2003300 C2003300

**Explanation:** Start SoftPOR of a failed ISL slot

---

C2003350 C2003350

**Explanation:** Waiting for SoftPOR of a failed ISL slot

---

C20033FF C20033FF

**Explanation:** Finish SoftPOR of a failed ISL slot

---

C2004100 C2004100

**Explanation:** Waiting for load source device to enlist

---

C2004200 C2004200

**Explanation:** Load source device has enlisted

---

C2004300 C2004300

**Explanation:** Preparing connection to load source device

---

---

C20043FF C20043FF

**Explanation:** Load source device is connected

---

C2005100 C2005100

**Explanation:** Preparing to initiate MSD phase

---

C2005110 C2005110

**Explanation:** Loading SID 82 from load source device

---

C2005115 C2005115

**Explanation:** MSD Phase I

---

C2005120 C2005120

**Explanation:** Writing processor registers into SID 82

---

C2005125 C2005125

**Explanation:** MSD Phase II

---

C2005130 C2005130

**Explanation:** Writing main store pages to the load source device

---

C2005133 C2005133

**Explanation:** Writing hardware page table to the load source device

---

C2005135 C2005135

**Explanation:** MSD Phase III

---

C2005140 C2005140

**Explanation:** Storing (final) SID 82 back to the load source device

---

C2005150 C2005150

**Explanation:** Allocating the hardware page table

---

C20051FF C20051FF

**Explanation:** MSD processing complete

---

C2006000 C2006000

**Explanation:** Locating First LID information on the load source

---

---

**C2006005**    **C2006005**
**Explanation:** Clearing all partition main store

---

**C2006010**    **C2006010**
**Explanation:** Locating Next LID information on the load source

---

**C2006020**    **C2006020**
**Explanation:** Verifying LID information

---

**C2006030**    **C2006030**
**Explanation:** Priming LP Configuration LID

---

**C2006040**    **C2006040**
**Explanation:** Preparing to initiate LID load from load source

---

**C2006050**    **C2006050**
**Explanation:** LP Configuration LID primed successfully

---

**C2006060**    **C2006060**
**Explanation:** Waiting for LID load to complete

---

**C20060F0**    **C20060F0**
**Explanation:** The license information document (LID) was read without the aid of an input/output processor (IOP).

---

**C2006100**    **C2006100**
**Explanation:** LID load completed successfully

---

**C2006200**    **C2006200**
**Explanation:** Loading raw kernel memory image

---

**C20062FF**    **C20062FF**
**Explanation:** Loading raw kernel memory image completed successfully

---

**C2007100**    **C2007100**
**Explanation:** Disconnecting from load source device

---

**C2007103**    **C2007103**
**Explanation:** Removing load source device from LID Manager object

---



---

**C2007105**    **C2007105**
**Explanation:** Preparing to remove the load source IOP from the primary partition

---

**C2007110**    **C2007110**
**Explanation:** Preparing to remove the load source IOP from the primary partition

---

**C2007120**    **C2007120**
**Explanation:** Non-load source IOP has been successfully removed from the primary partition

---

**C2007125**    **C2007125**
**Explanation:** Load source IOP has been successfully removed from the primary partition

---

**C2007130**    **C2007130**
**Explanation:** Calling fatal error on the Transport Manager bus unit object

---

**C20071FF**    **C20071FF**
**Explanation:** Load source is successfully disconnected

---

**C2008040**    **C2008040**
**Explanation:** Begin transfer slot locks to partition

---

**C2008060**    **C2008060**
**Explanation:** End transfer slot locks to partition

---

**C2008080**    **C2008080**
**Explanation:** Begin transfer VIO slot locks to partition

---

**C20080A0**    **C20080A0**
**Explanation:** End transfer VIO slot locks to partition

---

**C20080FF**    **C20080FF**
**Explanation:** Hypervisor low level session manager object is ready

---

**C2008100**    **C2008100**
**Explanation:** Initializing SP Communication Area #2

---

**C2008104**    **C2008104**
**Explanation:** Loading data structures into main store

---

## C2008110 • C200XXXX

---

C2008110 C2008110

**Explanation:** Initializing event paths

---

C2008120 C2008120

**Explanation:** Starting processors

---

C2008130 C2008130

**Explanation:** Begin associate of system ports.

---

C2008138 C2008138

**Explanation:** Associating system ports to the RPA partition.

---

C200813F C200813F

**Explanation:** End associate of system ports.

---

C20081FF C20081FF

**Explanation:** Processors started successfully, now waiting to receive the continue acknowledgement from System Licensed Internal Code

---

C2008200 C2008200

**Explanation:** Continue acknowledgement received from System Licensed Internal Code

---

C20082FF C20082FF

**Explanation:** VSP IPL complete successfully

---

C200XXXX C200XXXX

**Explanation:** Any other Virtual Service Processor Progress Code not listed here.

---

## (C3xx, C5xx, C6xx) IPL status progress codes

A server that stalls during an initial program load (IPL) of the operating system indicates a problem with the operating system code or hardware configuration.

In this case, your only service action is to call your next level of support. If the problem is in the operating system code or hardware configuration, exchanging any hardware FRU will not fix the problem.

### Notes:

- The following table contains the C3xxxxxx, C5xxxxxx, and C6xxxxxx IPL status progress codes. Some of these codes can appear on your control panel or management console display. Depending on the system activity and disk configuration the duration of time that each code is displayed can vary. Eventually the system will continue to the next progress code until the IPL status is complete, or if an error is detected an SRC other than a C3xxxxxx, C5xxxxxx, or C6xxxxxx will be displayed.
- There are instances when multiple tasks might be happening at the same time, so the progress code on the panel may not reflect the code module having problems.

The mode of the IPL (A, B, or D) determines, in part, which status SRCs are displayed. The different types of IPL use different progress codes, so you will not see all of the progress codes in the table below when you perform an IPL.

The list of IPL status progress codes uses the following format:

- The message number contains characters that represent a particular action your server performs during initialization of the supported operating system.
- The description identifies the action or procedure that produced the progress code.

---

**C3YXXXXX C3YXXXXX**

**Explanation:** System Processor or Main Storage Diagnostic in progress

---

**C500C92B C500C92B**

**Explanation:** Waiting for console device - error condition only if console not found

---

**C5YXXXXX C5YXXXXX**

**Explanation:** Licensed Internal Code system hardware initialization

---

**C6001800 C6001800**

**Explanation:** Licensed Internal Code SPCN setup

---

**C6003900 C6003900**

**Explanation:** SP transfer control of Bus 1 (BCU Switch) to Licensed Internal Code is Complete and Licensed Internal Code Machine Facilities component is initialized. IPL of Bus 1 is in progress.

---

**C6003910 C6003910**

**Explanation:** Licensed Internal Code has initiated PCI Bus Reset to all Bus 1 devices except the SP

---

**C6003911 C6003911**

**Explanation:** Licensed Internal Code has initiated self test of all Bus 1 devices except the SP

---

**C6003912 C6003912**

**Explanation:** Licensed Internal Code is initiating IPL of the Load Source IOP, waiting for the IOP to signal internal reset complete (Immediate Status Acknowledge Bit set to '1')

---

**C6003913 C6003913**

**Explanation:** Licensed Internal Code is initializing the Load Source IOP messaging functions

---

**C6003914 C6003914**

**Explanation:** Licensed Internal Code has detected a Load Source IOP problem and is resetting the IOP, or the IOP has requested a reset after an internal Flash

## C6003915 • C6004020

memory Licensed Internal Code update

---

**C6003915**    **C6003915**

**Explanation:** Licensed Internal Code has initiated the Load Source IOP self-load

---

**C6003916**    **C6003916**

**Explanation:** During self-load, the Load Source IOP signalled Licensed Internal Code that it is initiating an internal Flash Memory update or other critical function

---

**C6003917**    **C6003917**

**Explanation:** The Load Source IOP has completed IPL of its operational load, Licensed Internal Code is waiting for the IOP to report its attached IO resources. This is the last progress code normally displayed regarding Load Source IPL

---

**C60039XX**    **C60039XX**

**Explanation:** The typical sequence for an A/B/C mode IPL is 3900, 3910, 3911 (warm IPL only), 3912 (warm IPL only), 3913, 3915, 3917, and then other System Licensed Internal Code IPL progress codes. The others are seen when an IOP flash update occurs, usually on a D mode and possibly on a side (source) switch between A and B or C.

---

**C6004001**    **C6004001**

**Explanation:** Static paging

---

**C6004002**    **C6004002**

**Explanation:** Start limited paging, call LID manager

---

**C6004003**    **C6004003**

**Explanation:** Initialize IPL/Termination (IT) data area / set up node address communication area (NACA) pointer

---

**C6004004**    **C6004004**

**Explanation:** Check and update MSD SID

---

**C6004005**    **C6004005**

**Explanation:** Initialize event management is executing

---

**C6004006**    **C6004006**

**Explanation:** IPL all buses

---

**C6004007**    **C6004007**

**Explanation:** Start SLID

---

**C6004008**    **C6004008**

**Explanation:** Initialize I/O service

---

**C6004009**    **C6004009**

**Explanation:** Initialize I/O machine

---

**C6004010**    **C6004010**

**Explanation:** Initialize IDE (interactive device exerciser)

---

**C6004011**    **C6004011**

**Explanation:** Initialize remote services

---

**C6004012**    **C6004012**

**Explanation:** Initialize RMAC component data values

---

**C6004013**    **C6004013**

**Explanation:** Initialize context management

---

**C6004014**    **C6004014**

**Explanation:** Initialize RM (component) seize lock

---

**C6004015**    **C6004015**

**Explanation:** Initialize MISR

---

**C6004016**    **C6004016**

**Explanation:** Set time of day

---

**C6004017**    **C6004017**

**Explanation:** Initialize RM (component) process management

---

**C6004018**    **C6004018**

**Explanation:** Initialize error log

---

**C6004019**    **C6004019**

**Explanation:** Re-initialize the service processor

---

**C6004020**    **C6004020**

**Explanation:** Initialize machine services

---

---

<b>C6004021</b>	<b>C6004021</b>
<b>Explanation:</b>	Initialize performance data collector

---

<b>C6004022</b>	<b>C6004022</b>
<b>Explanation:</b>	Initialize event management

---

<b>C6004023</b>	<b>C6004023</b>
<b>Explanation:</b>	Create MI boundary manager tasks

---

<b>C6004024</b>	<b>C6004024</b>
<b>Explanation:</b>	Disable CPM

---

<b>C6004025</b>	<b>C6004025</b>
<b>Explanation:</b>	Initializes battery test

---

<b>C6004026</b>	<b>C6004026</b>
<b>Explanation:</b>	Hardware card checkout

---

<b>C6004027</b>	<b>C6004027</b>
<b>Explanation:</b>	Start integrated device exerciser (Type C IPL only)

---

<b>C6004028</b>	<b>C6004028</b>
<b>Explanation:</b>	Start DST

---

<b>C6004029</b>	<b>C6004029</b>
<b>Explanation:</b>	Make IPL task not critical

---

<b>C6004030</b>	<b>C6004030</b>
<b>Explanation:</b>	Free static storage

---

<b>C6004031</b>	<b>C6004031</b>
<b>Explanation:</b>	Destroy IPL task, DST has been started

---

<b>C6004033</b>	<b>C6004033</b>
<b>Explanation:</b>	Guest Partition Virtual I/O Initialization Complete

---

<b>C6004050</b>	<b>C6004050</b>
<b>Explanation:</b>	Storage management recovery is executing

---

<b>C6004051</b>	<b>C6004051</b>
<b>Explanation:</b>	Start LOG is executing

---

<b>C6004052</b>	<b>C6004052</b>
<b>Explanation:</b>	Trace table initialization is executing

---

<b>C6004053</b>	<b>C6004053</b>
<b>Explanation:</b>	Context rebuild is executing. Module called: #RCRBCTX.

---

<b>C6004054</b>	<b>C6004054</b>
<b>Explanation:</b>	Start Product Activity Log and APPN is executing

---

<b>C6004055</b>	<b>C6004055</b>
<b>Explanation:</b>	Authority recovery is executing

---

<b>C6004056</b>	<b>C6004056</b>
<b>Explanation:</b>	Journal recovery is executing

---

<b>C6004057</b>	<b>C6004057</b>
<b>Explanation:</b>	Data base recovery is executing

---

<b>C6004058</b>	<b>C6004058</b>
<b>Explanation:</b>	Journal synchronization is executing

---

<b>C6004059</b>	<b>C6004059</b>
<b>Explanation:</b>	Commit recovery is executing

---

<b>C6004060</b>	<b>C6004060</b>
<b>Explanation:</b>	Data base initialization is executing

---

<b>C6004061</b>	<b>C6004061</b>
<b>Explanation:</b>	Journal IPL clean up is executing

---

<b>C6004062</b>	<b>C6004062</b>
<b>Explanation:</b>	Commit initialization is executing

---

<b>C6004064</b>	<b>C6004064</b>
<b>Explanation:</b>	System Object Model (SOM) recovery is executing.

---

## C6004065 • C6004260

---

C6004065 C6004065

**Explanation:** Start operating system is executing

---

C6004072 C6004072

**Explanation:** Storage Management Recovery is complete

---

C6004073 C6004073

**Explanation:** Queueing was notified that full paging is available

---

C6004074 C6004074

**Explanation:** Breakpoint Manager initialization phase 2 complete

---

C6004075 C6004075

**Explanation:** Volume stats initialized

---

C6004076 C6004076

**Explanation:** Lid Manager was notified that full paging is available

---

C6004077 C6004077

**Explanation:** Recovery directory structure created

---

C6004078 C6004078

**Explanation:** Link loader was notified that full paging is available

---

C6004079 C6004079

**Explanation:** Clean up SLIC install structures

---

C600407A C600407A

**Explanation:** Initialize database storage

---

C600407B C600407B

**Explanation:** Initialize IFS storage

---

C600407C C600407C

**Explanation:** HRI was notified that full paging is available

---

C600407D C600407D

**Explanation:** Authority was notified that full paging is available

---

---

C600407E C600407E

**Explanation:** Initialize I/O structures

---

C600407F C600407F

**Explanation:** Initialize cryptography structures

---

C6004100 C6004100

**Explanation:** Searching for Load Source Candidate (D-mode only)

---

C6004101 C6004101

**Explanation:** Opening media-file to install Licensed Internal Code service displays with proper National Language Version

---

C6004102 C6004102

**Explanation:** Loading and linking from media-file to install Licensed Internal Code service displays with proper National Language Version

---

C6004201 C6004201

**Explanation:** Storage management recovery

---

C6004204 C6004204

**Explanation:** Synchronization of mirrored MSD.

---

C6004205 C6004205

**Explanation:** Synchronization of mirrored data (where xx is percent complete).

---

C6004240 C6004240

**Explanation:** Reclaim main storage

---

C6004250 C6004250

**Explanation:** Storage management subset directory recovery

---

C6004255 C6004255

**Explanation:** Defragmentation utility

---

C6004260 C6004260

**Explanation:** Storage management directory recovery.

---

---

**C6004272**    **C6004272**
**Explanation:** ASP overflow recovery
 

---

**C6004275**    **C6004275**
**Explanation:** Moving data on Load Source to increase reserved area.
 

---

**C6004300**    **C6004300**
**Explanation:** Static paging is available for the link/loader
 

---

**C6004301**    **C6004301**
**Explanation:** Applying temporary PTFs. If the IPL is terminated at this point, the Licensed Internal Code might need to be installed again.
 

---

**C6004302**    **C6004302**
**Explanation:** Applying modules. If the IPL is terminated at this point, the Licensed Internal Code might need to be installed again.
 

---

**C6004303**    **C6004303**
**Explanation:** Temporarily applied PTFs have reached the static paging phase
 

---

**C6004304**    **C6004304**
**Explanation:** Delayed LID is being requested.
 

---

**C6004305**    **C6004305**
**Explanation:** Delayed LID has loaded successfully.
 

---

**C600432A**    **C600432A**
**Explanation:** Resolving references to run Mode A. The system can be safely terminated while this work is being done.
 

---

**C600432B**    **C600432B**
**Explanation:** Resolving references to run Mode B. The system may be safely terminated while this work is being done.
 

---

**C6004330**    **C6004330**
**Explanation:** Full paging is available; workstation HRI processing
 

---



---

**C6004331**    **C6004331**
**Explanation:** Freeing unused nucleus pages
 

---

**C6004332**    **C6004332**
**Explanation:** Permanently applying PTFs. If the IPL is terminated at this point, the Licensed Internal Code might need to be installed again.
 

---

**C6004400**    **C6004400**
**Explanation:** Main Storage Dump Manager started (where xx is the number of minutes elapsed waiting for DASD to report in.
 

---

**C6004401**    **C6004401**
**Explanation:** Some DASD failed to report in
 

---

**C6004402**    **C6004402**
**Explanation:** Storage Management Recovery started
 

---

**C6004403**    **C6004403**
**Explanation:** Storage Management Recovery ended
 

---

**C6004404**    **C6004404**
**Explanation:** Licensed Internal Code log started. If Auto Copy in progress, xx is the percent complete. Module called: MsdStartSf.
 

---

**C6004405**    **C6004405**
**Explanation:** Dump auto copy completed successfully. Module called: MsdStartSf.
 

---

**C6004406**    **C6004406**
**Explanation:** Shutdown/Programmed IPL started (MSD related). Module called: MsdStartSf, MsdInit.
 

---

**C6004500**    **C6004500**
**Explanation:** Verifying network attributes
 

---

**C6004501**    **C6004501**
**Explanation:** Looking for the console
 

---

**C6004502**    **C6004502**
**Explanation:** Starting DST display task (SSP only)
 

---

## C6004503 • C6xx4404

---

C6004503 C6004503

**Explanation:** Checking possible MRI on media (SSP only)

---

C6004504 C6004504

**Explanation:** Verifying system serial number

---

C6004505 C6004505

**Explanation:** Verifying system type

---

C6004506 C6004506

**Explanation:** Verifying system-unique ID

---

C6004507 C6004507

**Explanation:** Starting 'before DST' DASD checker

---

C6004508 C6004508

**Explanation:** Verifying system password (if DASD check OK)

---

C6004509 C6004509

**Explanation:** Starting DASD migration function (only if migrating)

---

C600450A C600450A

**Explanation:** Starting 'after DST' DASD checker

---

C6004A57 C6004A57

**Explanation:** Parallel database recovery and is at Pass 1

---

C6004A60 C6004A60

**Explanation:** Parallel database initialization is at Pass 1

---

C6004B57 C6004B57

**Explanation:** Parallel database recovery is at Pass 2

---

C6004B60 C6004B60

**Explanation:** Parallel database initialization is at Pass 2

---

C6004C57 C6004C57

**Explanation:** Parallel database recovery is at Pass 3

---

C6004C60 C6004C60

**Explanation:** Parallel database initialization is at Pass 3

---

C6004F57 C6004F57

**Explanation:** The system is recovering all database objects. This step can take several hours.

---

C6004F60 C6004F60

**Explanation:** The system is examining all objects during database initialization.

---

C6xx1800 C6xx1800

**Explanation:** Licensed Internal Code SPCN setup

---

C6xx4205 C6xx4205

**Explanation:** Synchronization of mirrored data (where xx is percent complete).

---

C6xx4400 C6xx4400

**Explanation:** Main Storage Dump Manager started (where xx is the number of minutes elapsed waiting for DASD to report in).

---

C6xx4404 C6xx4404

**Explanation:** Licensed Internal Code log started. If Auto Copy in progress, xx is the percent complete. Module called: MsdStartSf.

---

## (C7xx) Server firmware IPL status progress codes

A server that stalls during an initial program load (IPL) of the server firmware indicates a problem with the server firmware code.

Server firmware IPL status progress codes enable your service provider and next level of support to more easily identify the server firmware component causing the problem.

**Note:** If the problem is in the server firmware code, exchanging any hardware FRU will not fix the problem.

---

### C7004091 C7004091

**Explanation:** This is the final IPL status progress code to be displayed before the system reaches standby state. When standby is reached, C7004091 will no longer be displayed.

---

### C700XXXX C700XXXX

**Explanation:** If the system stalls during an initial program load (IPL) of the server firmware, a problem has occurred with the server firmware code. Exchanging any hardware FRU will not fix the problem.

**Problem determination:** Collect information on words 3 and 4 of the SRC, and call your next level of support.



---

## (C9xx) IPL status progress codes

Learn about IPL status progress codes that have a format of C9xxxxxx.

As your server performs an IPL, the control panel displays progress codes that indicate the status of the IPL. Often, you can use these progress codes to help you perform problem analysis. The following list offers information on the IPL status progress codes that have a format of C9xxxxxx.

---

**C9002810**    **C9002810**

**Explanation:** Reclaim machine context

---

**C9002820**    **C9002820**

**Explanation:** Resolve system objects

---

**C9002825**    **C9002825**

**Explanation:** Convert Work Control Block Table

---

**C9002830**    **C9002830**

**Explanation:** System value object

---

**C90028C0**    **C90028C0**

**Explanation:** Prepare SPCF job

---

**C90028C5**    **C90028C5**

**Explanation:** Initialize system objects

---

**C9002910**    **C9002910**

**Explanation:** Start system logging

---

**C9002920**    **C9002920**

**Explanation:** Library and object information repository (OIR) cleanup

---

**C9002925**    **C9002925**

**Explanation:** Verify POSIX\*\* root directories

---

**C9002930**    **C9002930**

**Explanation:** Database cross-reference

---

**C9002940**    **C9002940**

**Explanation:** Console configuration

---

**C9002950**    **C9002950**

**Explanation:** Install complex objects

---

**C9002960**    **C9002960**

**Explanation:** Sign on processing

---

**C9002965**    **C9002965**

**Explanation:** Software Management Services (SMS) initialization

---

**C9002967**    **C9002967**

**Explanation:** Applying PTFs

---

**C9002968**    **C9002968**

**Explanation:** IPL options

---

**C9002970**    **C9002970**

**Explanation:** Database recovery part 1, journal recovery part 1

---

**C9002973**    **C9002973**

**Explanation:** This recovery step attempts to perform any needed recovery for database files that were being changed, created or deleted when an abnormal system end occurred.

---

**C9002976**    **C9002976**

**Explanation:** This recovery step verifies the object recovery list performs any needed recovery for journals and journal receivers.

---

**C9002978**    **C9002978**

**Explanation:** This progress code displays after progress codes C9002A70 through C9002976 have been completed

---

**C9002980**    **C9002980**

**Explanation:** Storage requirements

---

**C9002990**    **C9002990**

**Explanation:** Performance adjustments

## C90029A0 • C9002C40

---

**C90029A0**    **C90029A0**

**Explanation:** System control block

---

**C90029B0**    **C90029B0**

**Explanation:** Spool initialization

---

**C90029C0**    **C90029C0**

**Explanation:** Work control block table

---

**C9002A80**    **C9002A80**

**Explanation:** Before starting system jobs

---

**C9002A85**    **C9002A85**

**Explanation:** Bringing up POSIX SAG

---

**C9002A87**    **C9002A87**

**Explanation:** POSIX SAG restart and signals initialization

---

**C9002A90**    **C9002A90**

**Explanation:** Starting system jobs

---

**C9002A95**    **C9002A95**

**Explanation:** Abnormal Work Control Block Table cleanup

---

**C9002AA0**    **C9002AA0**

**Explanation:** Damage notification

---

**C9002AA1**    **C9002AA1**

**Explanation:** This recovery step either rolls back or completes certain uncompleted database operations that were run under commitment control

---

**C9002AA2**    **C9002AA2**

**Explanation:** This recovery completes certain journal operations that were in progress when the system ended processing

---

**C9002AA3**    **C9002AA3**

**Explanation:** This recovery sends messages to QHST for database files that may have been damaged by a system end

---

---

**C9002AA4**    **C9002AA4**

**Explanation:** This progress code displays after progress codes C9002AA0 - C9002AA3 have been completed

---

**C9002AA5**    **C9002AA5**

**Explanation:** Integrated File System/New File System (NFS) directory recovery

---

**C9002AAA**    **C9002AAA**

**Explanation:** IPL status SRC for spool initialization part 2.

---

**C9002AAC**    **C9002AAC**

**Explanation:** Integrated File System conversion

---

**C9002AB0**    **C9002AB0**

**Explanation:** Database recovery part 2

---

**C9002AC0**    **C9002AC0**

**Explanation:** Document Library Object (DLO) recovery

---

**C9002B10**    **C9002B10**

**Explanation:** Establish event monitors

---

**C9002B30**    **C9002B30**

**Explanation:** QLUJ job

---

**C9002B40**    **C9002B40**

**Explanation:** Device configuration

---

**C9002C10**    **C9002C10**

**Explanation:** After system arbiter

---

**C9002C20**    **C9002C20**

**Explanation:** SNADS recovery

---

**C9002C25**    **C9002C25**

**Explanation:** ZMF component (Mail Enablement (OeDS) Framework) recovery

---

**C9002C40**    **C9002C40**

**Explanation:** Work Control Block Table cleanup

---

---

C9002CF0 C9002CF0

**Explanation:** Reclaim storage

---

C9002F00 C9002F00

**Explanation:** IPL complete



---

## (CAxx) Partition firmware progress codes

Partition firmware progress codes offer information about the progress of partition firmware as it is initializing.

In some cases, a server might hang (or stall) at one of these progress codes without displaying an 8-character system reference code (SRC). Only during such a hang condition should you take any service action related to the progress code.

**Note:** If the control panel displays more than eight characters, use only the first eight characters to find the error in the list. Characters that display after the first eight represent a location code that assists you in diagnosing the problem.

---

**CA000000**    **CA000000**

**Explanation:** Process control now owned by partition firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA000020**    **CA000020**

**Explanation:** Checking the firmware levels

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA000030**    **CA000030**

**Explanation:** Attempting to establish a communication link by using lpevents

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA000032**    **CA000032**

**Explanation:** Attempting to register lpevent queues

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA000034**    **CA000034**

**Explanation:** Attempting to exchange cap and allocate lpevents

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA000038**    **CA000038**

**Explanation:** Attempting to exchange virtual continue events

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA000040**    **CA000040**

**Explanation:** Attempting to obtain RTAS code lid details

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA000050 CA000050

**Explanation:** Attempting to load RTAS firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA000060 CA000060

**Explanation:** Attempting to obtain open firmware details

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA000070 CA000070

**Explanation:** Attempting to load open firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA000080 CA000080

**Explanation:** Preparing to start open firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA000090 CA000090

**Explanation:** Open firmware package corrupted (phase 1).

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA000091 CA000091

**Explanation:** Attempting to load open firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA0000A0 CA0000A0

**Explanation:** Open firmware package corrupted (phase 2)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00D001 CA00D001

**Explanation:** PCI probe completed, create PCI bridge interrupt routing properties

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00D002 CA00D002

**Explanation:** PCI adapter nvram hint created; system is rebooting

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00D003 CA00D003

**Explanation:** PCI probing complete

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

---

**CA00D004 CA00D004**

**Explanation:** Start of install-console, loading GUI package

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00D008 CA00D008**

**Explanation:** Initialize console and flush queues

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00D00C CA00D00C**

**Explanation:** The partition firmware is about to search for an NVRAM script.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- NEXTLVL

---

**CA00D00D CA00D00D**

**Explanation:** Evaluating NVRAM script.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00D010 CA00D010**

**Explanation:** First pass open firmware initialization complete; establish parameters for restart

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00D011 CA00D011**

**Explanation:** First pass open firmware initialization complete; control returned to initialization firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00D012 CA00D012**

**Explanation:** Second pass open firmware initialization complete; control returned to initialization firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00D013 CA00D013**

**Explanation:** Run-time open firmware initialization complete; control returned to initialization firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00D020 CA00D020**

**Explanation:** The partition firmware is about to download and run the SLIC loader

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00D021 CA00D021**

**Explanation:** The partition firmware is about to download and run the I/O reporter to collect VPD

## CA00E101 • CA00E135

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E101 CA00E101

**Explanation:** Create RTAS node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E102 CA00E102

**Explanation:** Load/initialize RTAS

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E105 CA00E105

**Explanation:** Transfer control to the operating system (normal boot)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E10A CA00E10A

**Explanation:** Load RTAS device tree

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E10B CA00E10B

**Explanation:** Set RTAS device properties

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E110 CA00E110

**Explanation:** Create the kdump properties

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E130 CA00E130

**Explanation:** Build device tree

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E131 CA00E131

**Explanation:** Create the root node properties

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E134 CA00E134

**Explanation:** Create memory node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E135 CA00E135

**Explanation:** Create HCA node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E136 CA00E136**

**Explanation:** Create BSR node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E137 CA00E137**

**Explanation:** Create HEA node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E138 CA00E138**

**Explanation:** Create options node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E139 CA00E139**

**Explanation:** Create aliases node and system aliases

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E13A CA00E13A**

**Explanation:** Create packages node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E13B CA00E13B**

**Explanation:** Create HEA node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E13C CA00E13C**

**Explanation:** Create HEA port node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E13D CA00E13D**

**Explanation:** Create high frequency interface (HFI) IO hub node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

**CA00E13E CA00E13E**

**Explanation:** Create high frequency interface (HFI) Ethernet node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

## CA00E140 • CA00E152

---

### CA00E140 CA00E140

**Explanation:** Loading the operating system

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E141 CA00E141

**Explanation:** Synchronize the operating system bootlist to the management module bootlist

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E142 CA00E142

**Explanation:** Management module bootlist is being set from the operating system boot list

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E143 CA00E143

**Explanation:** Operating system bootlist is being set from the management module bootlist

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E149 CA00E149

**Explanation:** Create boot mgr node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E14C CA00E14C

**Explanation:** Create terminal emulator node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E14D CA00E14D

**Explanation:** Load boot image

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E150 CA00E150

**Explanation:** Create host (primary) PCI controller node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E151 CA00E151

**Explanation:** Probing PCI bus

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

---

### CA00E152 CA00E152

**Explanation:** Probing for adapter FCODE; evaluate if present

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

---

**CA00E153 CA00E153**

**Explanation:** End adapter FCODE probing and evaluation

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5
- 

**CA00E154 CA00E154**

**Explanation:** Create PCI bridge node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5
- 

**CA00E155 CA00E155**

**Explanation:** Probing PCI bridge secondary bus

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

**CA00E156 CA00E156**

**Explanation:** Create plug-in PCI bridge node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5
- 

**CA00E157 CA00E157**

**Explanation:** Probe for virtual function (VF) Fcode; evaluate if present

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5
- 

---

**CA00E158 CA00E158**

**Explanation:** End probing for, and evaluation of, for virtual function (VF) Fcode

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5
- 

**CA00E15B CA00E15B**

**Explanation:** Transfer control to Operating System (service mode boot)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

**CA00E15F CA00E15F**

**Explanation:** Adapter VPD evaluation

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5
- 

**CA00E170 CA00E170**

**Explanation:** Start of PCI BUS probe

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5
- 

**CA00E172 CA00E172**

**Explanation:** First pass PCI device probe

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5
-

## CA00E174 • CA00E19B

---

### CA00E174 CA00E174

**Explanation:** Establishing host connection

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWHOST

---

### CA00E175 CA00E175

**Explanation:** BootP request

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWHOST

---

### CA00E176 CA00E176

**Explanation:** TFTP file transfer

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E177 CA00E177

**Explanation:** Transfer failure due to TFTP error condition

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E178 CA00E178

**Explanation:** Initiating TFTP file transfer

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E179 CA00E179

**Explanation:** Closing BOOTP

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E17B CA00E17B

**Explanation:** Processor clock speed measurement

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- NEXTLVL

---

### CA00E198 CA00E198

**Explanation:** Rebooting partition to enact changes specified in ibm,client-architecture-support.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E199 CA00E199

**Explanation:** The partition is rebooting to enact changes that were specified the ELF header of the boot image.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E19A CA00E19A

**Explanation:** NVRAM auto-boot? variable not found - assume FALSE

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E19B CA00E19B

**Explanation:** NVRAM menu? variable not found - assume FALSE

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
-

---

**CA00E19D CA00E19D**

**Explanation:** Create NVRAM node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
- 

**CA00E19E CA00E19E**

**Explanation:** Real-time clock (RTC) initialization

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
- 

**CA00E1A0 CA00E1A0**

**Explanation:** User requested boot to SMS menus by using keyboard entry

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
- 

**CA00E1A1 CA00E1A1**

**Explanation:** User requested boot to open firmware prompt by using keyboard entry

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
- 

**CA00E1A2 CA00E1A2**

**Explanation:** User requested boot using default service mode boot list by using keyboard entry

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
- 

**CA00E1A3 CA00E1A3**

**Explanation:** User requested boot using customized service mode boot list by using keyboard entry

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
- 

**CA00E1A4 CA00E1A4**

**Explanation:** User requested boot to SMS menus by using the Hardware Management Console or a service processor command

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
- 

**CA00E1A5 CA00E1A5**

**Explanation:** User requested boot to open firmware prompt by using the HMC or a service processor command

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
- 

**CA00E1A6 CA00E1A6**

**Explanation:** User requested boot using default service mode boot list by using the HMC or a service processor command

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH
-

---

CA00E1A7 CA00E1A7

**Explanation:** User requested boot using customized service mode boot list by using the HMC or a service processor command.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00E1AA CA00E1AA

**Explanation:** System boot check for NVRAM Settings

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00E1AB CA00E1AB

**Explanation:** System booting using the default service mode boot list

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00E1AC CA00E1AC

**Explanation:** System booting using the customized service mode boot list

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00E1AD CA00E1AD

**Explanation:** System booting to the operating system

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00E1AE CA00E1AE

**Explanation:** System booted to SMS multiboot menu by using NVRAM settings

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWMBOOT

---

CA00E1AF CA00E1AF

**Explanation:** System booted to SMS utilities menu by using NVRAM settings

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00E1B0 CA00E1B0

**Explanation:** Process HMC-specified boot device specifier

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00E1B1 CA00E1B1

**Explanation:** System booting with HMC or hosting-partition directed boot-device repair

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

CA00E1B2 CA00E1B2

**Explanation:** XOFF received, waiting for XON

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWVTHMC

**CA00E1B3 CA00E1B3**

**Explanation:** XON received

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

**CA00E1B4 CA00E1B4**

**Explanation:** HMC or hosting-partition directed boot-string did not load an operating system repair

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- NEXTLVL

**CA00E1B5 CA00E1B5**

**Explanation:** Checking for iSCSI disk aliases

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

**CA00E1D0 CA00E1D0**

**Explanation:** Create PCI SCSI node

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

**CA00E1D3 CA00E1D3**

**Explanation:** Create SCSI block device node (SD)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

**CA00E1D4 CA00E1D4**

**Explanation:** Create SCSI byte device node (ST)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

**CA00E1DC CA00E1DC**

**Explanation:** On a Linux or AIX system or partition, the partition firmware (the System Management Services, or SMS) is waiting for a firmware console to be selected. If the system is managed by a management console, open a VTERM and select it as the console. If the system is not managed by a management console, insure that a console is attached, then select that console when prompted.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWCONS

**CA00E1DD CA00E1DD**

**Explanation:** A graphics adapter was selected as the firmware console, but the USB keyboard is not attached.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWCONS

**CA00E1F0 CA00E1F0**

**Explanation:** Start out-of-box experience

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

## CA00E1F1 • CA00E1FE

- FWFLASH

---

### CA00E1F1 CA00E1F1

**Explanation:** Start selftest sequence on one or more devices

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E1F5 CA00E1F5

**Explanation:** Build boot device list

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E1F6 CA00E1F6

**Explanation:** Determine boot device sequence

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA00E1F7 CA00E1F7

**Explanation:** Boot invalid or stopped

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA00E1F8 CA00E1F8

**Explanation:** Build boot device list for SCSI adapters (displays the location code of the SCSI adapter being scanned)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

---

### CA00E1F9 CA00E1F9

**Explanation:** Build boot device list for Fibre Channel adapters (displays the location of the SAN adapter being scanned)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

---

### CA00E1FA CA00E1FA

**Explanation:** Building device list for SCSI adapters (displays the device ID and device LUN of the devices being scanned)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

---

### CA00E1FB CA00E1FB

**Explanation:** Scan SCSI bus for attached devices

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWSCSIH

---

### CA00E1FC CA00E1FC

**Explanation:** Build boot device list for SSA adapters (displays the location code of the SSA adapter being scanned)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

---

### CA00E1FE CA00E1FE

**Explanation:** Building device list for Fibre Channel (SAN) adapters (displays the WWPN of the fibre-channel adapter being scanned)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

**CA00E1FF CA00E1FF**

**Explanation:** Build device list for Fibre Channel (SAN) adapters (displays the LUN for each device being scanned)

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

**CA00E440 CA00E440**

**Explanation:** Validate NVRAM, initialize partitions as needed

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E441 CA00E441**

**Explanation:** Generate /options node NVRAM configuration variable properties

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E442 CA00E442**

**Explanation:** Validate NVRAM partitions

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E443 CA00E443**

**Explanation:** Generate NVRAM configuration variable dictionary words

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E444 CA00E444**

**Explanation:** NVRAM size is less than 8K bytes

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E701 CA00E701**

**Explanation:** Create memory VPD

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E800 CA00E800**

**Explanation:** Initialize gdata for the control (operator) panel

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E820 CA00E820**

**Explanation:** Initializing lpevent

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E830 CA00E830**

**Explanation:** Initializing event scan

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

## CA00E840 • CA00E879

**Failing Item:**

- FWFLASH

---

**CA00E840 CA00E840**

**Explanation:** Initializing hot plug

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E843 CA00E843**

**Explanation:** Initializing interface/aix access

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E850 CA00E850**

**Explanation:** Initializing dynamic reconfiguration

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E860 CA00E860**

**Explanation:** Initializing sensors

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E865 CA00E865**

**Explanation:** Initializing VPD

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E870 CA00E870**

**Explanation:** Initializing pfd's memory manager

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E875 CA00E875**

**Explanation:** Initializing rtas\_last\_error

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E876 CA00E876**

**Explanation:** Initializing rtas\_error\_inject

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E877 CA00E877**

**Explanation:** Initialize dump interface

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E879 CA00E879**

**Explanation:** Initialize the platform-assisted kdump interface

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E880 CA00E880**

**Explanation:** Send firmware version data to the hypervisor

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E885 CA00E885**

**Explanation:** Initializing set-power-level

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E886 CA00E886**

**Explanation:** Initializing exit2c

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E887 CA00E887**

**Explanation:** Initialize gdata for activate\_firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E890 CA00E890**

**Explanation:** Starting to initialize open firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E891 CA00E891**

**Explanation:** Finished initializing open firmware

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00E8A0 CA00E8A0**

**Explanation:** Initializing the pinned page manager

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA00EAA1 CA00EAA1**

**Explanation:** Probe PCI-PCI bridge bus

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWPCI5

---

**CA060203 CA060203**

**Explanation:** An alias was modified or created

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

**CA26FFFF CA26FFFF**

**Explanation:** An extended amount of time was required while waiting for lpevent to complete.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

## CA26TTSS • CA360001

- FWFLASH

---

### CA26TTSS CA26TTSS

**Explanation:** Waiting for lpevent of type tt and subtype ss

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

**Failing Item:**

- FWFLASH

---

### CA279001 CA279001

**Explanation:** The firmware update image contains an update module that is not present in the current image.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA2799FD CA2799FD

**Explanation:** The service processor is receiving a server firmware update module

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA2799FF CA2799FF

**Explanation:** The service processor is writing a server firmware update module.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

### CA360001 CA360001

**Explanation:** Entered H-HFI-VERIFY-INTERFACE-STATE method to check the interface state for an HFI unit id. The wait time may be as long as 1 hour and 15 mins. No intervention is required; do not power off the CEC.

**Response:** No repair action steps prior to working the failing item list.

**Problem determination:** No additional problem determination.

---

## (CF00) Linux kernel boot progress codes

---

CF000012    CF000012

**Explanation:** Set up initialization.

**Problem determination:** If the system or partition does not progress past this code, contact your Linux provider.

---

CF000015    CF000015

**Explanation:** Set up is complete.

**Problem determination:** If the system or partition does not progress past this code, contact your Linux provider.

---

CF000020    CF000020

**Explanation:** External interrupt controller server initialization.

**Problem determination:** If the system or partition does not progress past this code, contact your Linux provider.

---

CF000021    CF000021

**Explanation:** External interrupt controller server complete.

**Problem determination:** If the system or partition does not progress past this code, contact your Linux provider.

---

CF000100    CF000100

**Explanation:** Memory manager initialization.

**Problem determination:** If the system or partition does not progress past this code, contact your Linux provider.



---

## (D1xx) Service processor firmware progress codes

A D1xx reference code indicates that an event or exception occurred in service processor firmware.

To resolve any D1xx reference code, determine if the SRC requires a service action or if it is for tracking purposes only.

Diagnostics analyze an event when it occurs to determine if the event requires service or if the event will only be recorded for tracking purposes and future reference. The determination is based on machine type, model, installed features, configuration, topology and activations at the time of the event.

If you do not find the SRC in a serviceable event view then it is a tracking event only and does not require service. Tracking events appear as **informational** or **Misc.** or **temp** in the IBM i product activity log and the Advanced System Manage Interface (ASMI).

---

### D1XXC351 D1XXC351

**Explanation:** The CEC server firmware aborted.

**Response:** Determine if this is a tracking or serviceable event. If this is a tracking event, no service actions are required. Otherwise, use the FRU and procedure callouts detailed with the SRC to determine service actions.

---

### D1XXCA01 D1XXCA01

**Explanation:** Informational message: Items that were deconfigured by the system were guarded out.

---

### D1XXCA02 D1XXCA02

**Explanation:** Informational message: items that were deconfigured by the user via the ASMI menus were guarded out.

---

### D1XXCA03 D1XXCA03

**Explanation:** Informational message: The guard data has been cleared.

---

### D1XXCA04 D1XXCA04

**Explanation:** Informational message: There is a new version of the guard data.

---

### D1XXCA05 D1XXCA05

**Explanation:** Informational message: The guard data was corrupted, and has been rebuilt.

---

### D1XXCA06 D1XXCA06

**Explanation:** Informational message: There was an error when opening a file.

---

### D1XXCA07 D1XXCA07

**Explanation:** Informational message: There was an error when reading a file.

---

### D1XXCA08 D1XXCA08

**Explanation:** Informational message: There was an error when writing a file.

---

### D1XXCA09 D1XXCA09

**Explanation:** Informational message: There was an error when closing a file.

---

### D1XXCA0A D1XXCA0A

**Explanation:** Informational message: There was an link file error.

---

### D1XXCA0B D1XXCA0B

**Explanation:** Informational message: Failure when setting the DIMM status in the hardware object manager.

---

### D1XXCA0C D1XXCA0C

**Explanation:** Informational message: Failure when setting the status of a device other than a DIMM.

---

### D1XXCA0D D1XXCA0D

**Explanation:** Informational message: Failure when reading the system type.

---

### D1XXCA0E D1XXCA0E

**Explanation:** Informational message: Failure when reading a registry entry.

## D1XXCA0F • D1XXCA16

---

### D1XXCA0F D1XXCA0F

**Explanation:** Informational message: Failure when getting VPD data.

---

### D1XXCA10 D1XXCA10

**Explanation:** Informational message: Items that had been guarded out were recovered.

---

### D1XXCA11 D1XXCA11

**Explanation:** Informational message: The resource ID was not found in the list.

---

### D1XXCA12 D1XXCA12

**Explanation:** Informational message: Manual configuration or deconfiguration is not allowed.

---

### D1XXCA13 D1XXCA13

**Explanation:** Informational message: The buffer size is invalid.

---

### D1XXCA14 D1XXCA14

**Explanation:** Informational message: Unable to return a valid guard state for the requested resource.

---

### D1XXCA15 D1XXCA15

**Explanation:** Informational message: The guard action that was requested is not allowed.

---

### D1XXCA16 D1XXCA16

**Explanation:** Informational message: Items that were deconfigured by the system (but are eligible for resource recovery) were guarded out.

---

## (D1xx) Service processor status progress codes

D1xx status reference codes, posted by the service processor, offer information about the state of the service processor during a power-off operation.

---

### D1XX900C D1XX900C

**Explanation:** Breakpoint set in CPU controls has been hit

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1XXB0FF D1XXB0FF

**Explanation:** Request to initiate power-off program has been sent

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1XXC000 D1XXC000

**Explanation:** Indicates a message is ready to send to the server firmware to power off

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1XXC001 D1XXC001

**Explanation:** Waiting for the server firmware to acknowledge the delayed power off notification

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1XXC002 D1XXC002

**Explanation:** Waiting for the server firmware to send the power off message

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1XXC003 D1XXC003

**Explanation:** Server firmware handshaking is complete

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.



---

## (D1xx) Service processor dump status progress codes

D1xx service processor dump status codes

Service processor dump status codes use the format of D1yy1xxx, where:

- yy indicates the type of data that is being dumped.
- xxx is a counter that increments each time the server stores 4K of data. When these codes occur during a service processor dump, they appear in the control panel display.

---

### D1001XXX D1001XXX

**Explanation:** Dump error data

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1011XXX D1011XXX

**Explanation:** Dump sai\_header Hardware Management Console (HMC) file

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D101C00F D101C00F

**Explanation:** No power off to allow debugging for CPU controls

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1021XXX D1021XXX

**Explanation:** Dump sai\_header directory

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1031XXX D1031XXX

**Explanation:** Dump sai\_header fips header

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1041XXX D1041XXX

**Explanation:** Dump sai\_header entry header

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1051XXX D1051XXX

**Explanation:** Dump core file for failing component

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1061XXX D1061XXX

**Explanation:** Dump all NVRAM

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1071XXX D1071XXX

**Explanation:** Dump component trace for failing component

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1081XXX D1081XXX

**Explanation:** Dump component data from /opt/p0

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1091XXX D1091XXX

**Explanation:** Dump /opt/p1/\*\*

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

### D1111XXX D1111XXX

**Explanation:** Dump /opt/p0/\*

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1121XXX D1121XXX**

**Explanation:** Dump /opt/p1/\*

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1131XXX D1131XXX**

**Explanation:** Dump all traces

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1141XXX D1141XXX**

**Explanation:** Dump code version

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1151XXX D1151XXX**

**Explanation:** Dump all /opt/p3 except rtbl

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1161XXX D1161XXX**

**Explanation:** Dump pddcustomize -r command

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1171XXX D1171XXX**

**Explanation:** Dump registry -l command

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1181XXX D1181XXX**

**Explanation:** Dump all /core/core.\* files

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1191XXX D1191XXX**

**Explanation:** Dump BDMP component trace (after dump if enough space)

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**D11A1XXX D11A1XXX**

**Explanation:** Dump any state information before dumping starts

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D11B1XXX D11B1XXX**

**Explanation:** Dump /proc filesystem.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D11C1XXX D11C1XXX**

**Explanation:** Dump mounted filesystem statistics.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D11D1XXX D11D1XXX**

**Explanation:** Dump environment.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1231XXX D1231XXX**

**Explanation:** Dump update dump headers

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1241XXX D1241XXX**

**Explanation:** Dump CRC1 calculation off

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1251XXX D1251XXX**

**Explanation:** Dump CRC1 calculation on

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1261XXX D1261XXX**

**Explanation:** Dump CRC2 calculation off

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**D1271XXX D1271XXX**

**Explanation:** Dump CRC2 calculation on

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1281XXX D1281XXX**

**Explanation:** Dump output the calculated CRC1 (sai\_headers)

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1291XXX D1291XXX**

**Explanation:** Dump output the calculated CRC2 (data and data headers)

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D12A1XXX D12A1XXX**

**Explanation:** Jump to the position in dump directly after CRC1

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D12B1XXX D12B1XXX**

**Explanation:** Initialize the headers dump time and serial numbers

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D12C1XXX D12C1XXX**

**Explanation:** Display final SRC to panel

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D12D1XXX D12D1XXX**

**Explanation:** Remove /core/core.app.time.pid

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

---

**D12E1XXX D12E1XXX**

**Explanation:** Remove /core/core.\*

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D12F1XXX D12F1XXX**

**Explanation:** Display beginning SRC to panel

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1301XXX D1301XXX**

**Explanation:** Turn off error log capture into dump

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1311XXX D1311XXX**

**Explanation:** Turn on error log capture into dump

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1321XXX D1321XXX**

**Explanation:** Store information about existing core files

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1381XXX D1381XXX**

**Explanation:** Invalidate the dump

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1391XXX D1391XXX**

**Explanation:** Check for valid dump sequence

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D13A1XXX D13A1XXX**

**Explanation:** Get dump identity sequence

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

## D13B1XXX • D1FF1XXX

---

D13B1XXX D13B1XXX

**Explanation:** Get dump length sequence

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

D1FF1XXX D1FF1XXX

**Explanation:** Dump complete

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

## (D1xx) Platform dump status progress codes

D1xx platform dump status codes

Platform dump status codes use the format of D1xx3yzz, where:

- xx is the cage or node ID that the dump component is processing. This varies depending on the node the hardware data is being collected from. It will be set to 0xFF when collecting the mainstore memory data.
- y increments from 0x0 to 0xF (to indicate that the system is not hung).
- zz is the command that is being processed (see the list below).

---

**D1XX3Y01**    **D1XX3Y01**

**Explanation:** Get SCOM.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y02**    **D1XX3Y02**

**Explanation:** Get scan ring.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y03**    **D1XX3Y03**

**Explanation:** Get array values.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y04**    **D1XX3Y04**

**Explanation:** Stop the clocks.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y05**    **D1XX3Y05**

**Explanation:** Flush the cache.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y06**    **D1XX3Y06**

**Explanation:** Get CFAM.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y07**    **D1XX3Y07**

**Explanation:** Put SCOM.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y08**    **D1XX3Y08**

**Explanation:** Send command.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y09**    **D1XX3Y09**

**Explanation:** Get optimized cache.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y0A**    **D1XX3Y0A**

**Explanation:** Get GP register.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y0B**    **D1XX3Y0B**

**Explanation:** Processor clean-up.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

**D1XX3Y0C**    **D1XX3Y0C**

**Explanation:** Get JTAG register.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y0D D1XX3Y0D

**Explanation:** Stop clocks without quiescing.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

D1XX3YF0 D1XX3YF0

**Explanation:** Memory collection set-up.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

D1XX3YF1 D1XX3YF1

**Explanation:** Memory collection DMA step.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

D1XX3YF2 D1XX3YF2

**Explanation:** Memory collection cleanup.

**Response:** Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

---

## (D2xx) Partition status progress codes

D2xxxxxx progress codes are posted by the Virtual Service Processor (VSP) when powering down a partition.

---

**D200A100**    **D200A100**

**Explanation:** Received MSD SP attention

---

**D200A110**    **D200A110**

**Explanation:** Received CPM SP attention

---

**D200A120**    **D200A120**

**Explanation:** Received LL SP attention

---

**D200A130**    **D200A130**

**Explanation:** Received RPA end-of-life event

---

**D200A200**    **D200A200**

**Explanation:** Begin partition power down. SRC word 3 contains the reason for the power off.

**Problem determination:** SRC word 3 power down reasons

- 1: White button power down (also known as delayed power off)
- 2: Partition requested power down
- 3: Partition requested end of life
- 4: System wide shutdown
- 5: Attention link loader
- 6: Attention MSD
- 7: Panel function 3 requested
- 8: Panel function 8 requested
- 9: Panel function 22 requested
- A: Panel function 34 requested

---

**D200B050**    **D200B050**

**Explanation:** Begin transfer slot locks to VSP

---

**D200B05F**    **D200B05F**

**Explanation:** End transfer slot locks to VSP

---

**D200B060**    **D200B060**

**Explanation:** Begin transfer VIO slot locks to VSP

---

**D200B06F**    **D200B06F**

**Explanation:** End transfer VIO slot locks to VSP

---

**D200B070**    **D200B070**

**Explanation:** Begin reset slots

---

**D200B077**    **D200B077**

**Explanation:** Waiting for reset slots

---

**D200B07F**    **D200B07F**

**Explanation:** End reset slots

---

**D200B080**    **D200B080**

**Explanation:** Begin reset VIO slots

---

**D200B08F**    **D200B08F**

**Explanation:** End reset VIO slots

---

**D200B090**    **D200B090**

**Explanation:** Begin soft POR slots

---

**D200B097**    **D200B097**

**Explanation:** Waiting soft POR slots

---

**D200B09F**    **D200B09F**

**Explanation:** End soft POR slots

---

**D200B100**    **D200B100**

**Explanation:** Sending Hypervisor reset

---

**D200B1FF**    **D200B1FF**

**Explanation:** Hypervisor reset successfully sent

---

**D200B200**    **D200B200**

**Explanation:** Begin forced LP reset (after the 1 second timeout)

---

**D200B210**    **D200B210**

**Explanation:** Send CSP/FSP soft processor reset command (word 3 processor ID, word 4 thread ID)

## D200B2FF • D200E1FF

---

D200B2FF D200B2FF

**Explanation:** End forced LP reset

---

D200B300 D200B300

**Explanation:** Closing Hypervisor events paths

---

D200B310 D200B310

**Explanation:** Deactivating panel functions

---

D200B3FF D200B3FF

**Explanation:** Hypervisor reset complete successfully

---

D200C100 D200C100

**Explanation:** Sending Hypervisor I/O reset

---

D200C1FF D200C1FF

**Explanation:** Hypervisor I/O reset sent successfully

---

D200C200 D200C200

**Explanation:** Deallocating events

---

D200C2FF D200C2FF

**Explanation:** Hypervisor I/O reset complete successfully

---

D200D100 D200D100

**Explanation:** Removing partition configuration resources

---

D200D1FF D200D1FF

**Explanation:** Partition resources removed successfully

---

D200E050 D200E050

**Explanation:** Begin power off slots

---

D200E057 D200E057

**Explanation:** Waiting power off slots

---

D200E05F D200E05F

**Explanation:** End power off slots

---

D200E060 D200E060

**Explanation:** Begin power off VIO slots

---

---

D200E06F D200E06F

**Explanation:** End power off VIO slots

---

D200E080 D200E080

**Explanation:** Begin release slot locks

---

D200E08F D200E08F

**Explanation:** End release slot locks

---

D200E090 D200E090

**Explanation:** Begin release VIO slot locks

---

D200E09F D200E09F

**Explanation:** End release VIO slot locks

---

D200E0A0 D200E0A0

**Explanation:** Begin unassociate of system ports

---

D200E0A8 D200E0A8

**Explanation:** Unassociate system ports from an RPA partition

---

D200E0AF D200E0AF

**Explanation:** End unassociate of system ports

---

D200E100 D200E100

**Explanation:** Power off SPCN racks

---

D200E110 D200E110

**Explanation:** Issuing a rack power off command

---

D200E120 D200E120

**Explanation:** Rack power off command complete successfully

---

D200E1FF D200E1FF

**Explanation:** SPCN racks powered off phase complete

---

---

## (D6xx) General status progress codes

Learn about general status progress codes with a format of D6xxxxxx.

The following list contains general status progress codes with a format of D6xxxxxx in numeric order. The xx after D6 in each progress code represents two hexadecimal numbers that further define the progress code.

---

**D6000298**    **D6000298**

**Explanation:** Managed system power down started

---

**D6000299**    **D6000299**

**Explanation:** Managed system power down status

---

**D6000483**    **D6000483**

**Explanation:** Power failed; delay timer is running

---

**D6000484**    **D6000484**

**Explanation:** MI run in progress

---

**D600430A**    **D600430A**

**Explanation:** Operating system service partition power down status: indicates that a server firmware code update is in progress for the P-side (permanent) of the managed system.

**Problem determination:** Your server may display this progress code for an extended period of time where the "xx" increments periodically. Allow the server to complete the processing. Do not interrupt this process.

---

**D600430B**    **D600430B**

**Explanation:** Operating system service partition power down status indicates that a server firmware code update is in progress for the T-side (temporary) of the managed system.

**Problem determination:** Your server may display this progress code for an extended period of time where the "xx" increments periodically. Allow the server to complete the processing. Do not interrupt this process.

---

**D60043BA**    **D60043BA**

**Explanation:** Operating system service partition power down status indicates that a server firmware code update is in progress to copy the server firmware code from the T-side (temporary) of the managed system to the P-side (permanent).

**Problem determination:** Your server may display this progress code for an extended period of time. Allow

the server to complete the processing. Do not interrupt this process.

---

**D6005500**    **D6005500**

**Explanation:** Managed system power down status; attempting to delete information from the disk subsystem cache

---

**D6005501**    **D6005501**

**Explanation:** Managed system power down status; indicates that the information from the disk subsystem cache was deleted successfully

---

**D6005502**    **D6005502**

**Explanation:** Managed system power down status; indicates that the system failed to delete information from the disk subsystem cache

---

**D6005503**    **D6005503**

**Explanation:** Managed system power down status, which indicates the information from the disk subsystem cache was deleted with qualified success

---

**D6xx0298**    **D6xx0298**

**Explanation:** Managed system power down started

---

**D6xx0299**    **D6xx0299**

**Explanation:** Managed system power down status

---

**D6xx0483**    **D6xx0483**

**Explanation:** Power failed; delay timer is running

---

**D6xx0484**    **D6xx0484**

**Explanation:** MI run in progress

---

**D6xx430A**    **D6xx430A**

**Explanation:** Operating system service partition power down status: indicates that a server firmware code

## D6xx430B • D6xx5503

update is in progress for the P-side (permanent) of the managed system.

**Problem determination:** Your server may display this progress code for an extended period of time where the "xx" increments periodically. Allow the server to complete the processing. Do not interrupt this process.

---

### D6xx430B D6xx430B

**Explanation:** Operating system service partition power down status indicates that a server firmware code update is in progress for the T-side (temporary) of the managed system.

**Problem determination:** Your server may display this progress code for an extended period of time where the "xx" increments periodically. Allow the server to complete the processing. Do not interrupt this process.

---

### D6xx43BA D6xx43BA

**Explanation:** Operating system service partition power down status indicates that a server firmware code update is in progress to copy the server firmware from the T-side (temporary) of the managed system to the P-side (permanent).

**Problem determination:** Your server may display this progress code for an extended period of time. Allow the server to complete the processing. Do not interrupt this process.

---

### D6xx5500 D6xx5500

**Explanation:** Managed system power down status; attempting to delete information from the disk subsystem cache

---

### D6xx5501 D6xx5501

**Explanation:** Managed system power down status; indicates that the information from the disk subsystem cache was deleted successfully

---

### D6xx5502 D6xx5502

**Explanation:** Managed system power down status; indicates that the system failed to delete information from the disk subsystem cache

---

### D6xx5503 D6xx5503

**Explanation:** Managed system power down status, which indicates the information from the disk subsystem cache was deleted with qualified success

---

## (D9xx) General status progress codes

The D9xx progress codes indicate the progress of powering-off a partition.

Not all progress codes below apply to all operating systems.

---

**D9002740**    **D9002740**

**Explanation:** Power off immediate

---

**D9002750**    **D9002750**

**Explanation:** All subsystems ended

---

**D9002760**    **D9002760**

**Explanation:** Device configuration shutdown

---

**D9002770**    **D9002770**

**Explanation:** QPLUS job ending

---

**D9002780**    **D9002780**

**Explanation:** Close database cross-reference files

---

**D9002790**    **D9002790**

**Explanation:** QSYSARB job ending

---

**D90027C0**    **D90027C0**

**Explanation:** System jobs are ending



---

## Notices

This information was developed for products and services offered in the U.S.A.

The manufacturer may not offer the products, services, or features discussed in this document in other countries. Consult the manufacturer's representative for information on the products and services currently available in your area. Any reference to the manufacturer's product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any intellectual property right of the manufacturer may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any product, program, or service.

The manufacturer may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to the manufacturer.

**The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:** THIS PUBLICATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. The manufacturer may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to websites not owned by the manufacturer are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this product and use of those websites is at your own risk.

The manufacturer may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning products not produced by this manufacturer was obtained from the suppliers of those products, their published announcements or other publicly available sources. This manufacturer has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to products not produced by this manufacturer. Questions on the capabilities of products not produced by this manufacturer should be addressed to the suppliers of those products.

All statements regarding the manufacturer's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

The manufacturer's prices shown are the manufacturer's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

If you are viewing this information in softcopy, the photographs and color illustrations may not appear.

The drawings and specifications contained herein shall not be reproduced in whole or in part without the written permission of the manufacturer.

The manufacturer has prepared this information for use with the specific machines indicated. The manufacturer makes no representations that it is suitable for any other purpose.

The manufacturer's computer systems contain mechanisms designed to reduce the possibility of undetected data corruption or loss. This risk, however, cannot be eliminated. Users who experience unplanned outages, system failures, power fluctuations or outages, or component failures must verify the accuracy of operations performed and data saved or transmitted by the system at or near the time of the outage or failure. In addition, users must establish procedures to ensure that there is independent data verification before relying on such data in sensitive or critical operations. Users should periodically check the manufacturer's support websites for updated information and fixes applicable to the system and related software.

## **Homologation statement**

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

---

## **Trademarks**

IBM, the IBM logo, and [ibm.com](http://ibm.com) are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at [www.ibm.com/legal/copytrade.shtml](http://www.ibm.com/legal/copytrade.shtml).

INFINIBAND, InfiniBand Trade Association, and the INFINIBAND design marks are trademarks and/or service marks of the INFINIBAND Trade Association.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Oracle and/or its affiliates.

UNIX is a registered trademark of The Open Group in the United States and other countries.

---

## **Electronic emission notices**

When attaching a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices supplied with the monitor.

## Class A Notices

The following Class A statements apply to the IBM servers that contain the POWER7<sup>®</sup> processor and its features unless designated as electromagnetic compatibility (EMC) Class B in the feature information.

### Federal Communications Commission (FCC) statement

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Industry Canada Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

### Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

### European Community Compliance Statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

European Community contact:  
IBM Deutschland GmbH  
Technical Regulations, Department M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Tele: +49 7032 15 2941  
email: [lugi@de.ibm.com](mailto:lugi@de.ibm.com)

**Warning:** This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## VCCI Statement - Japan

この装置は、クラスA 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A

The following is a summary of the VCCI Japanese statement in the box above:

This is a Class A product based on the standard of the VCCI Council. If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective actions.

### Japanese Electronics and Information Technology Industries Association (JEITA) Confirmed Harmonics Guideline (products less than or equal to 20 A per phase)

高調波ガイドライン適合品

### Japanese Electronics and Information Technology Industries Association (JEITA) Confirmed Harmonics Guideline with Modifications (products greater than 20 A per phase)

高調波ガイドライン準用品

## Electromagnetic Interference (EMI) Statement - People's Republic of China

### 声 明

此为 A 级产品,在生活环境  
中,该产品可能会造成无线电干  
扰。在这种情况下,可能需要用  
户对其干扰采取切实可行的措  
施。

Declaration: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may need to perform practical action.

## Electromagnetic Interference (EMI) Statement - Taiwan

警告使用者：  
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

The following is a summary of the EMI Taiwan statement above.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user will be required to take adequate measures.

### IBM Taiwan Contact Information:

台灣IBM 產品服務聯絡方式：  
台灣國際商業機器股份有限公司  
台北市松仁路7號3樓  
電話：0800-016-888

## Electromagnetic Interference (EMI) Statement - Korea

이 기기는 업무용(A급)으로 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

## Germany Compliance Statement

### Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:  
"Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

#### **Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten**

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

#### **Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:  
International Business Machines Corp.  
New Orchard Road  
Armonk, New York 10504  
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:  
IBM Deutschland GmbH  
Technical Regulations, Abteilung M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Tel: +49 7032 15 2941  
email: lugi@de.ibm.com

Generelle Informationen:

**Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.**

#### **Electromagnetic Interference (EMI) Statement - Russia**

**ВНИМАНИЕ! Настоящее изделие относится к классу А.  
В жилых помещениях оно может создавать  
радиопомехи, для снижения которых необходимы  
дополнительные меры**

#### **Class B Notices**

The following Class B statements apply to features designated as electromagnetic compatibility (EMC) Class B in the feature installation information.

#### **Federal Communications Commission (FCC) statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM-authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM-authorized dealers. IBM is not responsible for any radio or television interference caused by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **Industry Canada Compliance Statement**

This Class B digital apparatus complies with Canadian ICES-003.

### **Avis de conformité à la réglementation d'Industrie Canada**

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### **European Community Compliance Statement**

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to European Standard EN 55022. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication equipment.

European Community contact:  
IBM Deutschland GmbH  
Technical Regulations, Department M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Tele: +49 7032 15 2941  
email: [lugi@de.ibm.com](mailto:lugi@de.ibm.com)

## VCCI Statement - Japan

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。 VCCI-B

## Japanese Electronics and Information Technology Industries Association (JEITA) Confirmed Harmonics Guideline (products less than or equal to 20 A per phase)

高調波ガイドライン適合品

## Japanese Electronics and Information Technology Industries Association (JEITA) Confirmed Harmonics Guideline with Modifications (products greater than 20 A per phase)

高調波ガイドライン準用品

## IBM Taiwan Contact Information

台灣IBM 產品服務聯絡方式：  
台灣國際商業機器股份有限公司  
台北市松仁路7號3樓  
電話：0800-016-888

## Electromagnetic Interference (EMI) Statement - Korea

이 기기는 가정용(B급)으로 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

## Germany Compliance Statement

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse B EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse B ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

#### **Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten**

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

#### **Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse B**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:  
International Business Machines Corp.  
New Orchard Road  
Armonk, New York 10504  
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:  
IBM Deutschland GmbH  
Technical Regulations, Abteilung M372  
IBM-Allee 1, 71139 Ehningen, Germany  
Tel: +49 7032 15 2941  
email: lugi@de.ibm.com

Generelle Informationen:

**Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse B.**

---

## **Terms and conditions**

Permissions for the use of these publications are granted subject to the following terms and conditions.

**Applicability:** These terms and conditions are in addition to any terms of use for the IBM website.

**Personal Use:** You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative works of these publications, or any portion thereof, without the express consent of IBM.

**Commercial Use:** You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of IBM.

**Rights:** Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the Publications or any information, data, software or other intellectual property contained therein.

IBM reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by IBM, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

IBM MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.





Printed in USA